Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver & Rubber mallet (not provider).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	SEAT	1 PC	
В	LEG FRAME	2 PCS	
С	RAIL TOP	2 PCS	
D	RAIL BOTTOM	2 PCS	
Е	CENTER RAIL TOP	1 PC	
F	CENTER RAIL BOTTOM	2 PCS	
G	BOARD	1 PC	

HARDWARE LIST				
ITEM	DESCRIPTION		QTY	
1	JCBB BOLT M8 x 50mm	aaaaaaaa ⊖	8 PCS	
2	M8 SPRING WASHER		8 PCS	
3	WOOD SCREW M4 x 32mm	€	23 PCS	
4	WOOD DOWEL M10 x 30mm		14 PCS	
5	M5 ALLEN KEY (BALL SHAPE)	<u> </u>	1 PC	





