



2 Place Seat Cushion (E) on assembled Dining Chair Frame.

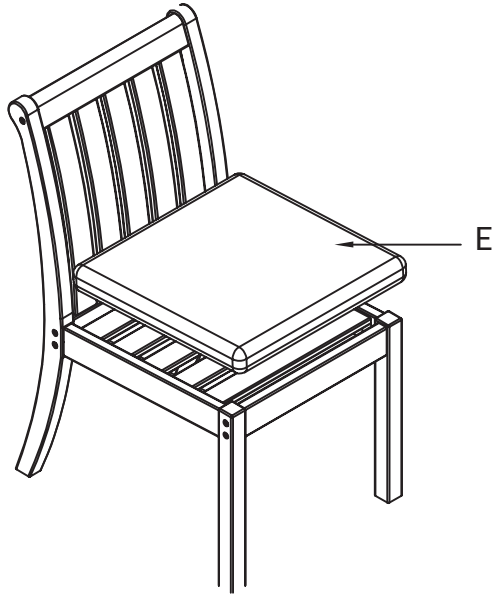

DINING CHAIR

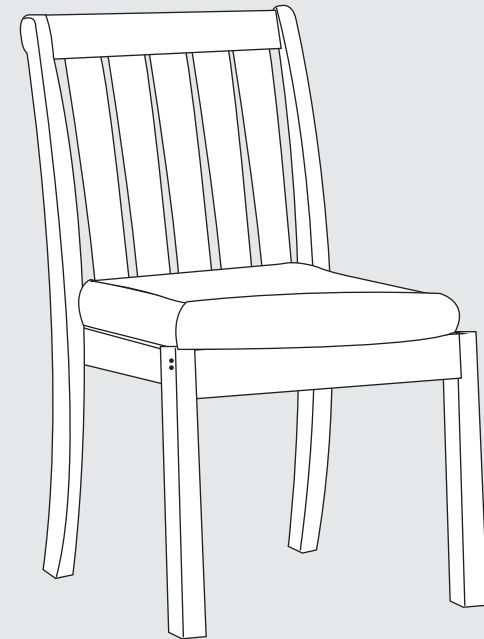

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.




WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Left Armless Frame
1x

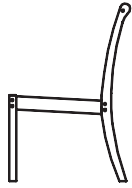


B. Right Armless Frame
1x

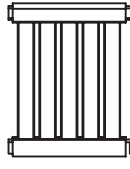


C. Back Rest
1x

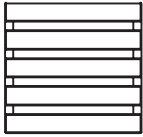

 D. Seat Deck
1x



E. Front Frame
1x

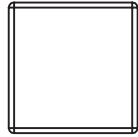

F. Seat Cushion
1x



G. Bolt
10x



H. Bolt
6x



I. Allen Key
1x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Attach Left Armless Frame (A) and Right Armless Frame (B) to Back Rest (C) and Seat Deck (D) using Bolts (G). Secure Seat Deck (D) to Left Armless Frame (A) and Right Armless Frame (B) using Bolts (H). Tighten using provided Allen Key (I).

