


# Assembly Instructions


SG010 | 4-Tier Clear Glass Bookcase | 80 cm

## 4-Tier Clear Glass Bookcase 80 cm

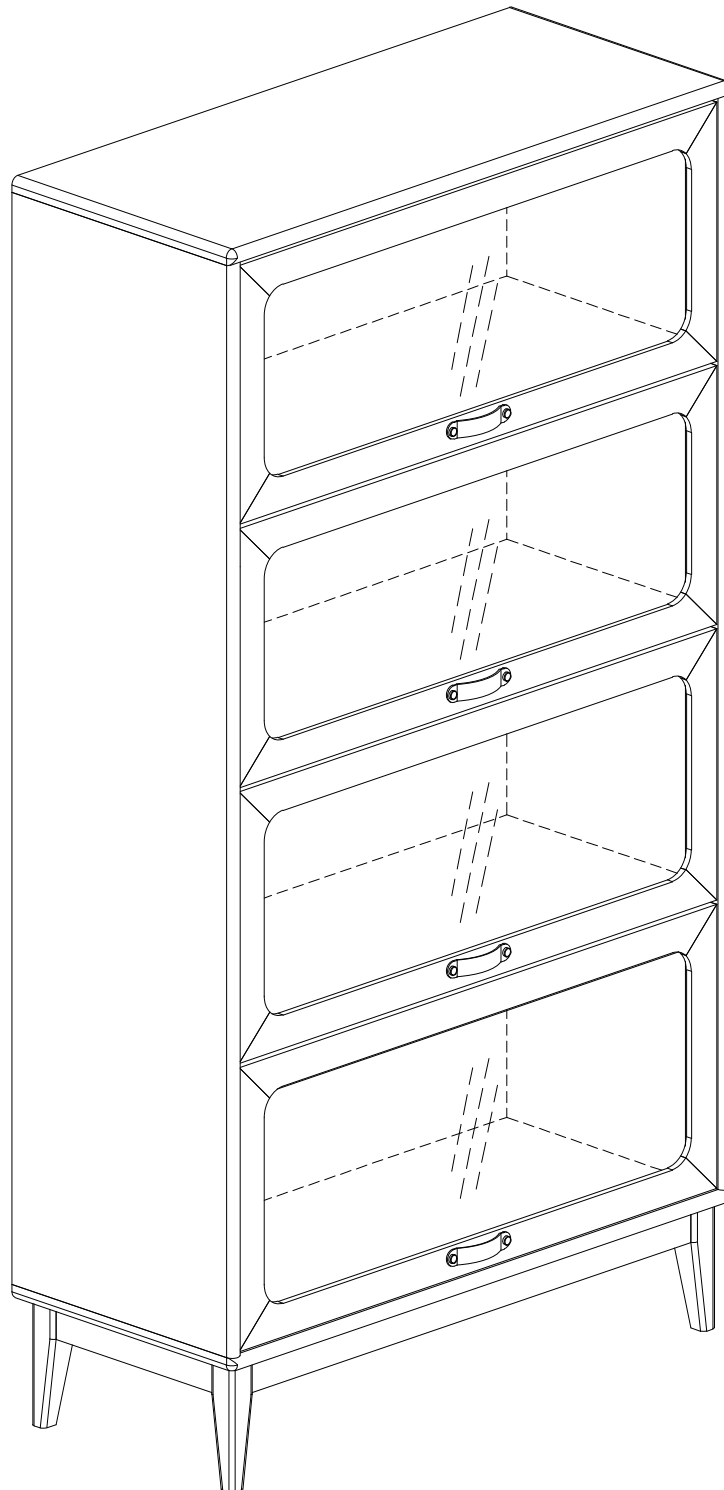

# Assembly Overview

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

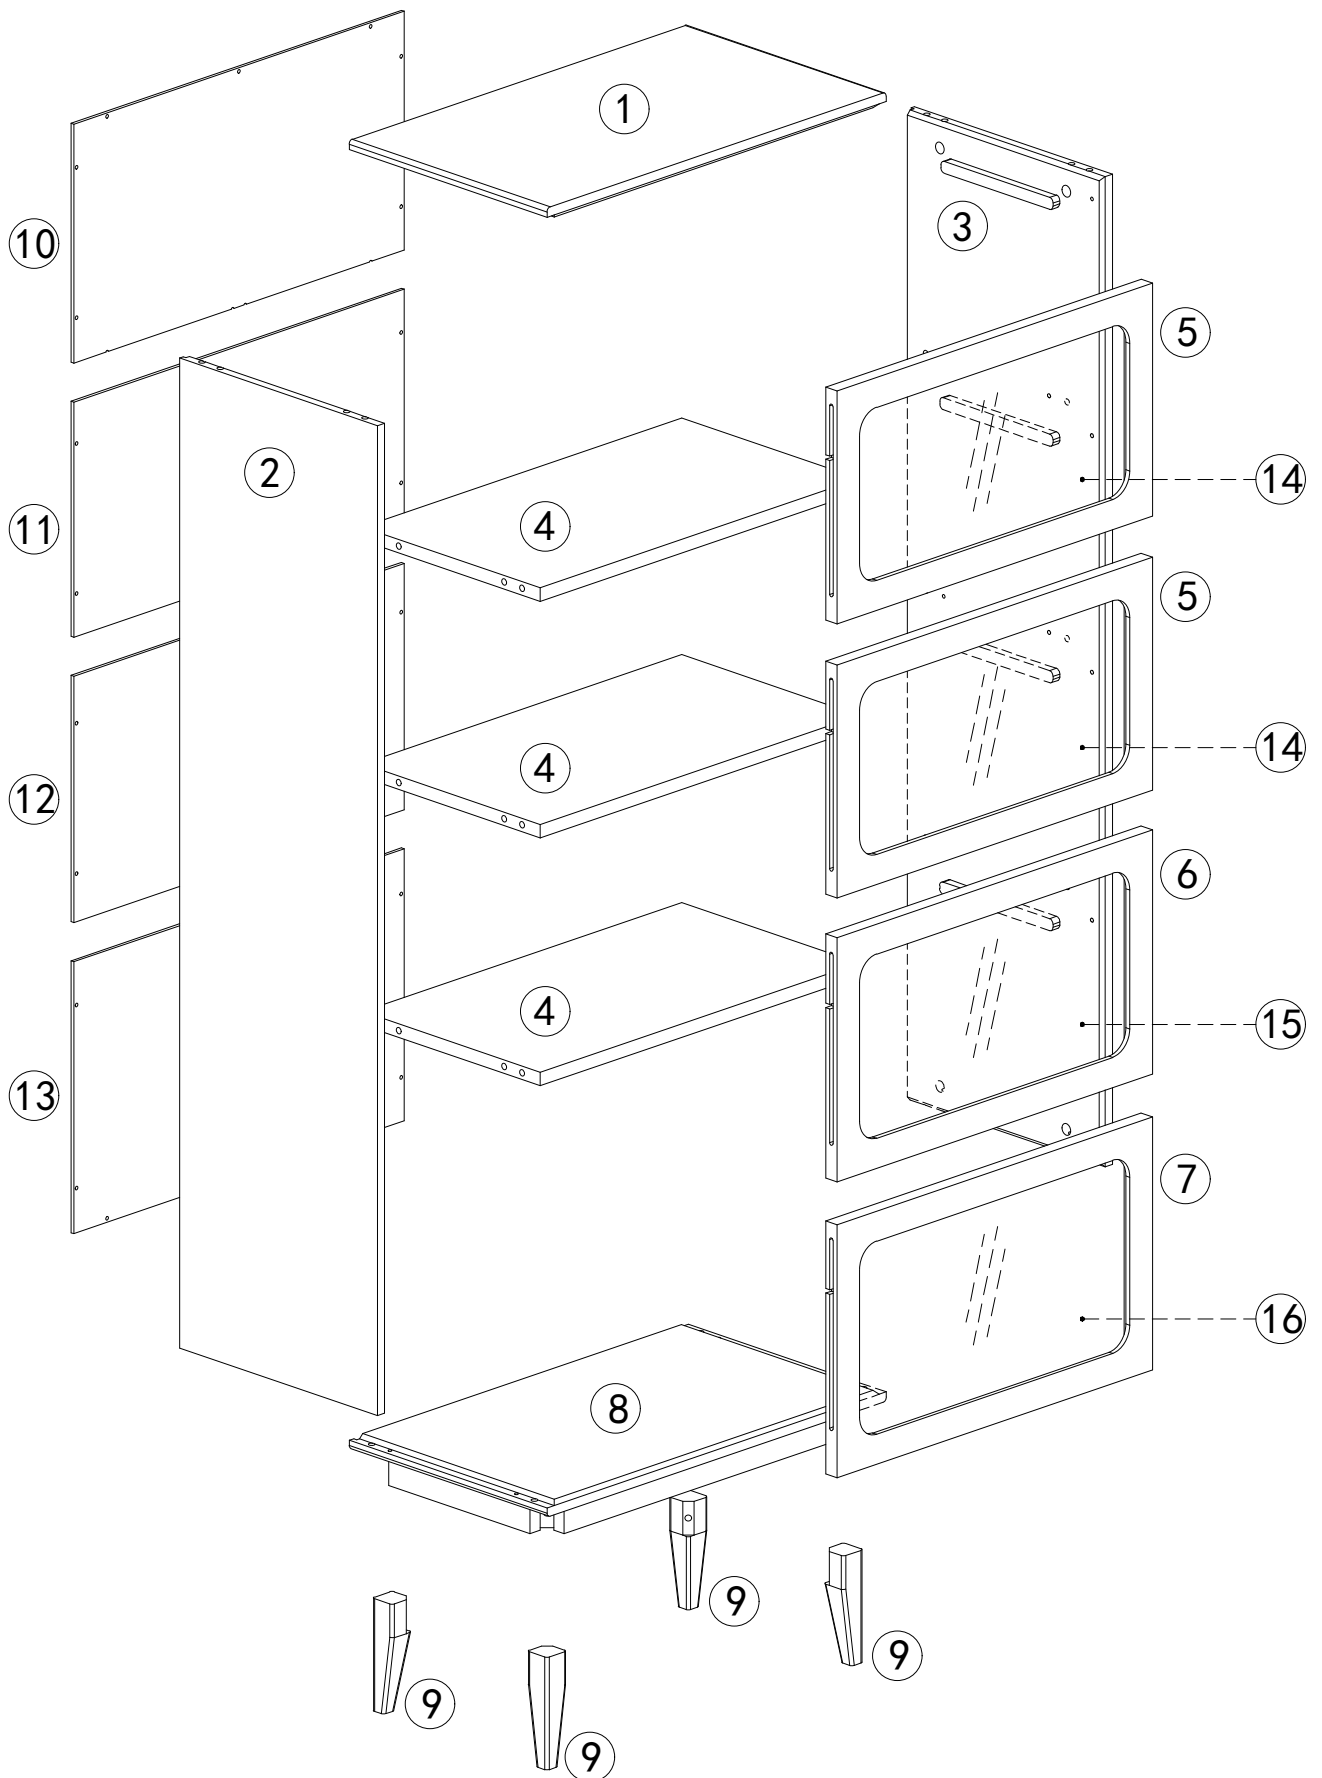

# Parts List

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

- 1 **Top panel**  
800 x 350 x 18 mm  
1 pc



- 2 **Left side panel**  
1318 x 350 x 18 mm  
1 pc




- 3 **Right side panel**  
1318 x 350 x 18 mm  
1 pc




- 4 **Shelf panel**  
764 x 314 x 18 mm  
3 pcs




- 5 **Upper door panel**  
758 x 310 x 20 mm  
2 pcs

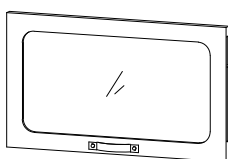

- 6 **Middle door panel**  
758 x 325 x 20 mm  
1 pc

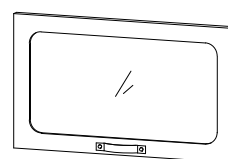

- 7 **Lower door panel**  
758 x 337 x 20 mm  
1 pc

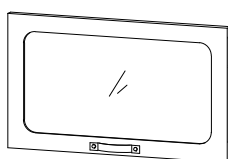

- 8 **Bottom frame**  
800 x 350 x 57 mm  
1 pc



# Parts List - continued

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

## 9 Leg

150 x 35 x 35 mm


4 pcs



## 10 Upper back panel

784 x 318 x 5 mm


1 pc

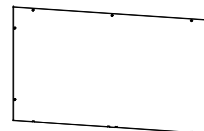

## 11 Upper-middle back panel

784 x 313 x 5 mm


1 pc

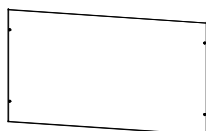

## 12 Lower-middle back panel

784 x 328 x 5 mm


1 pc

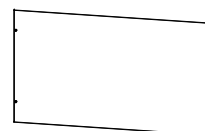

## 13 Lower back panel

784 x 362 x 5 mm


1 pc

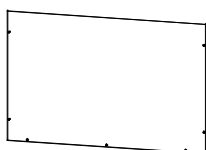

## 14 Door glass (preinstalled)

696 x 248 x 5 mm


2 pcs

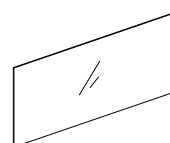

## 15 Door glass (preinstalled)

696 x 263 x 5 mm


1 pc

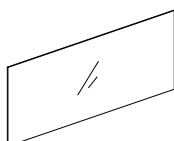

## 16 Door glass (preinstalled)

696 x 275 x 5 mm

1 pc

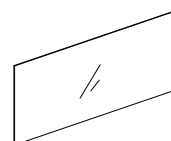


# Hardware and Tools

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

## A Cam bolt

L = 40 mm

20 pcs + 3 spare

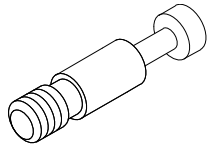

## B Cam lock

Diameter 15 mm


20 pcs + 3 spare



## C Wood dowel

Diameter 8 x 30 mm


20 pcs + 3 spare

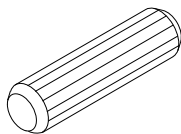

## D Umbrella-head wood screw

Diameter 3.5 x 19 mm

 
36 pcs + 4 spare



## E Hex key

M5 x 100 mm


1 pc (reusable tool)

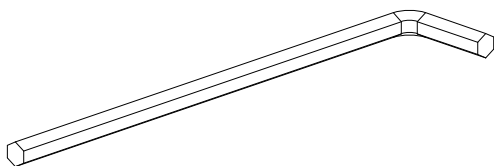

## F Hex socket bolt

M8 x 50 mm


4 pcs + 1 spare

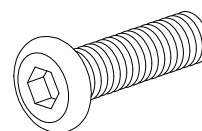

## G Flat washer

M8 x 19 mm

 4 pcs + 1 spare



## H Spring washer

M8

4 pcs + 1 spare




# Hardware and Tools - continued

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

## I Door hinge pin

Diameter 5 x 25 mm

 8 pcs + 2 spare



## J Positioning bolt

M5 x diameter 6 x 19 mm

 
1 pc



## K Cam-lock cover sticker

Diameter 20 mm

20 pcs + 3 spare



## L Rubber bumper


Diameter 8 mm

6 pcs + 1 spare



## M Anti-tip hardware kit


1 set

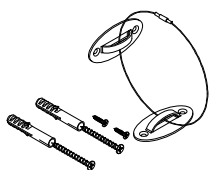

## N Phillips screwdriver

M6 x 128 mm


1 pc (reusable tool)

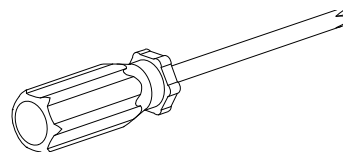

## O Adjustable foot (preinstalled)

M6 x diameter 19 mm


4 pcs

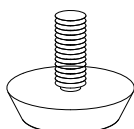


# Screw Selection

SG010 | 4-Tier Clear Glass Bookcase | 80 cm


Use screws of the correct size to avoid damaging the panels.

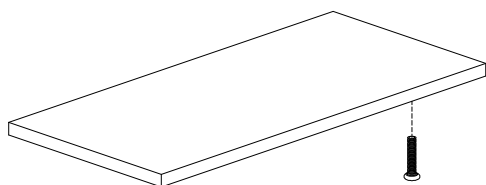

Example

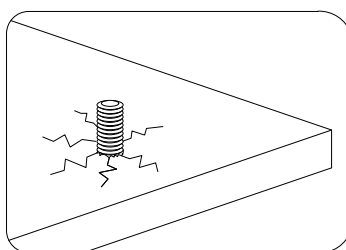

Incorrect

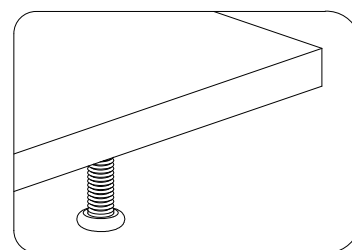

Correct

Incorrect screws may split the wood panels.  
Use screws of the correct size, as shown.


# Step 1

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Fit cam bolts A to left side panel (2). Attach the three shelf panels (4) using wood dowels C and cam locks B. Tighten B with screwdriver N, then cover the cam-lock holes with stickers K.

**A x 6 | B x 6 | C x 6 | K x 6**

Tool: N (reused)

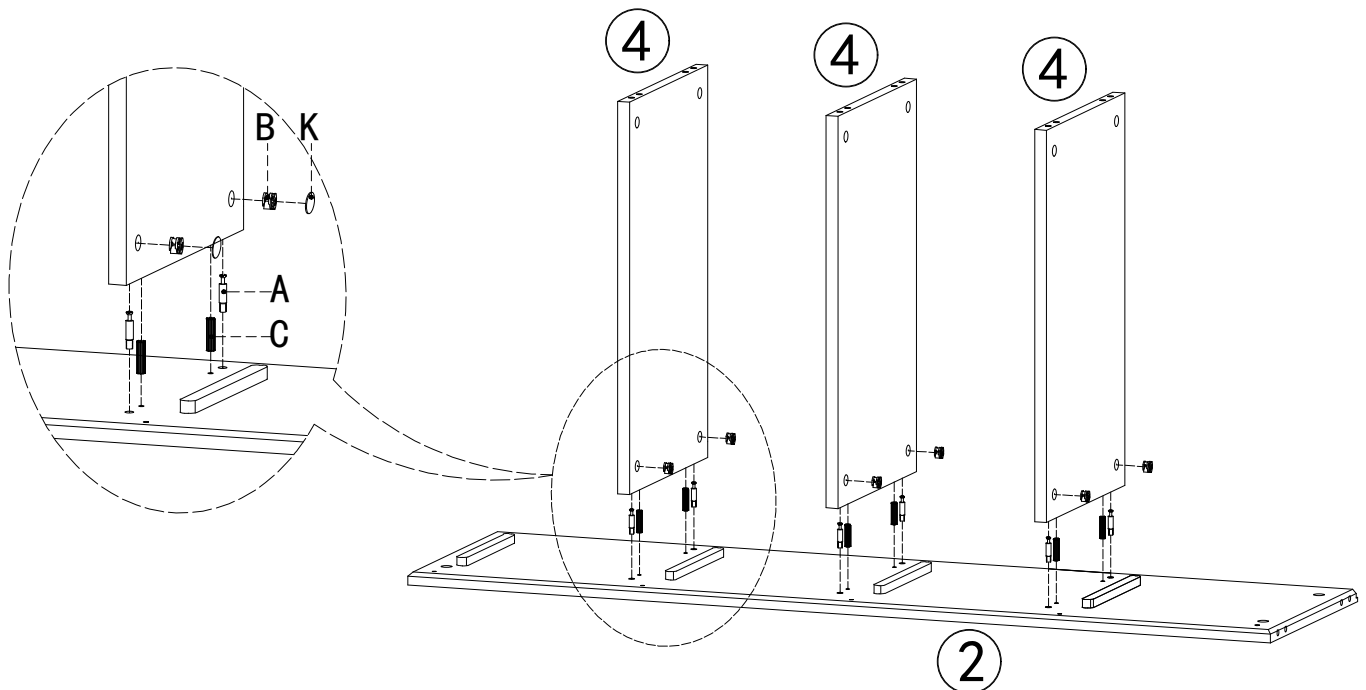


## Step 2

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Fit cam bolts A to right side panel (3). Join panel (3) to the assembly from Step 1 using wood dowels C and cam locks B. Tighten B with screwdriver N, then cover the cam-lock holes with stickers K.

**A x 6 | B x 6 | C x 6 | K x 6**

Tool: N (reused)

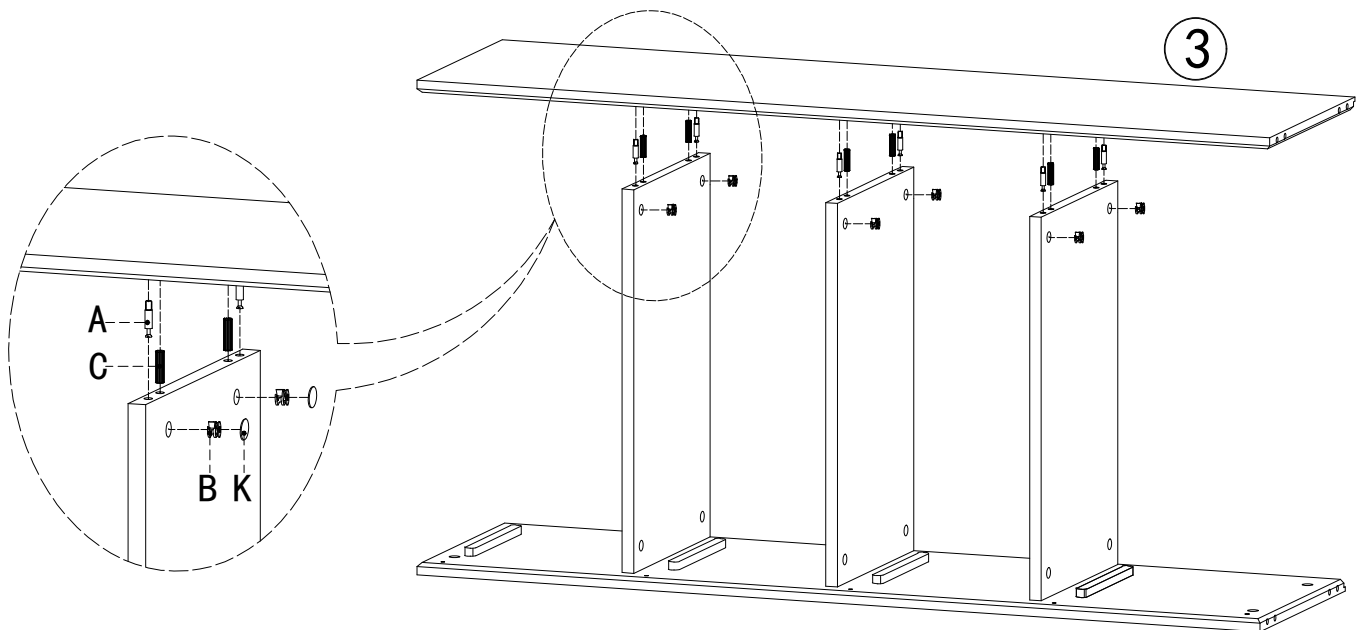


## Step 3

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Attach the four legs (9) to bottom frame (8) using bolts F, flat washers G and spring washers H. Tighten with hex key E, as shown.

**F x 4 | G x 4 | H x 4**

Tool: E (reused)

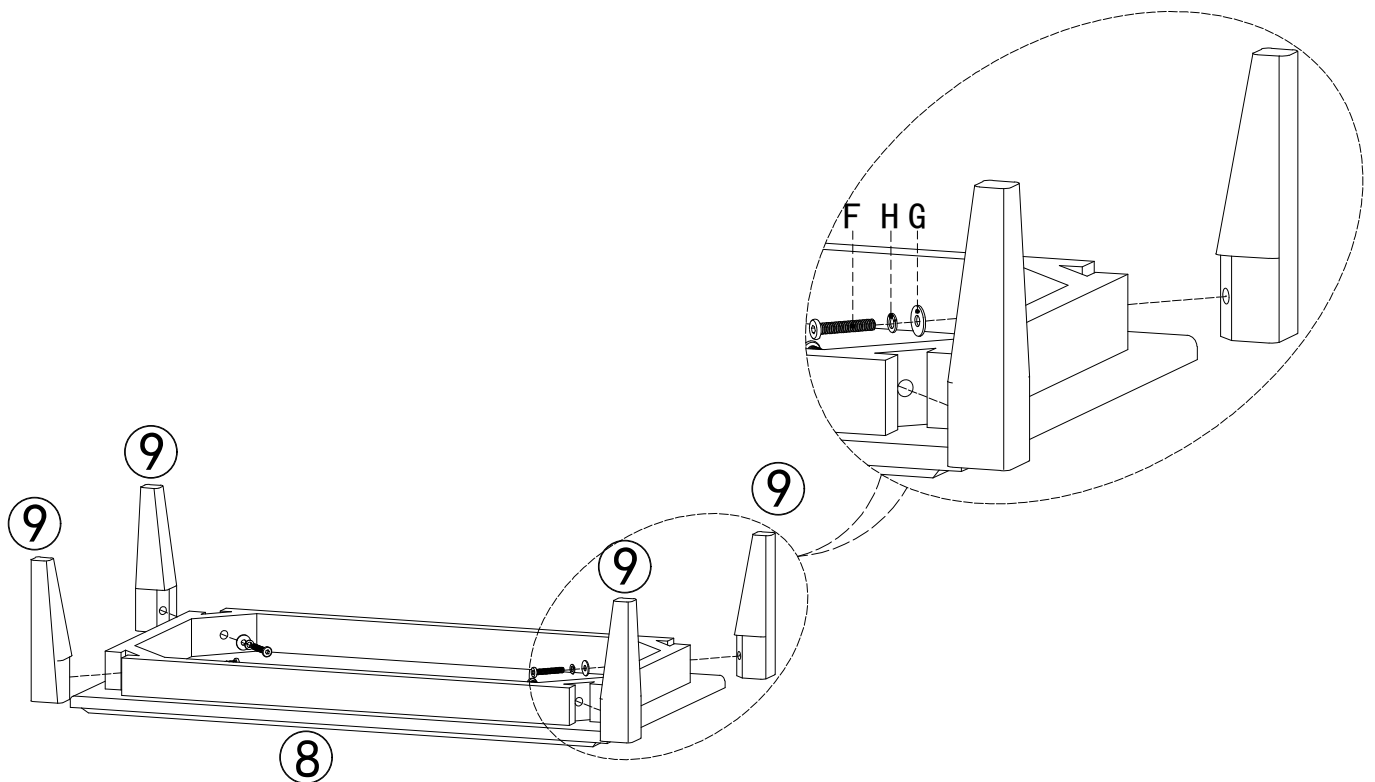


# Step 4

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Fit cam bolts A to top panel (1) and bottom frame (8). Join them to the assembly from Step 2 using wood dowels C and cam locks B. Tighten B with screwdriver N, then cover the cam-lock holes with stickers K.

**A x 8 | B x 8 | C x 8 | K x 8**

Tool: N (reused)

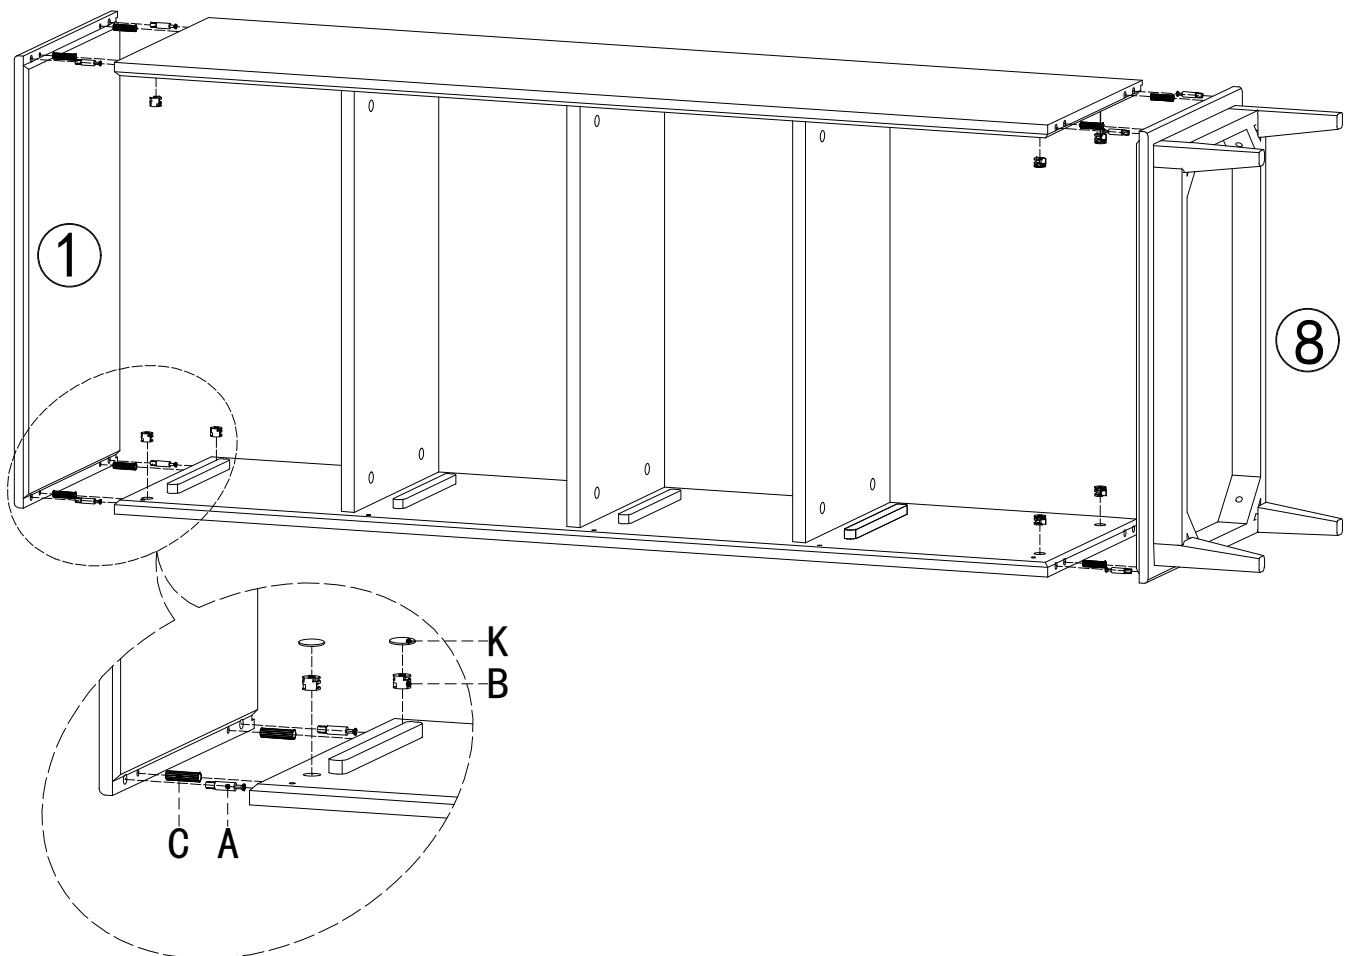


# Step 5

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Attach back panels (10), (11), (12) and (13) to the assembly from Step 4 using screws D and screwdriver N, in the positions shown.

**D x 36**

Tool: N (reused)

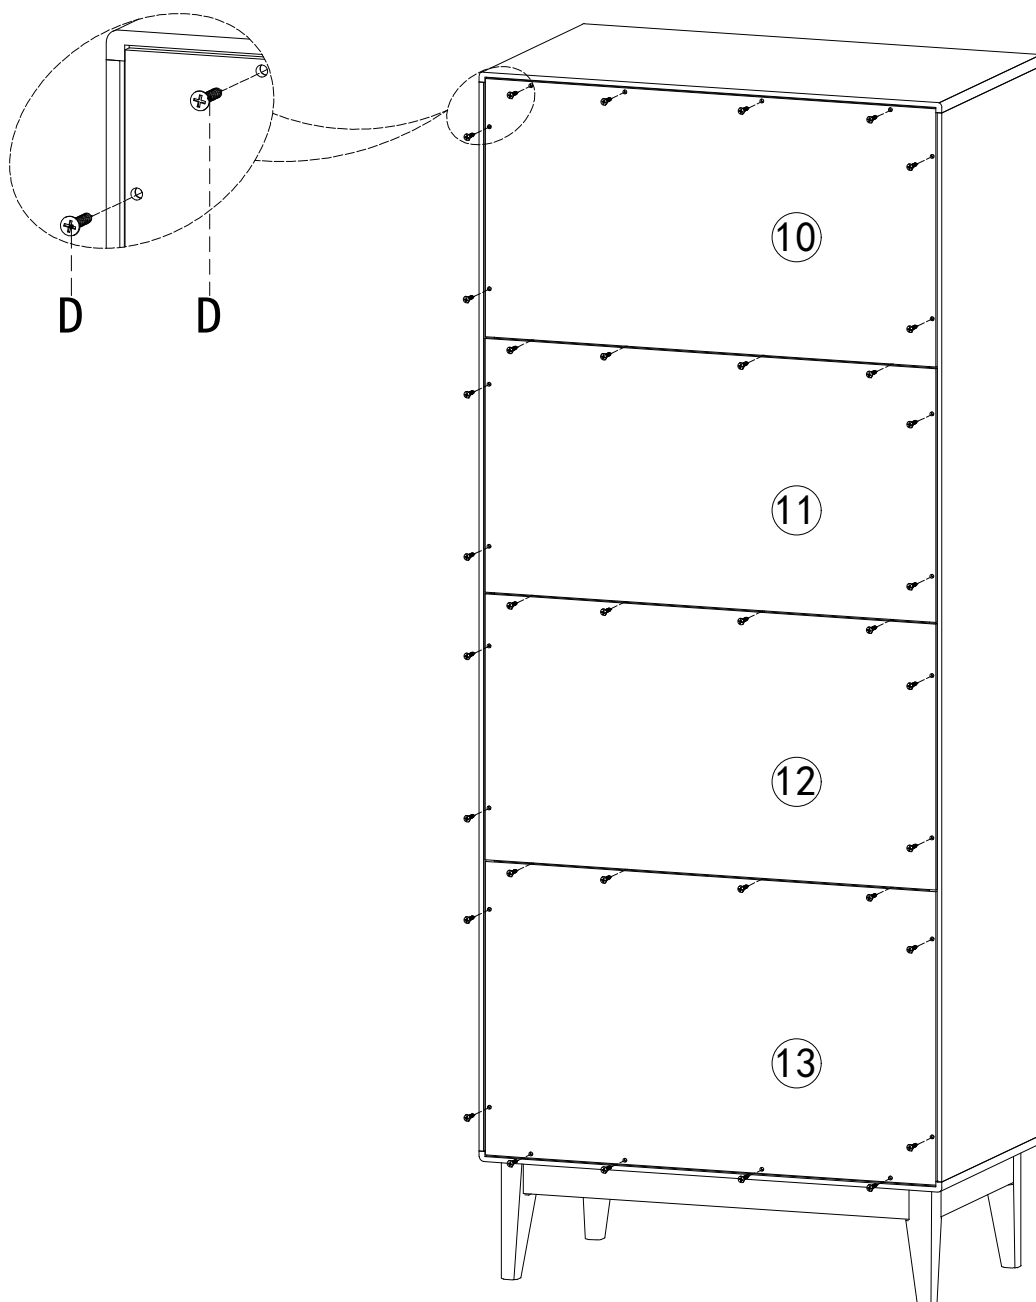


# Step 6

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Attach rubber bumpers L to both sides of the front edge of each shelf panel (4), as shown. Fit positioning bolt J at the lower inside end of left side panel (2).

L x 6 | J x 1

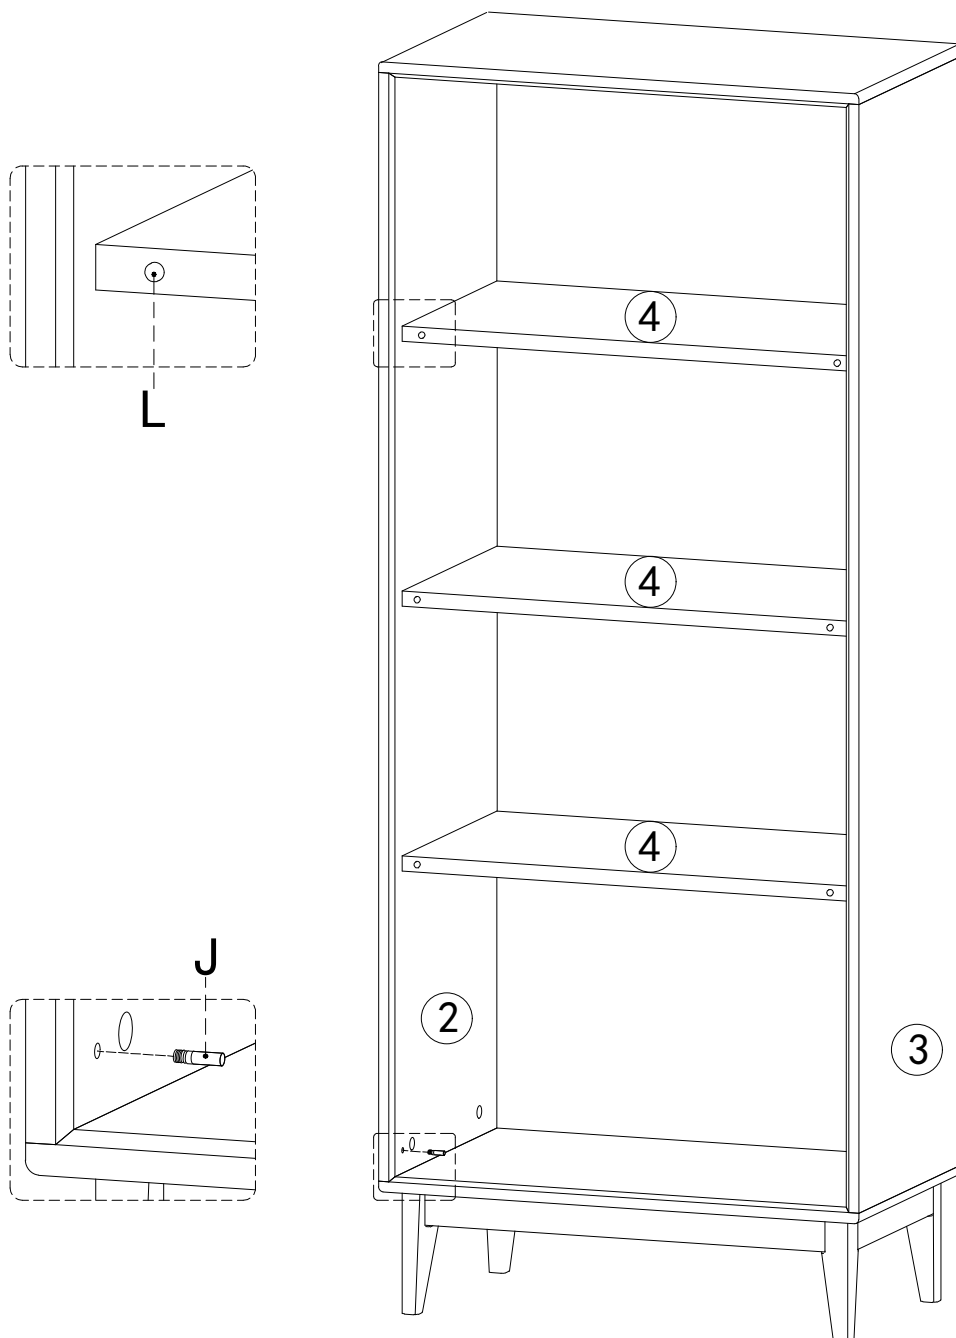


# Step 7

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Insert hinge pins I into the holes on the inside of side panels (2) and (3). Hold door panels (5), (6) and (7) horizontally on the pins. Gently push the doors inward until the pins slide into the door-frame slots, as shown.

1 x 8

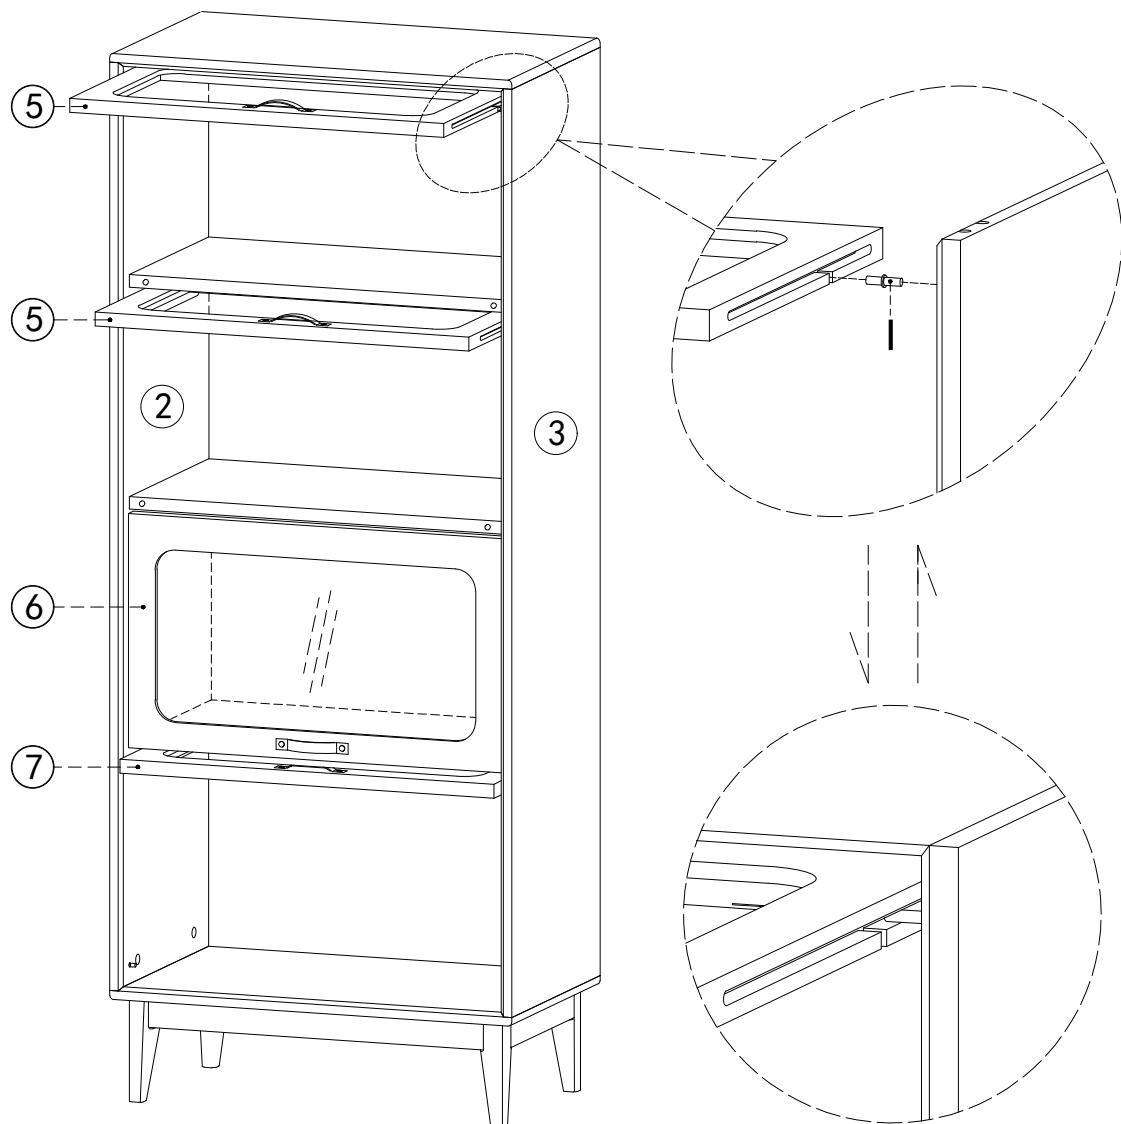

## Step 8

SG010 | 4-Tier Clear Glass Bookcase | 80 cm

Place the bookcase against the wall. Adjust the four preinstalled feet O until the bookcase is stable. Use anti-tip hardware kit M to connect the rear of the bookcase top to the wall to prevent tipping and injury. Assembly is complete.

**M x 1 set | O x 4 (preinstalled; adjust only)**

