 



ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

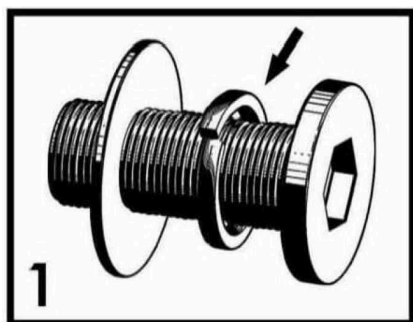

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

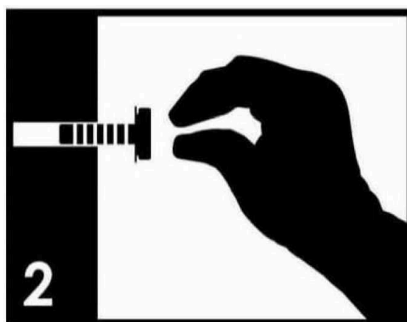

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

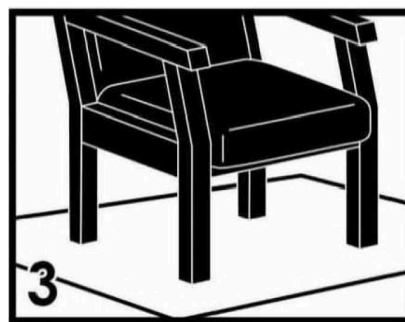

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

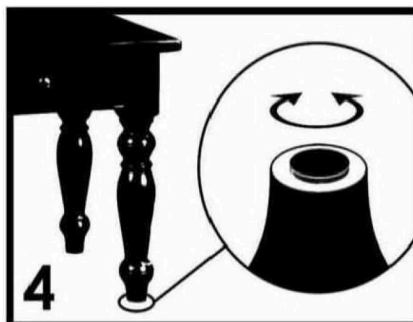

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

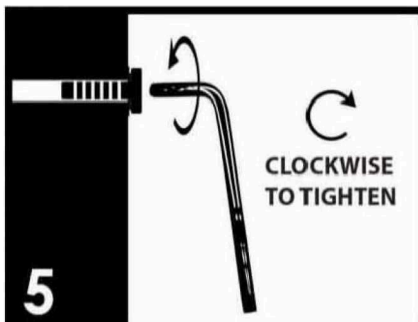

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

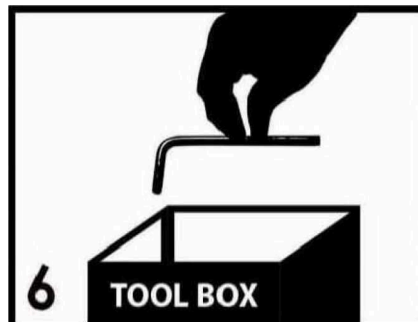


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

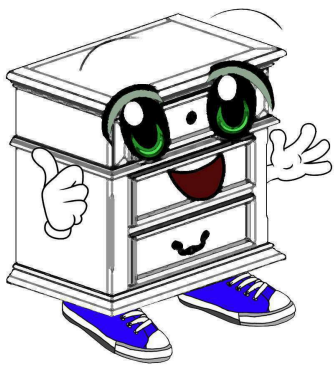


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List

 Hardware List




#1 x 1pc
Loveseat



#A x 7pcs
Screw M5*50MM



 
#2 x 1pc
Chaise Seat



#3 x 1pc
Loveseat Backrest



 
#4 x 1pc
Chaise Backrest



#5 x 2pcs
ARM (L & R)


 
#6 x 3pcs
Back Cushion





#7 x 2pcs
Leg A




#8 x 3pcs
Leg B



  Remove the following parts from the bottom compartments of loveseat (#1) and chaise seat (#2)

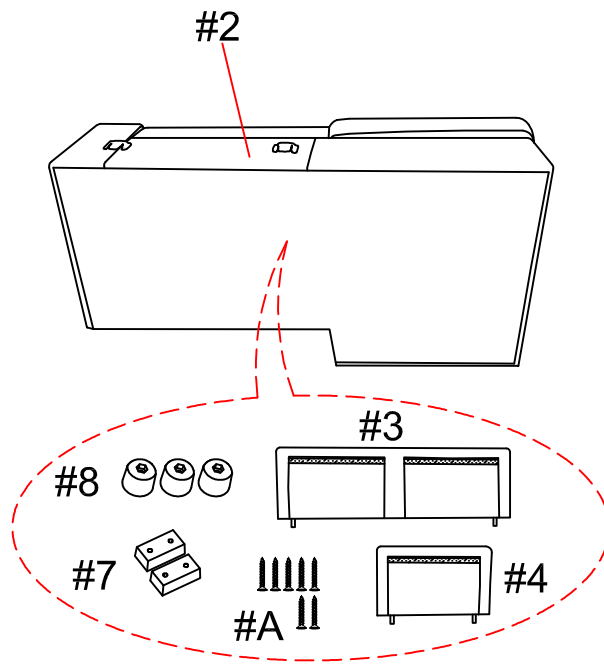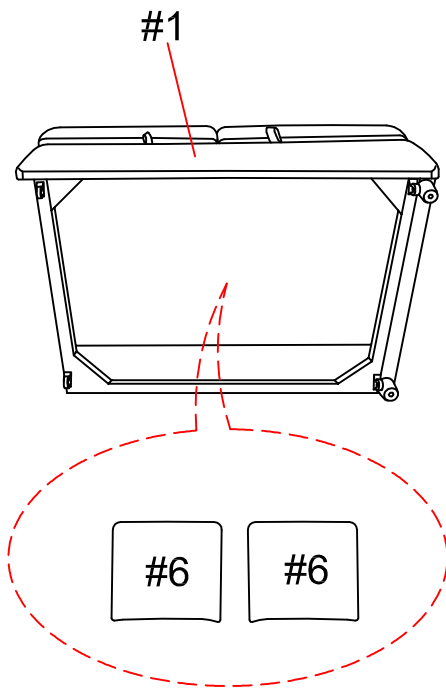


#A x 7pcs

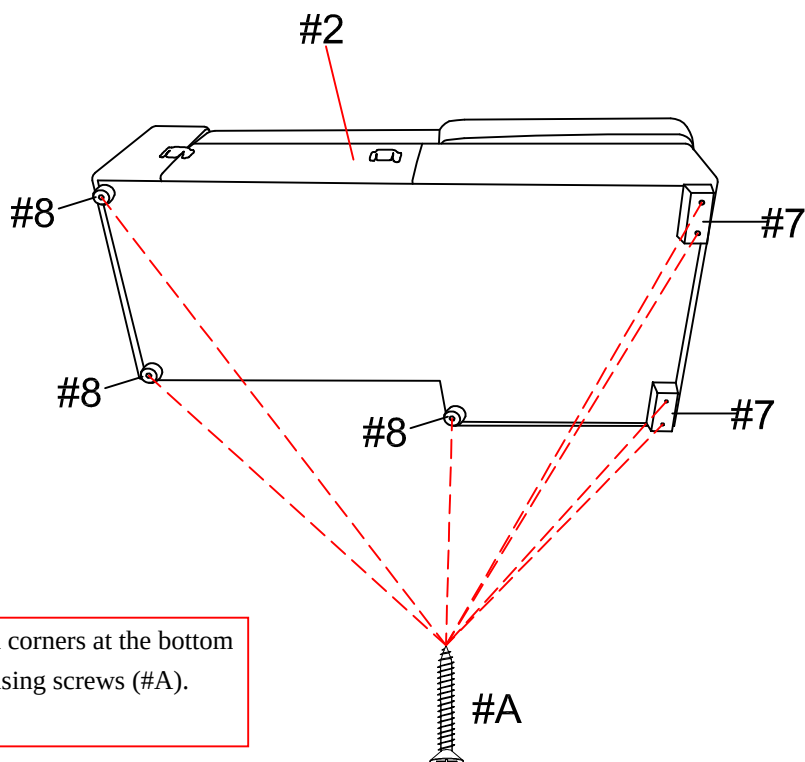 


Align legs (#7,8) to the solid wood corners at the bottom of the chaise seat (#2). Secure by using screws (#A).
There will be no pre-drilled holes.



 Align and attach the metal brackets of the loveseat (#1) and chaise seat (#2) to the metal brackets of the arms (#5R/L). Make sure it is firmly in place.

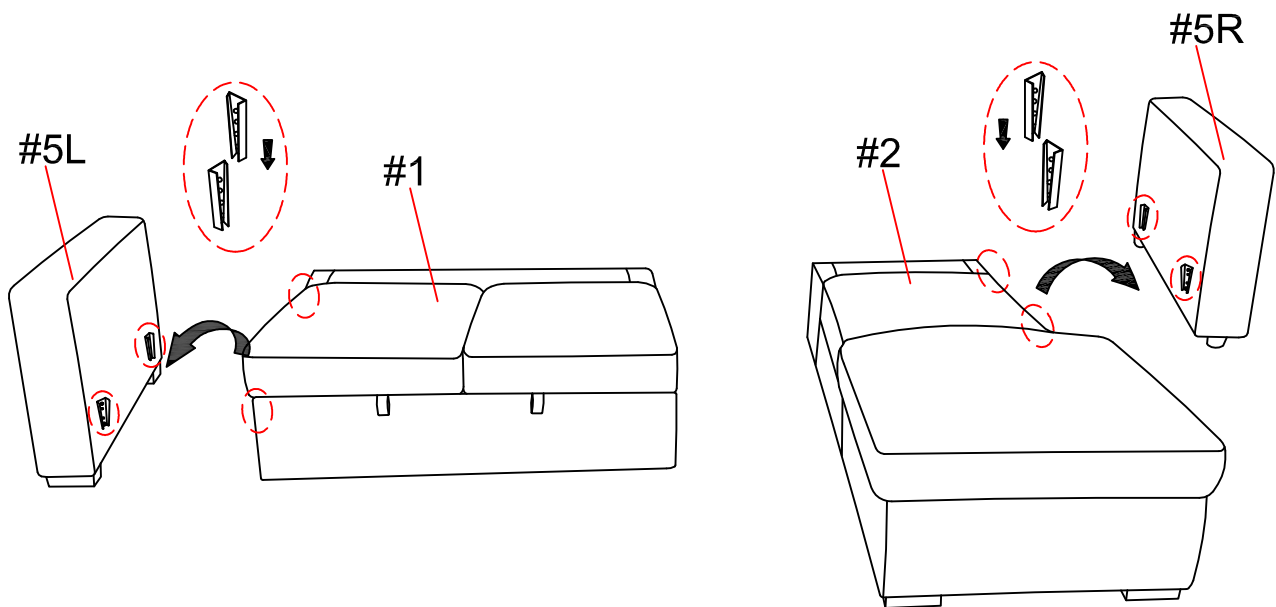


 Align and attach the metal brackets of the loveseat backrest (#3) and chaise backrest (#4) to the metal brackets of the loveseat (#1) and chaise seat (#2). Make sure it is firmly in place.

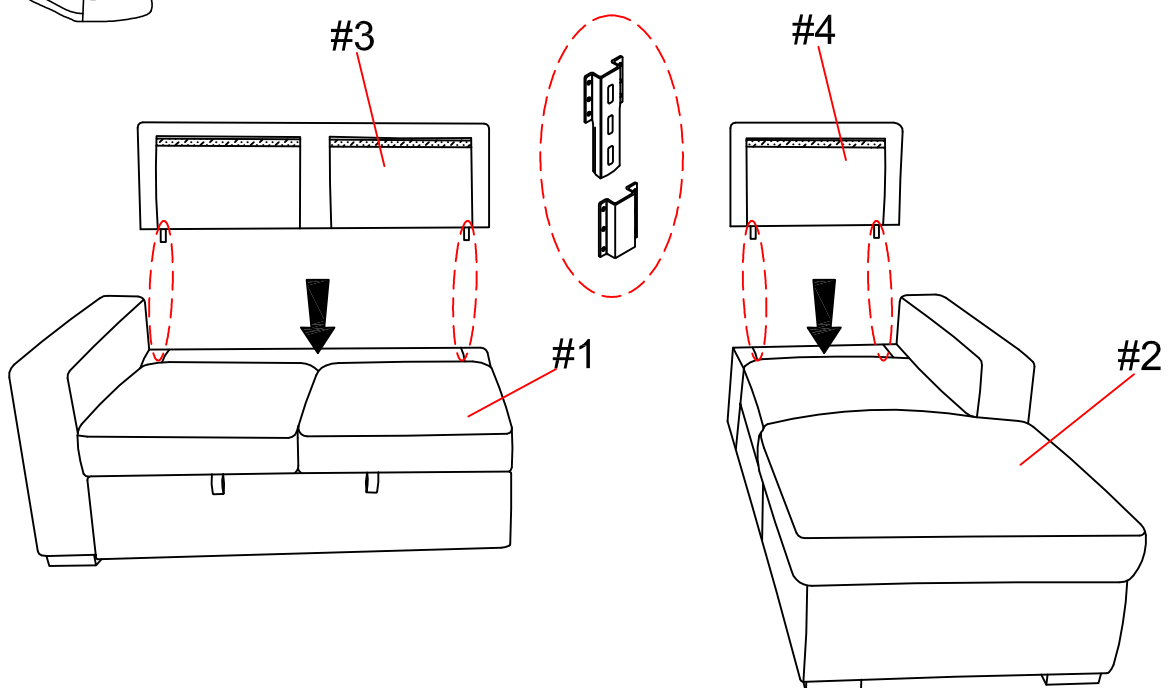



 Align and attach the metal hooks to each other. Make sure it is firmly in place.

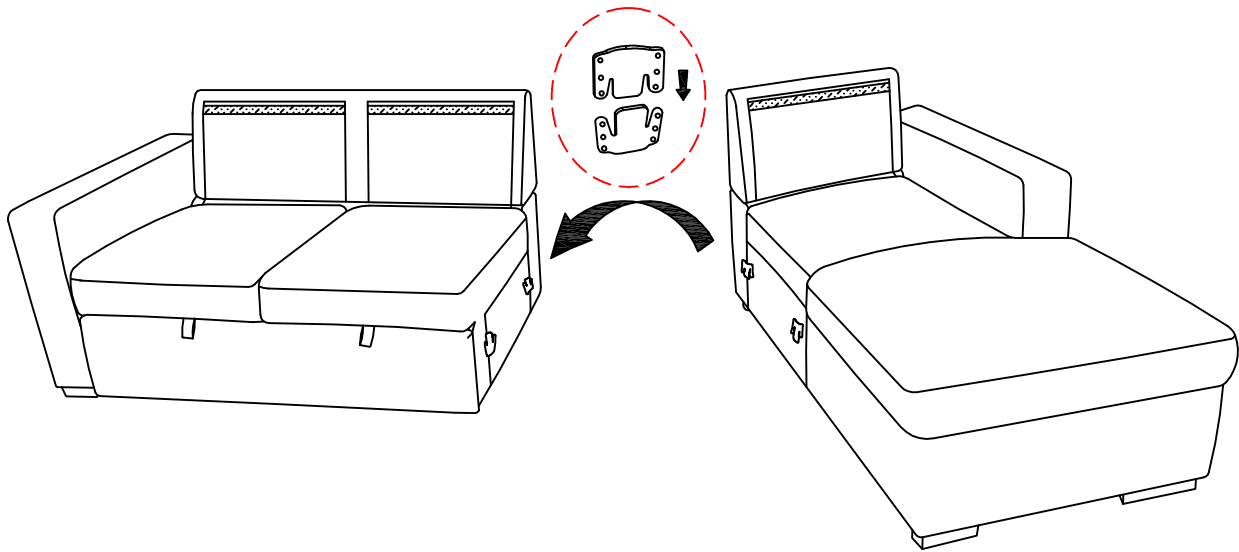

Place back cushions (#6) to the backrest.

