



ASSEMBLY INSTRUCTION

STOCK CODE: 2402060


a		20
b		8
c		8
d		16
e		4
f		12
g		1
h		2
i		2
j		4
k		2

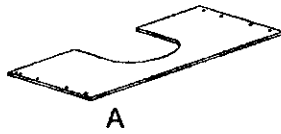

 
A



D

 

E

 

F




G



B



C

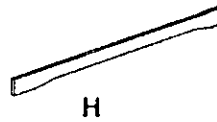

H



I




J


STEP1




STEP2

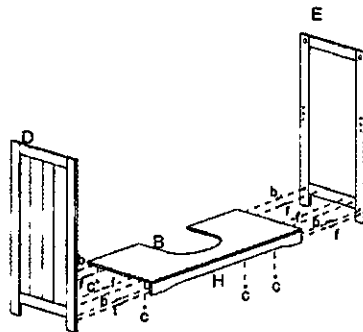


STEP3

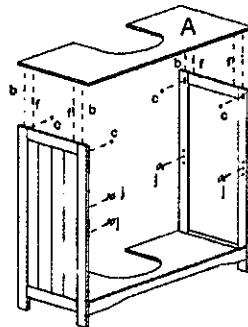


STEP4

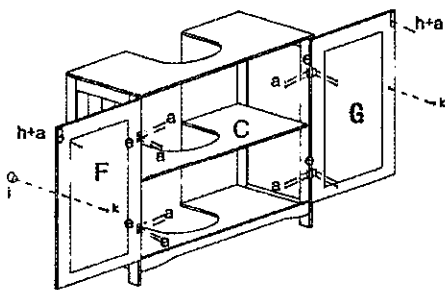

STEP5

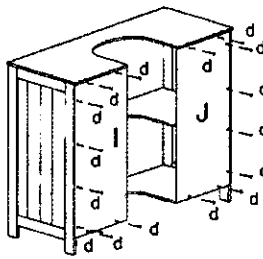

STEP6

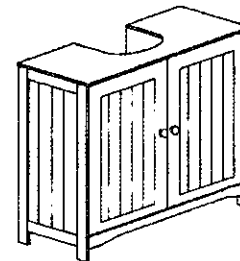

ATTENTION: KEEP OUT OF DIRECT SUNLIGHT

in the unlikely event of missing parts please contact spareparts@premierhousewares.co.uk. Detailing: when and where purchased, stock code, detail of missing piece(s), full name and address.