

AI - ACSC24ST

 
Assembly Instructions




Customer Service E-mail Address : xiuxiumaoyius@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

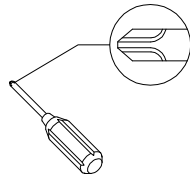

 - V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

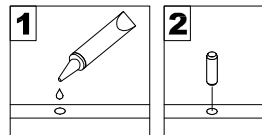


 In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

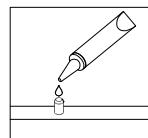


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

   
 
 
- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

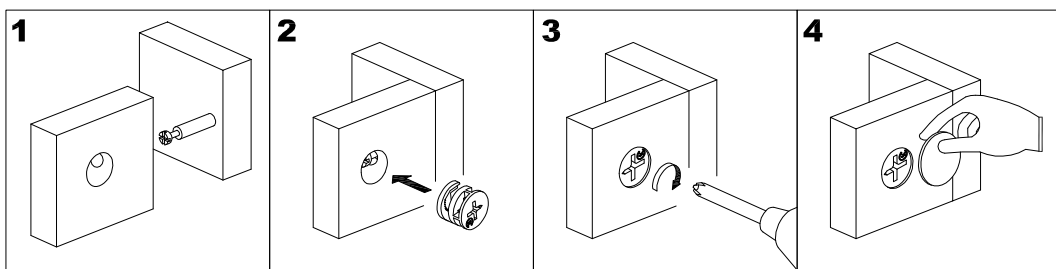


 


 
 
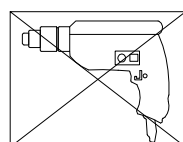 


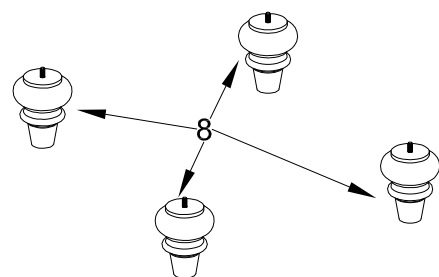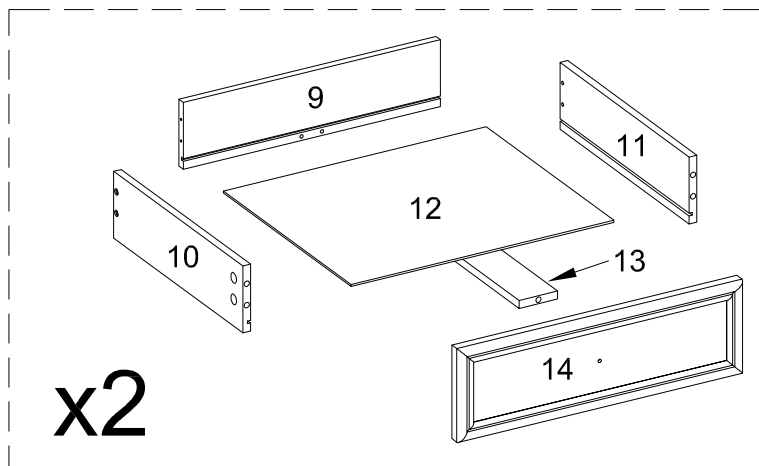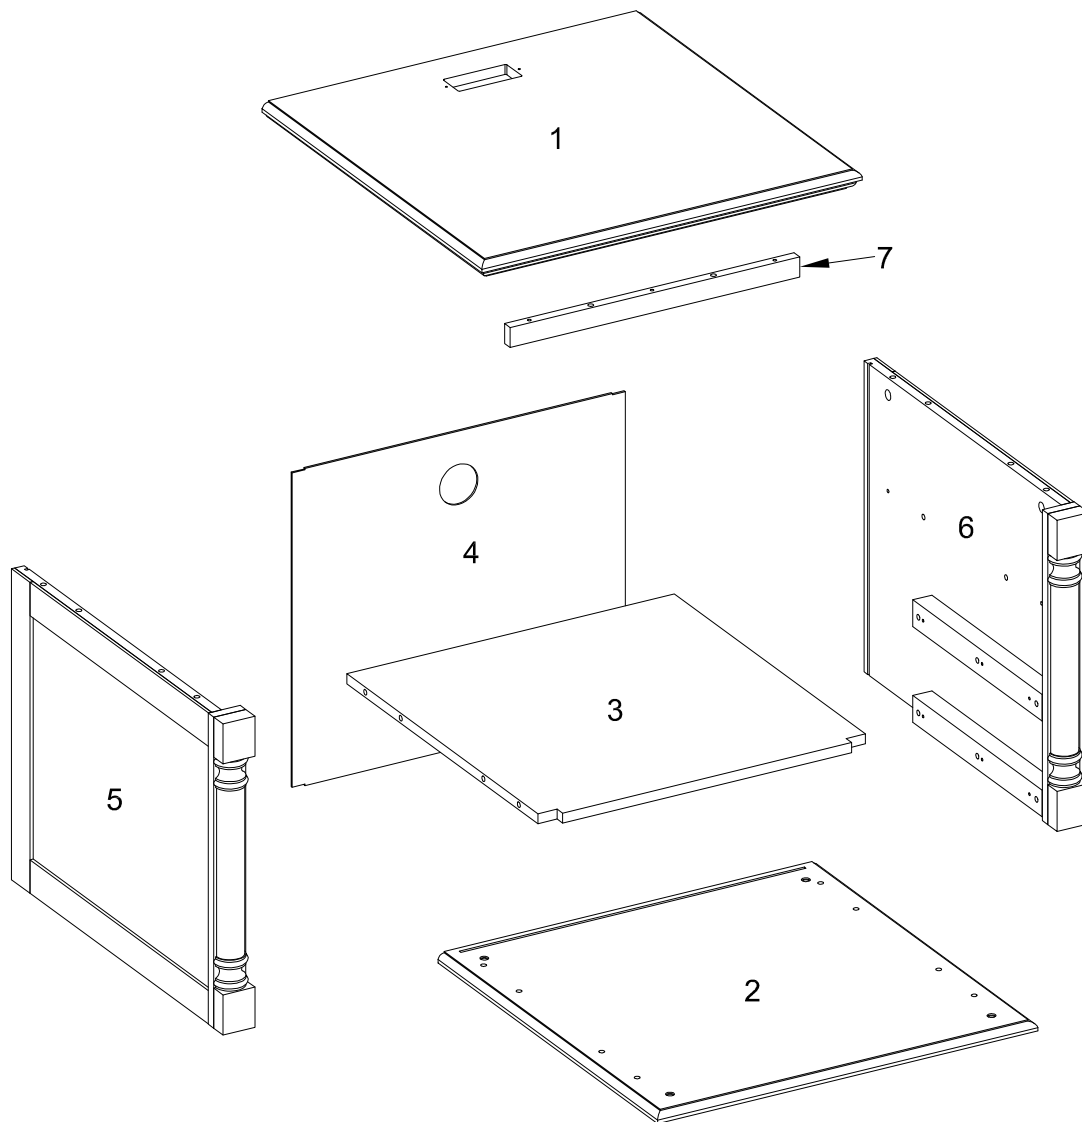

 

 
 
 
 
 
 
- VII. Power tools should not be used to assemble this product .




Parts List




Hardware List

A		Ø8x30mm	Long dowel	14 pcs
B		Ø6x35mm	Cam bolt	18 pcs
C		Ø15x11mm	Large Cam lock	8 pcs
D		Ø30mm	Cam cover	18 pcs
E			Glue	1 pc
F			Plastic Bracket	6 pcs
G		Ø3x17mm	Flat-head screw	6 pcs
H		Ø4x12mm	Knob bolt	2 pcs
J			Knob	2 pcs
K		Ø15x9.5mm	Small Cam lock	10 pcs
L		Ø4x38mm	Screw	15 pcs
M		Ø6x50mm	Screw	4 pcs
N		M 4	Allen wrench	1 pc
P		Ø3.5x12mm	Screw	26 pcs
Q		14"	Left Glide Track	2 pcs
R		14"	Right Glide Track	2 pcs
S		14"	Left Glide Runner	2 pcs
T		14"	Right Glide Runner	2 pcs
U			USB Interface	1 pc

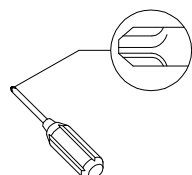 


Philips head screwdriver required for assembly
(not included)

 
Step 1

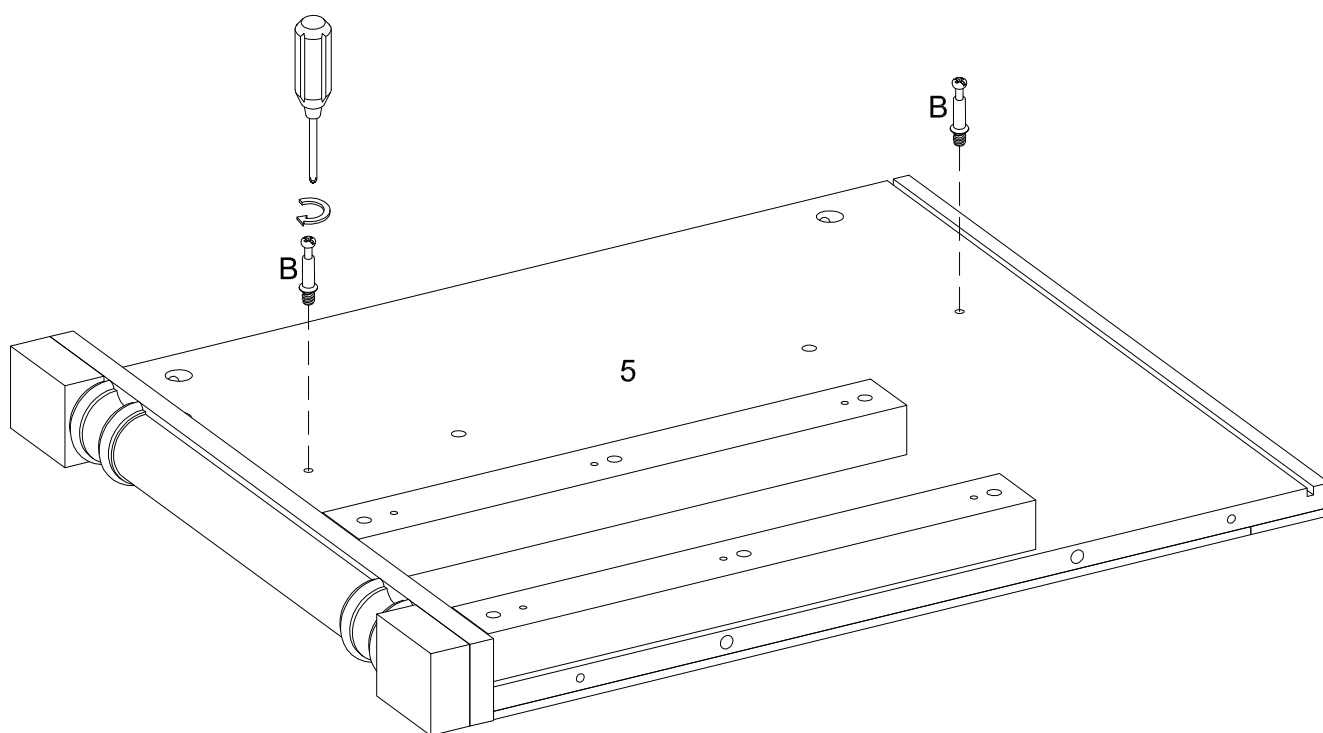

 
Step 2

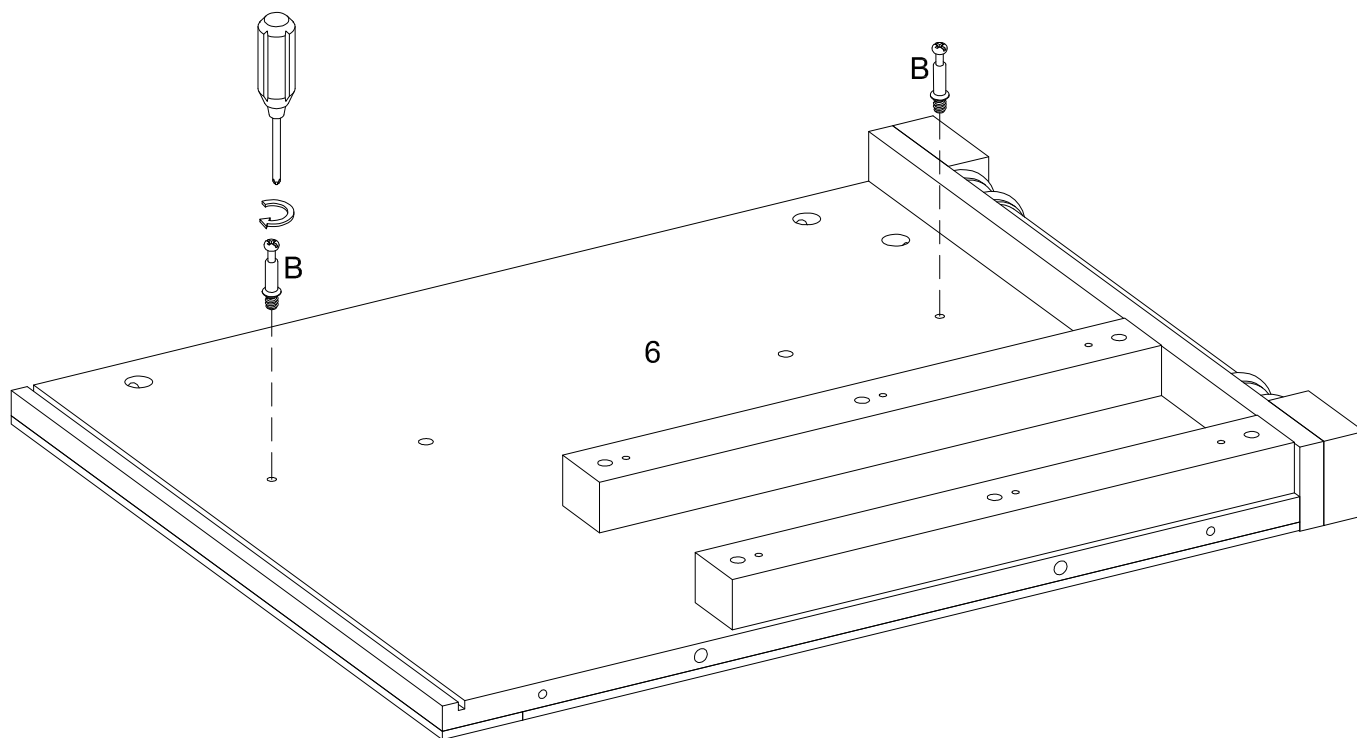


 
Step 3

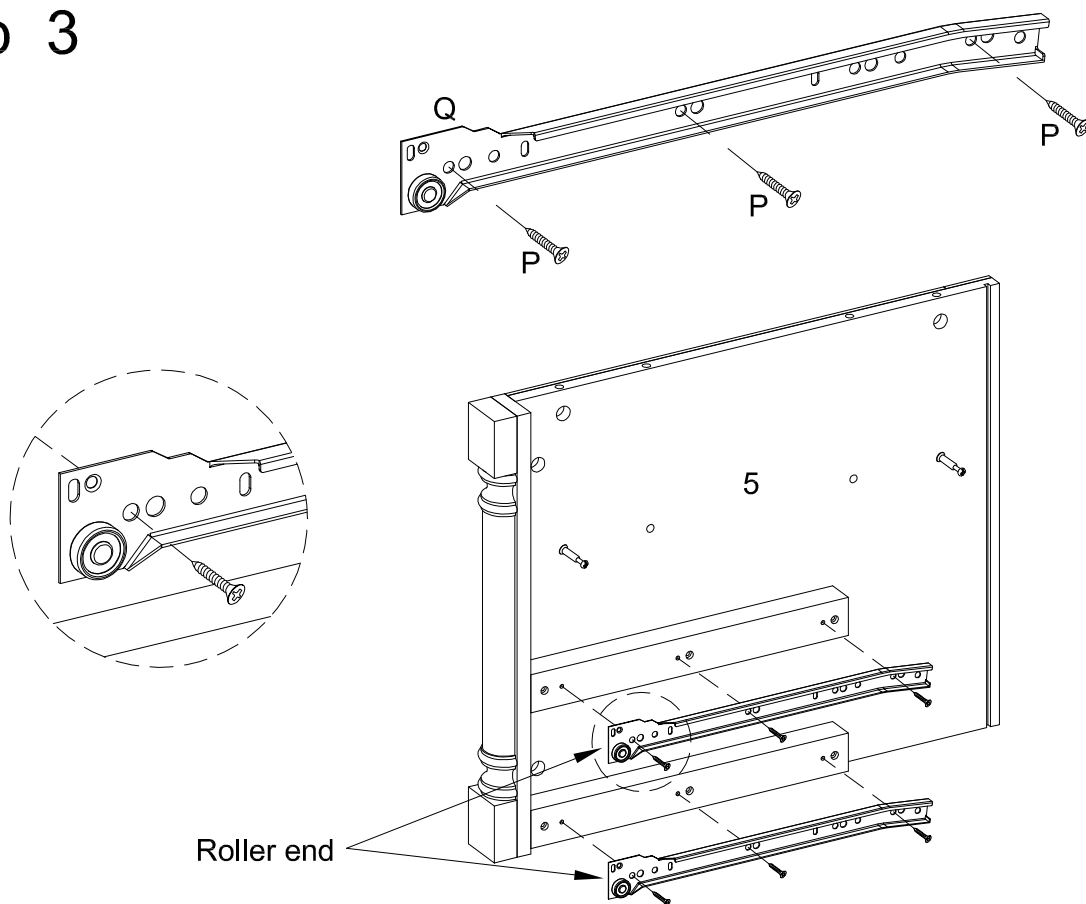

 
Step 4

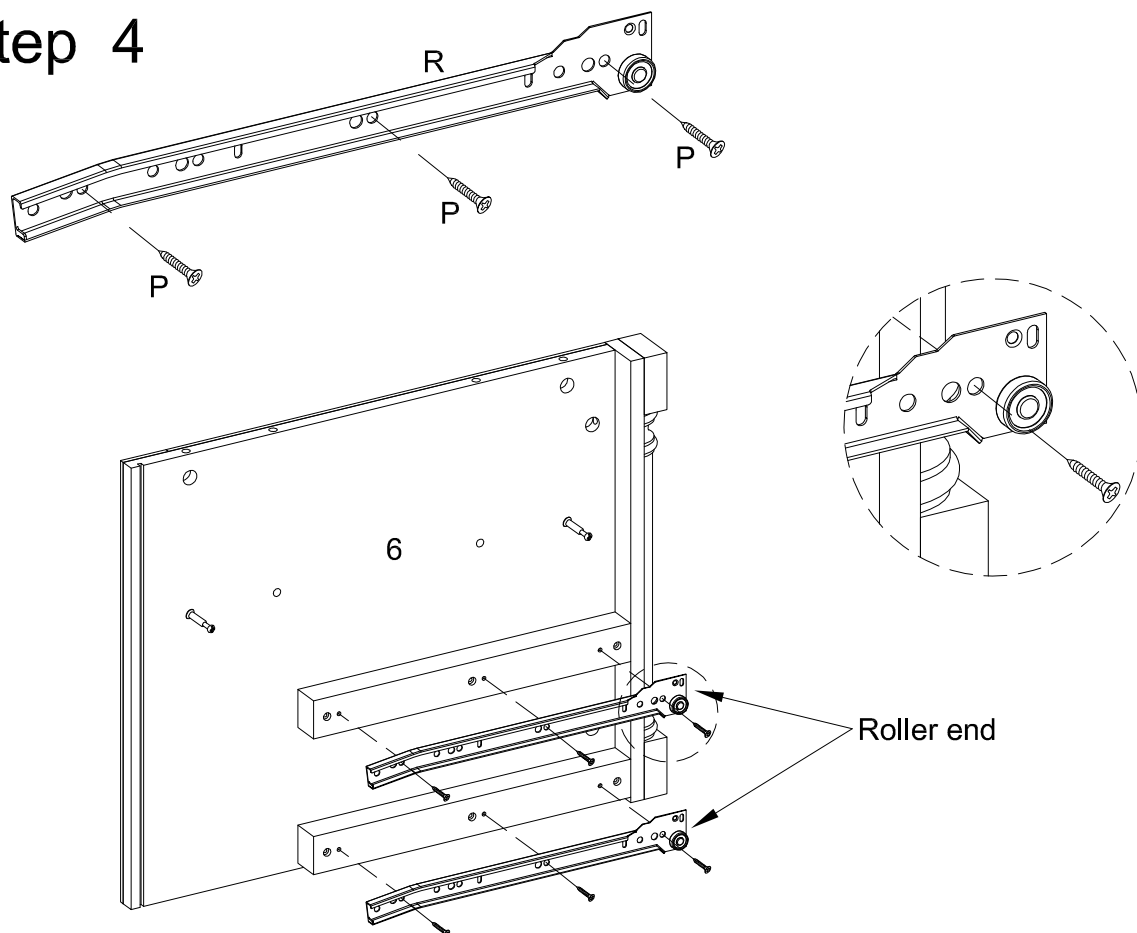

  
Step 5

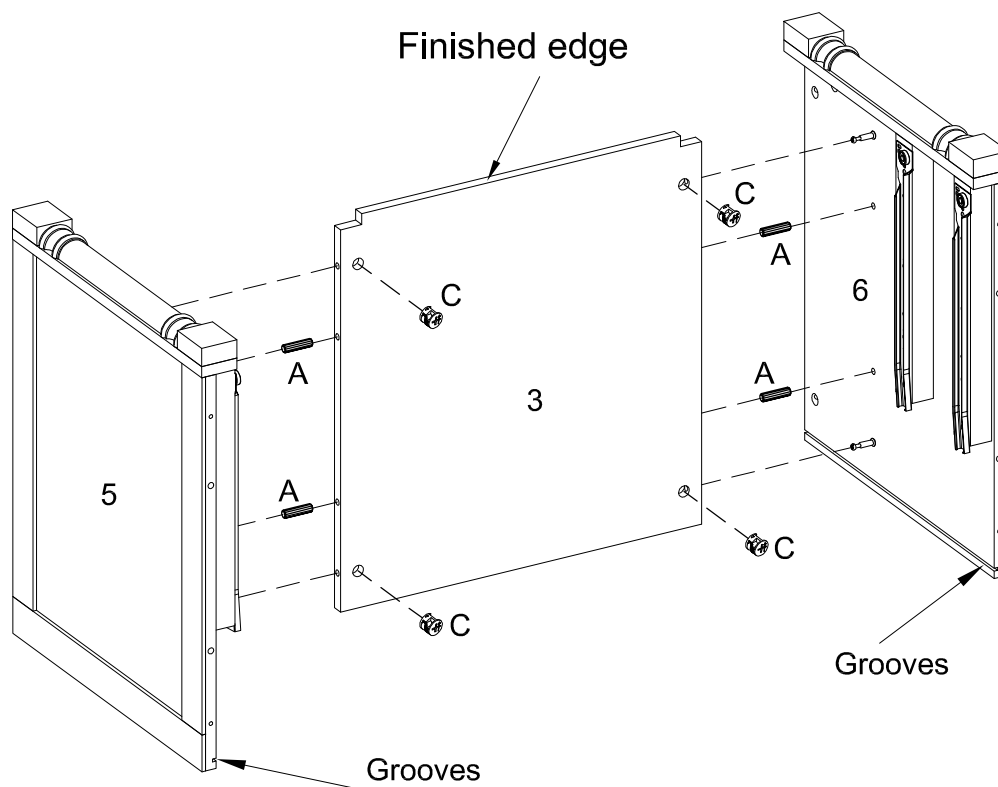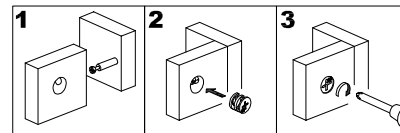

 
Step 6

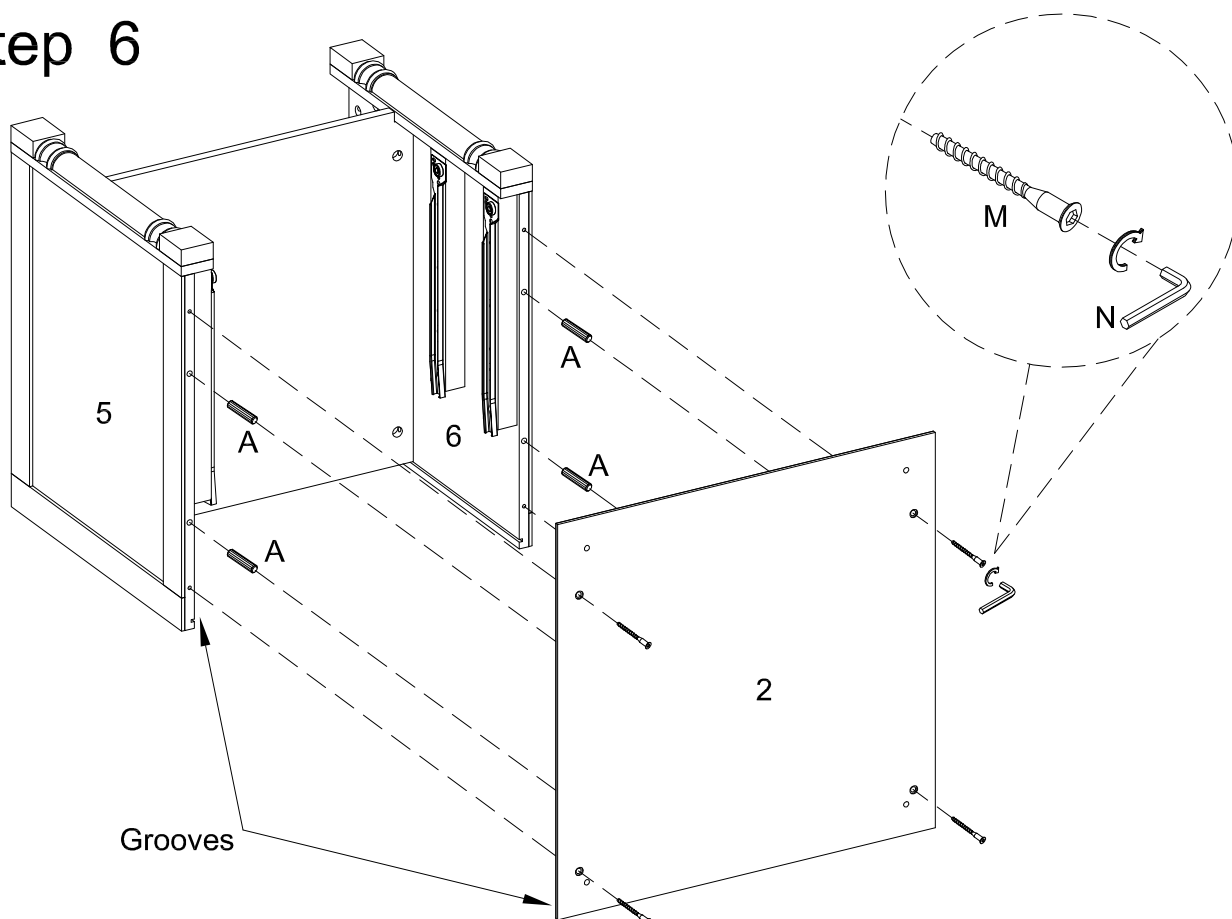

 
Step 7

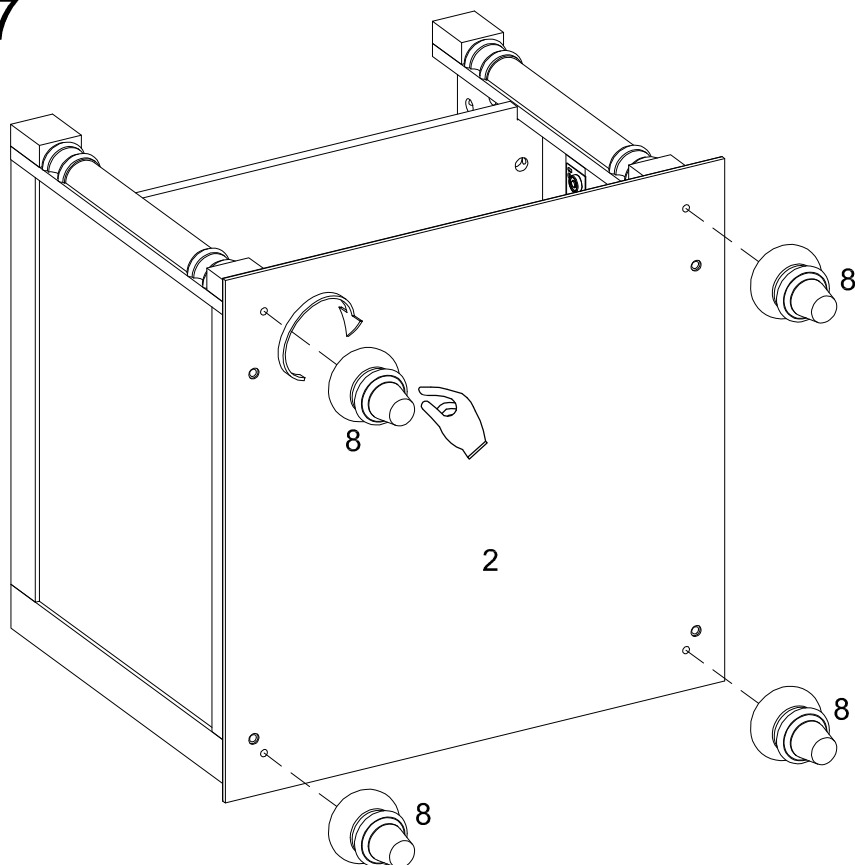

 
Step 8

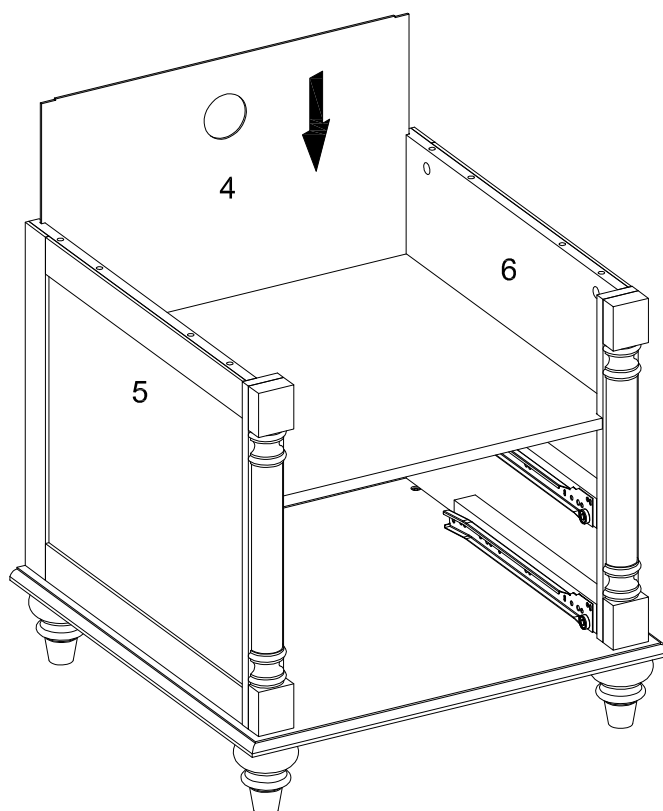

 
Step 9

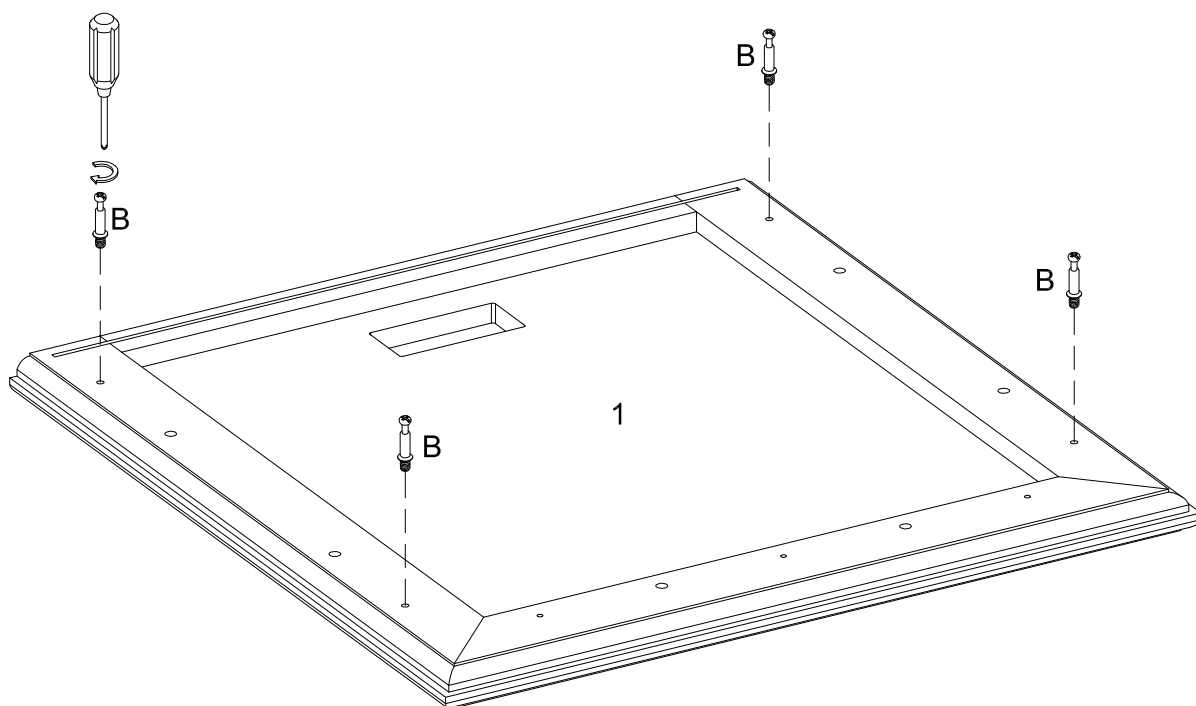

 
Step 10

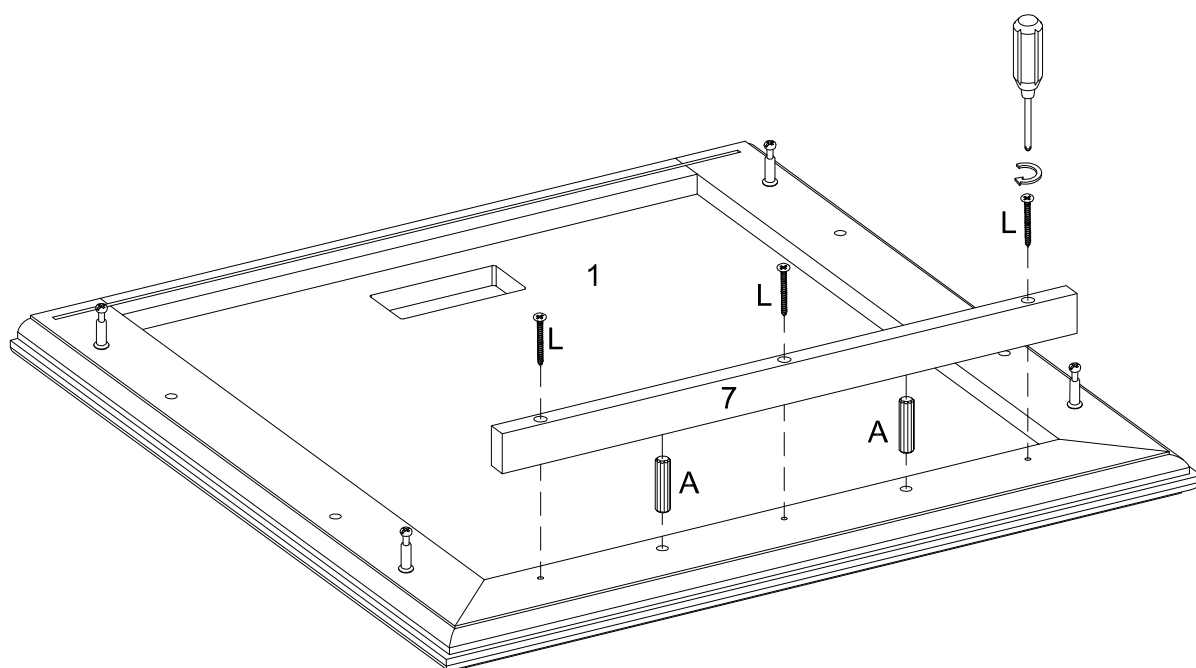

 
Step 11

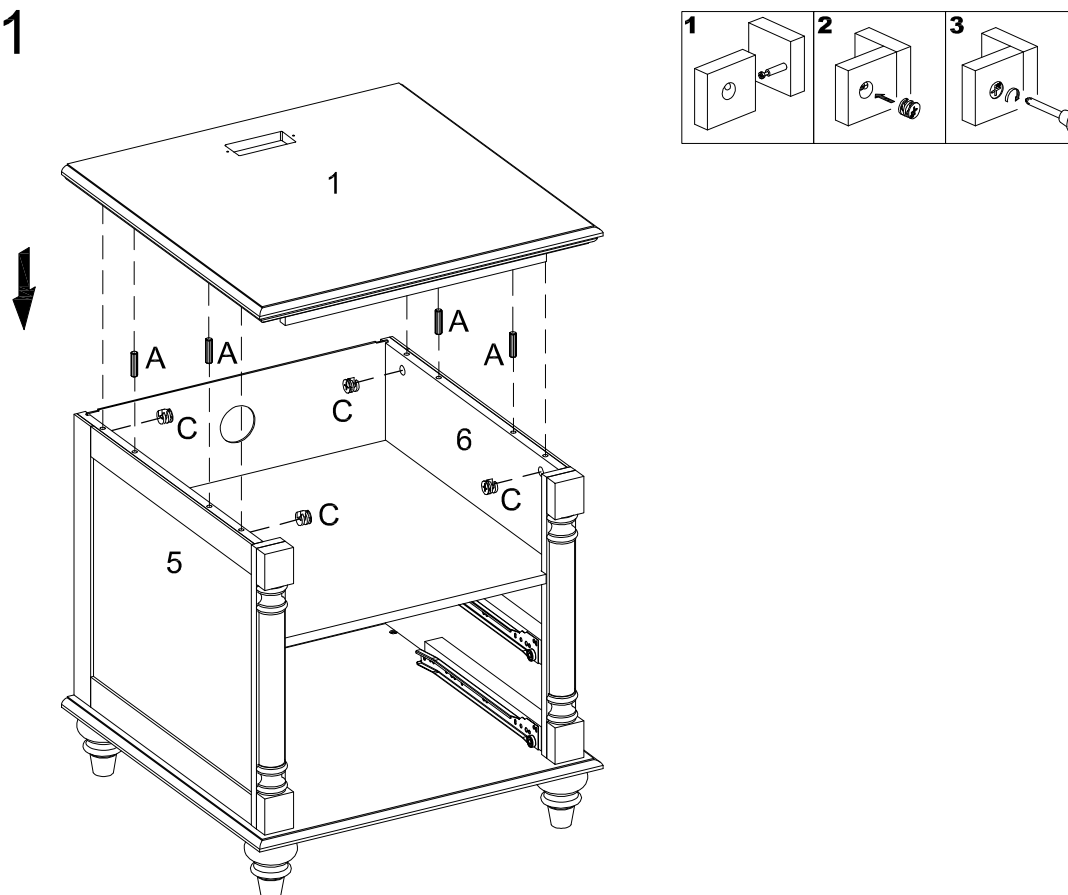

 Step 12

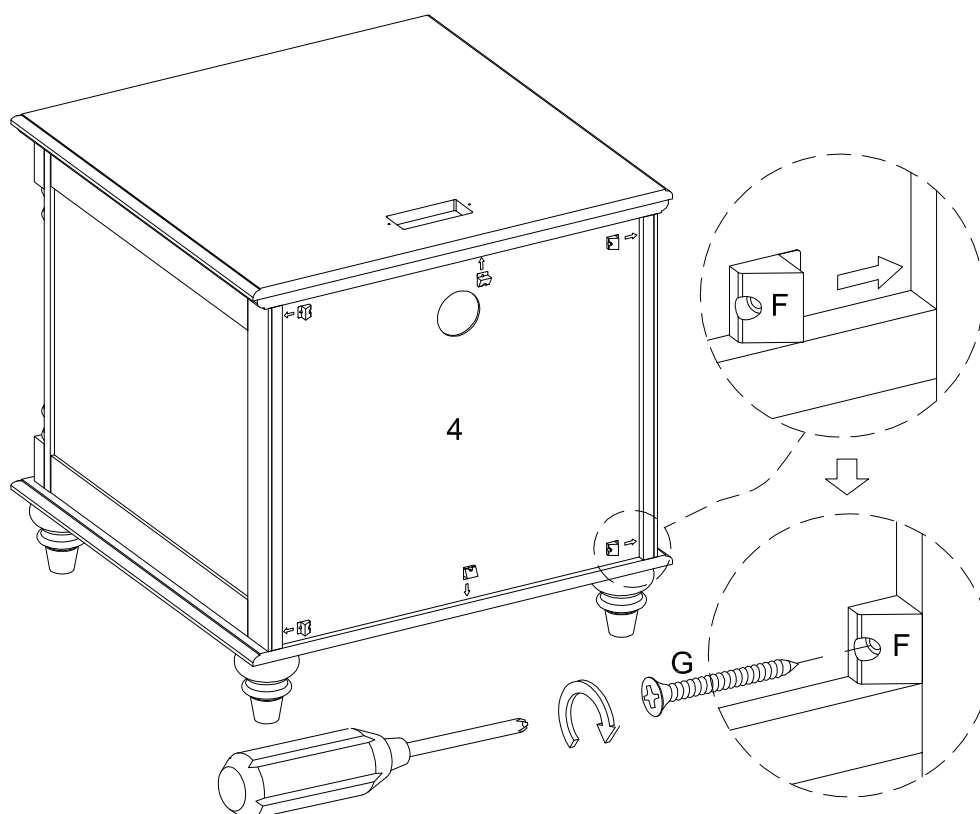


 Step 13

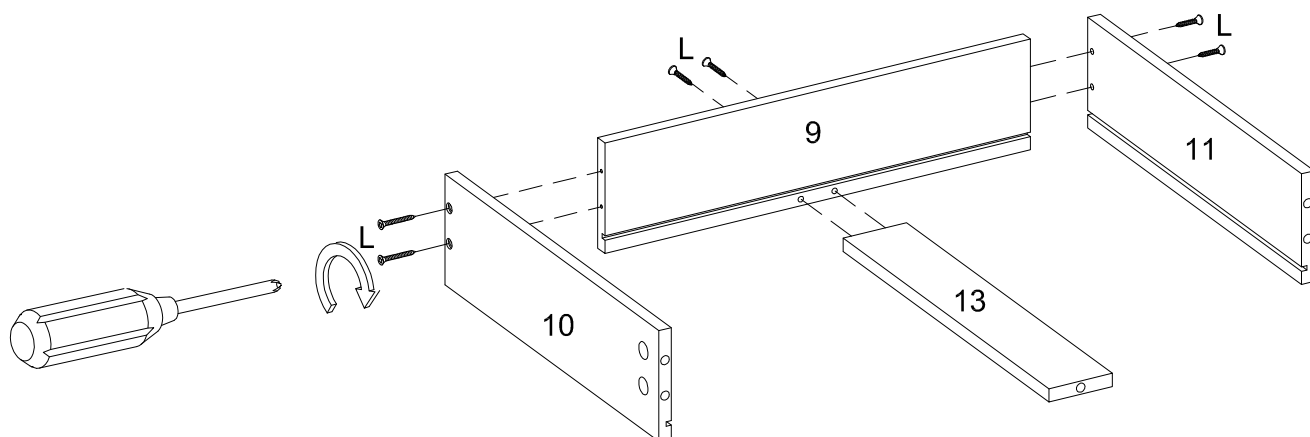

x2

 
Step 14

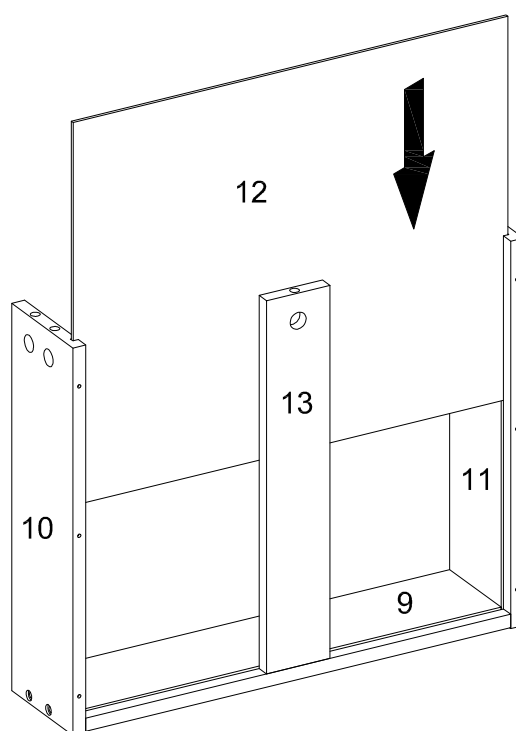



x2

Step 15

 x2

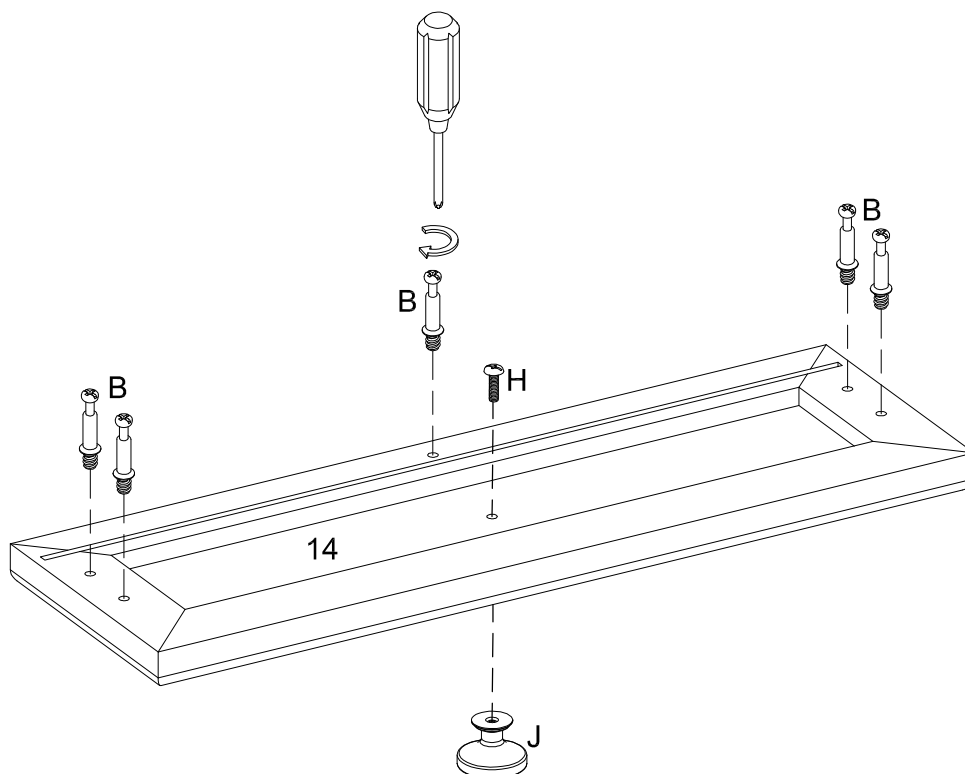


  Step 16

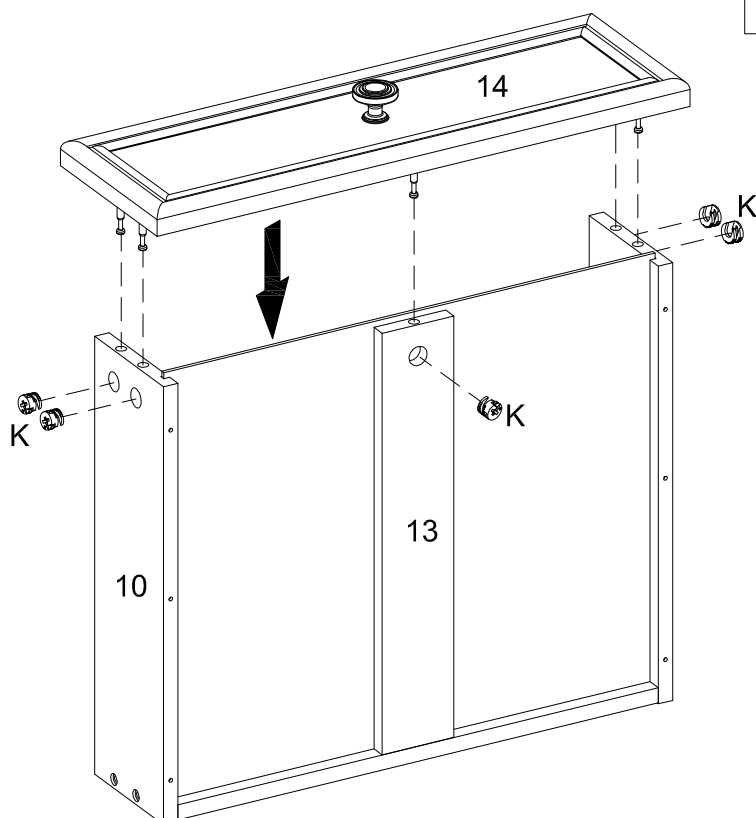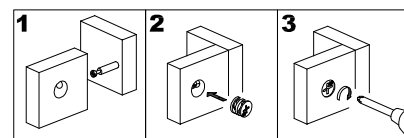


x2

 
Step 17

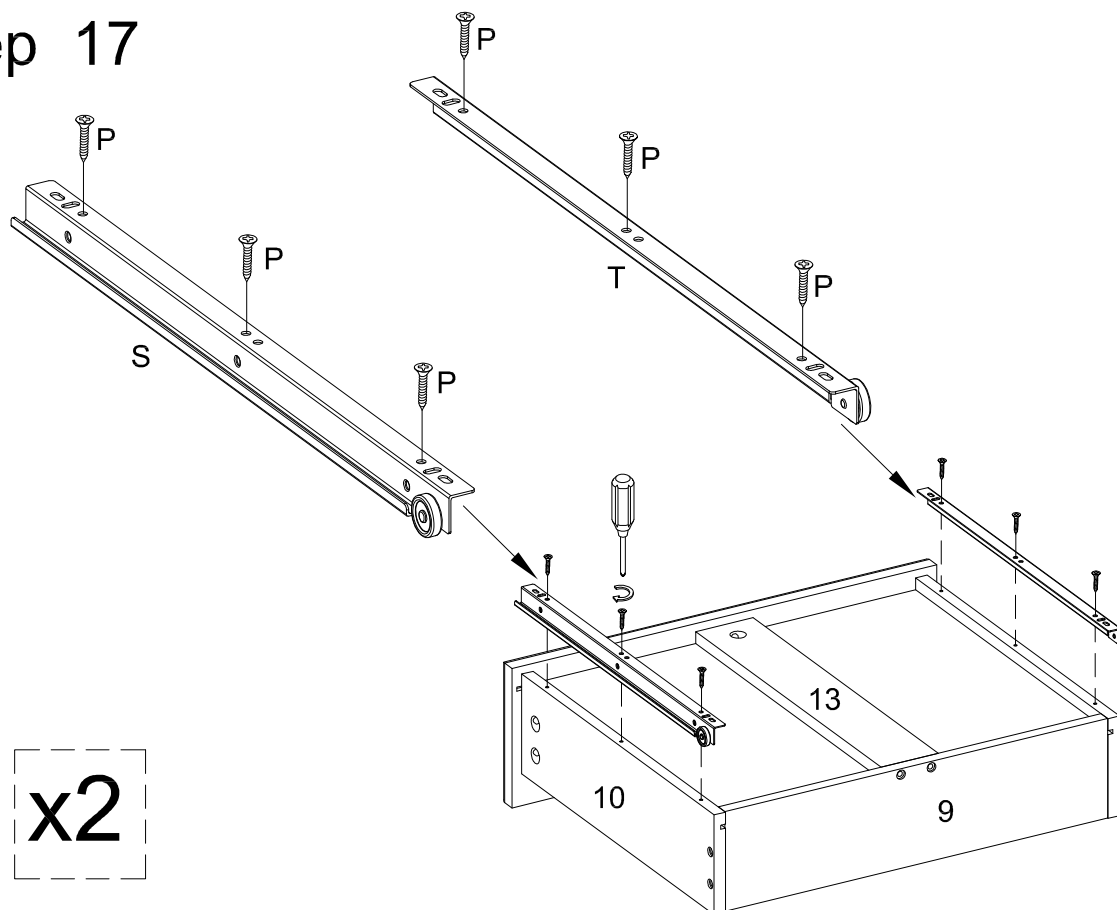

 
Step 18

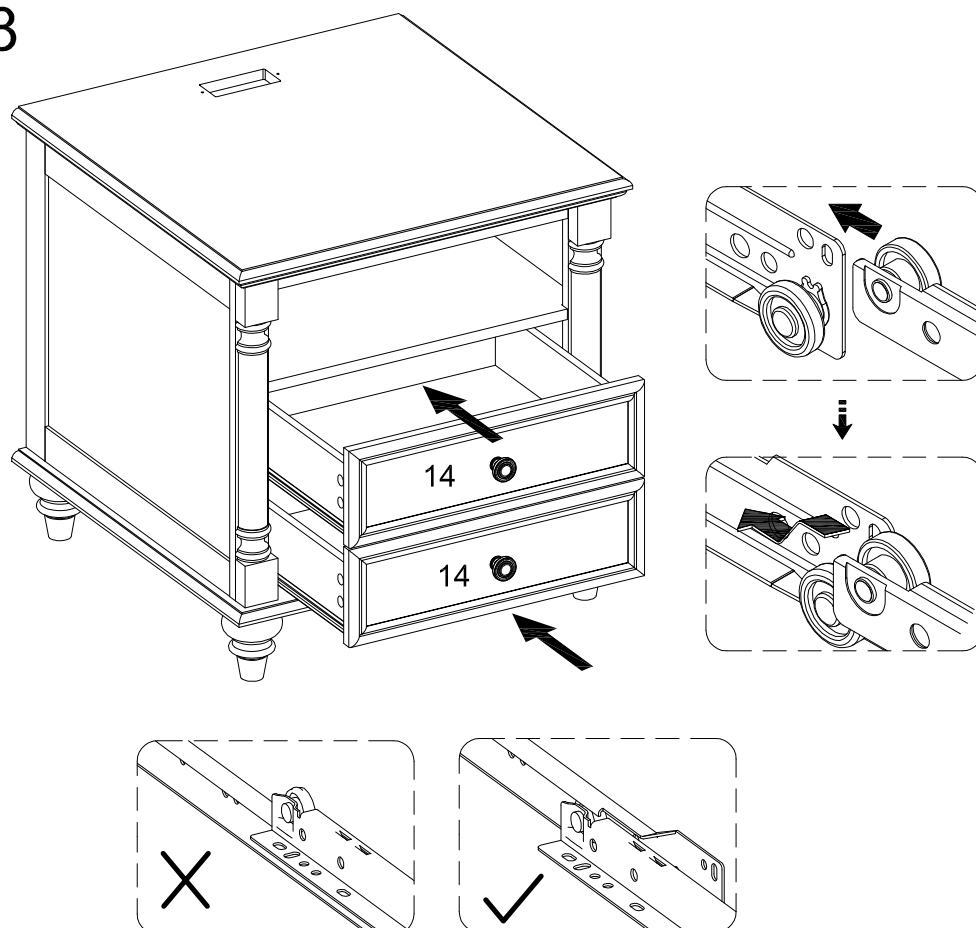

 Step 19

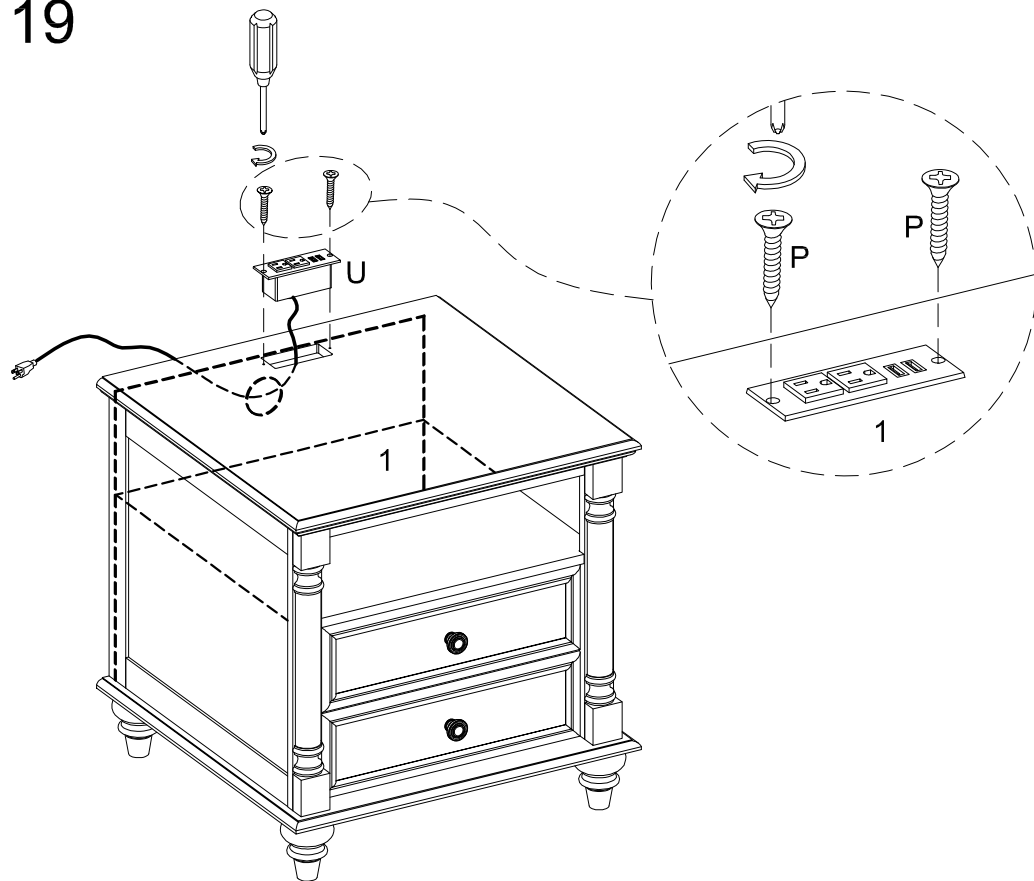

 Step 20

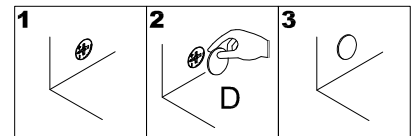

Final Assembly