 


65" ELECTRIC FIREPLACE MEDIA ENTERTAINMENT TV STAND WITH LED LIGHTS AND CRACKLING SOUND

ASSEMBLY, CARE & USE INSTRUCTIONS

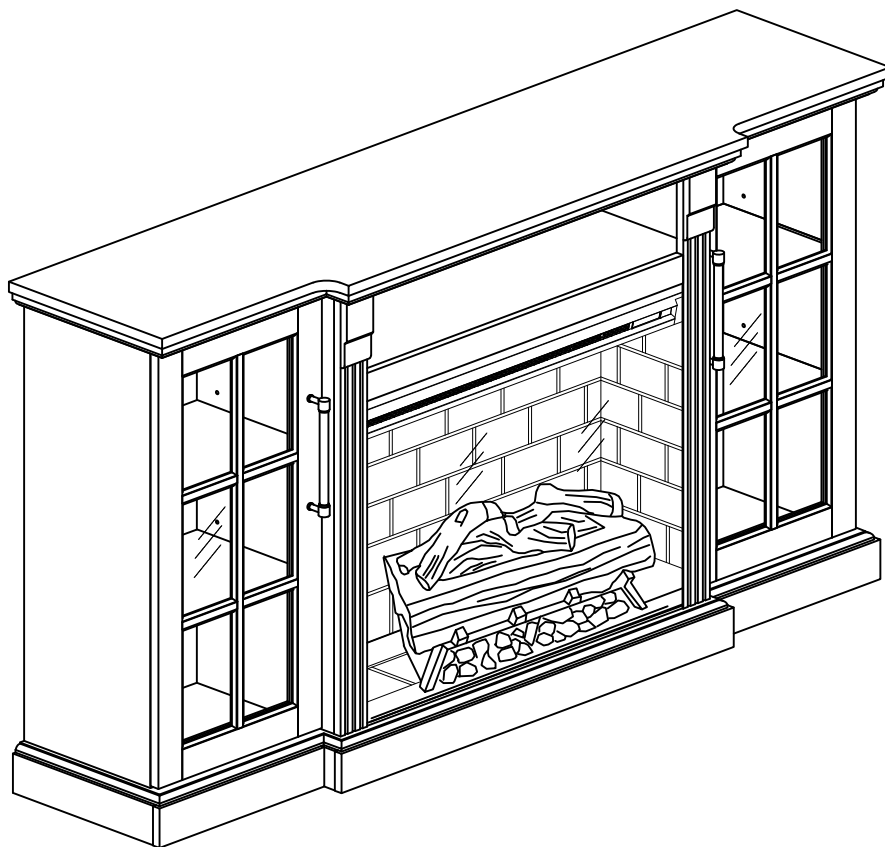

W127-2822-RB

 
 
Thank you for your trust in purchasing our electric fireplace media mantel. We are committed to continuously developing quality products designed to enhance your home. For more information and to view our full range of products available for your home improvement needs.

 
CAUTION: This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

Note: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.



Weight limitations are as follows:

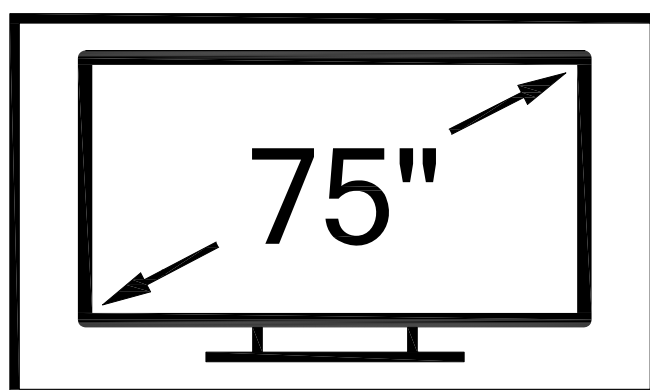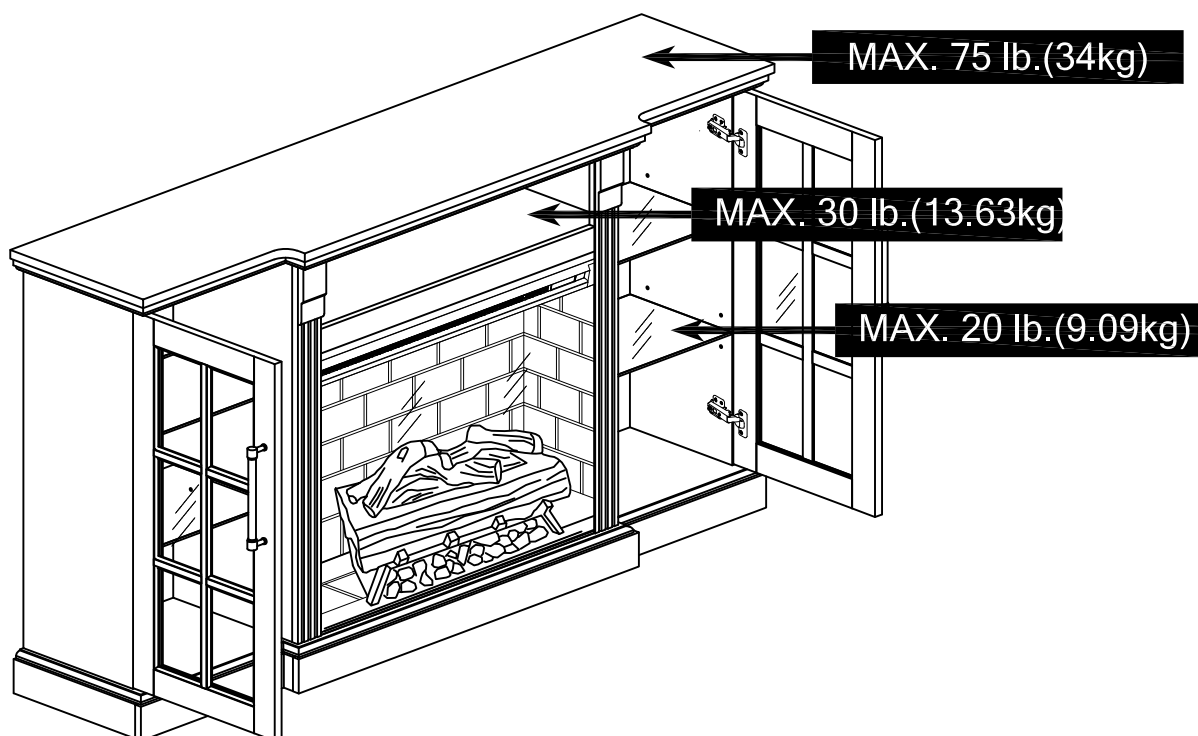


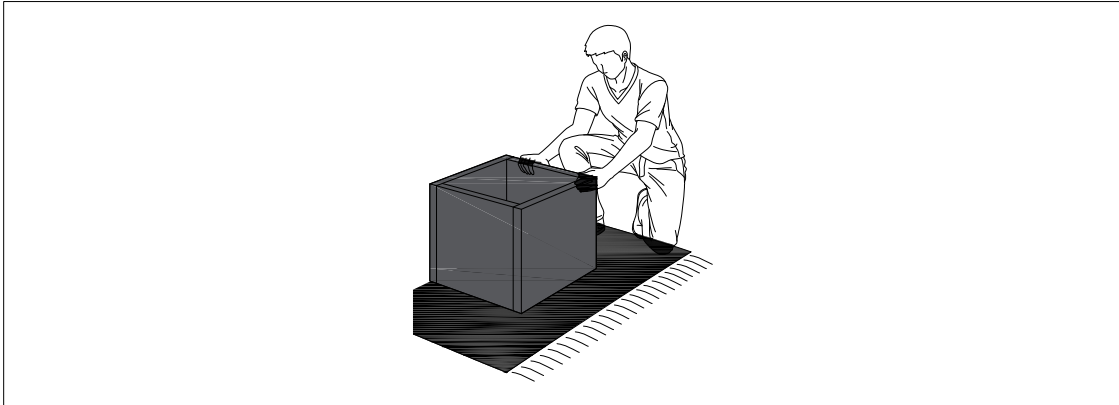

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

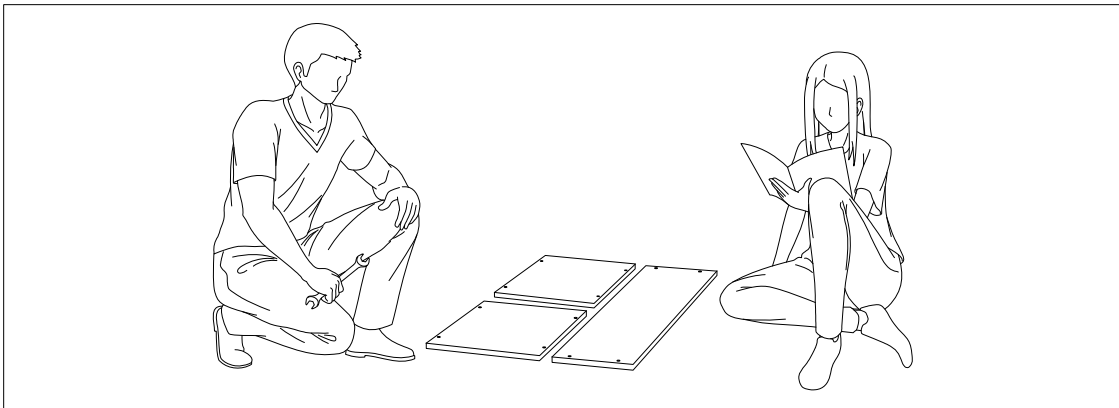

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly.

 
Hand tight all hardware and careful not to over tighten to avoid damaging the product.

CAUTION

There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation













PARTS IDENTIFICATION

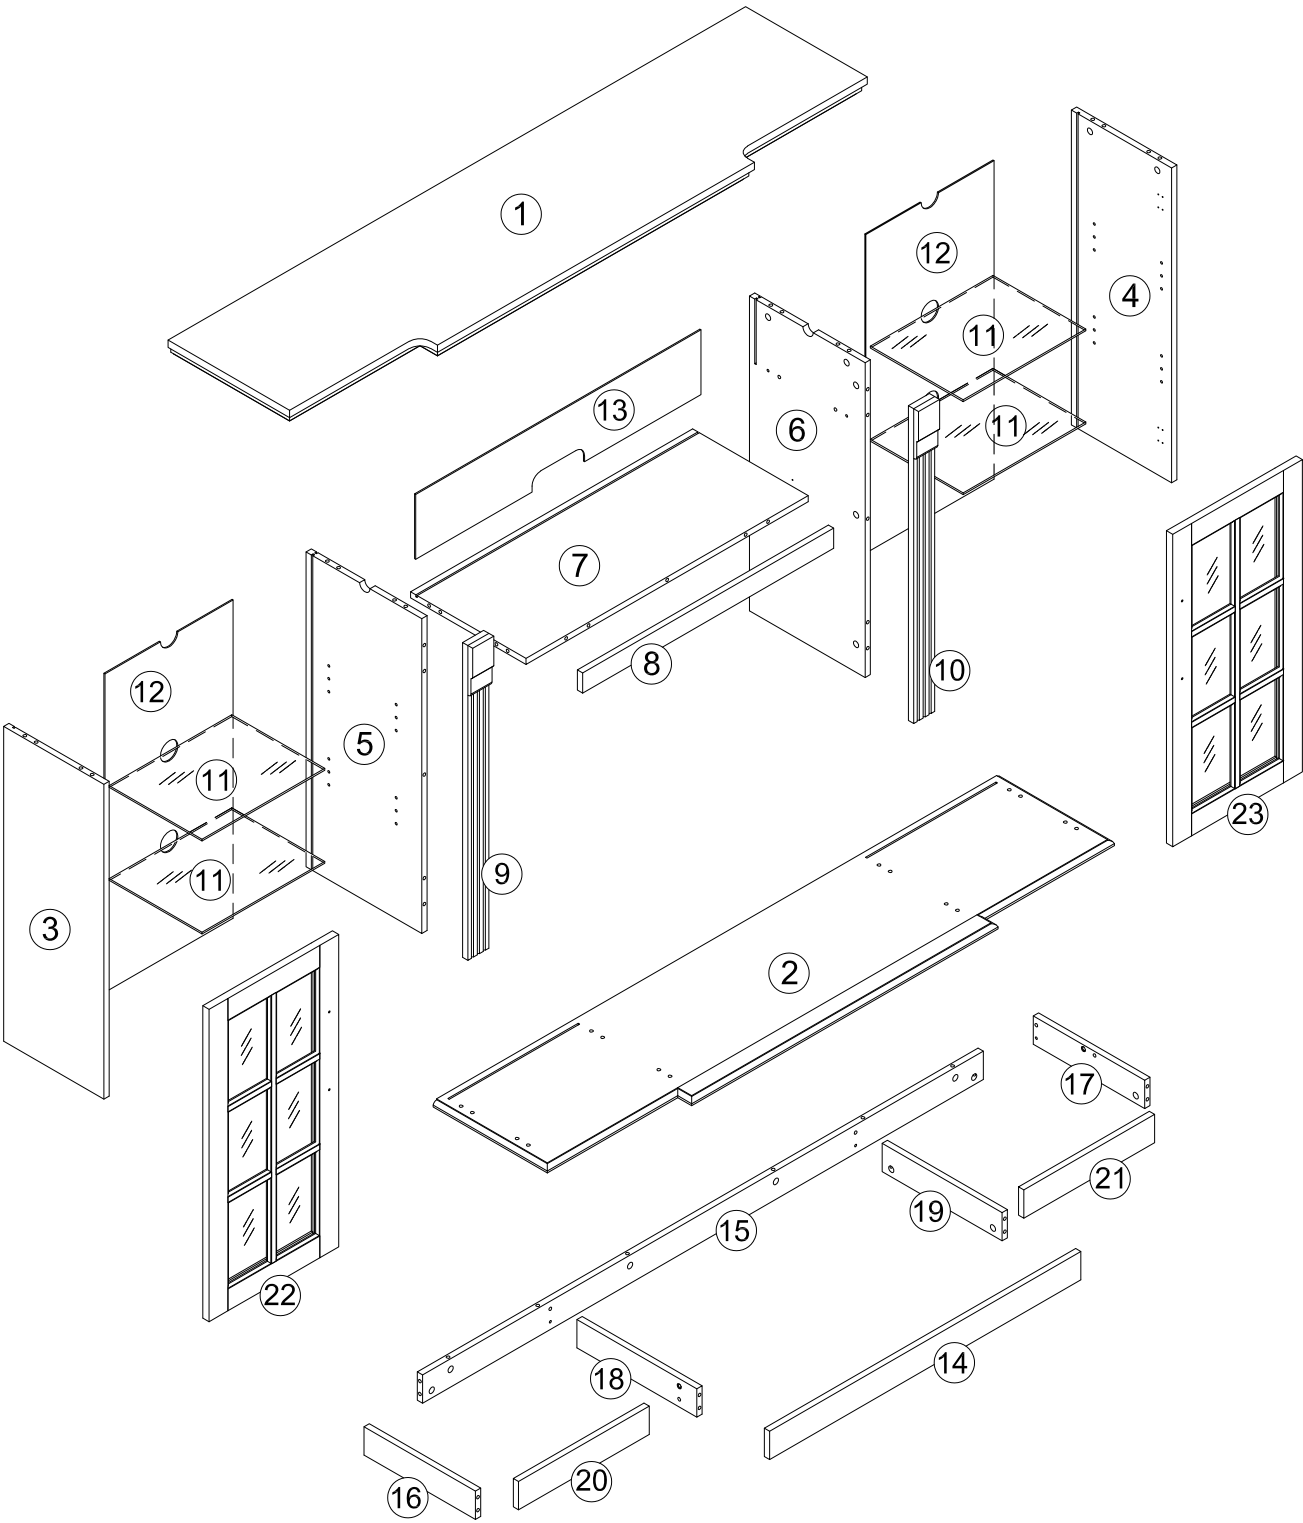


Package wood part

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Left Lateral Panel	1
4	Right Lateral Panel	1
5	Left Medial Panel	1
6	Right Medial Panel	1
7	Center Panel	1
8	Crossbar	1
9	Left Side Surround Panel	1
10	Right Side Surround Panel	1
11	Glass Shelf Panel	4
12	Bottom Back Panel	2
13	Upper Back Panel	1
14	Front Base Panel	1
15	Back Base Panel	1
16	Left Base Panel	1
17	Right Base Panel	1
18	Left Mid Base Panel	1
19	Right Mid Base Panel	1
20	Left Front Base Panel	1
21	Right Front Base Panel	1
22	Left Door Panel	1
23	Right Door Panel	1

            
Package hardware part

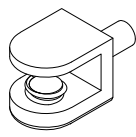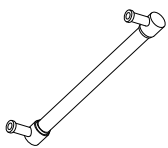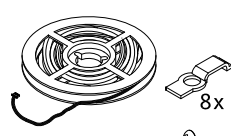A  33x+3x	B  33x+3x φ15x11	C  33x+3x	D  36x+3x φ8x30	E  16x+1x
F  8x φ6x50	G  1x M4	H  8x L57 x 20*20	I  16x+1x M6 x 12	J  22x+2x 16x16*10.5
K  22x+2x φ3x17	L  4x	M  24x+2x φ3.5x14	N  2x	O  4x 5/32**22
P  1x 8x 8x	Q  2x φ8.5x30	R  2x φ4x18	S  2x 140x25	T  2x φ4x25

 
STEP 1

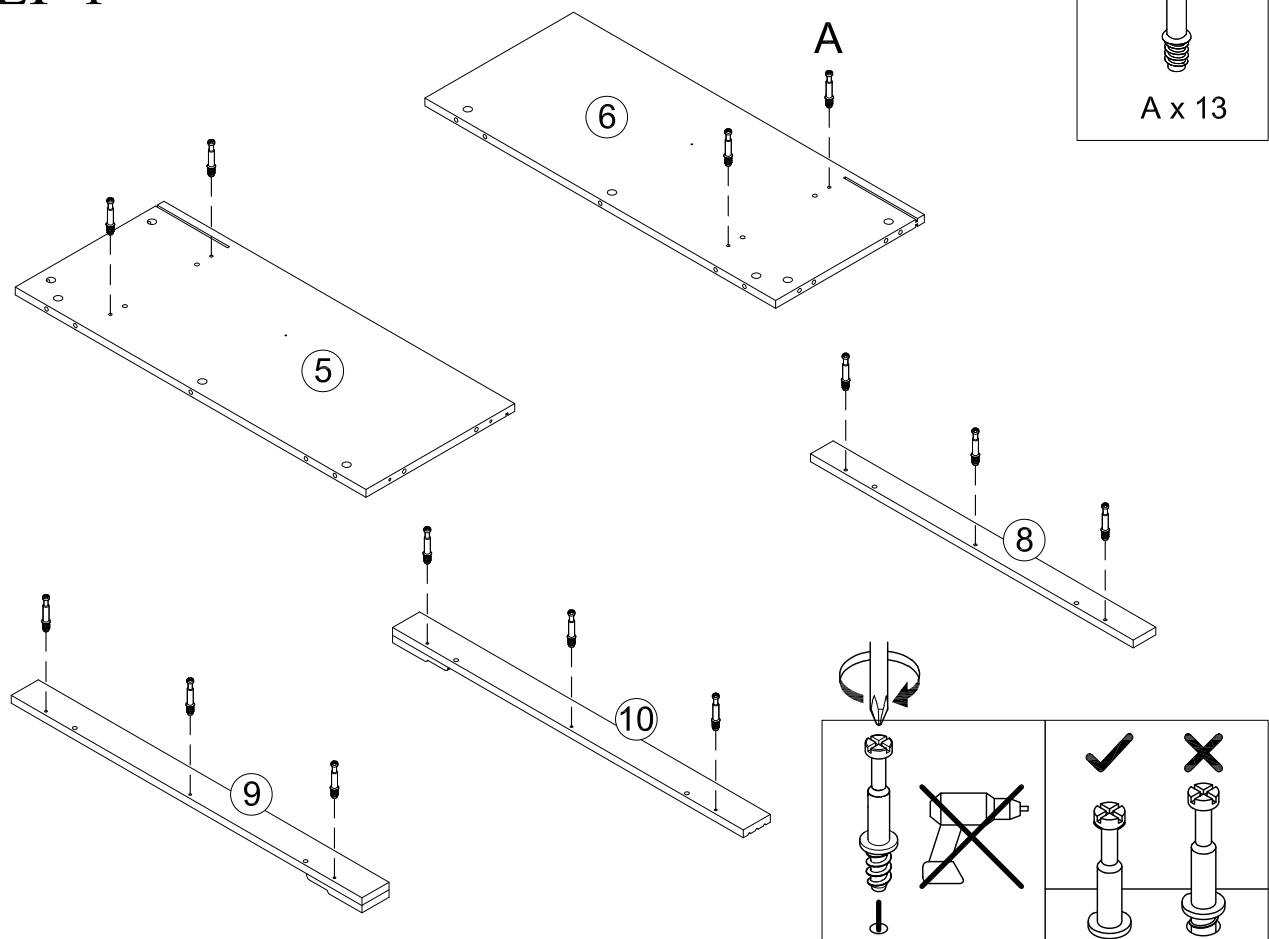

 STEP 2

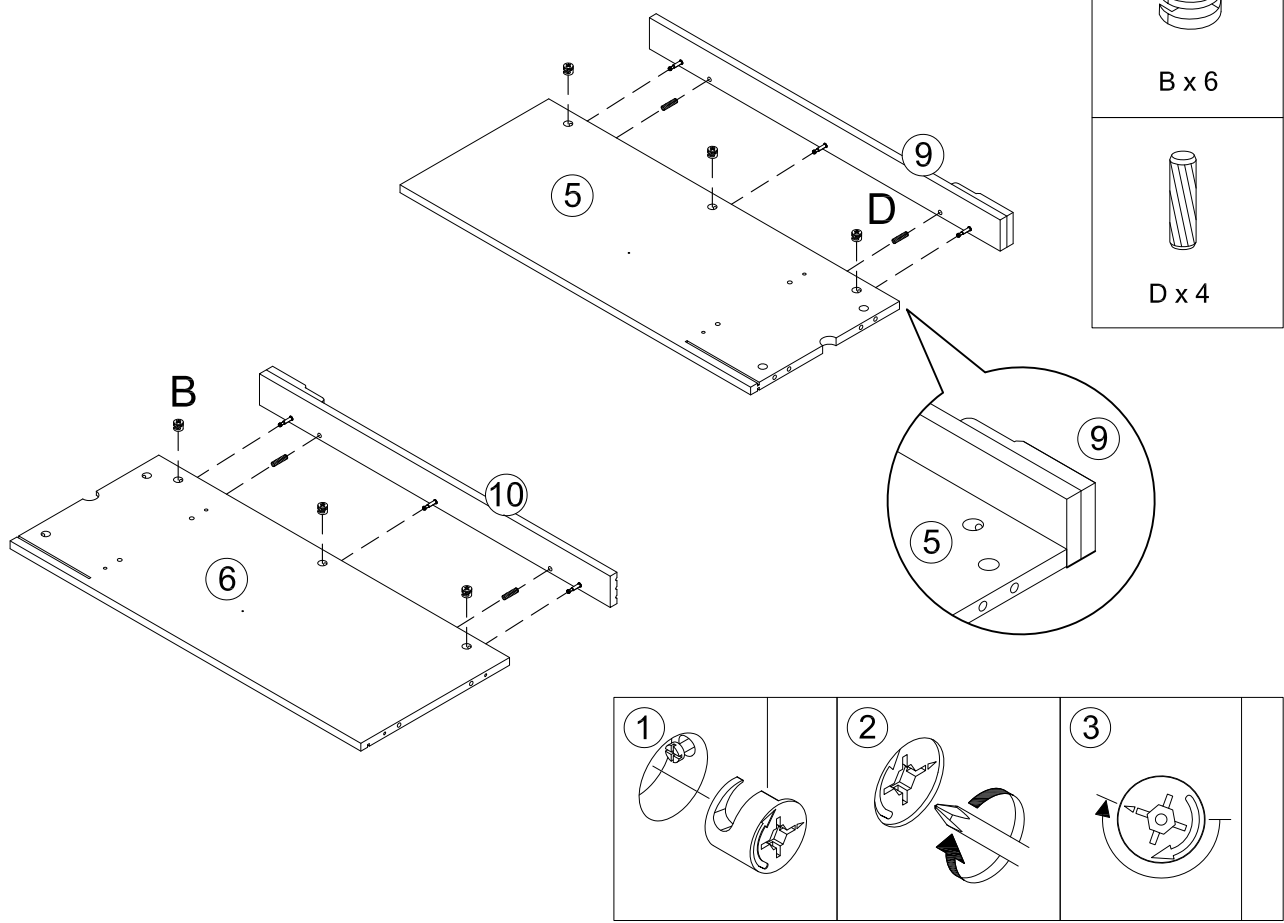


 STEP 3

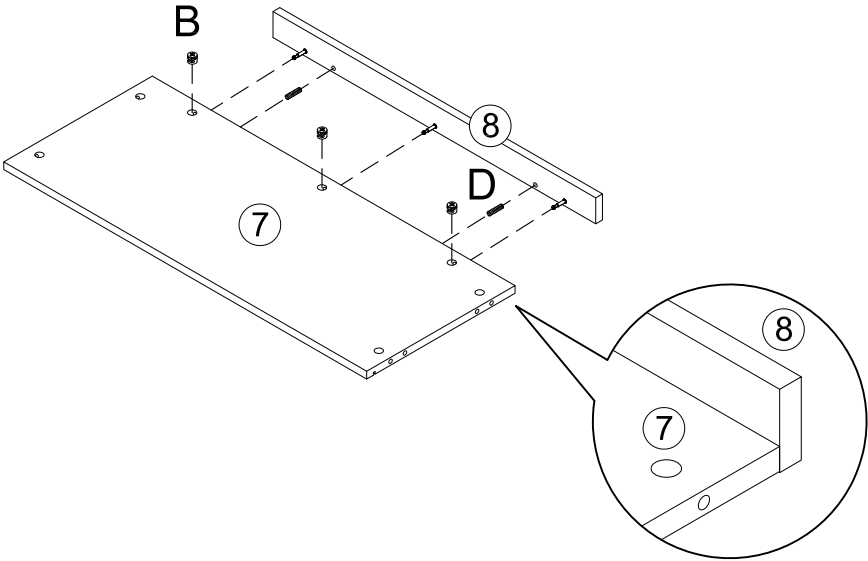



B x 3

 D x 2

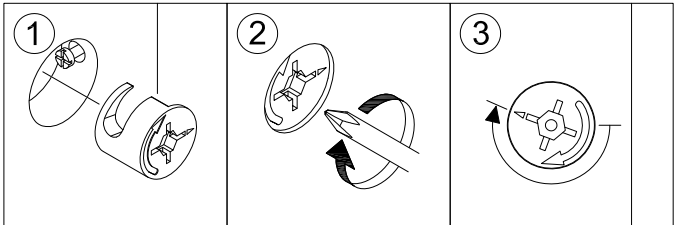


 STEP 4



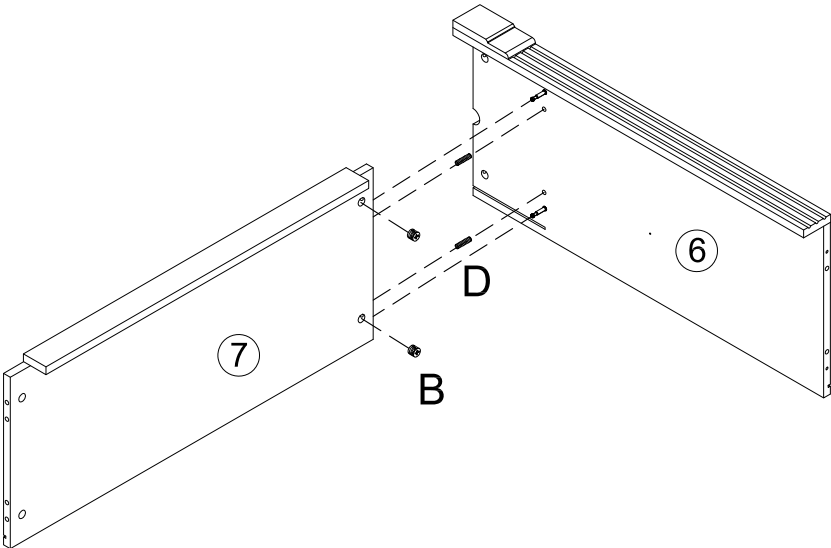



B x 2



 
D x 2

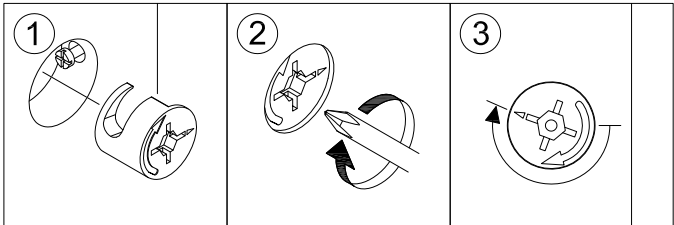

   
STEP 5

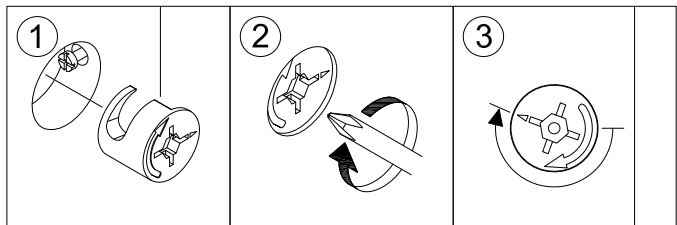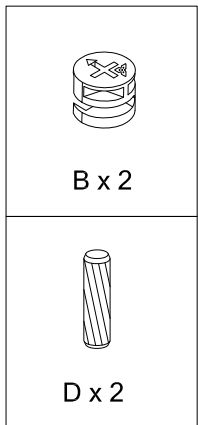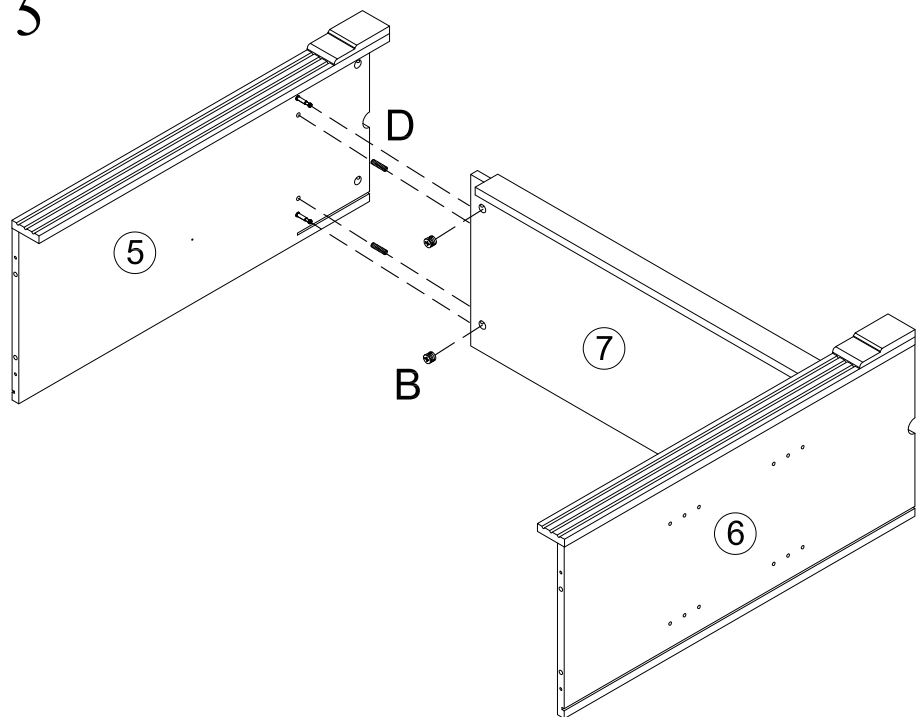

   
STEP 6

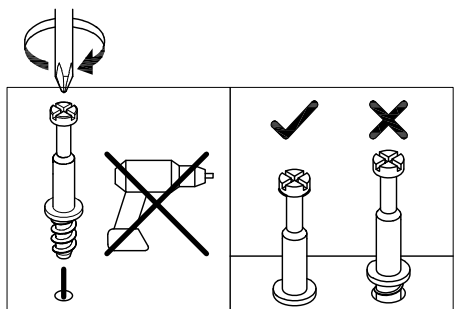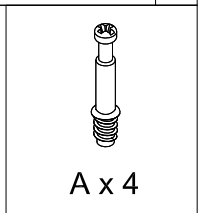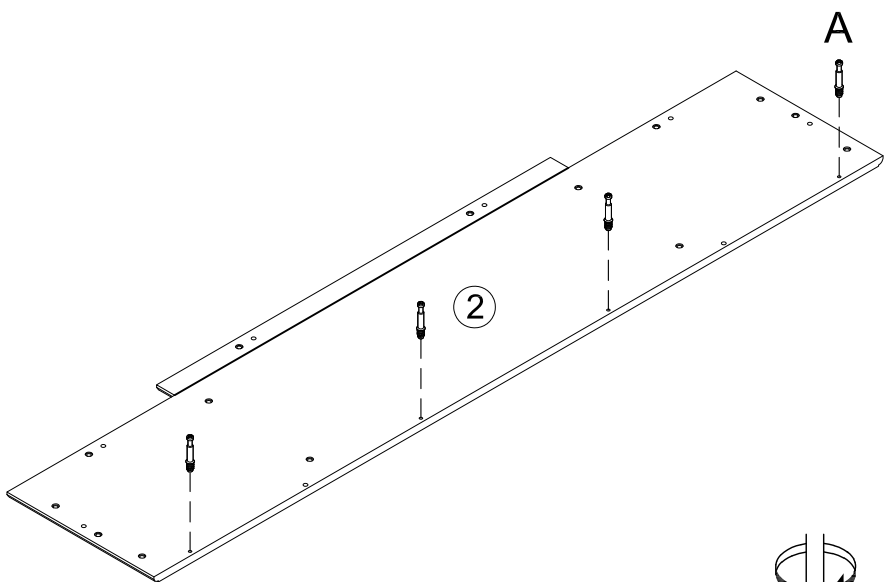

 
STEP 7

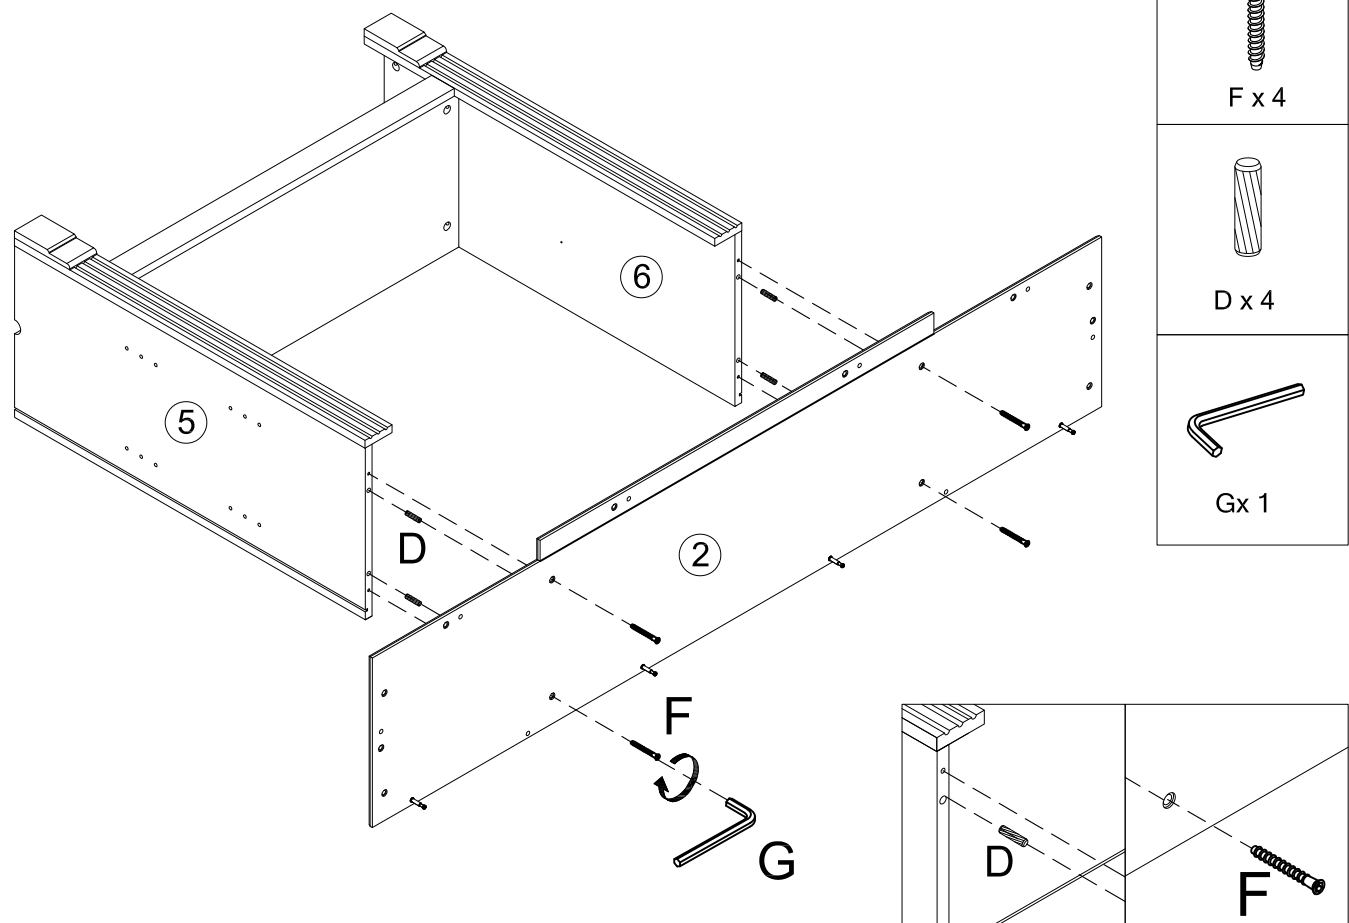

 
STEP 8

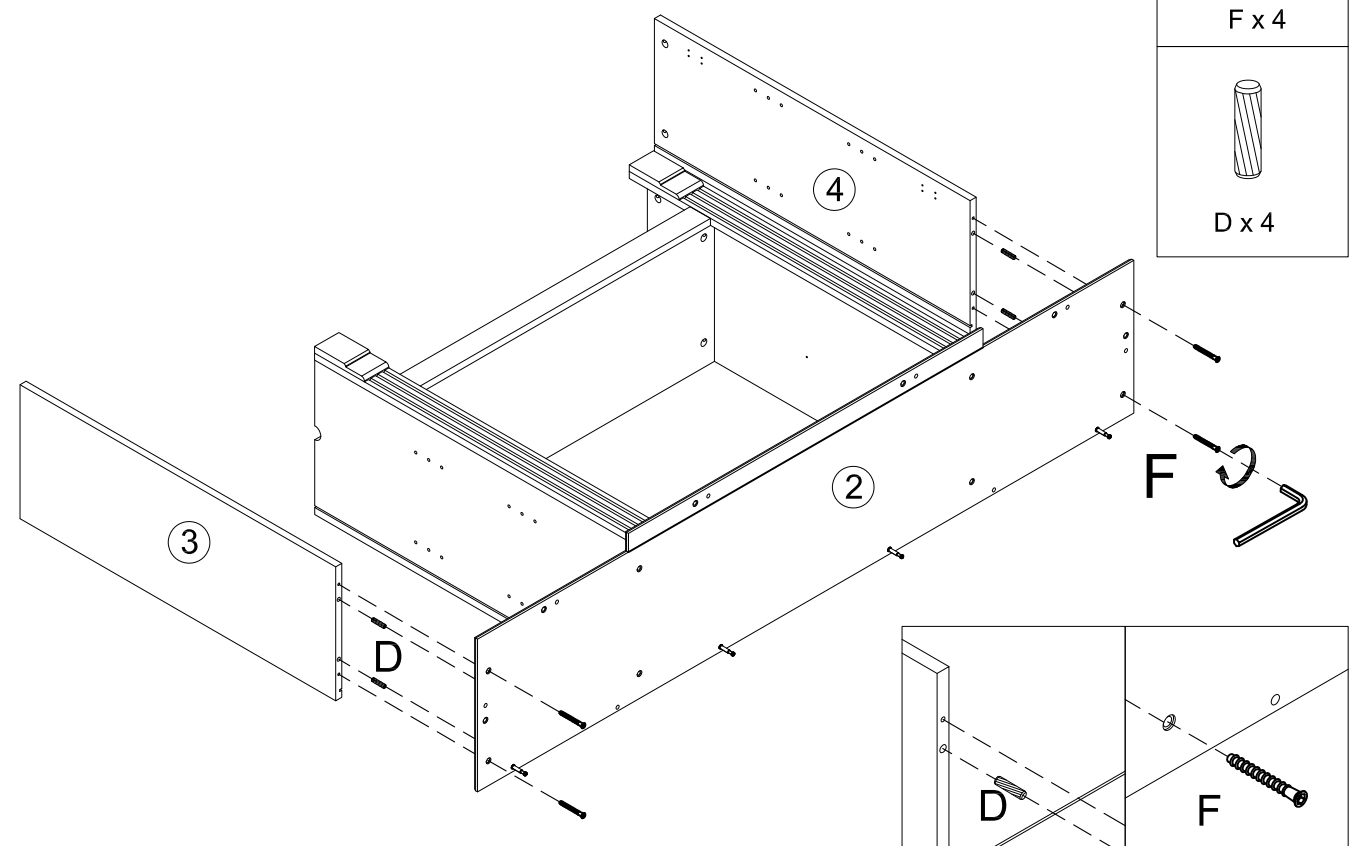

 
STEP 9

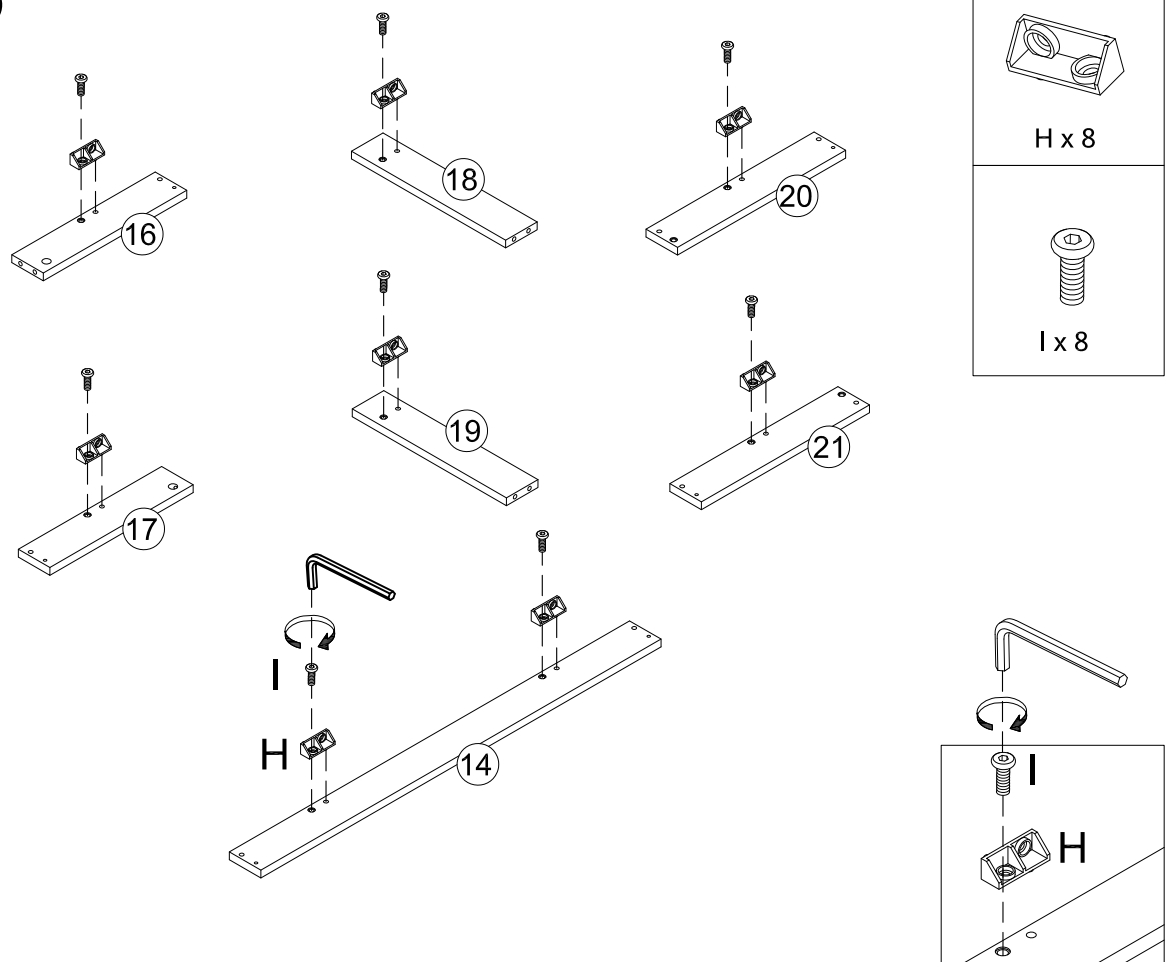

 STEP 10

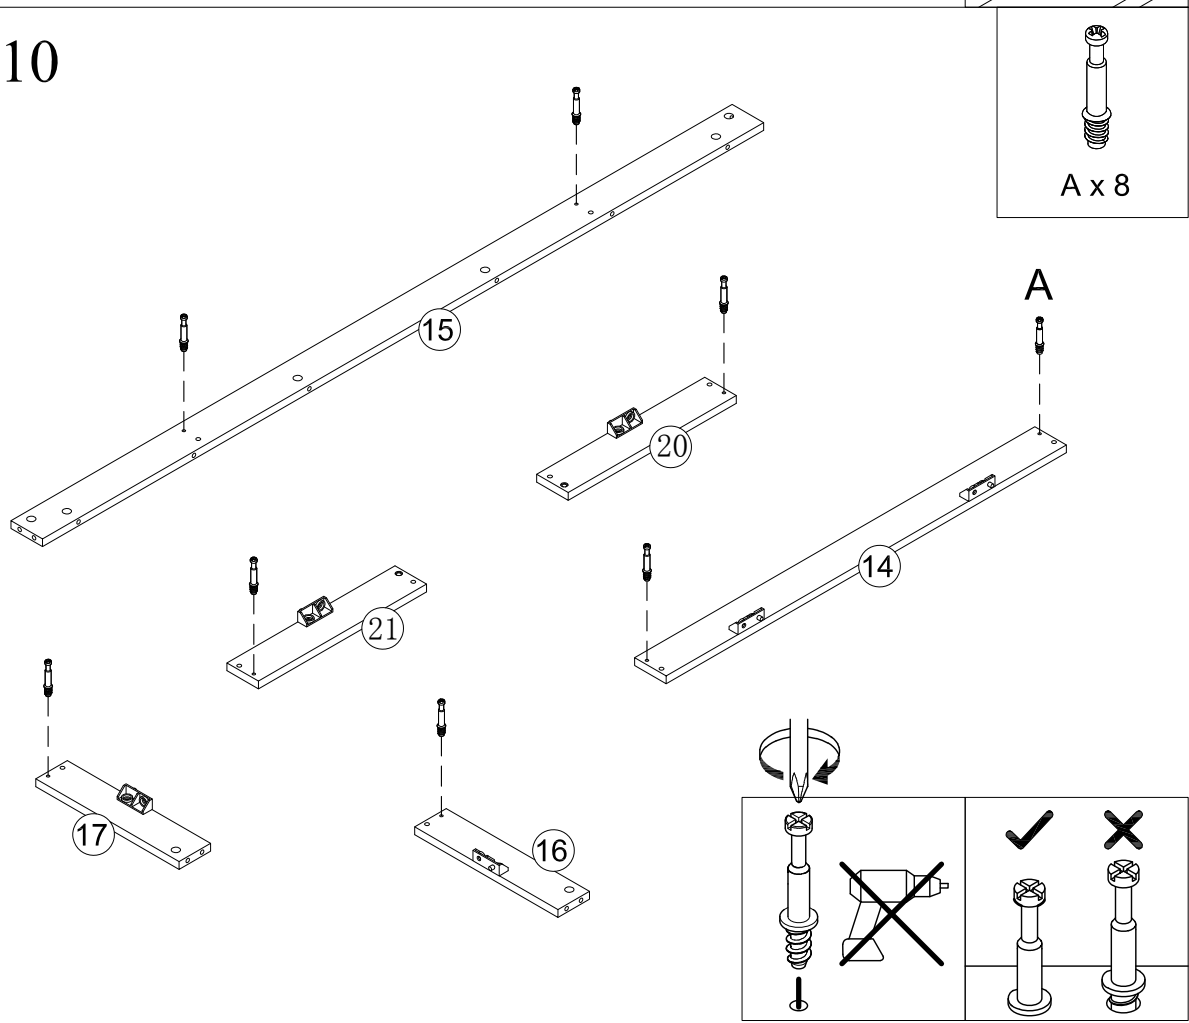


 STEP 11

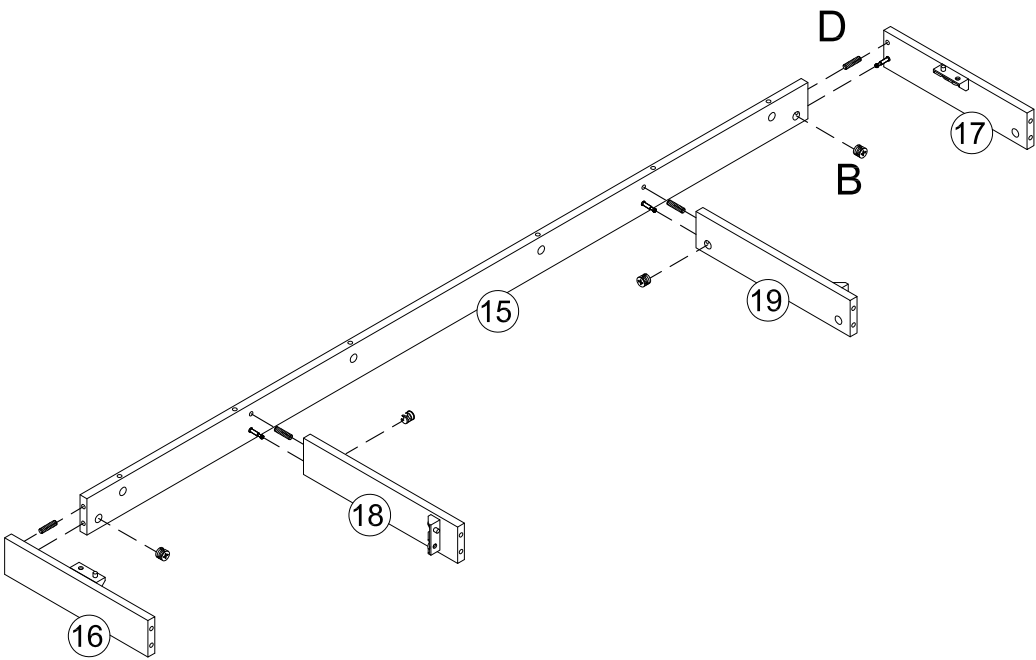



B x 4

 D x 4

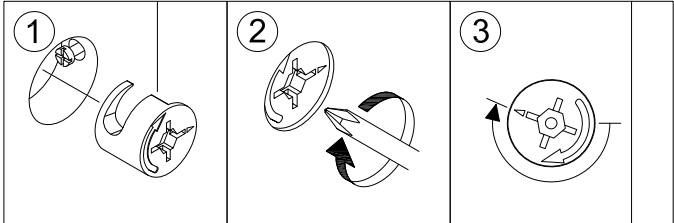

 
STEP 12

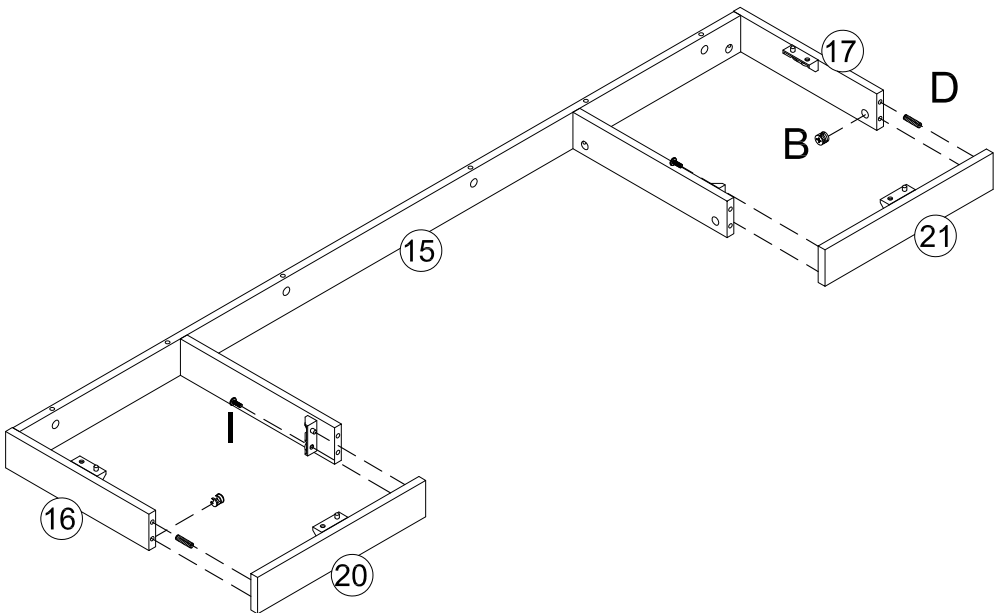



B x 2

D x 2

 l x 2

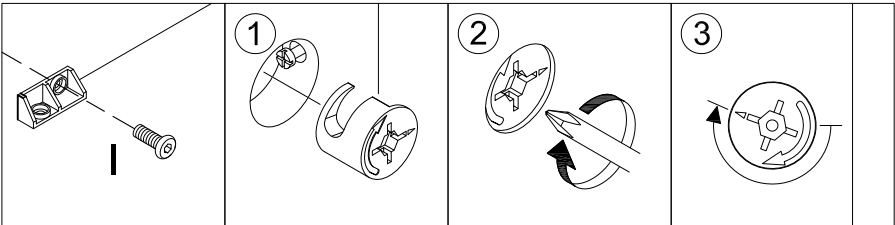

 
STEP 13

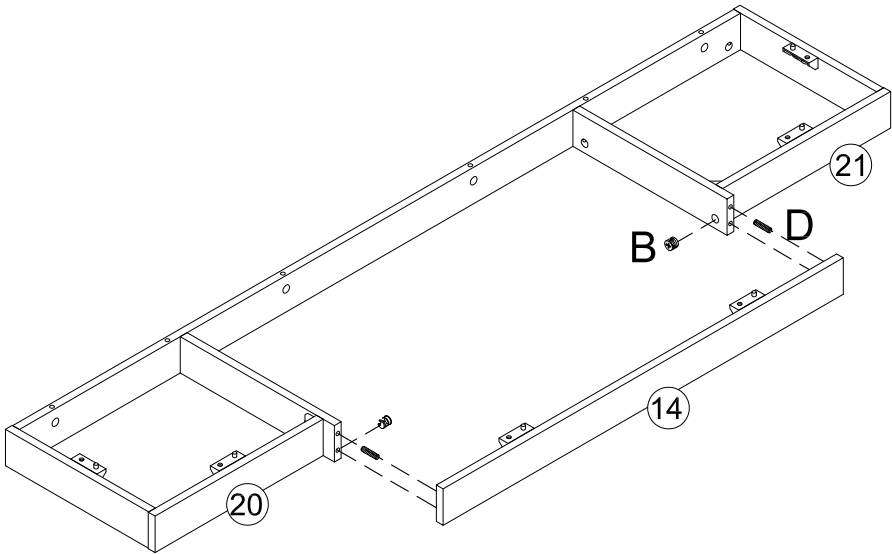


B x 2



 D x 2

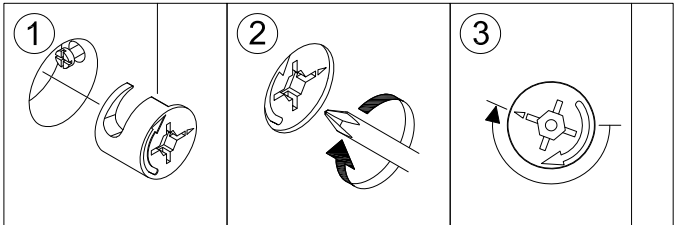

 STEP 14

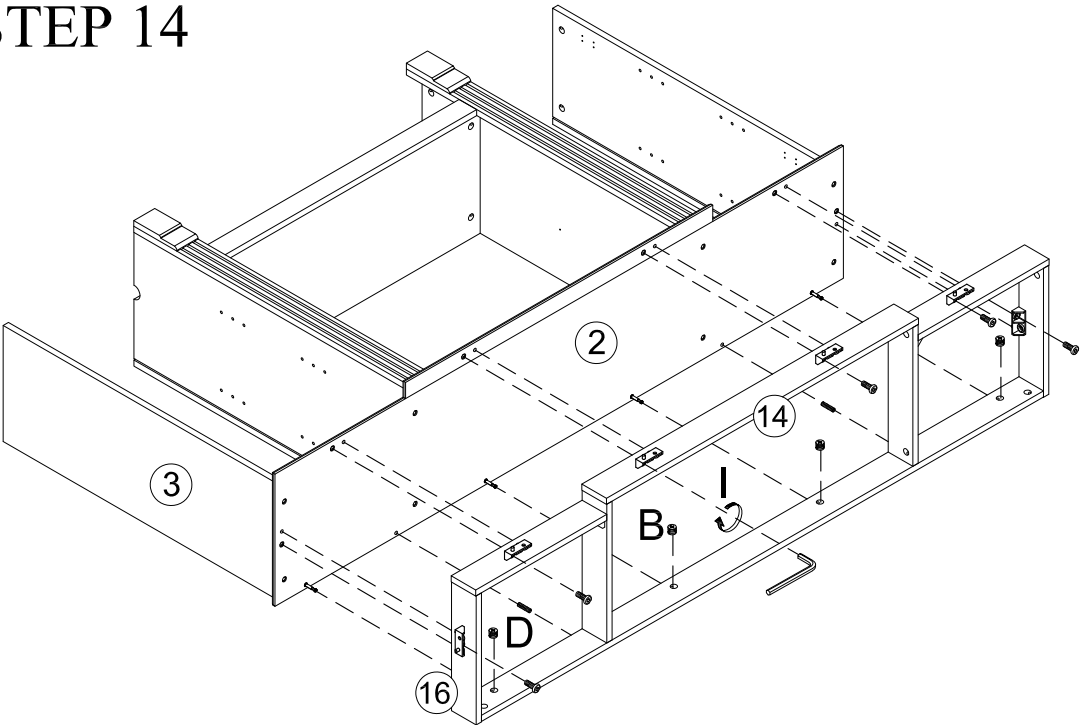


B x 4




D x 2





 
I x 6

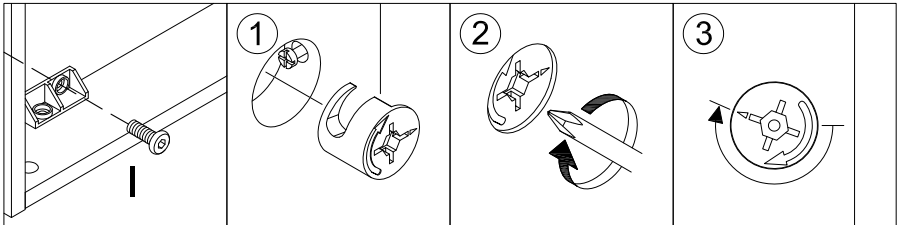


 
STEP 15

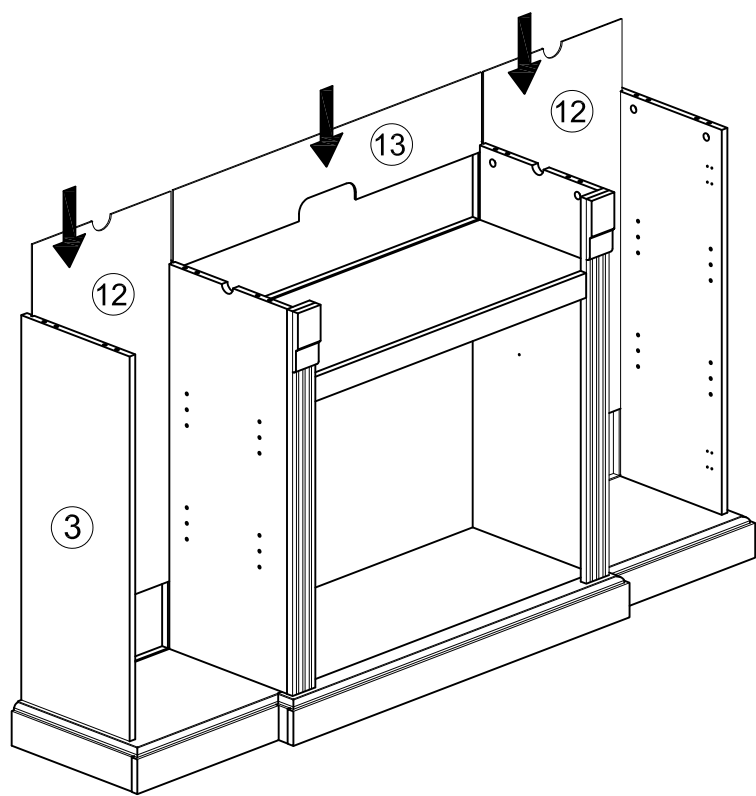

   
STEP 16

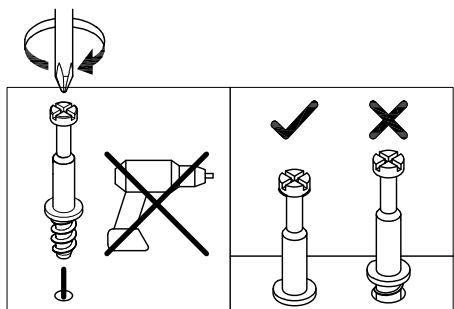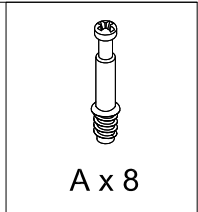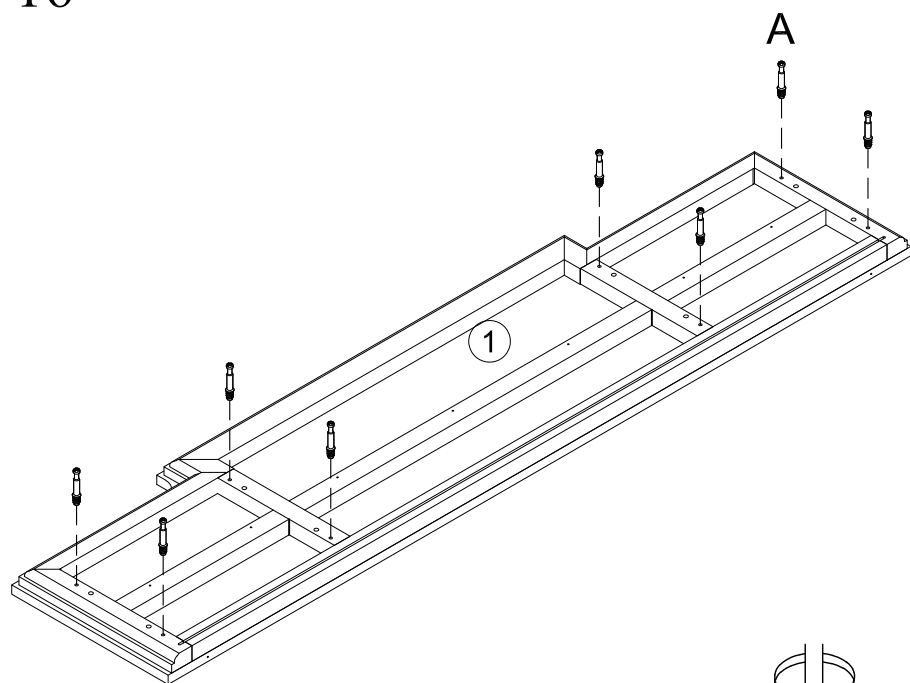


 
 
STEP 17

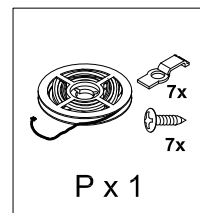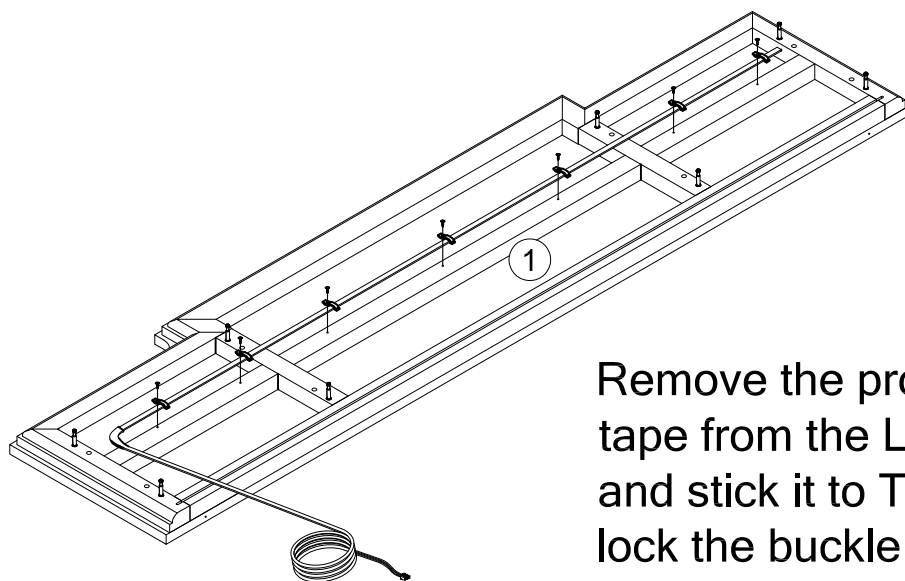



 
Remove the protective layer of tape from the LED light stripes and stick it to TOP panel, then lock the buckle that holds the position in place

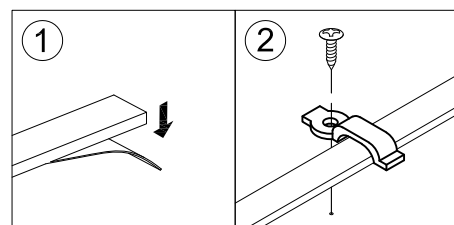

 
 
 
STEP 18

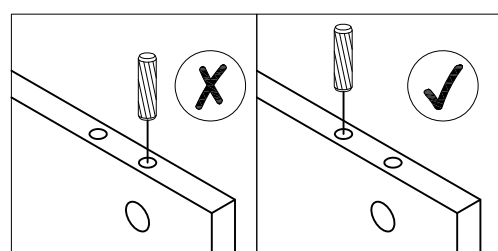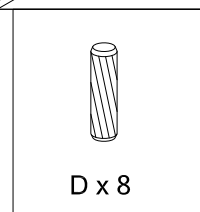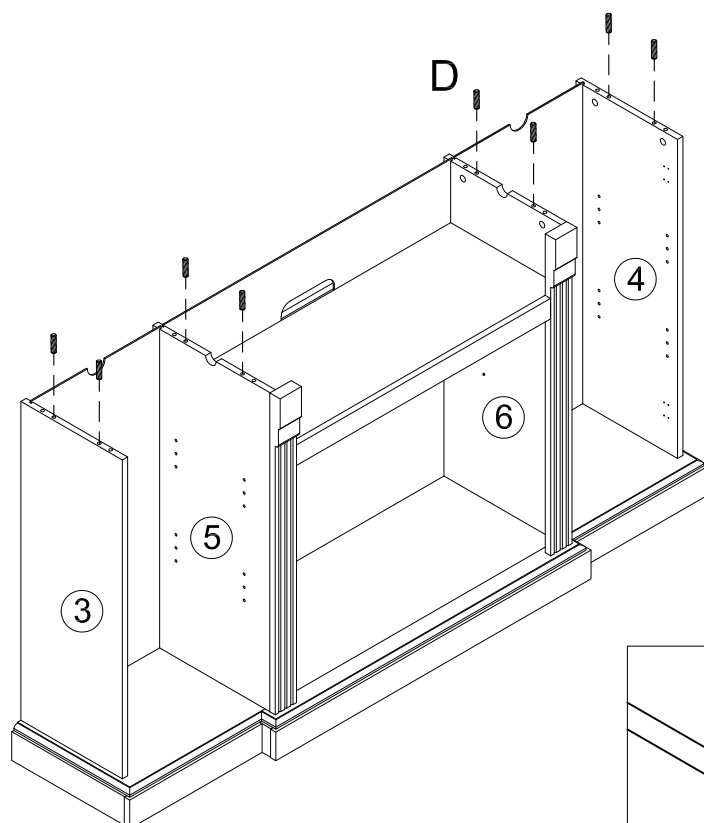

  
 
STEP 19

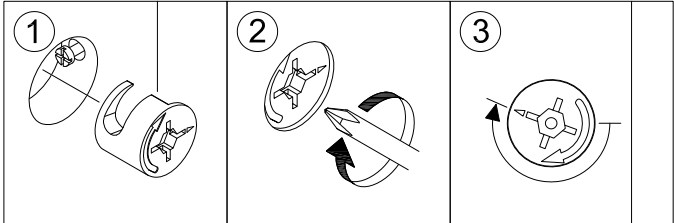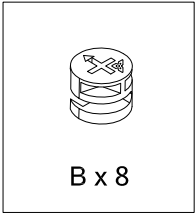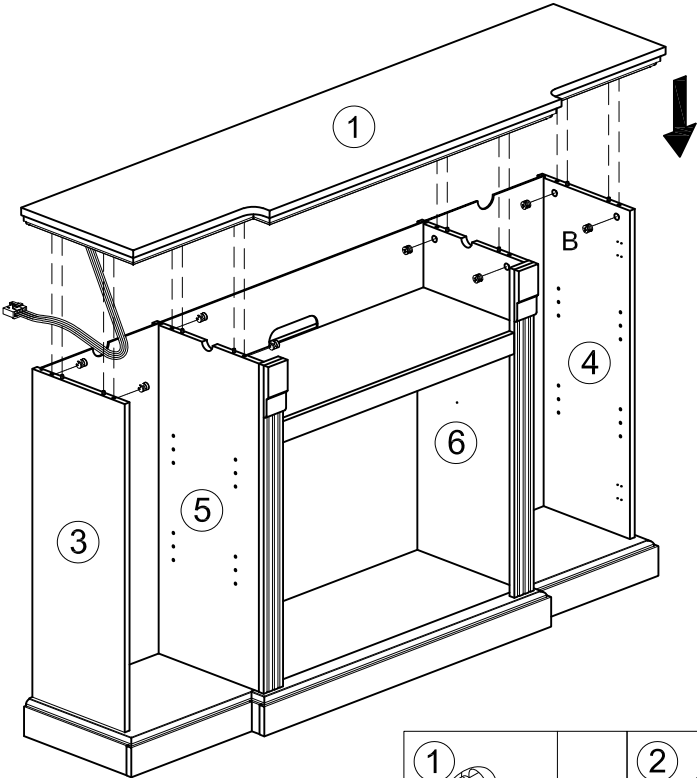

   
STEP 20

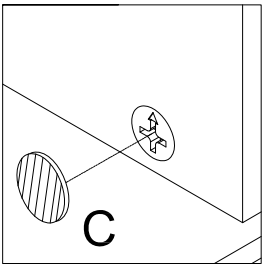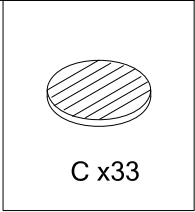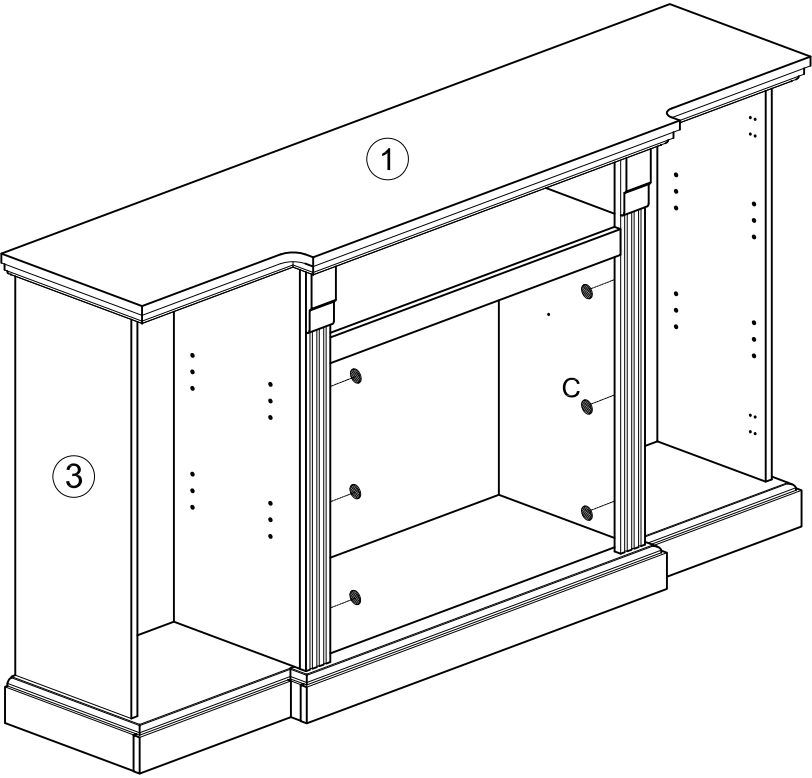

  STEP 21

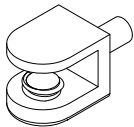
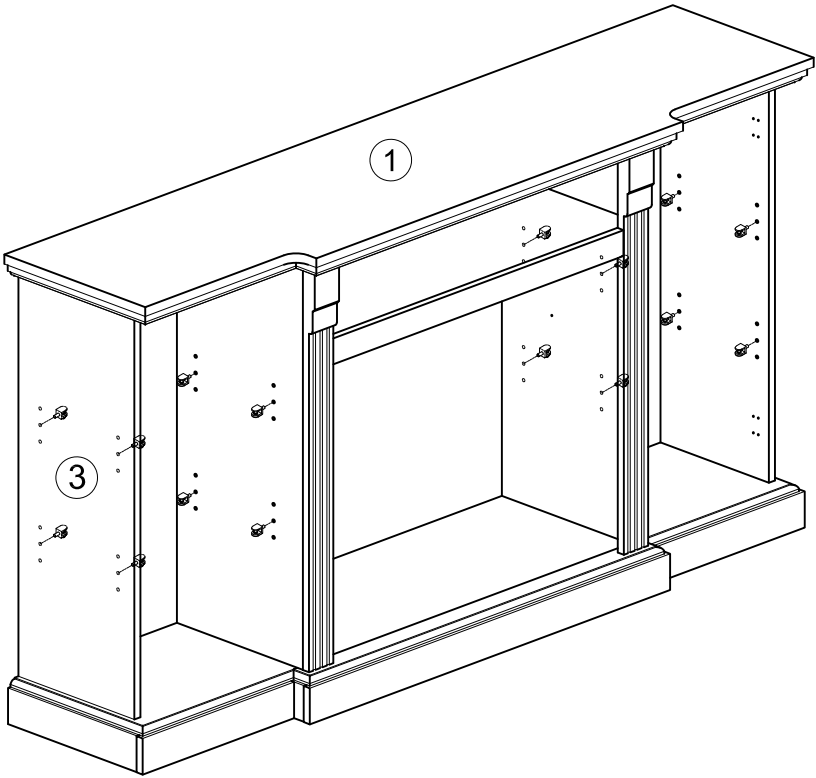


E x16

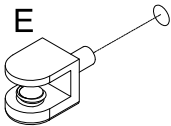 


E

 
 
STEP 22

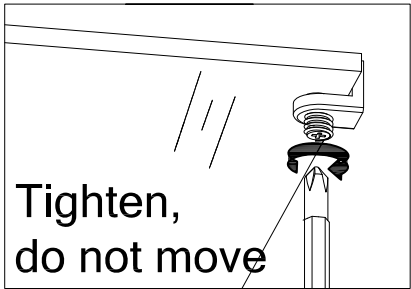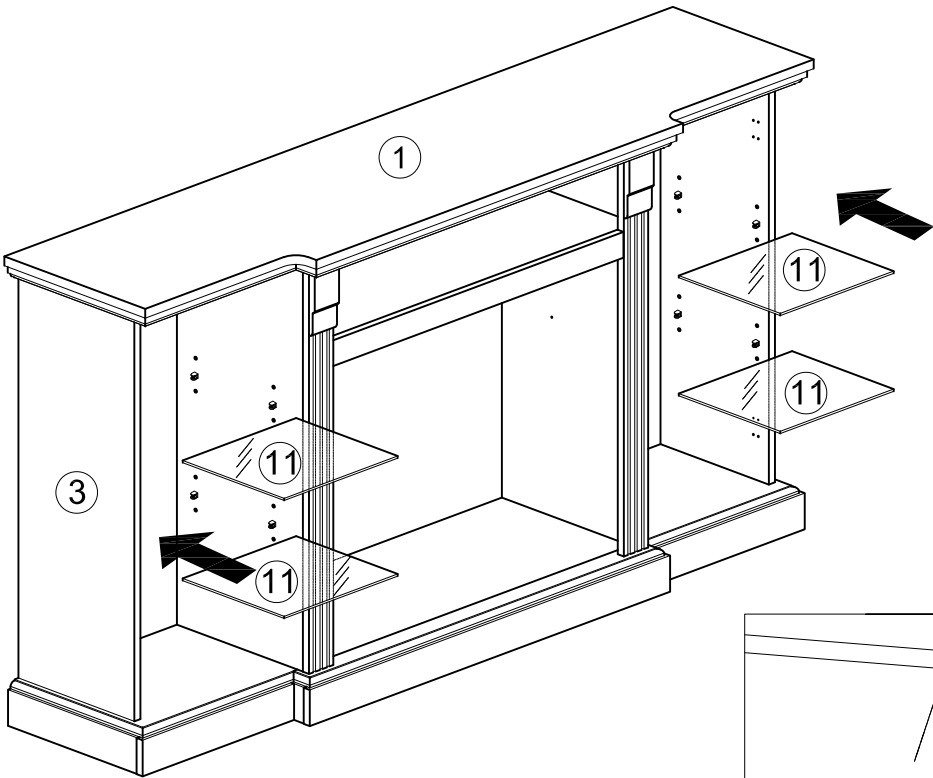


Tighten,
do not move

   
STEP 23

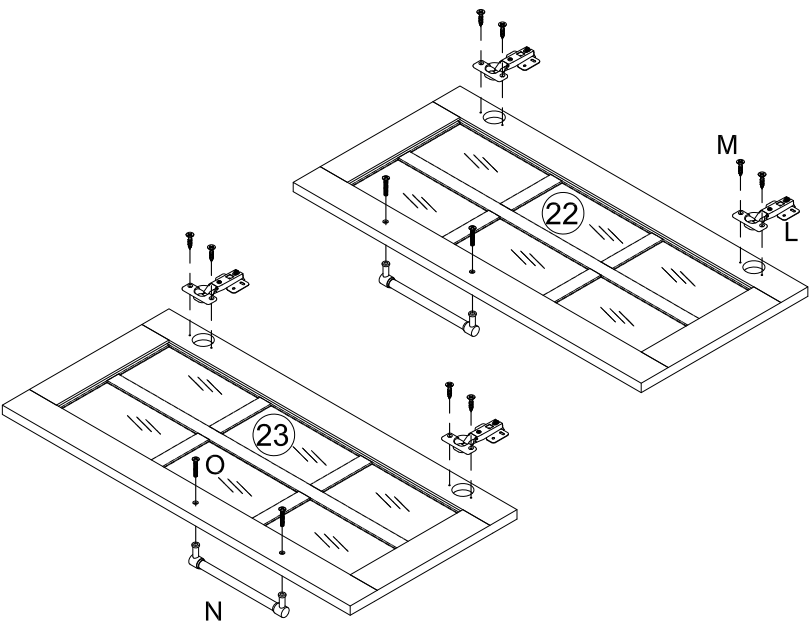


 L x 4	 N x 2
 M x 8	 O x 4

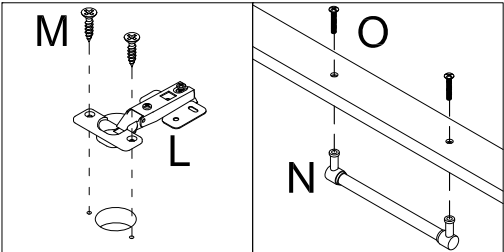 

 
STEP 24

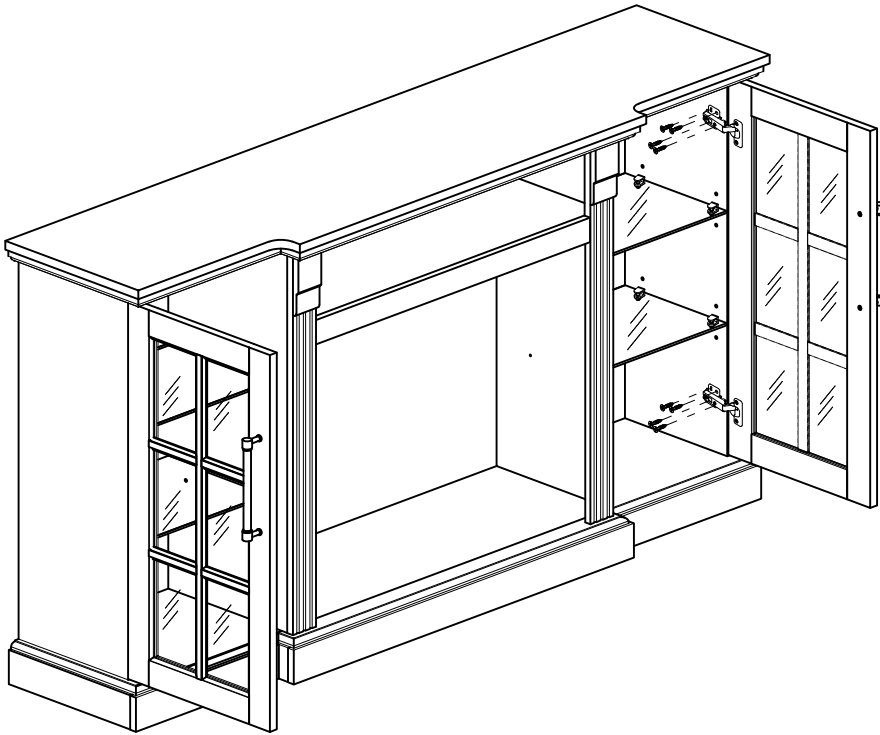


 M x 16

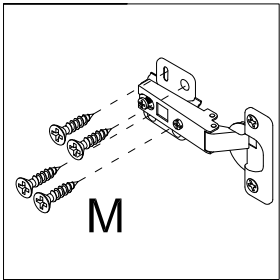 

 
STEP 25

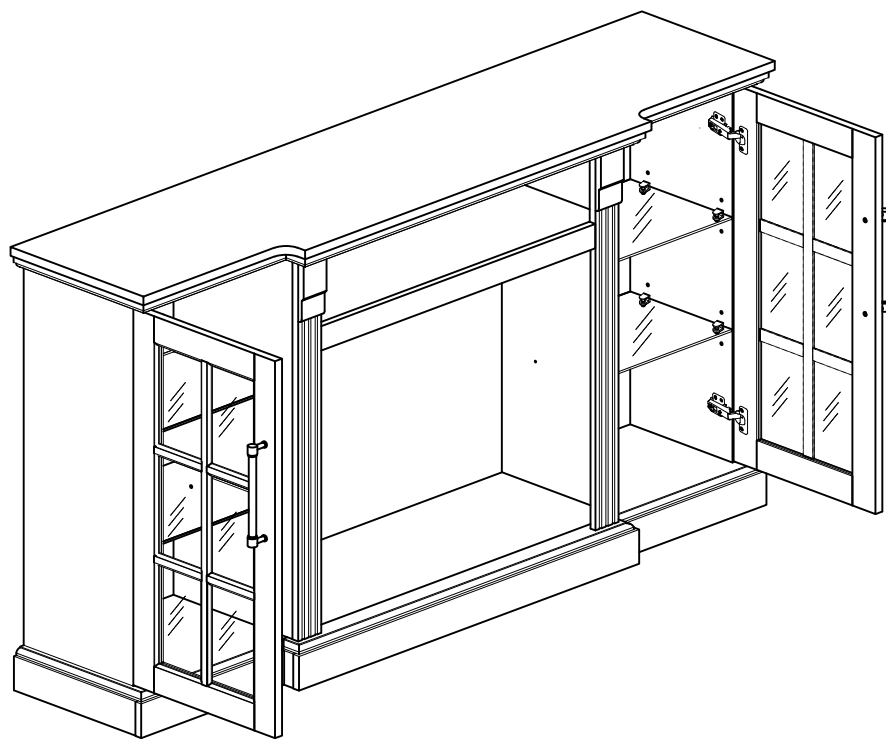

 
Adjust the position of the cabinet doors.

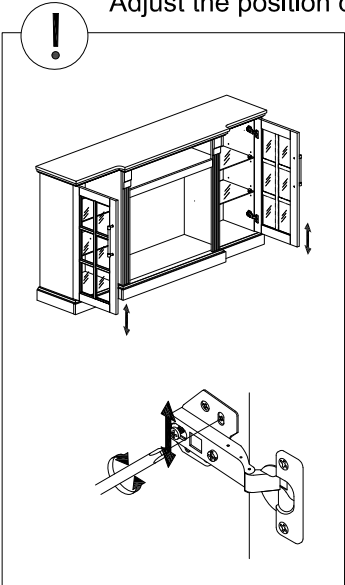

 Up and down adjustment by loosening the screws on the mounting plate.

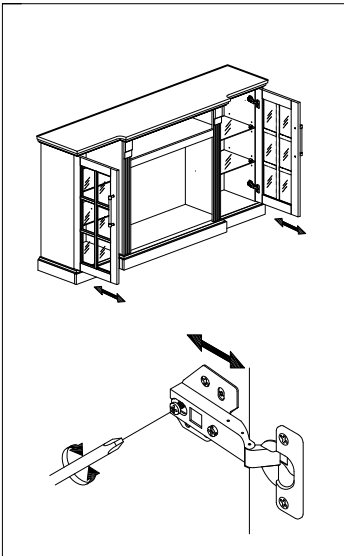


 In and out adjustment by loosening the screws on the hinge arm.

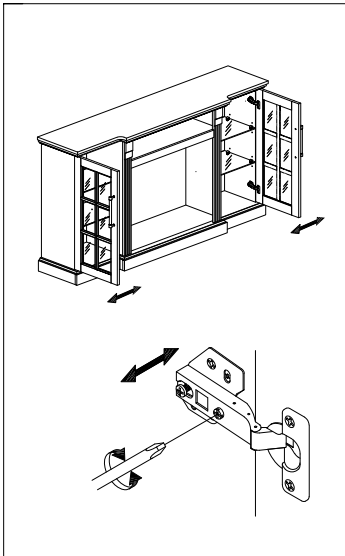

Side to side adjustment using the front adjustment screw on the hinge.

 
STEP 26

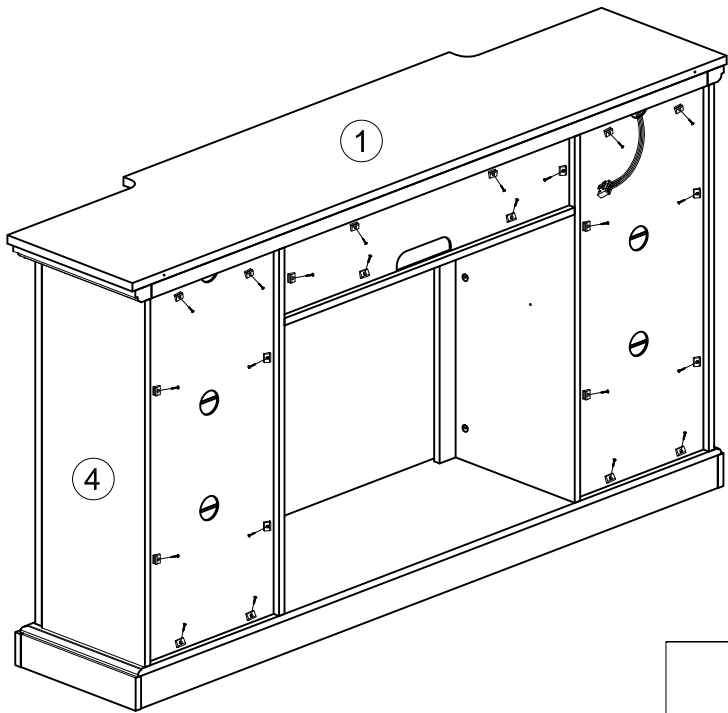


J x 22



 K x 22

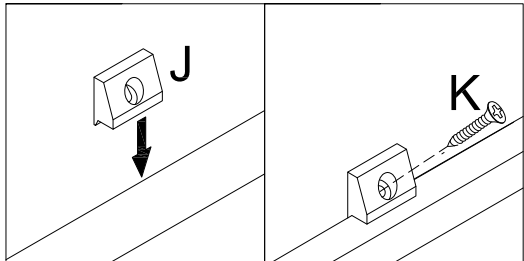


 STEP 27

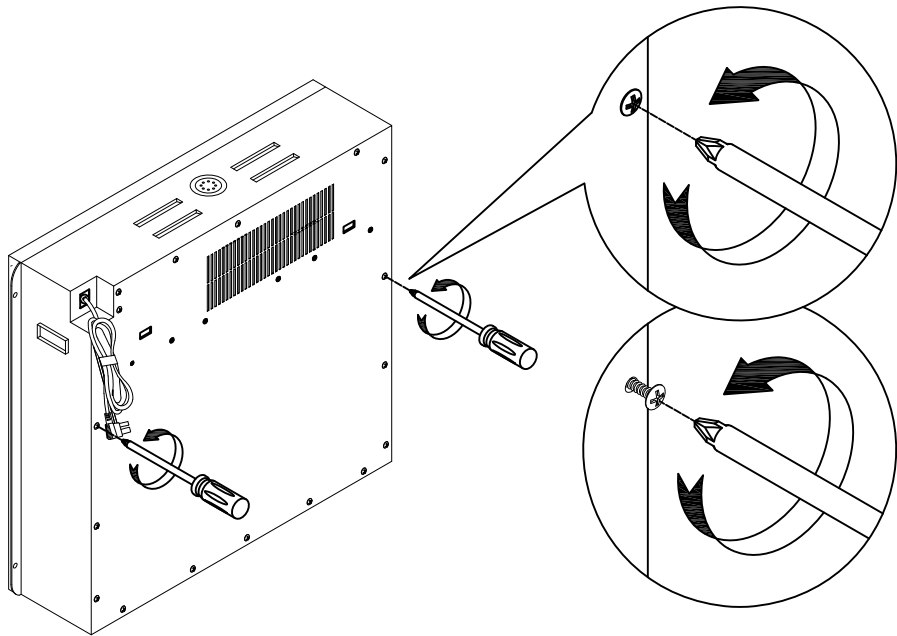


Remove screws from the back of your fireplace.




 
STEP 28

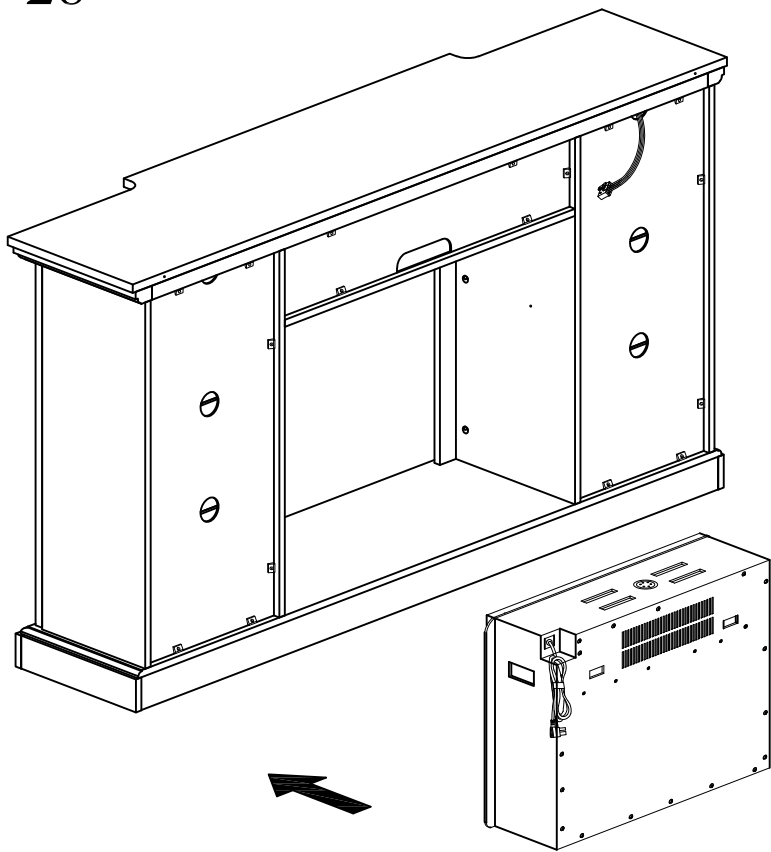


 
STEP 29

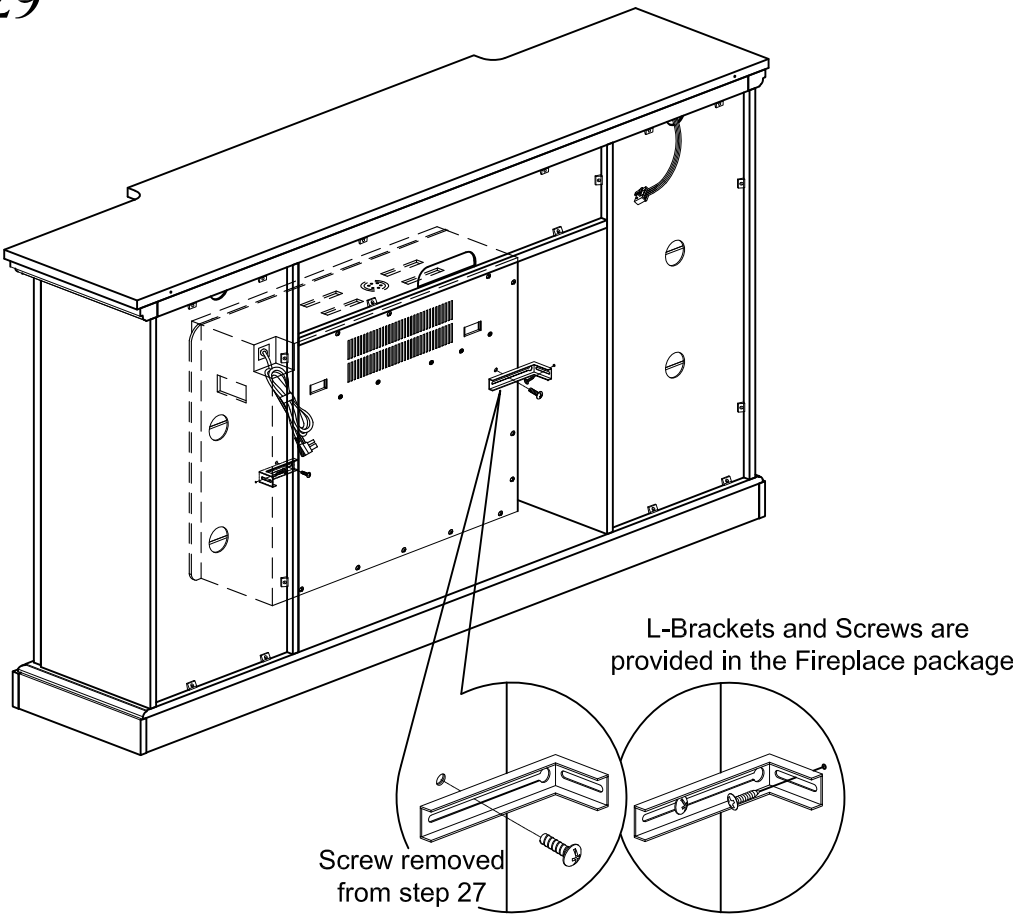

    STEP 30

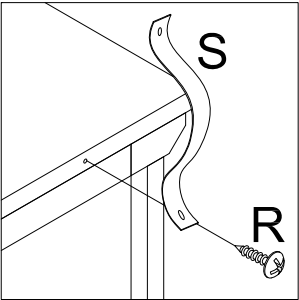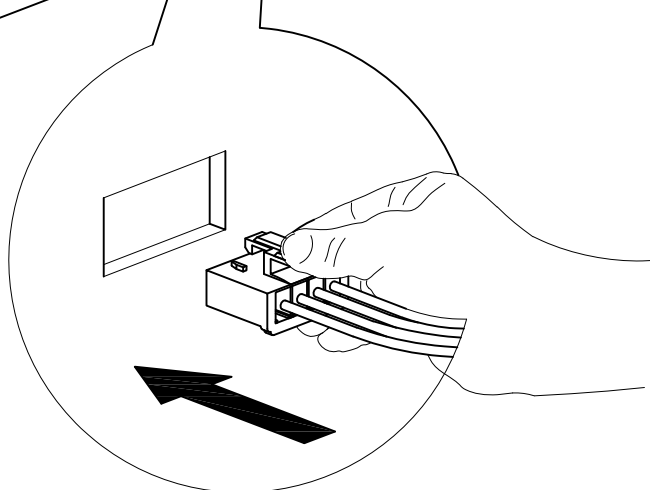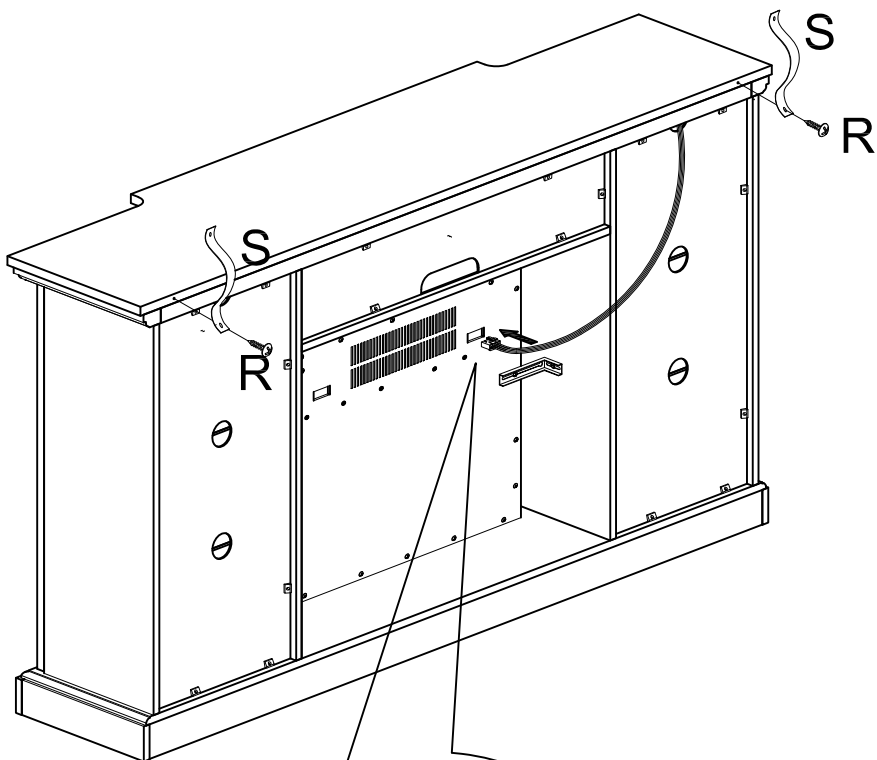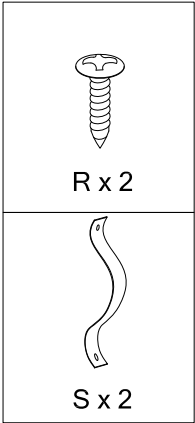

  STEP 31

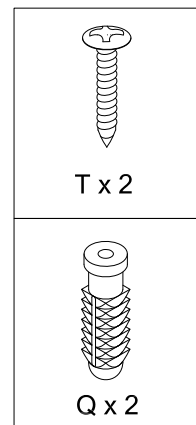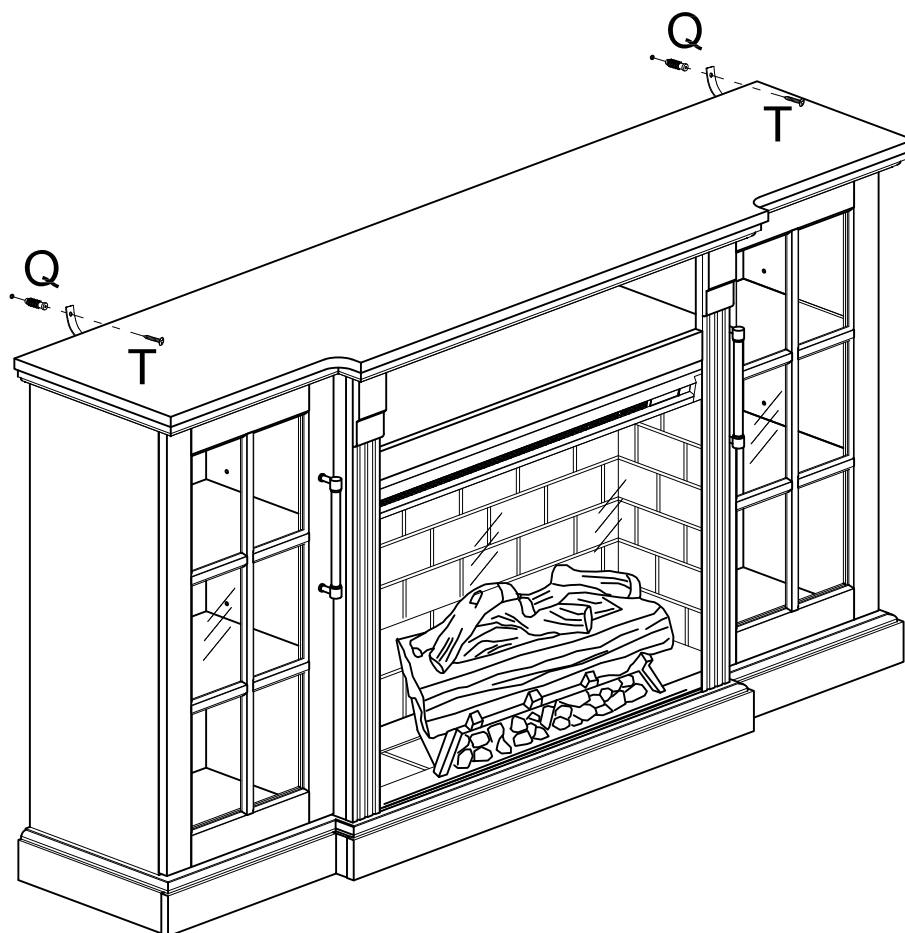

Furniture must be permanently fitted to the wall stud with an Included anti-tipping device to prevent the furniture from tipping over.

Mark the drill position on the wall with a pencil.

Drill a small hole on the marked position.

Insert a wall anchor into the drilled hole.

Fixed the anti-tipping strap to the wall with provided screws.

Assembly is complete

