 


# ASSEMBLY INSTRUCTIONS

Compression must wait for 72 hours before it can be unfolded, and it needs to be flapped by hand

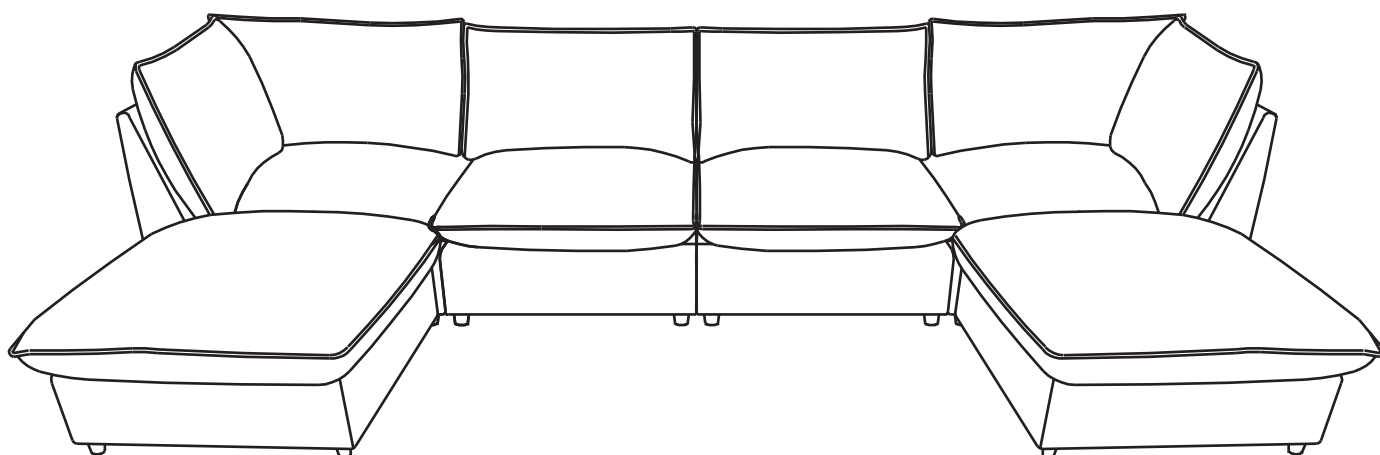

**WF309596/ WF309597/ WF309598  
WF309599/WF309600/ WF309602  
WF309603**

1. Thank you for choosing *our products*.

2. Return Policy








DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution. Feel free to also directly contact our manufacturer concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

#### Recommendations Before Beginning Assembly

-  • Read instructions, cover to cover
-  • Have 2-4 adults on hand for assembly depending on product size
-  • Do not assemble directly on flooring or carpet
-  • Assemble on a clean non-marring surface (example: packing foam)
-  • Save all packaging until finished









3. Assembly Notice:


- If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the


parts of the product stored in a safe place and contact us immediately so we may assist you further.

- ☒ Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- ☒ Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- ☒ **IMPORTANT:** When setting up your product, **DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING.** Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- ☒ When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

#### Care & Maintenance

- ⊘  ● Do not put hot items directly on furniture surface
- ⊘  ● Do not clean furniture with harsh cleansers or polish
- ⊘  ● Do not place furniture under direct sunlight
- ⊘  ● Do not place furniture near heating or cooling vents
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface
- ⊘  ● Do not place furniture outside. For indoor use only
- ⊘  ● Not for commercial use. For residential use only
- ⊘  ● Stains may be removed with mild soap solution and damp cloth

 
⊘  ● Children should not climb or jump on the furniture

✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth

 
 
 
 
 

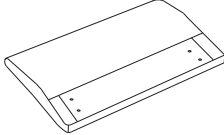 

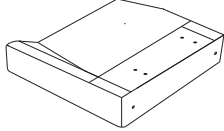 

 

 







#### Caution

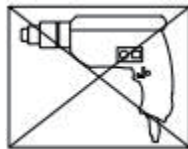● This product contains small components. Please ensure that they are kept away from small children.


● Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

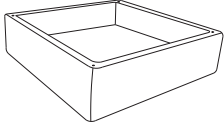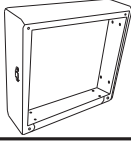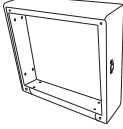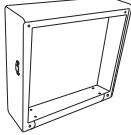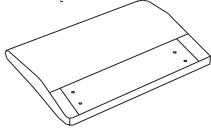
   
# PART LIST:

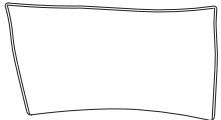
A		2PCS	WF309596: Hx1 Ex2 Gx1 Ox24 Px24 Qx24 Rx1 Sx24 Tx24 WF309597: Dx1 Fx1 Jx1 Nx1 WF309598: Dx1 Fx1 Jx1 Nx1 WF309599: Bx1 Kx1 Mx1 Lx1 WF309600: Cx1 Kx1 Mx1 Lx1 WF309602: Ax1 Ix1 WF309603: Ax1 Ix1		
B		1PCS			
C		1PCS			
D		2PCS			
E		2PCS	O		28PCS
F		2PCS	P		24PCS
G		1PCS	Q		24PCS
H		1PCS	R		1PCS
I		2PCS	S		28PCS
J		2PCS	T		28PCS
K		2PCS			
L		2PCS			
M		2PCS			
N		2PCS			

 1

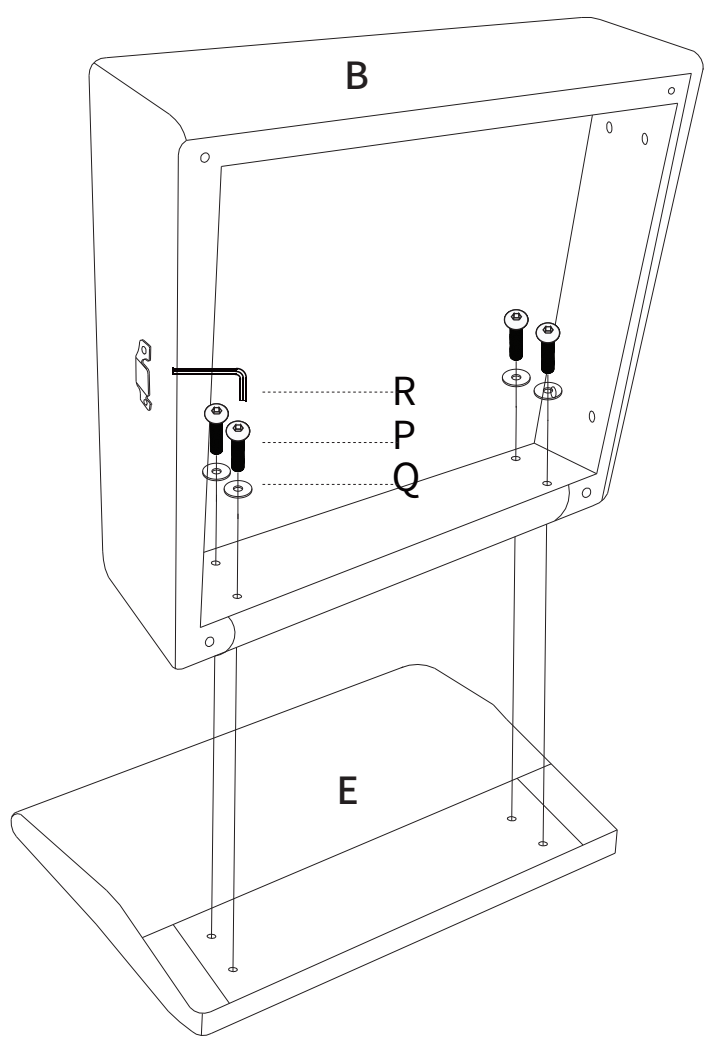


- Bx1
- Ex1
- Rx1
- Px4
- Qx4

 2

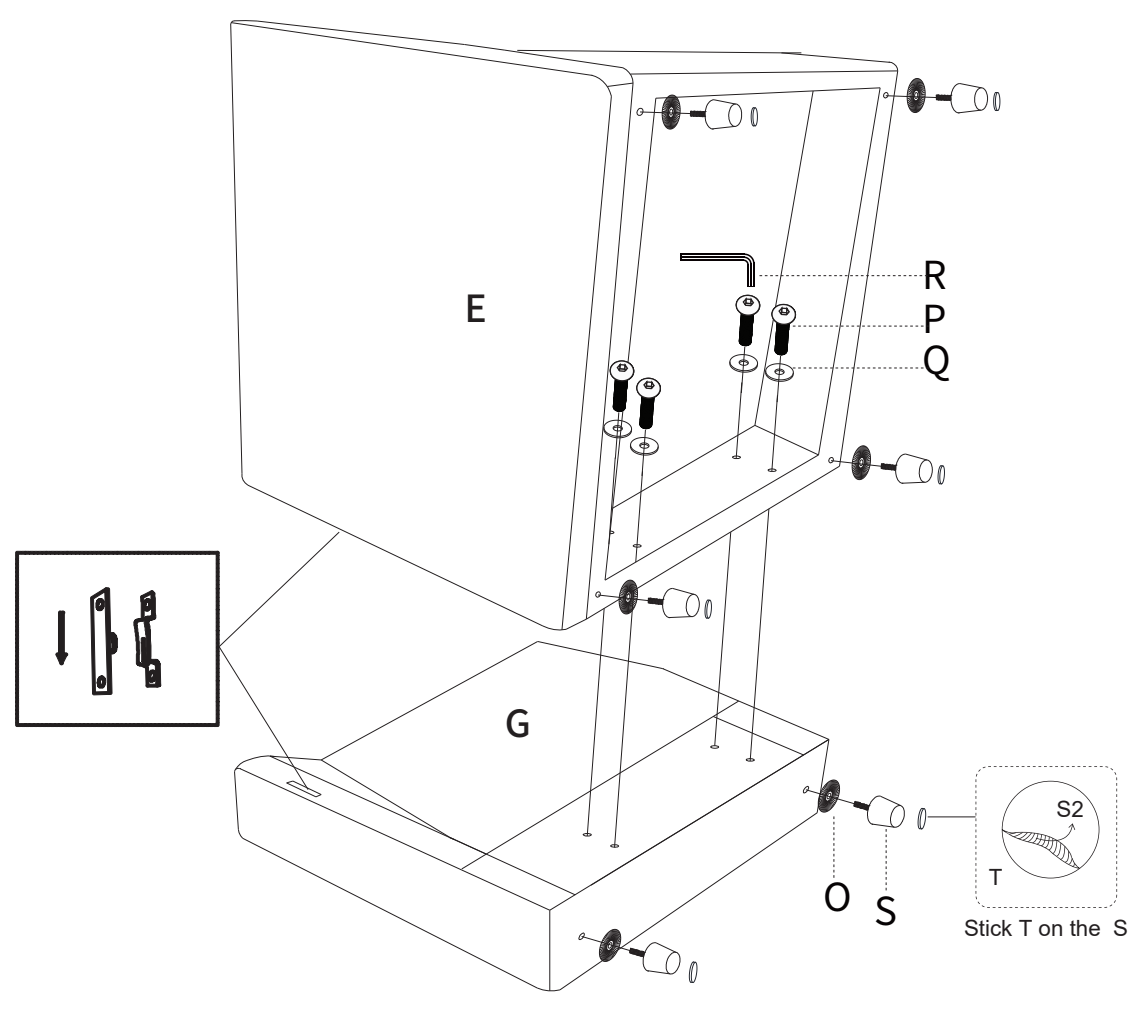



- Gx1
- Rx1
- Px4
- Qx4
- Ox6
- Sx6
- Tx6

 3

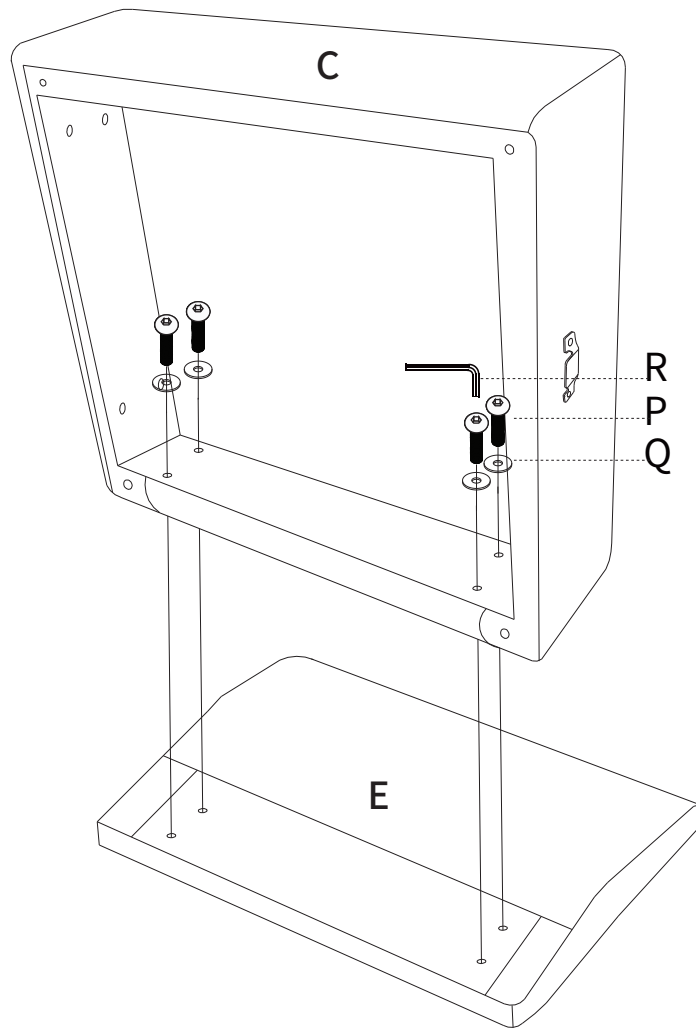


Cx1  
Ex1  
Rx1  
Px4  
Qx4

  4

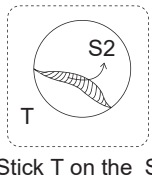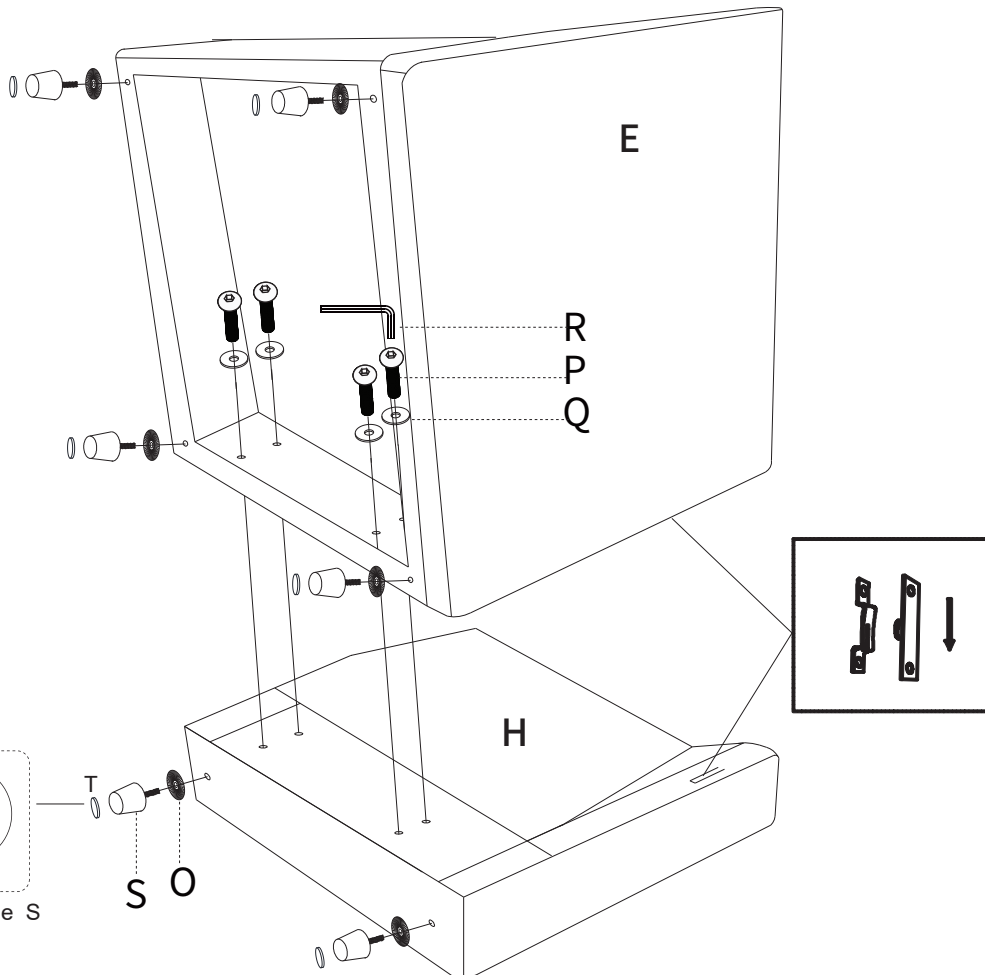

Hx1  
Rx1  
Px4  
Qx4  
Ox6  
Sx6  
Tx6

 
5

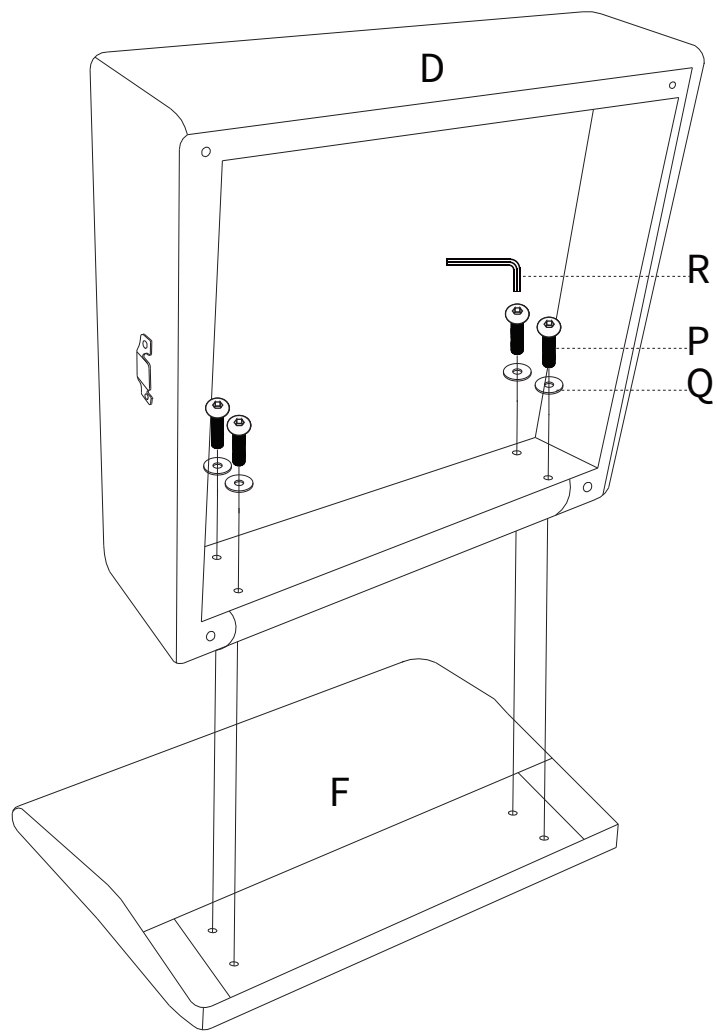

x 2

Dx1  
Fx1  
Rx1  
Px4  
Qx4

 6

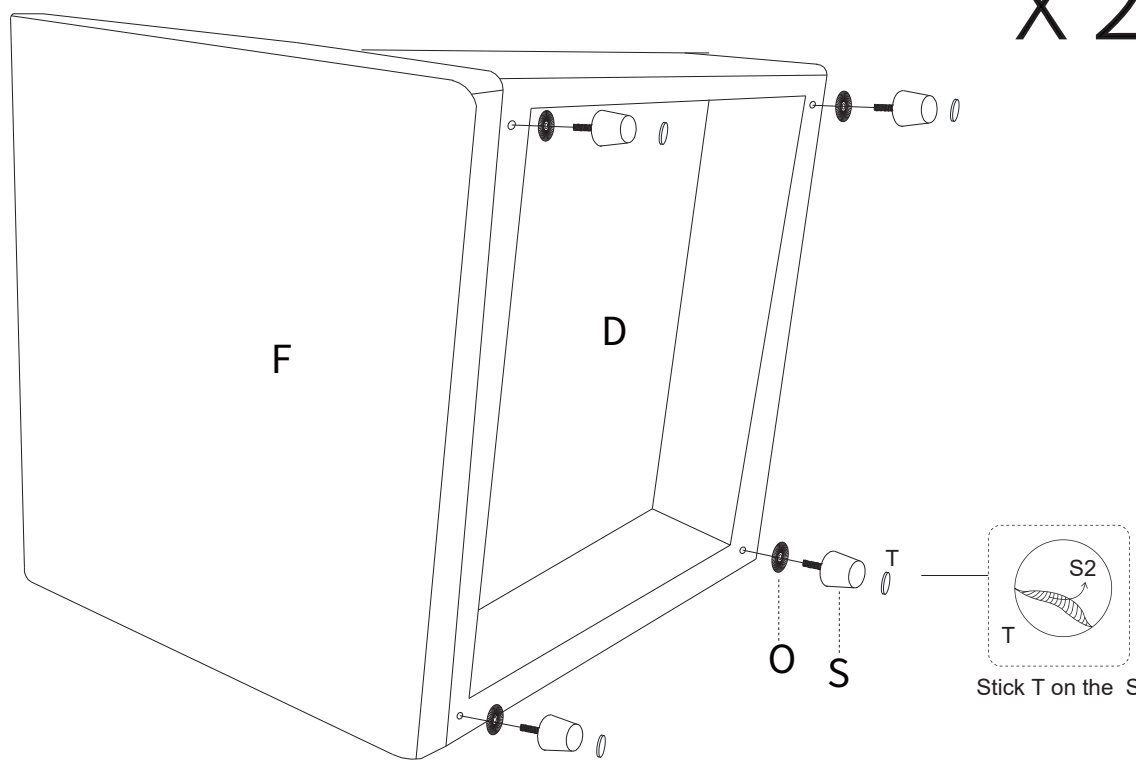


x 2

Ox4  
Sx4  
Tx4


5

 x2

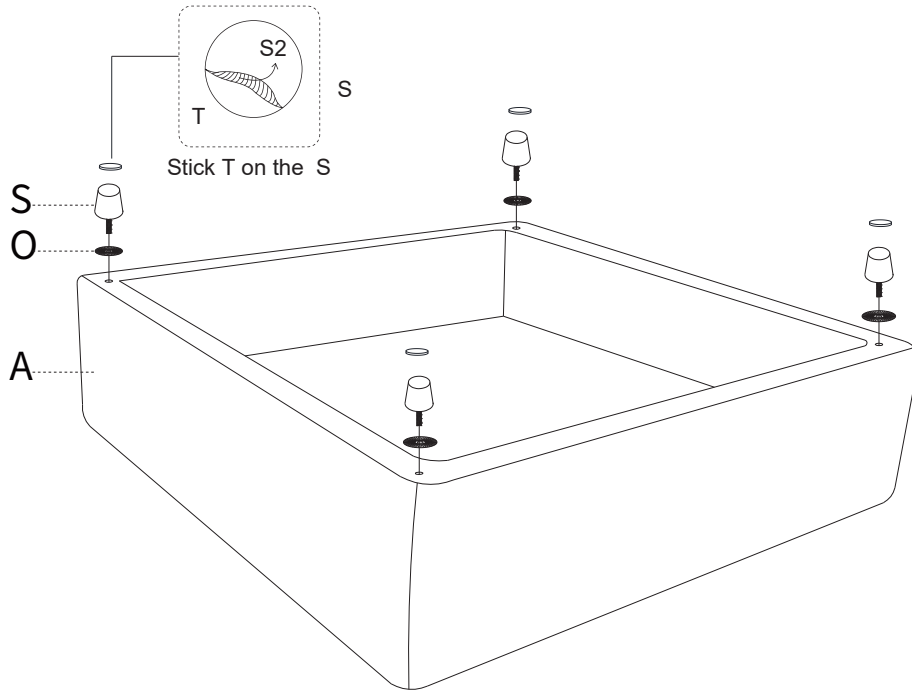

Ax1  
Ox4  
Sx4  
Tx4

 6

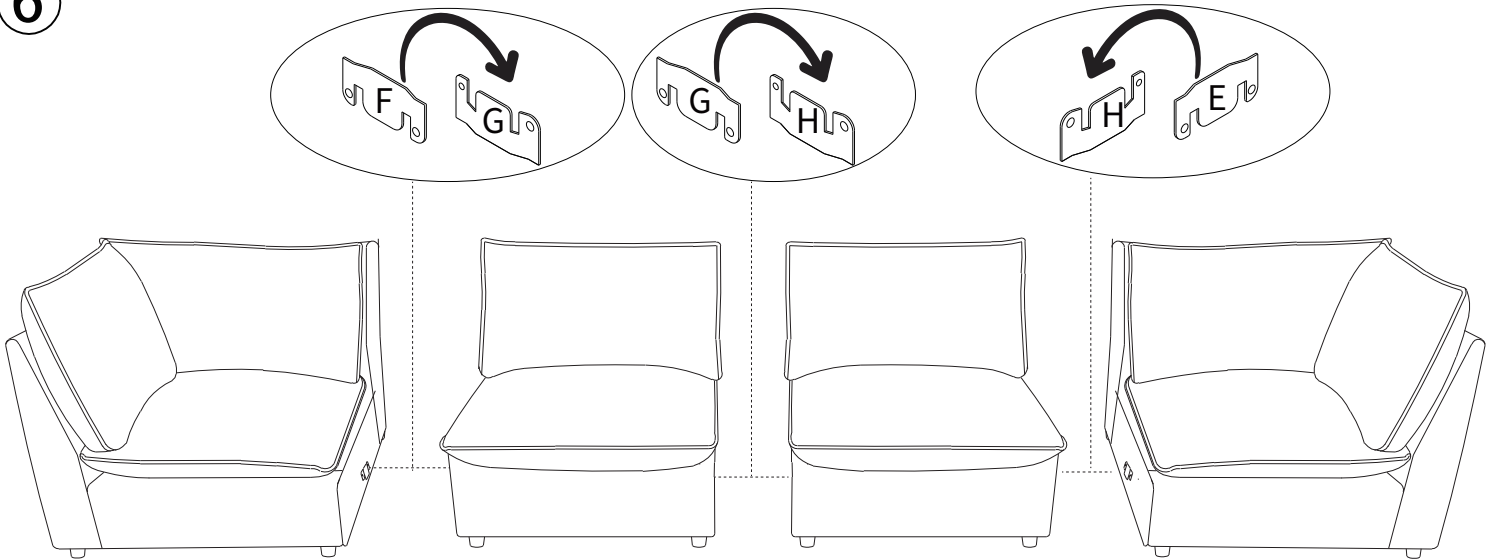

7

