 






Instruction Manual

Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.

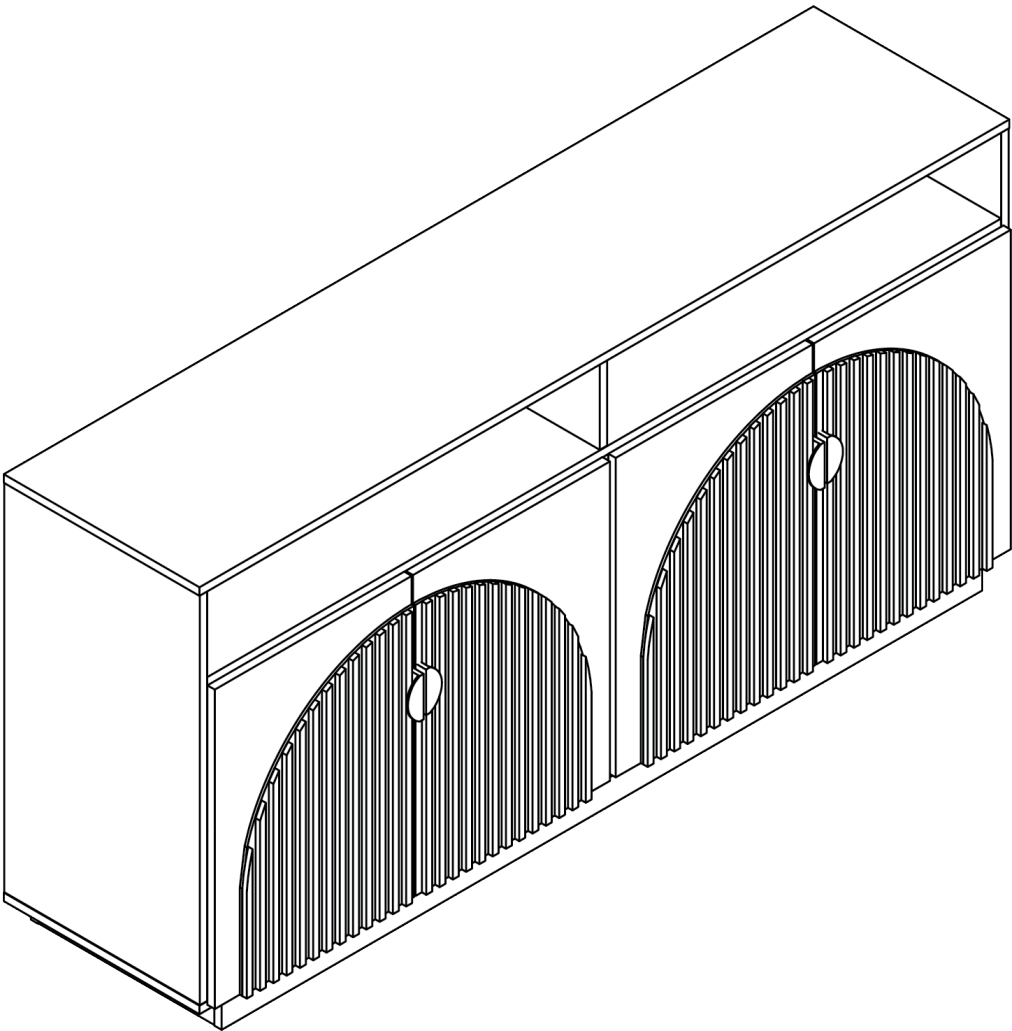

 
 
WARNING!

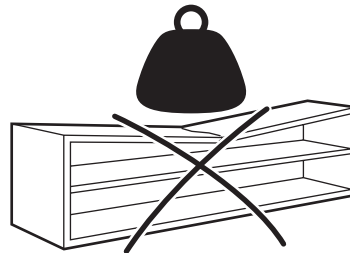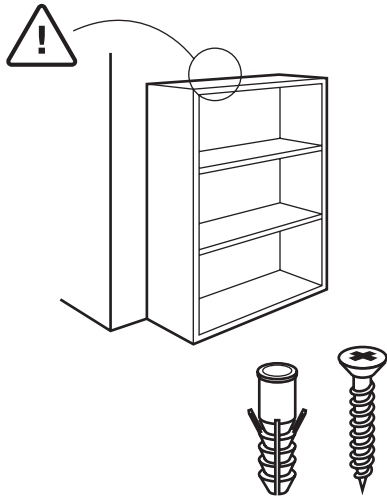

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.
- Different wall materials requires different type of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or local hardware store and seek professional advice.
- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.
- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



CAUTION!

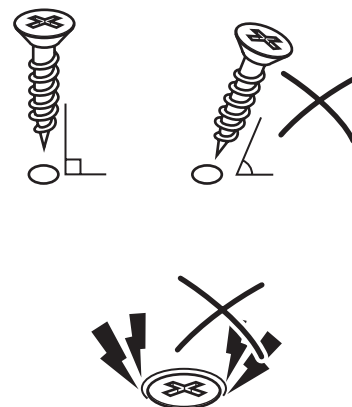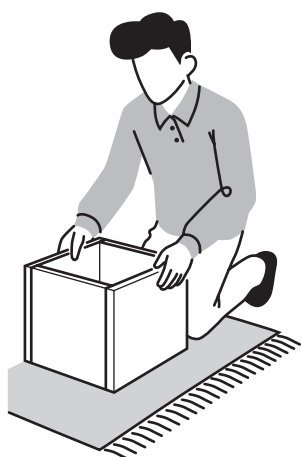

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly


100 mins




Weight Capacity Limitations are as Follows:

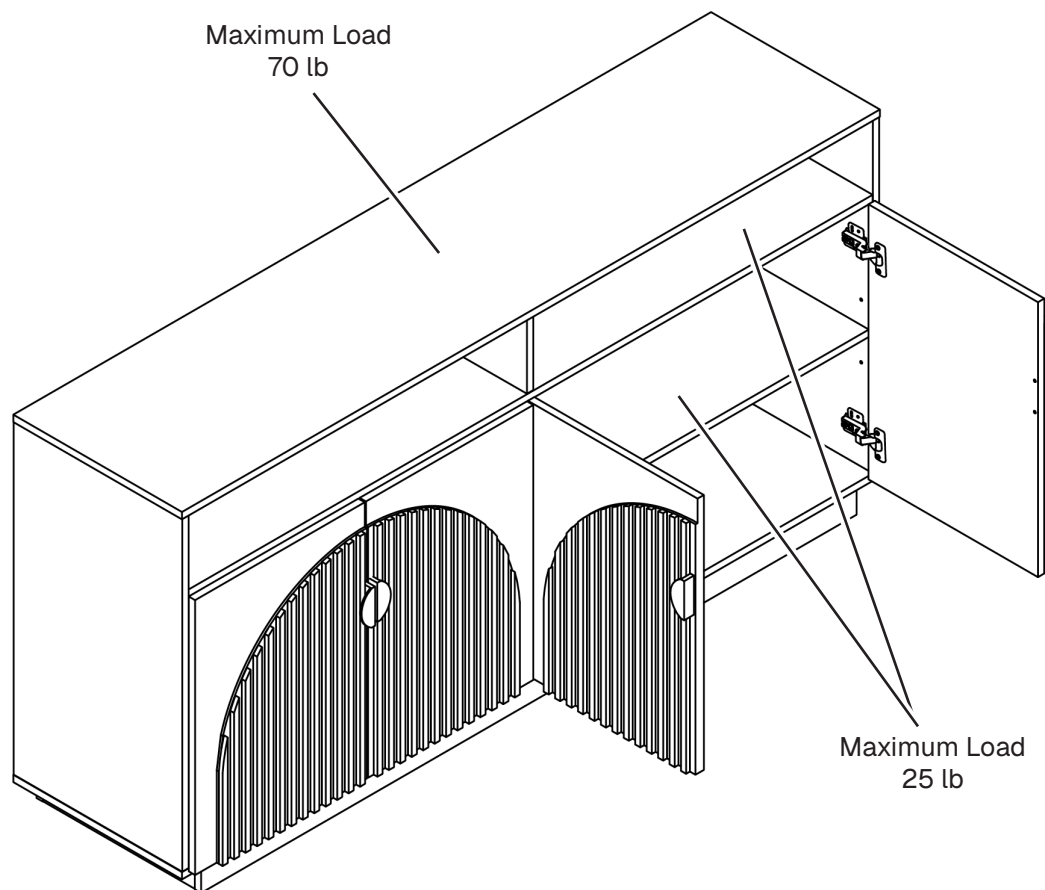


Tools Needed

 

• Philips Screwdriver

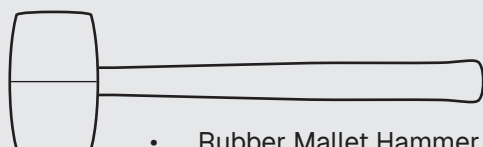 


• Rubber Mallet Hammer

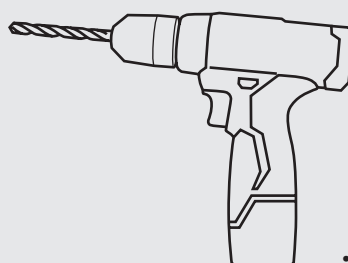 

• Electric Drill

 Package Contents

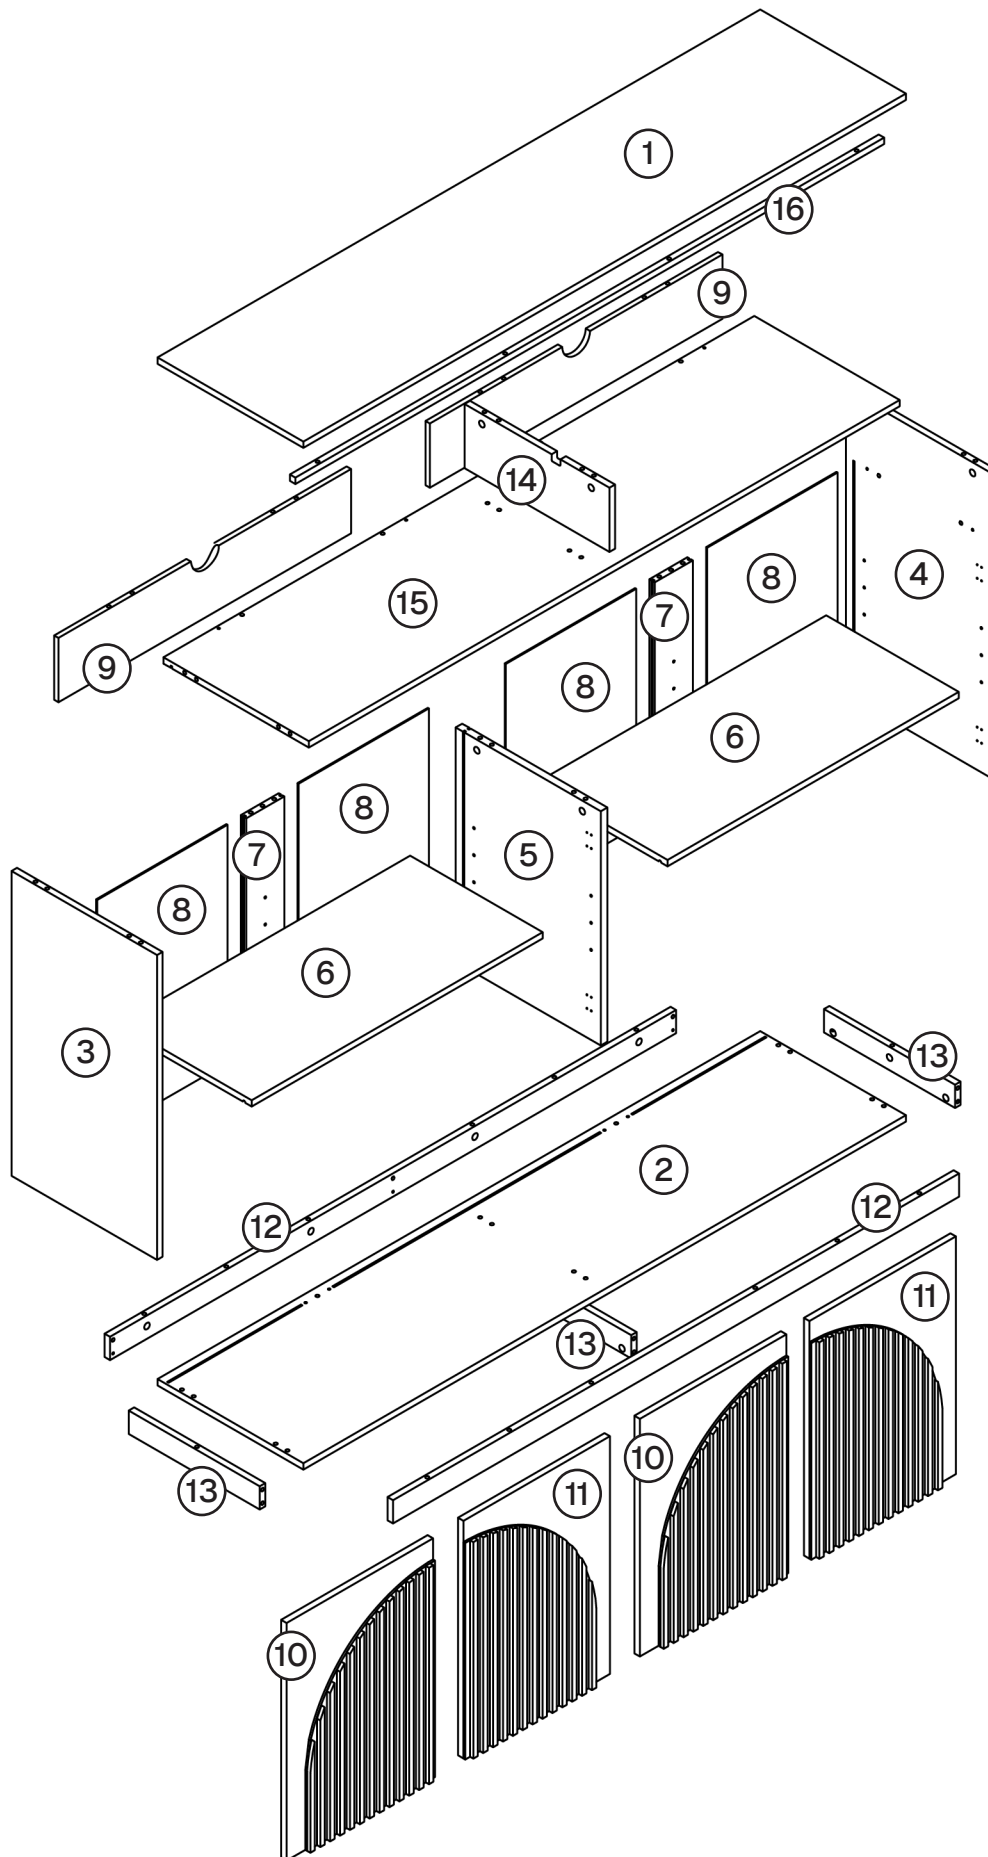








Package Contents(A)

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
7	Back Support Panel	2
9	Top Back Panel	2
10	Left Cabinet Door	2
11	Right Cabinet Door	2
12	Long Base Strip	2
15	Center Panel	1
16	Crossbar	1
	Hardware pack	1 set

Package Contents(B)

CODE	DESCRIPTION	QTY
3	Left Lateral Panel	1
4	Right Lateral Panel	1
5	Medial Panel	1
6	Storage Shelf Panel	2
8	Back Panel	4
13	Short Base Strip	3
14	Top Divider Panel	1

       Package Contents

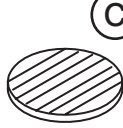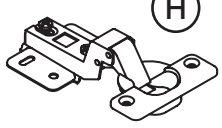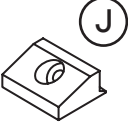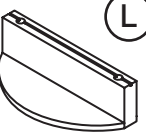
 A 45x + 4x	 B 37x + 3x Ø15 x 11	 C 45x + 4x	 D 42x + 4x	 E 10x + 1x
 F 8x Ø6 x 50	 G 1x	 H 8x	 I 48x + 4x Ø3.5 x 14	 J 16x + 1x
 K 16x + 1x Ø3 x 17	 L 4x	 M 8x + 1x 5/32" x 25	 N 2x	 O 2x Ø4 x 18
 P 2x Ø4 x 25	 Q 2x	 R 8x Ø15 x 9	 S 4x M6 x 25	

01

Lateral panels and center panel



 
A 10x

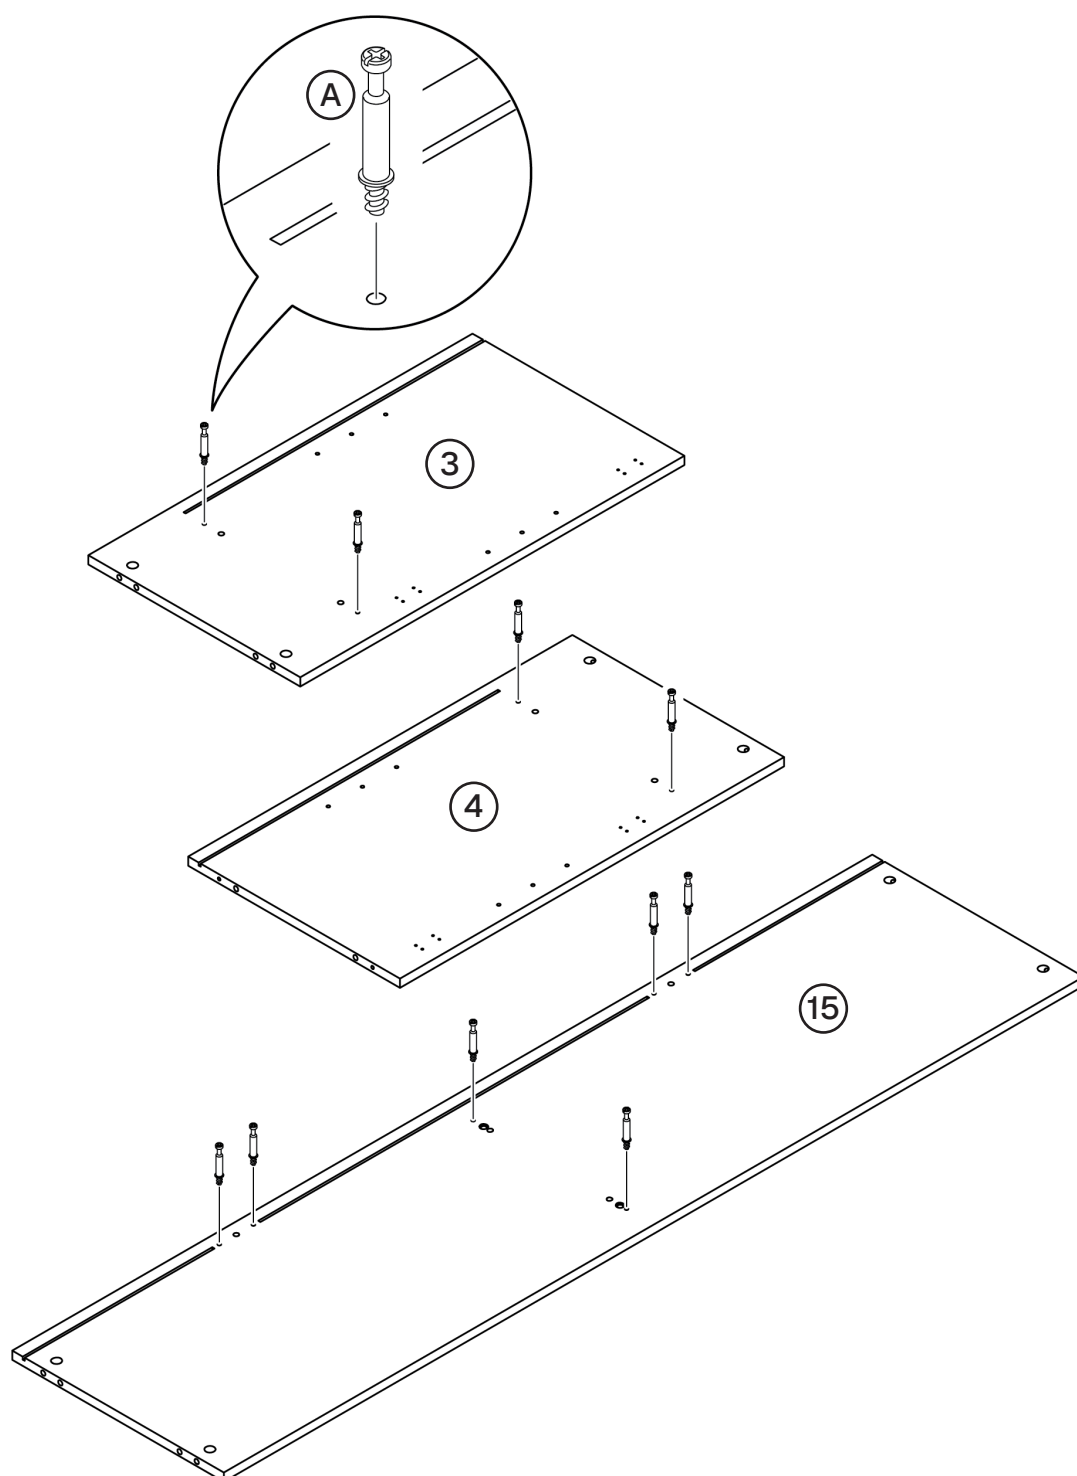

02 Medial panel, top divider panel, and center panel



 D 12x

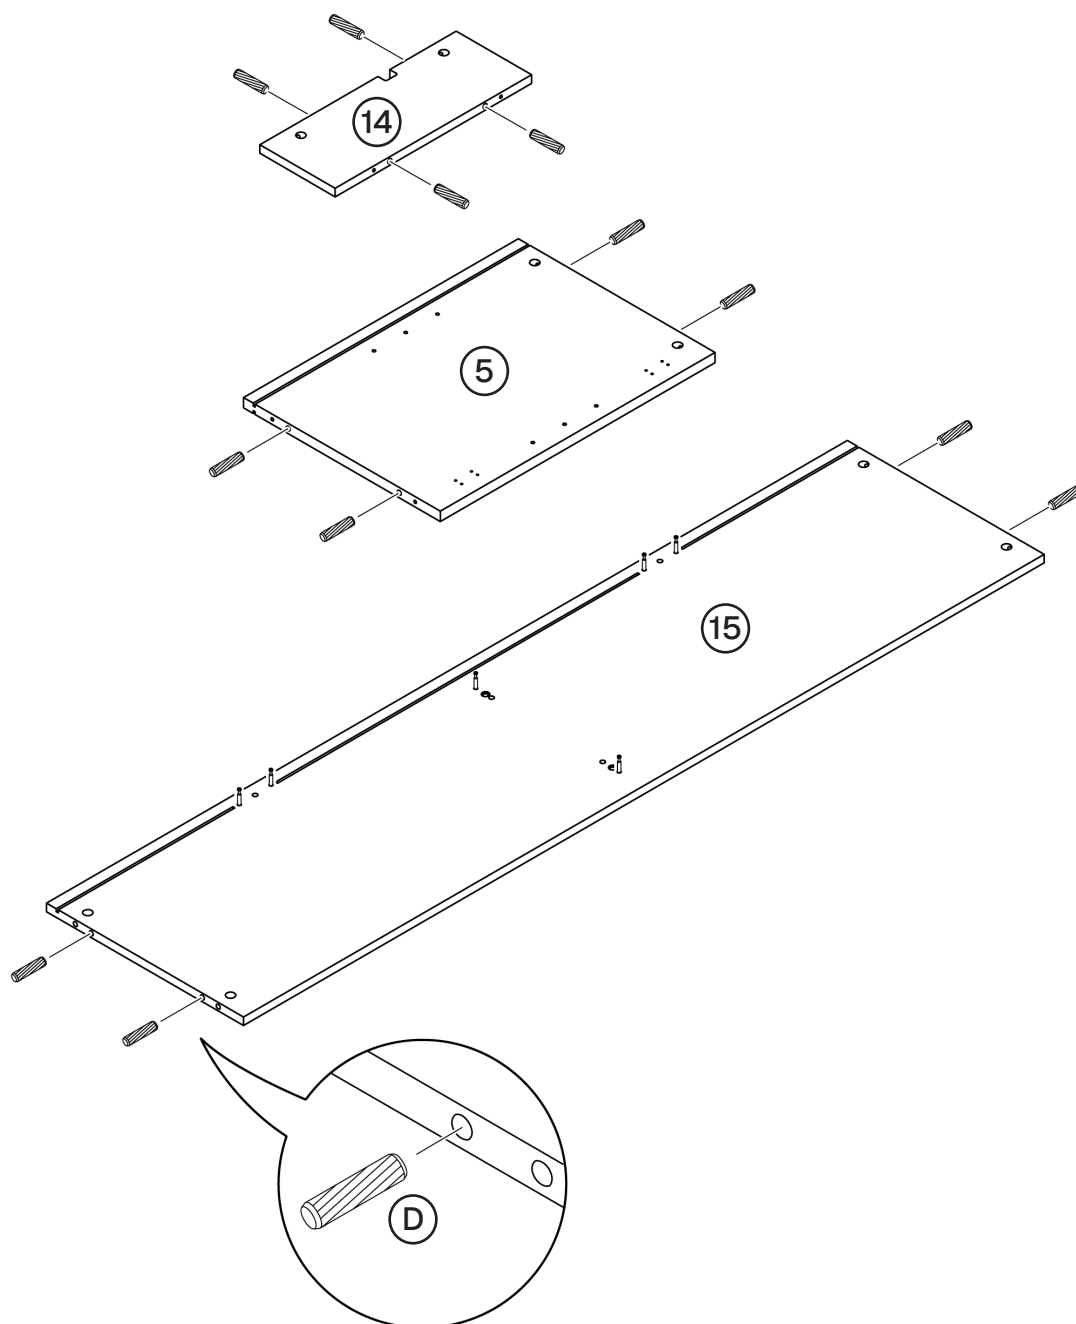


03 Assembling center panel between lateral panels



B 4x



 
C 4x

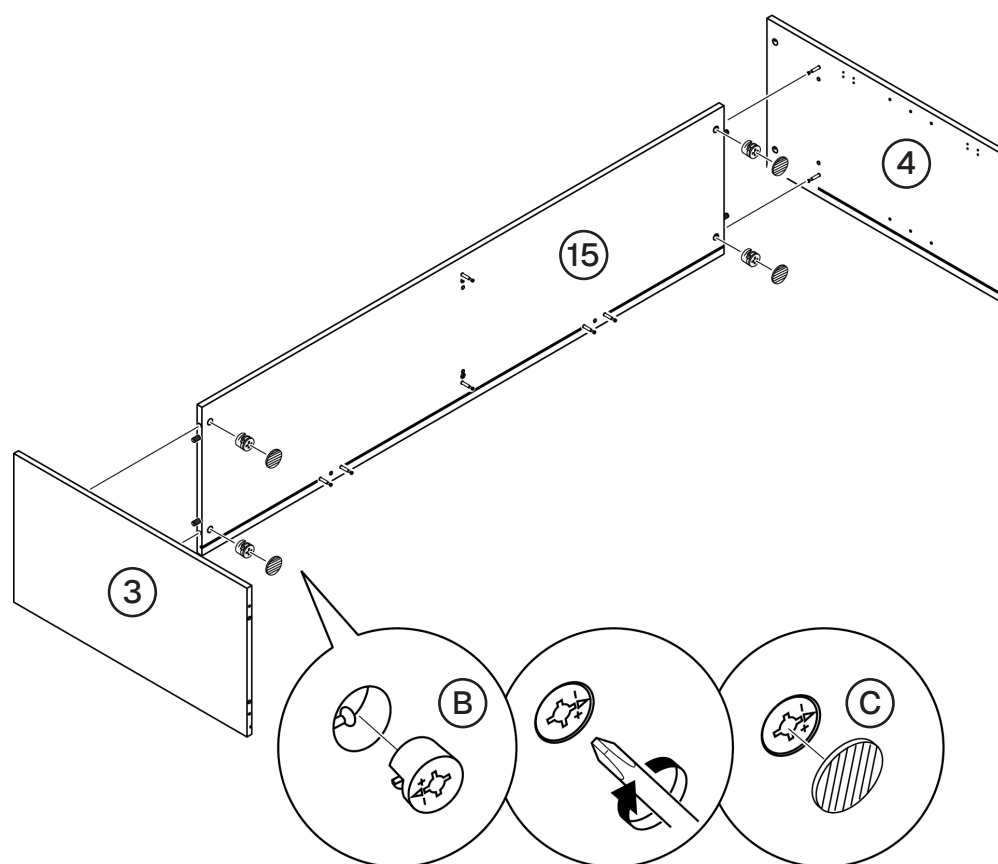

04 Attaching top divider panel



 F 2x

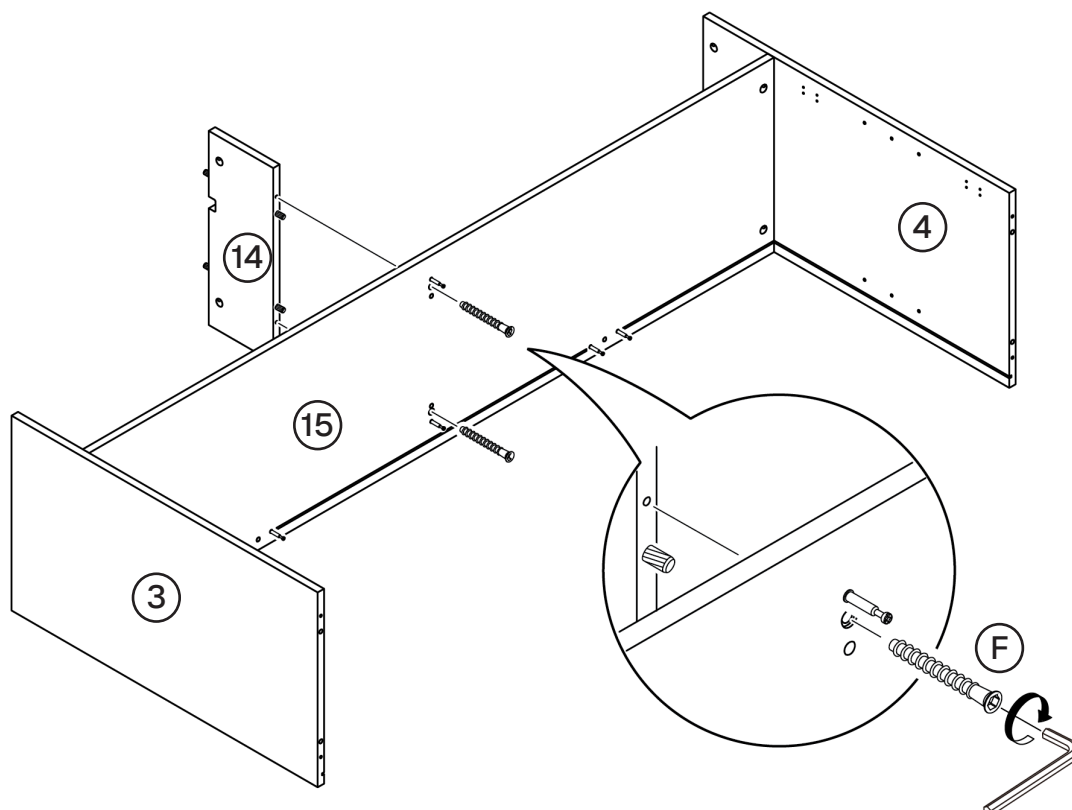

05 Attaching medial panel

 


Ø15 x 11

B 2x




C 2x

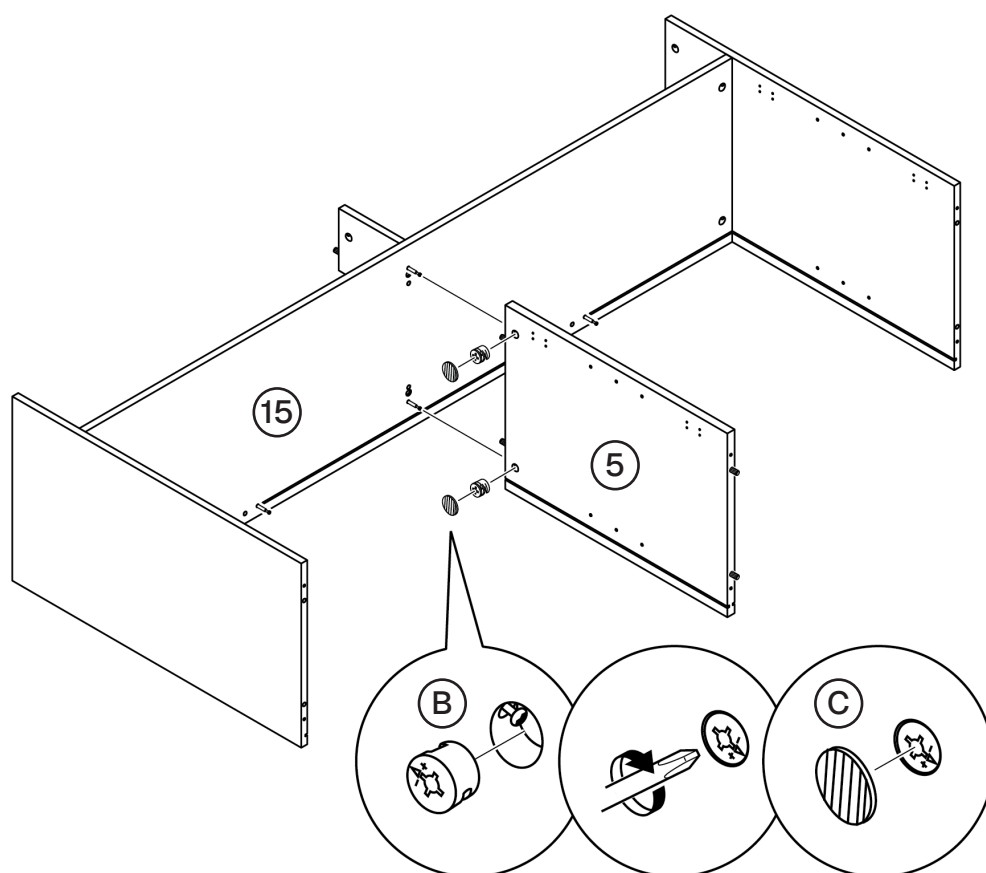

06 Inserting wood dowels to lateral panels



 
D 8x

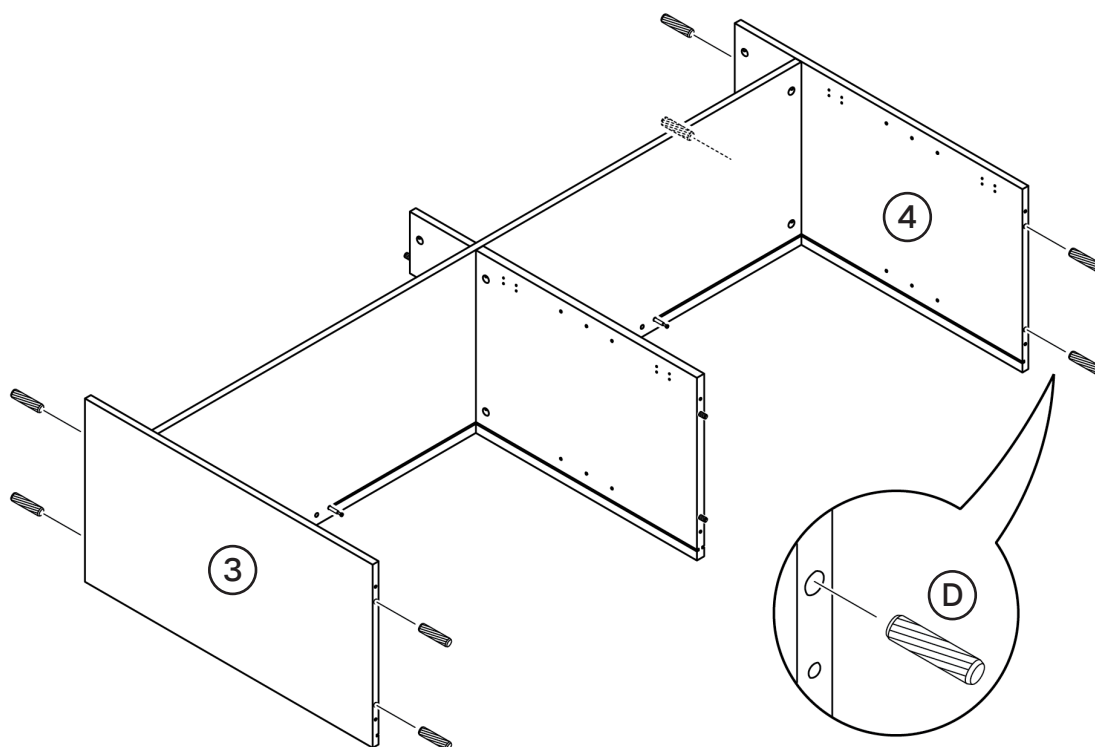

07 Back support panels



 D 4x

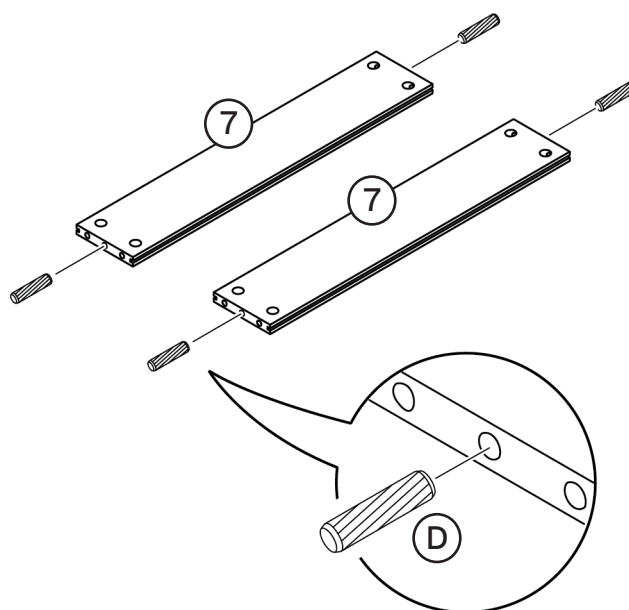

08 Attaching back support panels

 


ø15 x 11


B 4x





C 4x

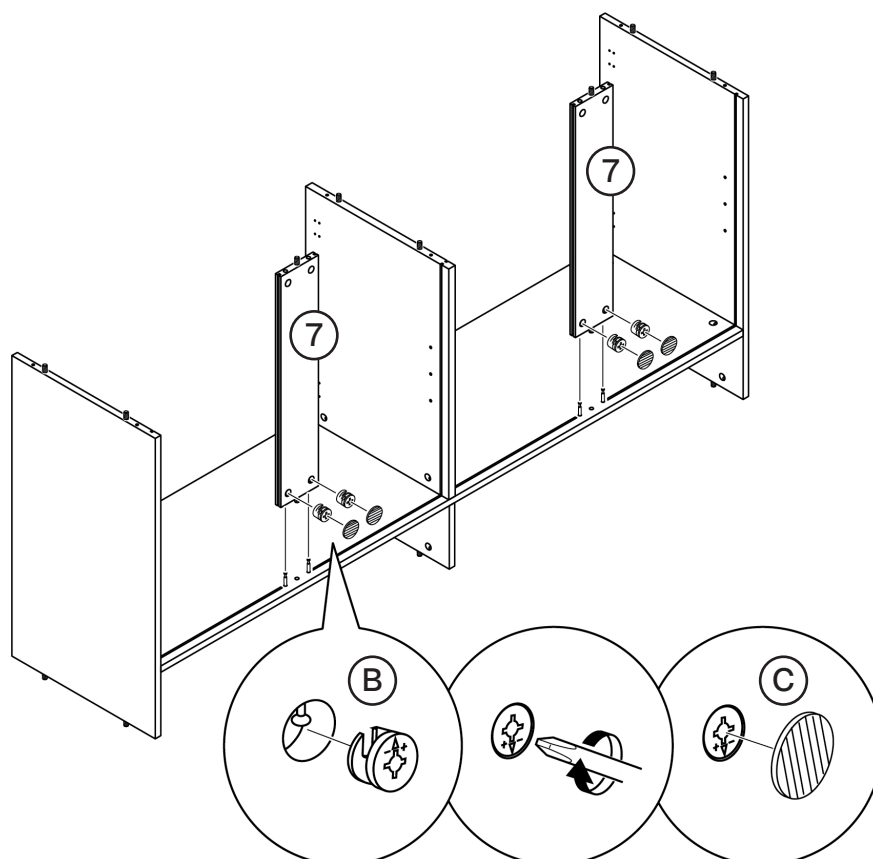

09 Sliding in back panels

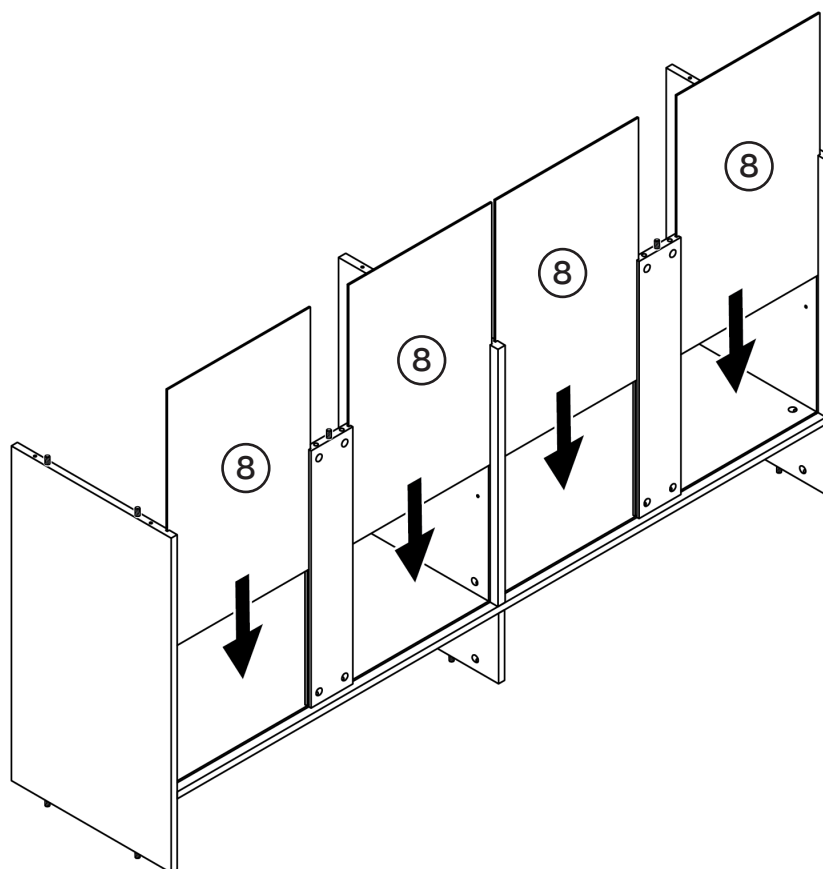 

10 Bottom panel

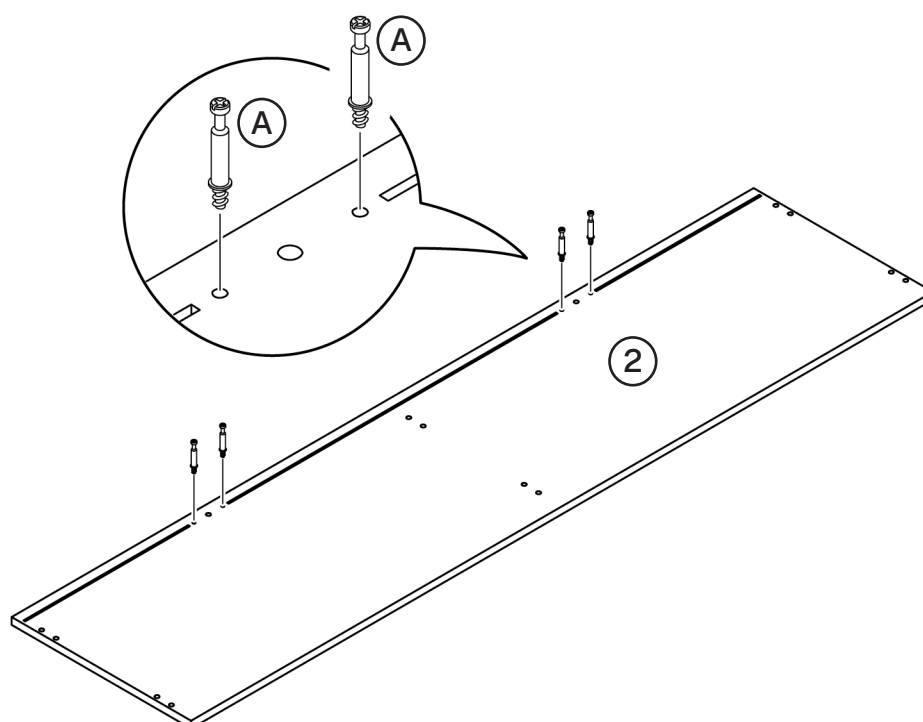  


11

Attaching bottom panel



 F 6x

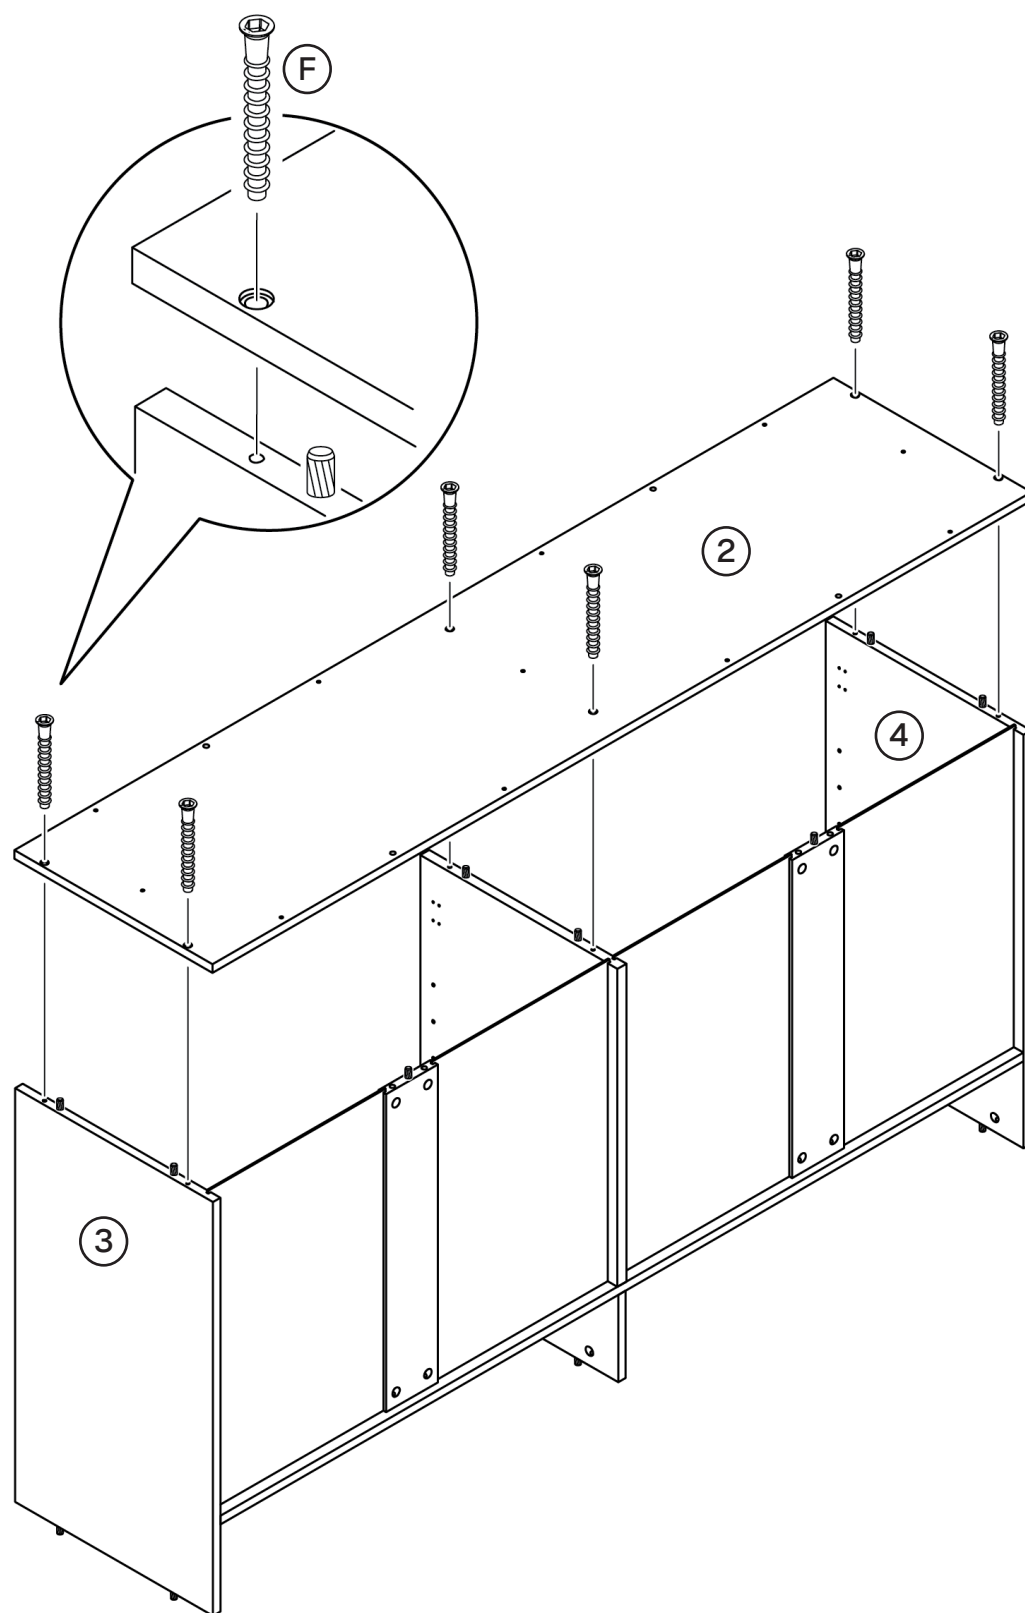

12

 
Securing back support panels in place



B 4x



C 4x


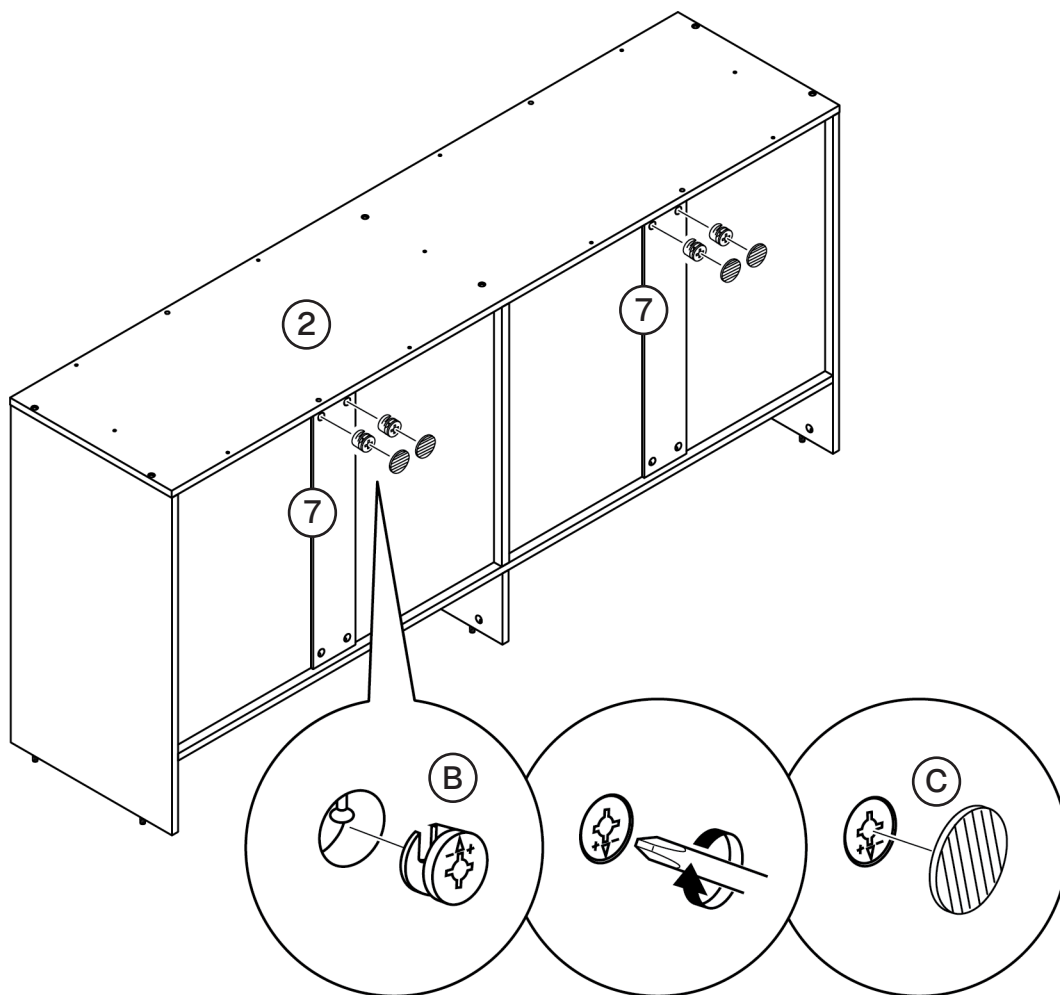


13

Bottom panel and long base strips



  A 17x

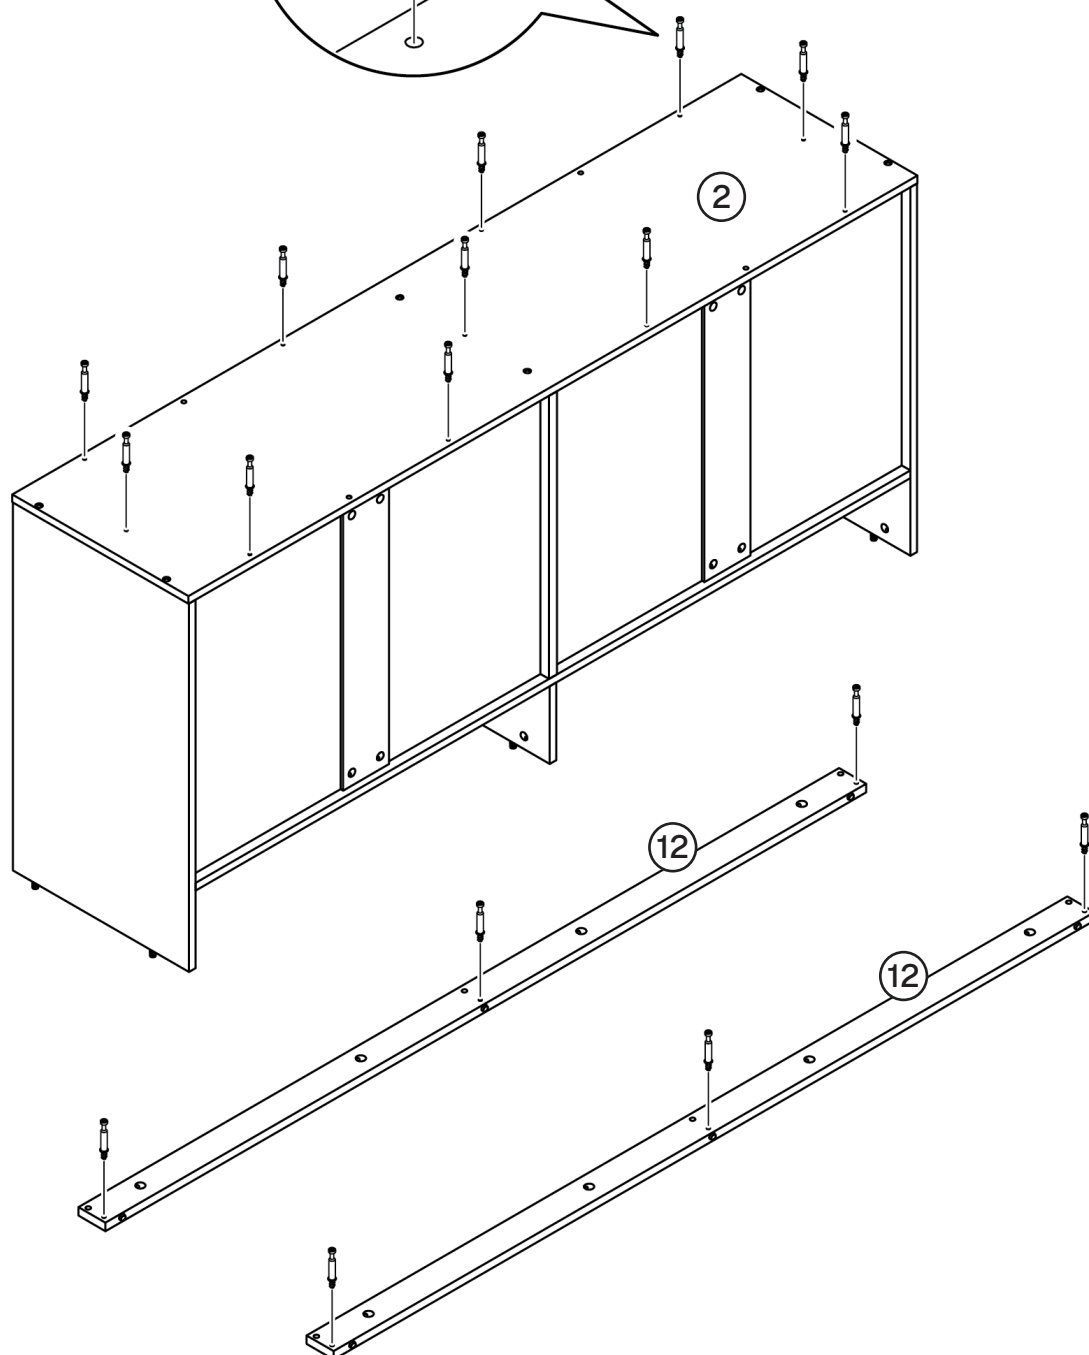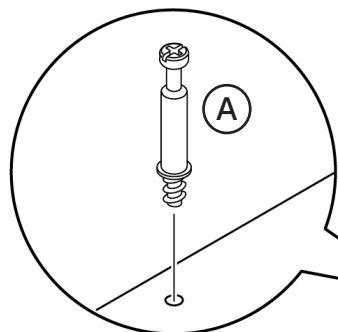


14

Insert wood dowels to base strips



 D 10x

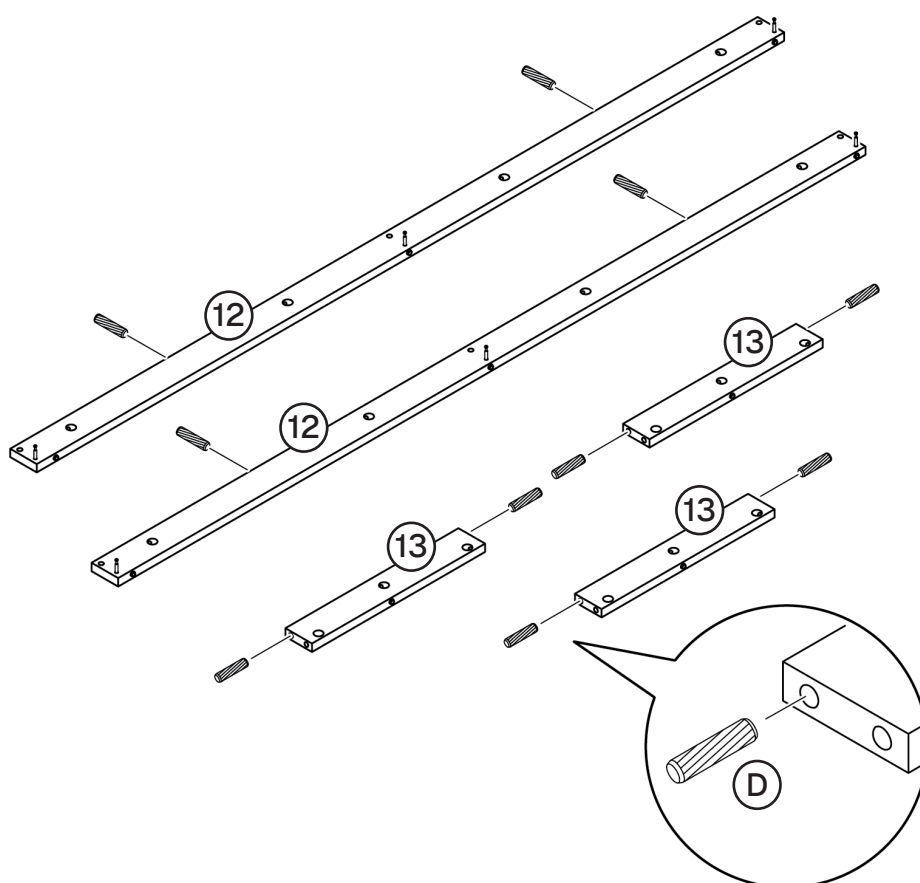

15

 
Assembling the base



B 6x



C 6x

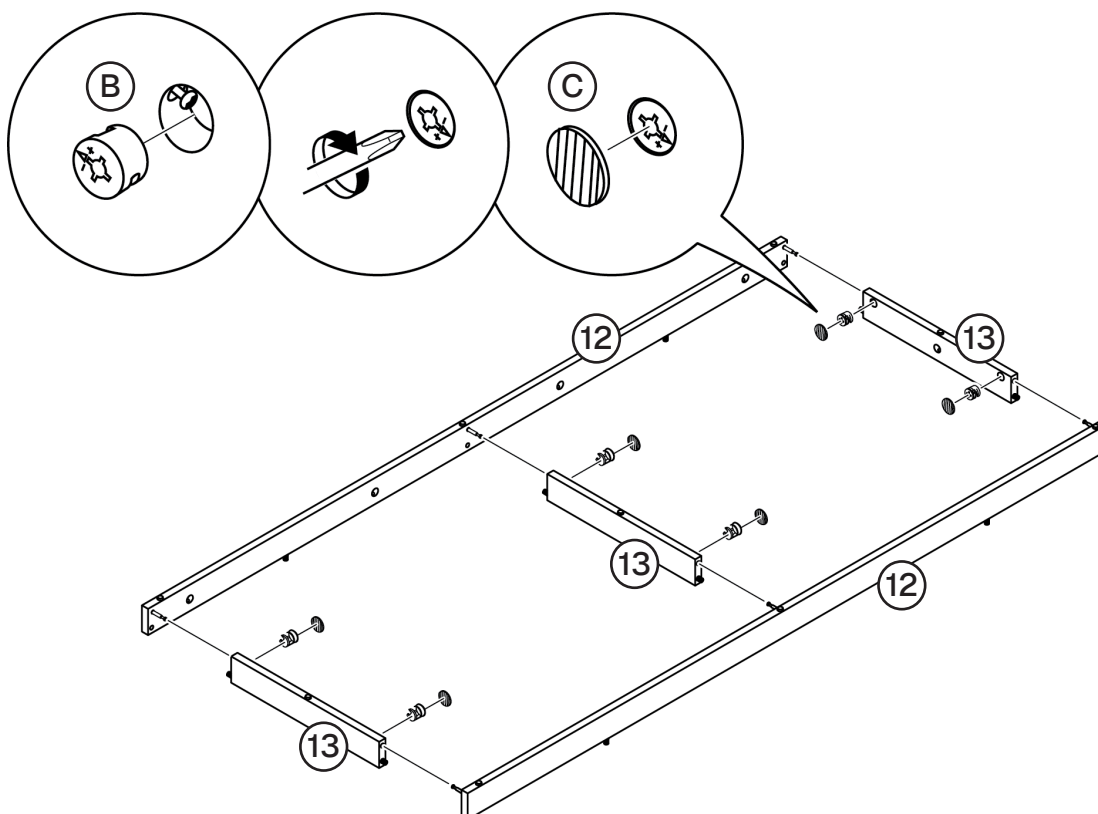

16

Attaching the base to the bottom panel

 
 


Ø15 x 11

B 11x



C 11x

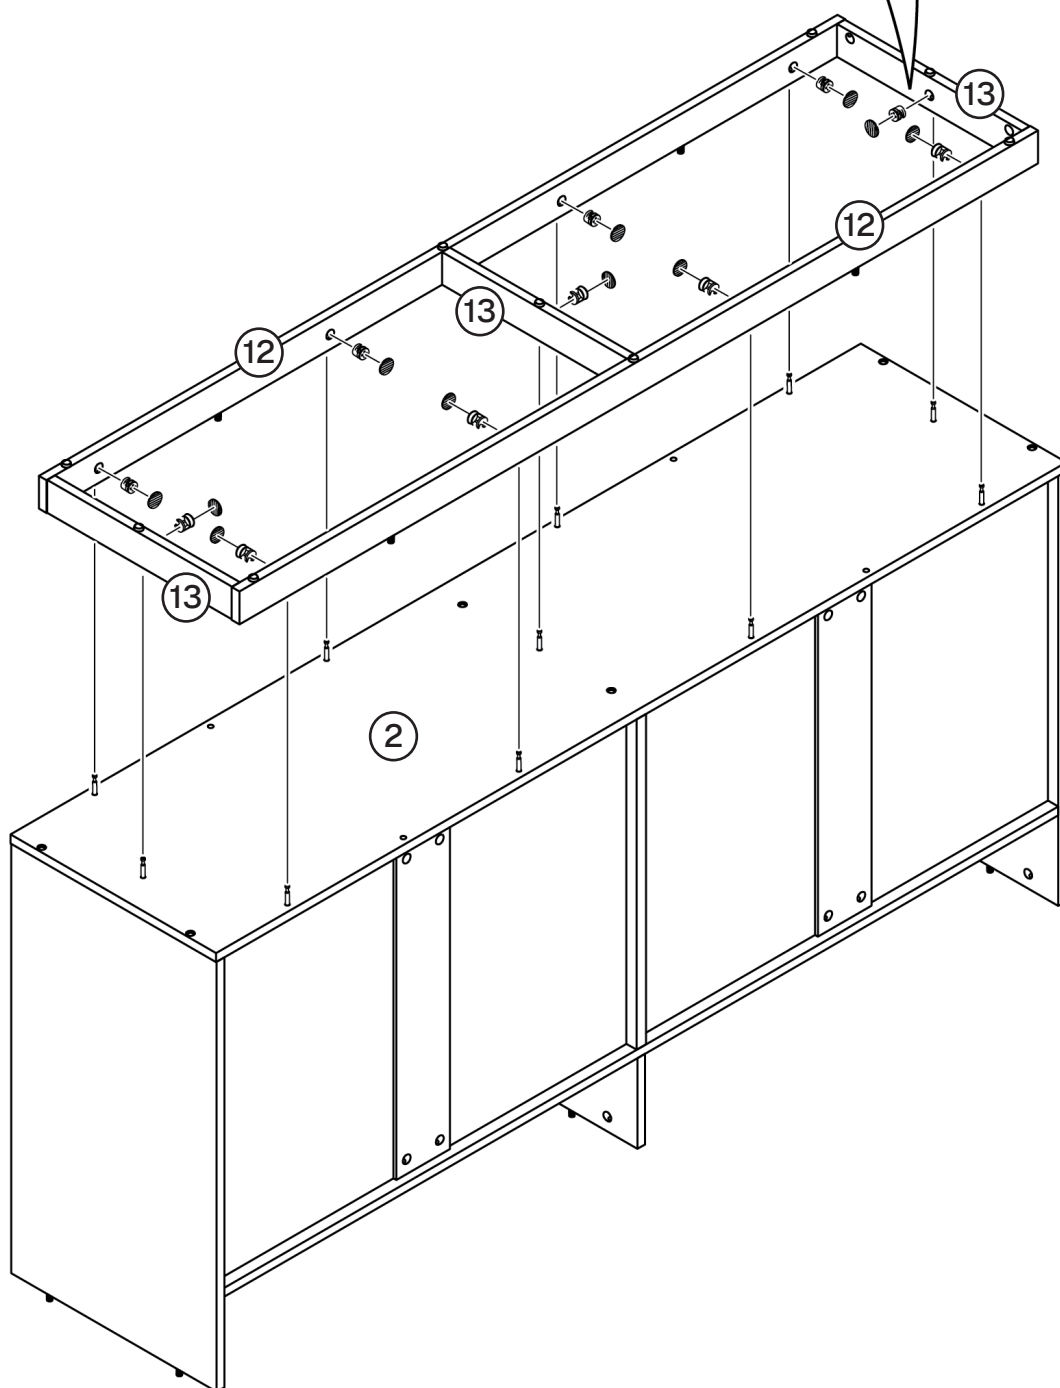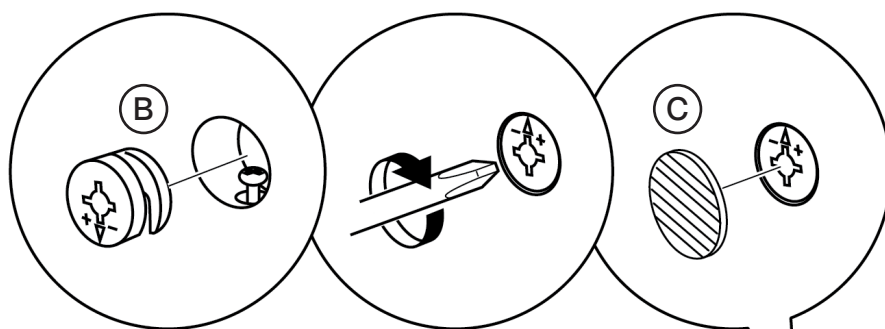


17

Top back panels



 D 8x

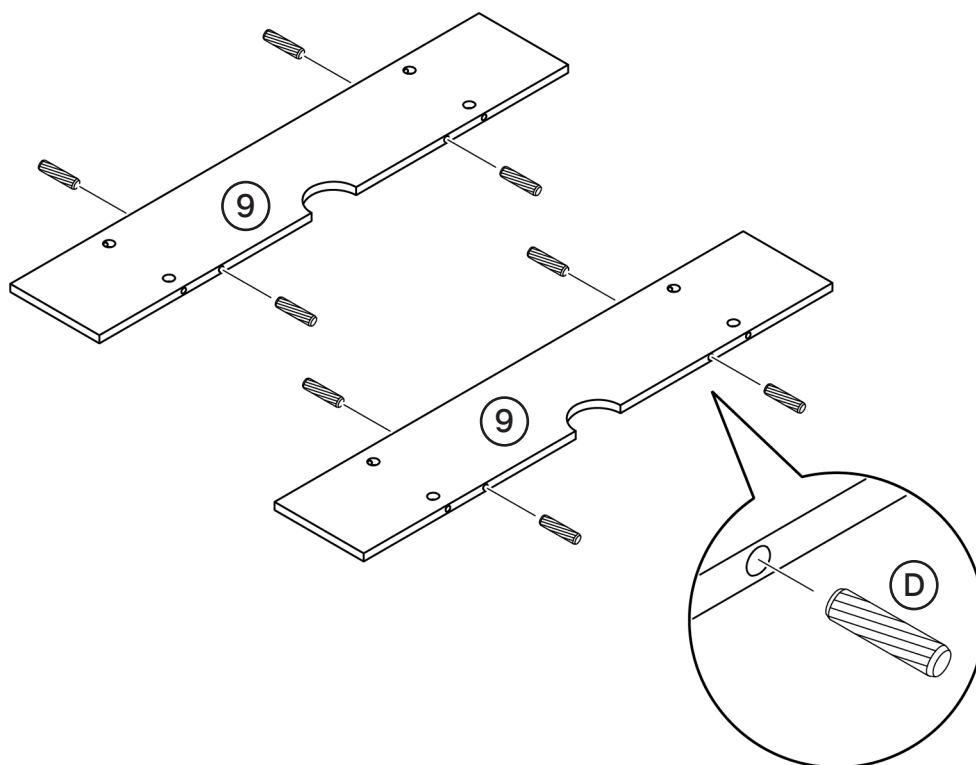


18

Center panel



 A 4x

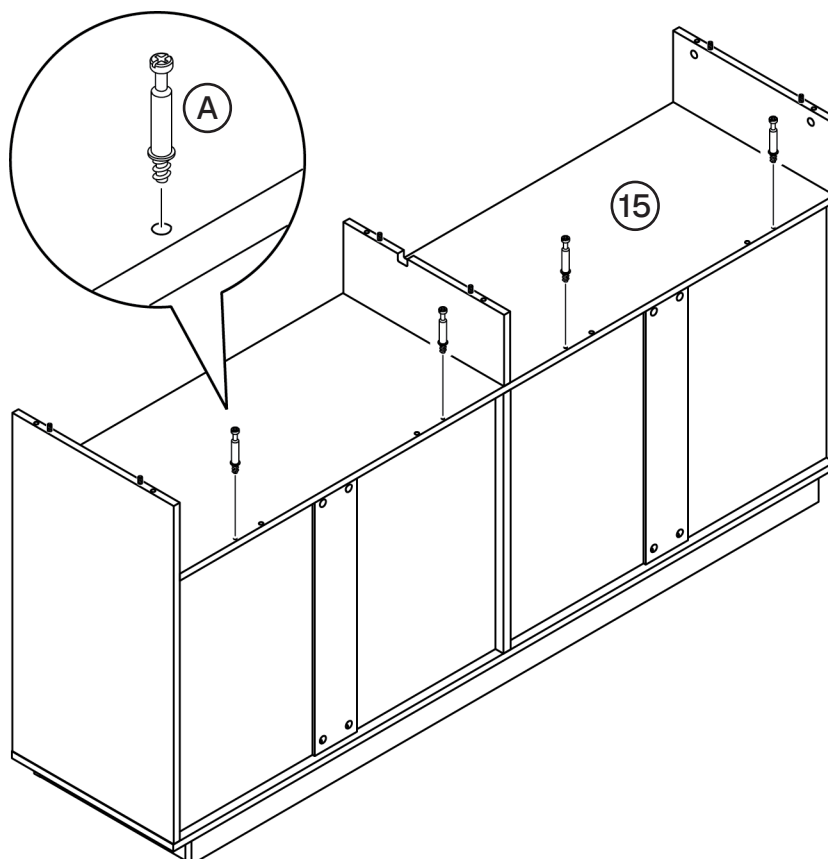

19

 
 
 
Attaching top back panels



R 4x




C 4x

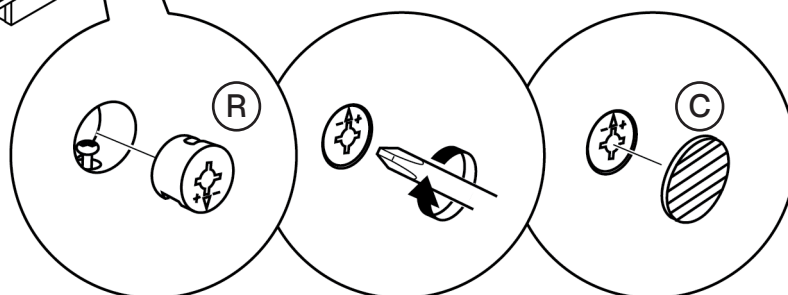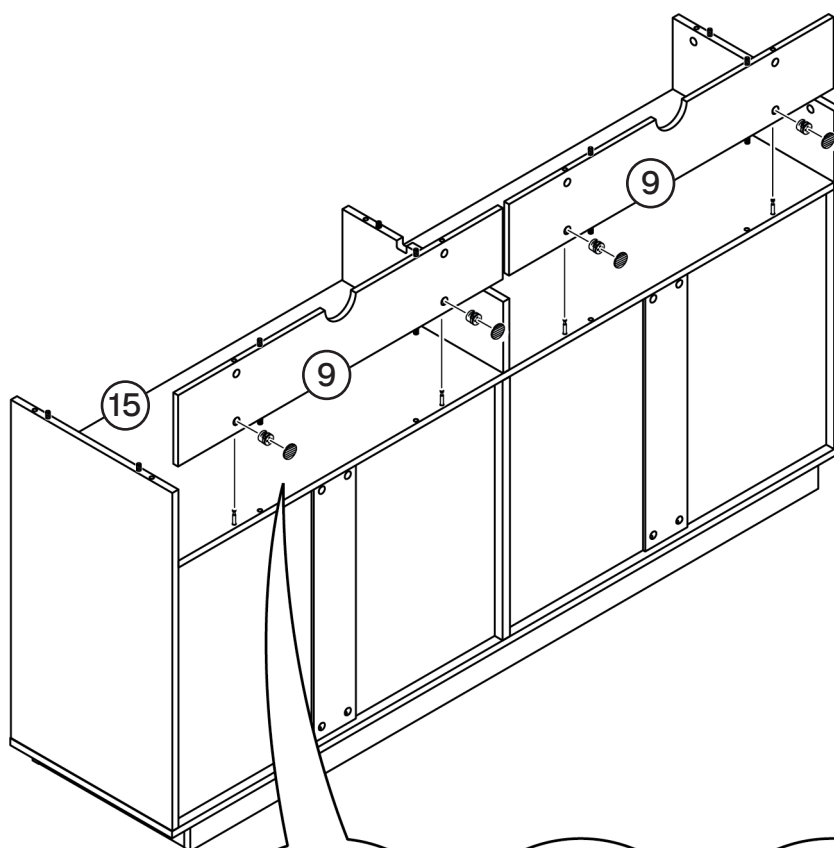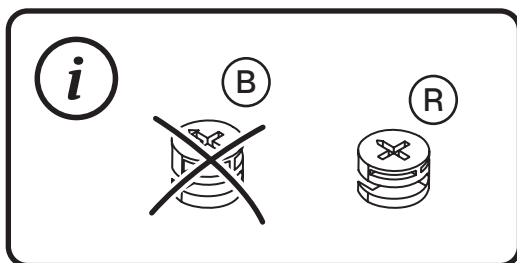

20 Attaching crossbar



 
S 4x

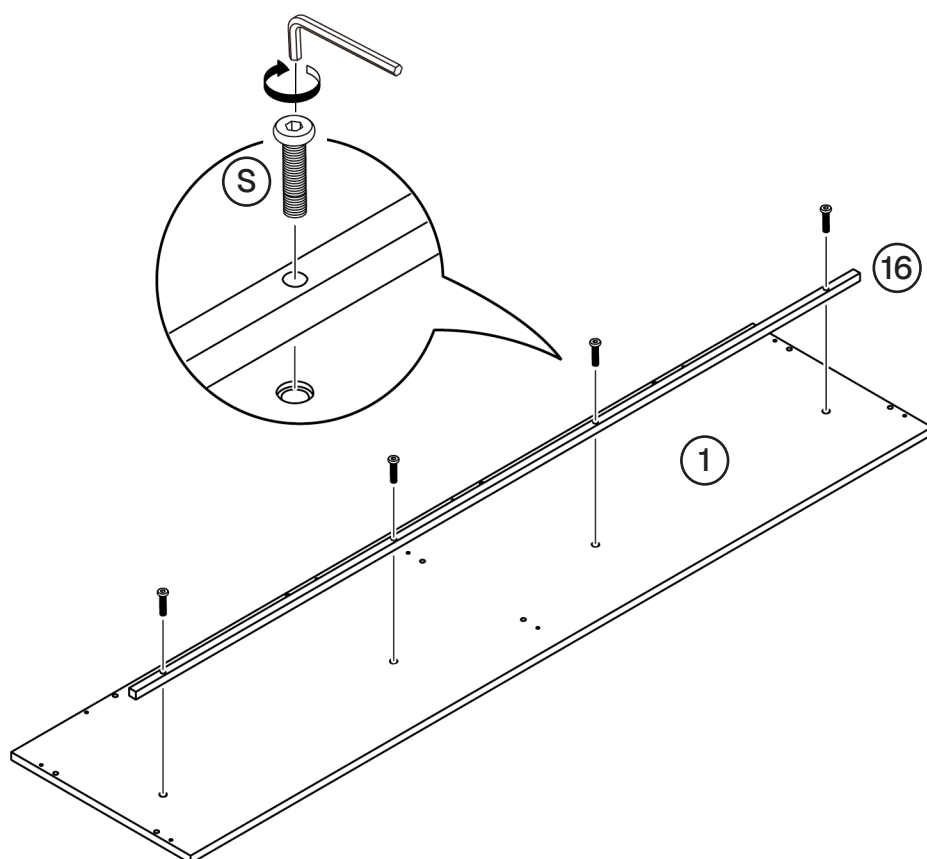

21 Top panel



 A 10x

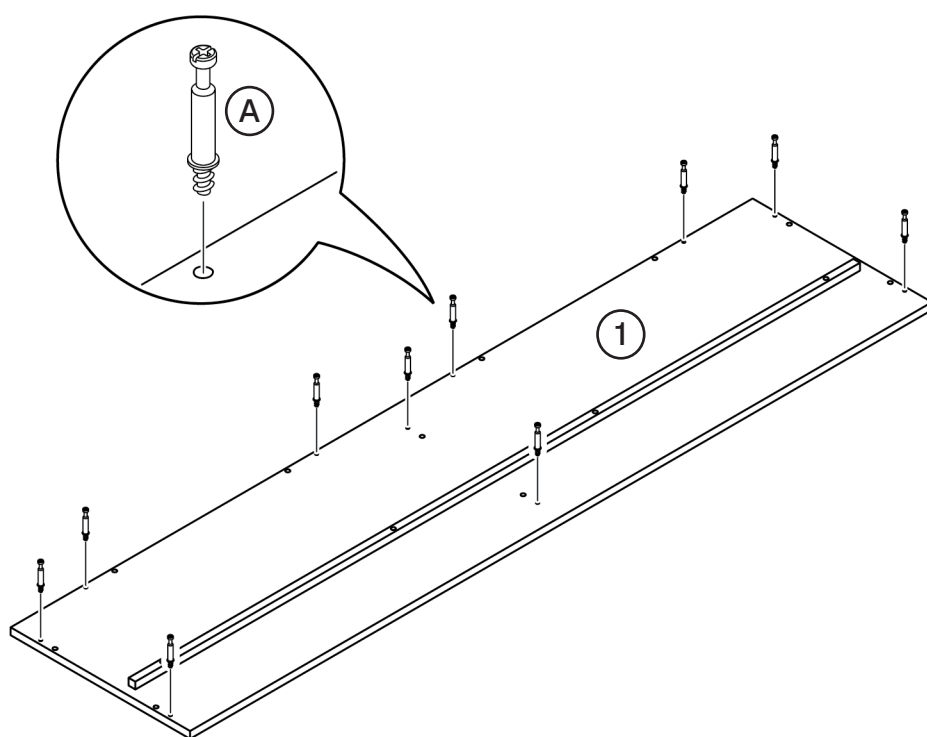

22

 
Attaching top panel



B 6x



C 6x

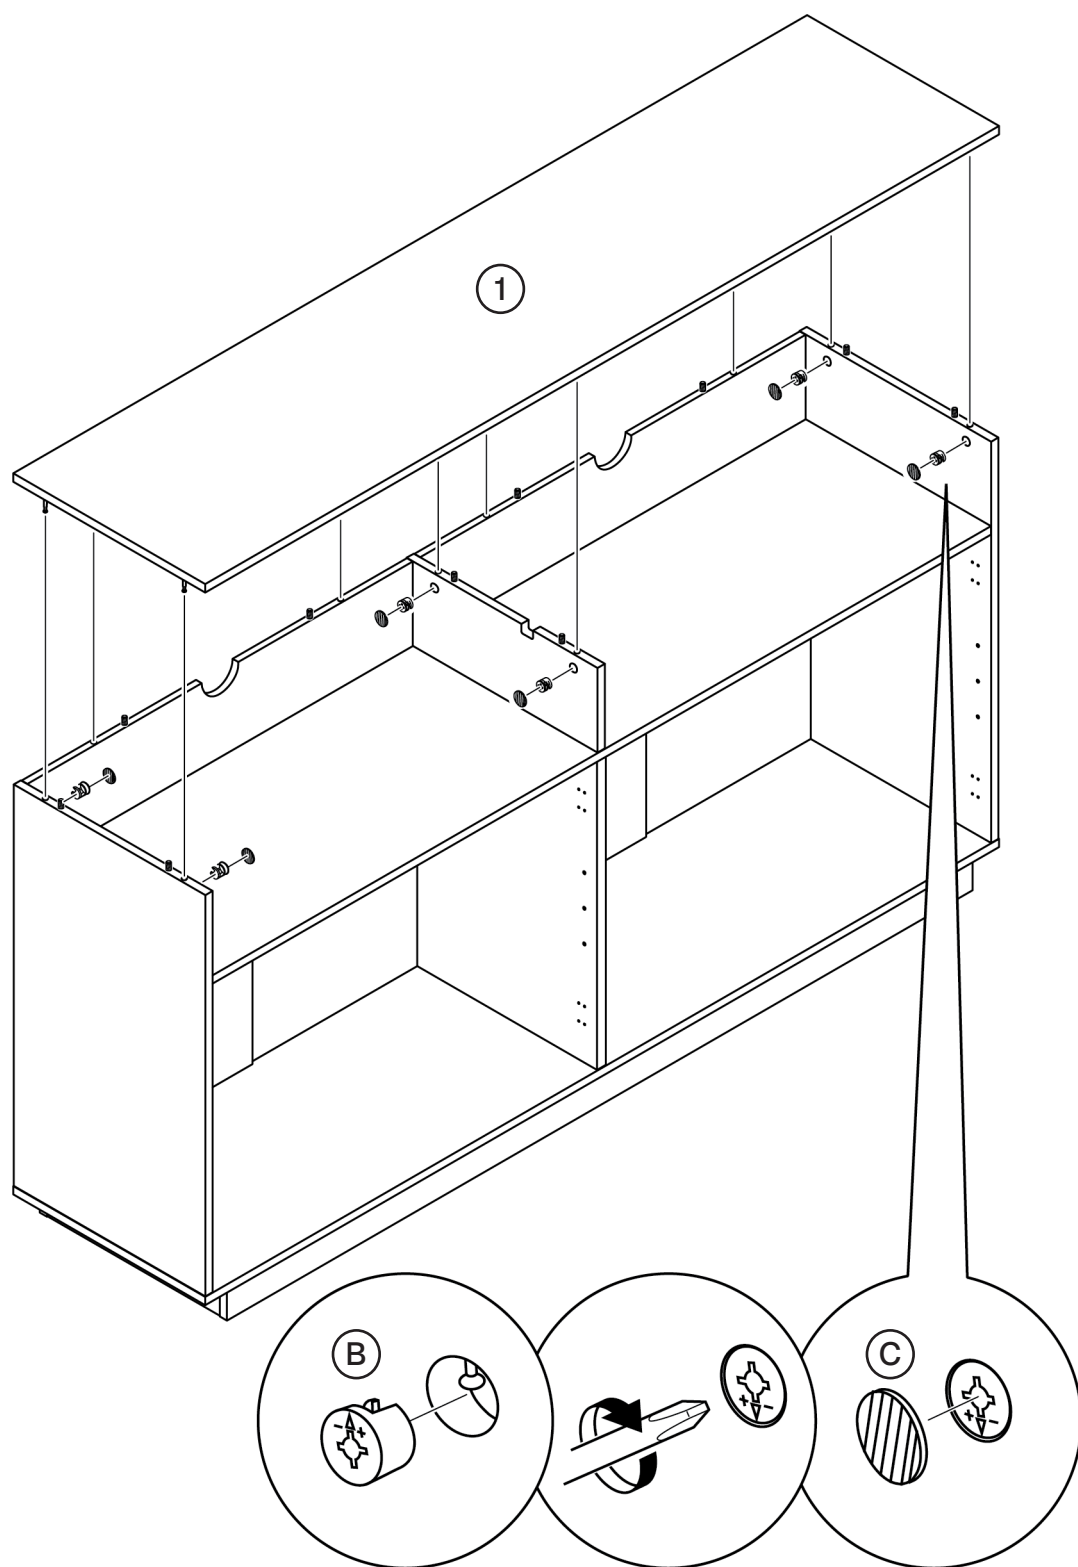

23

 
 
 
 
 
Securing top back panels



R 4x



C 4x

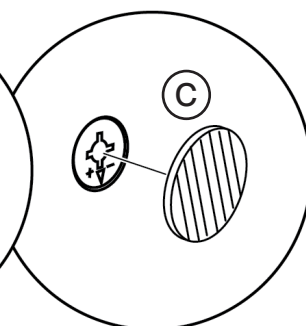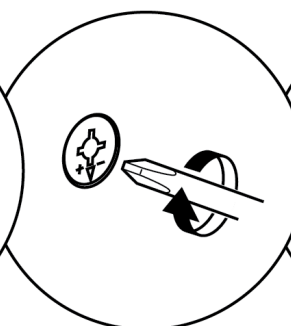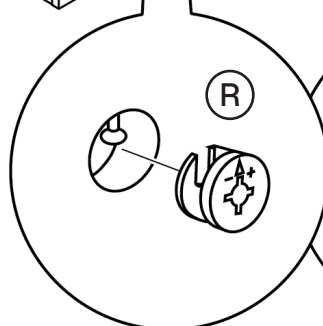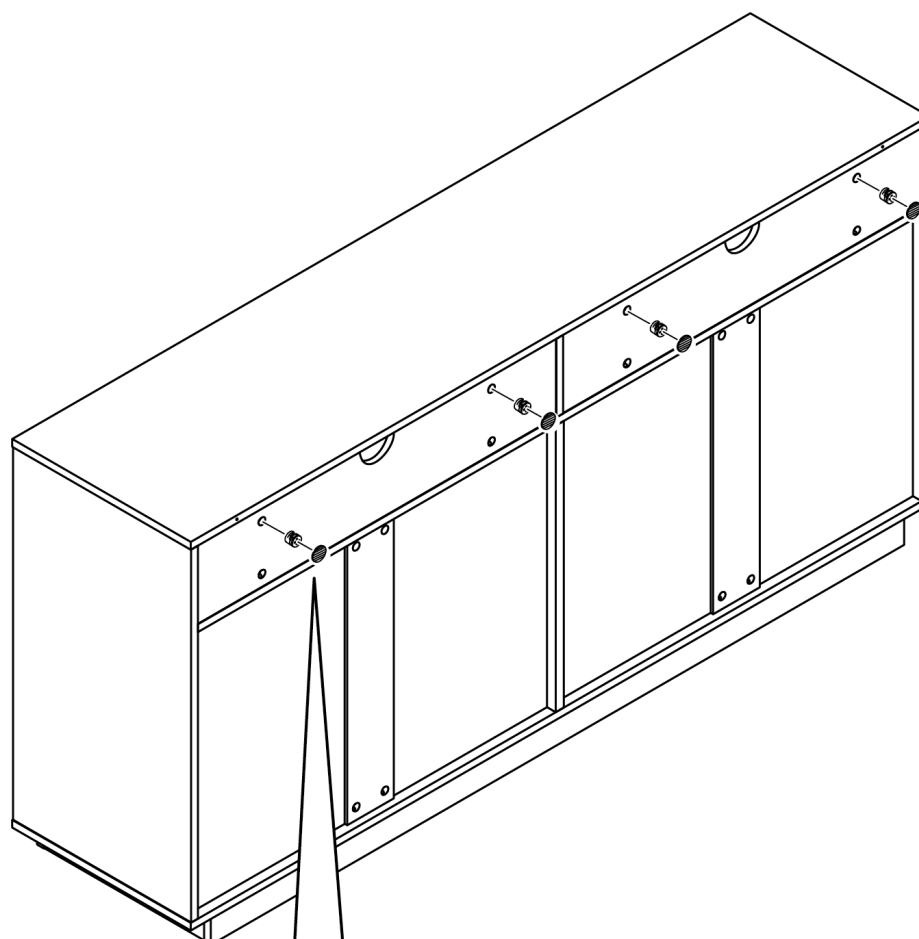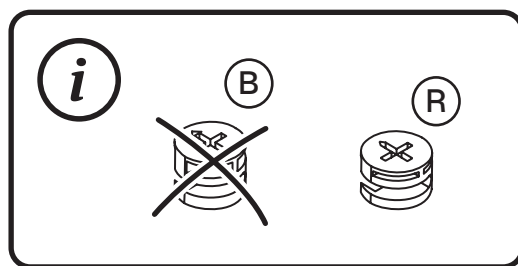


24 Securing back panels



J 16x



 
K 16x

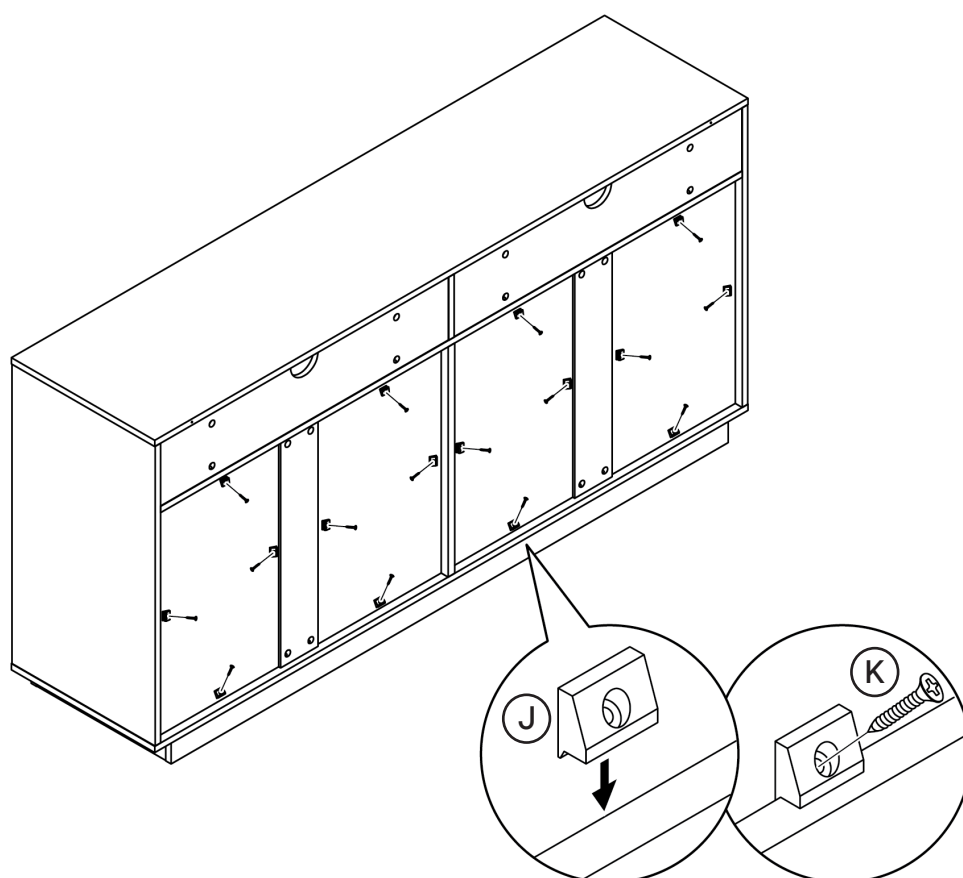

25 Inserting shelf pegs and putting on storage shelf panels



 E 10x

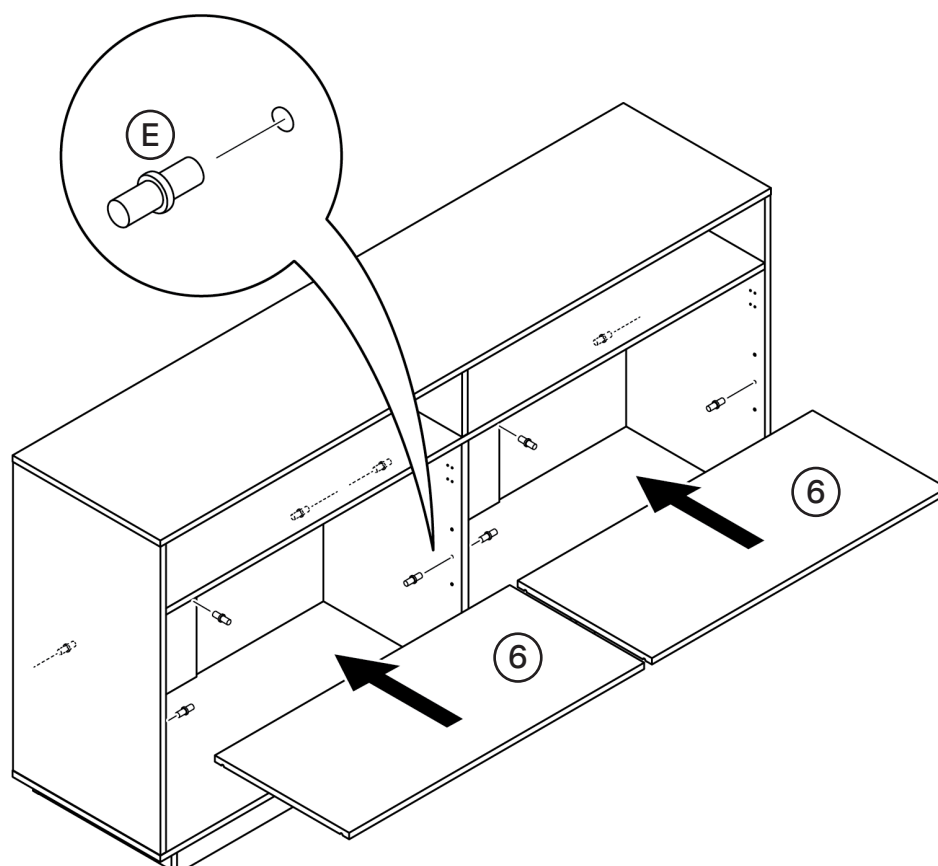


26 Attaching door hinge




H 8x



 I 16x

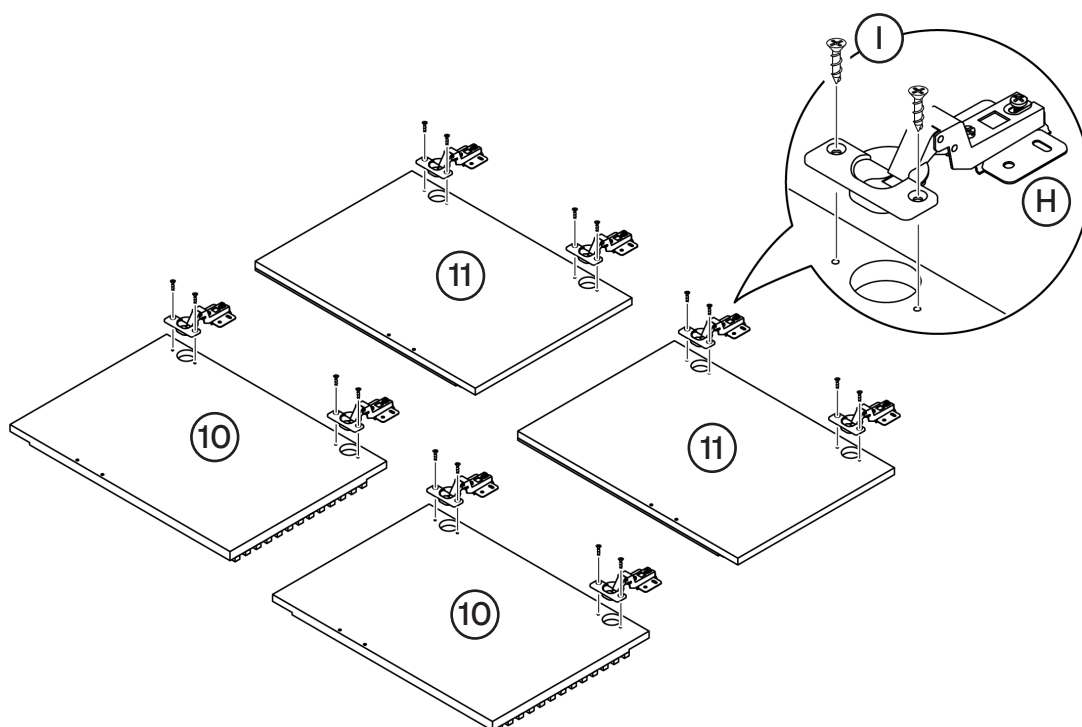


27 Attaching door handle

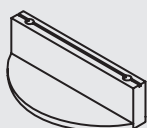 

L 4x



 M 8x

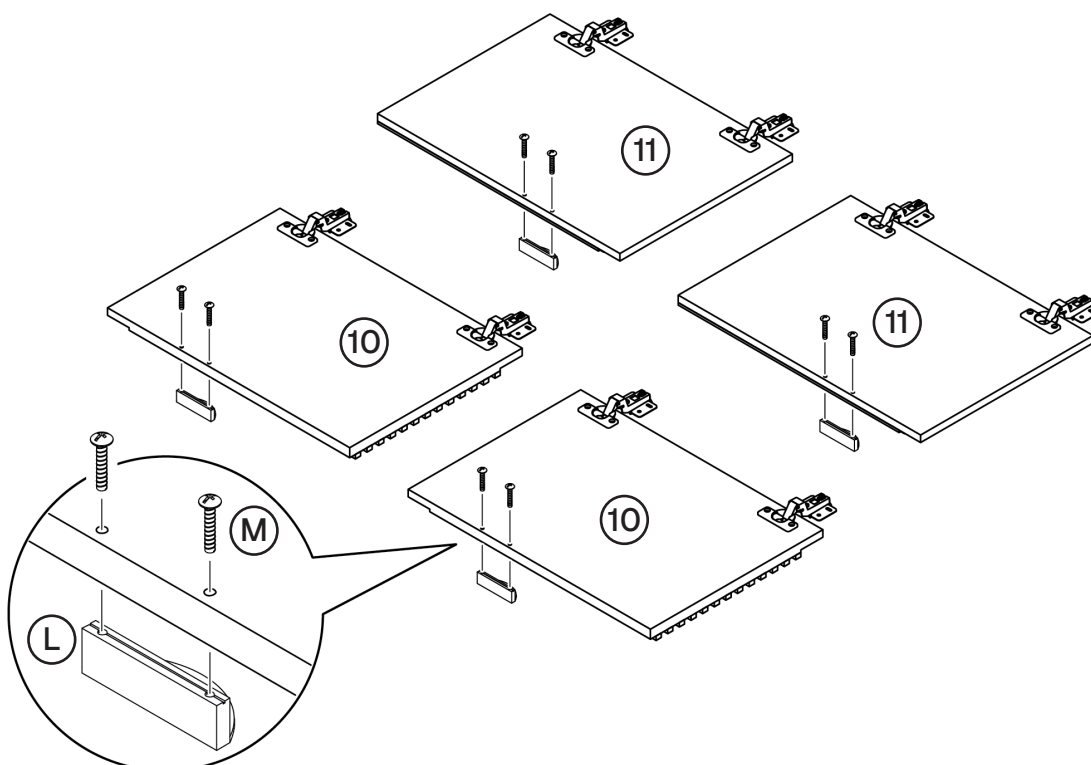


28



Attaching cabinet doors



 I 32x




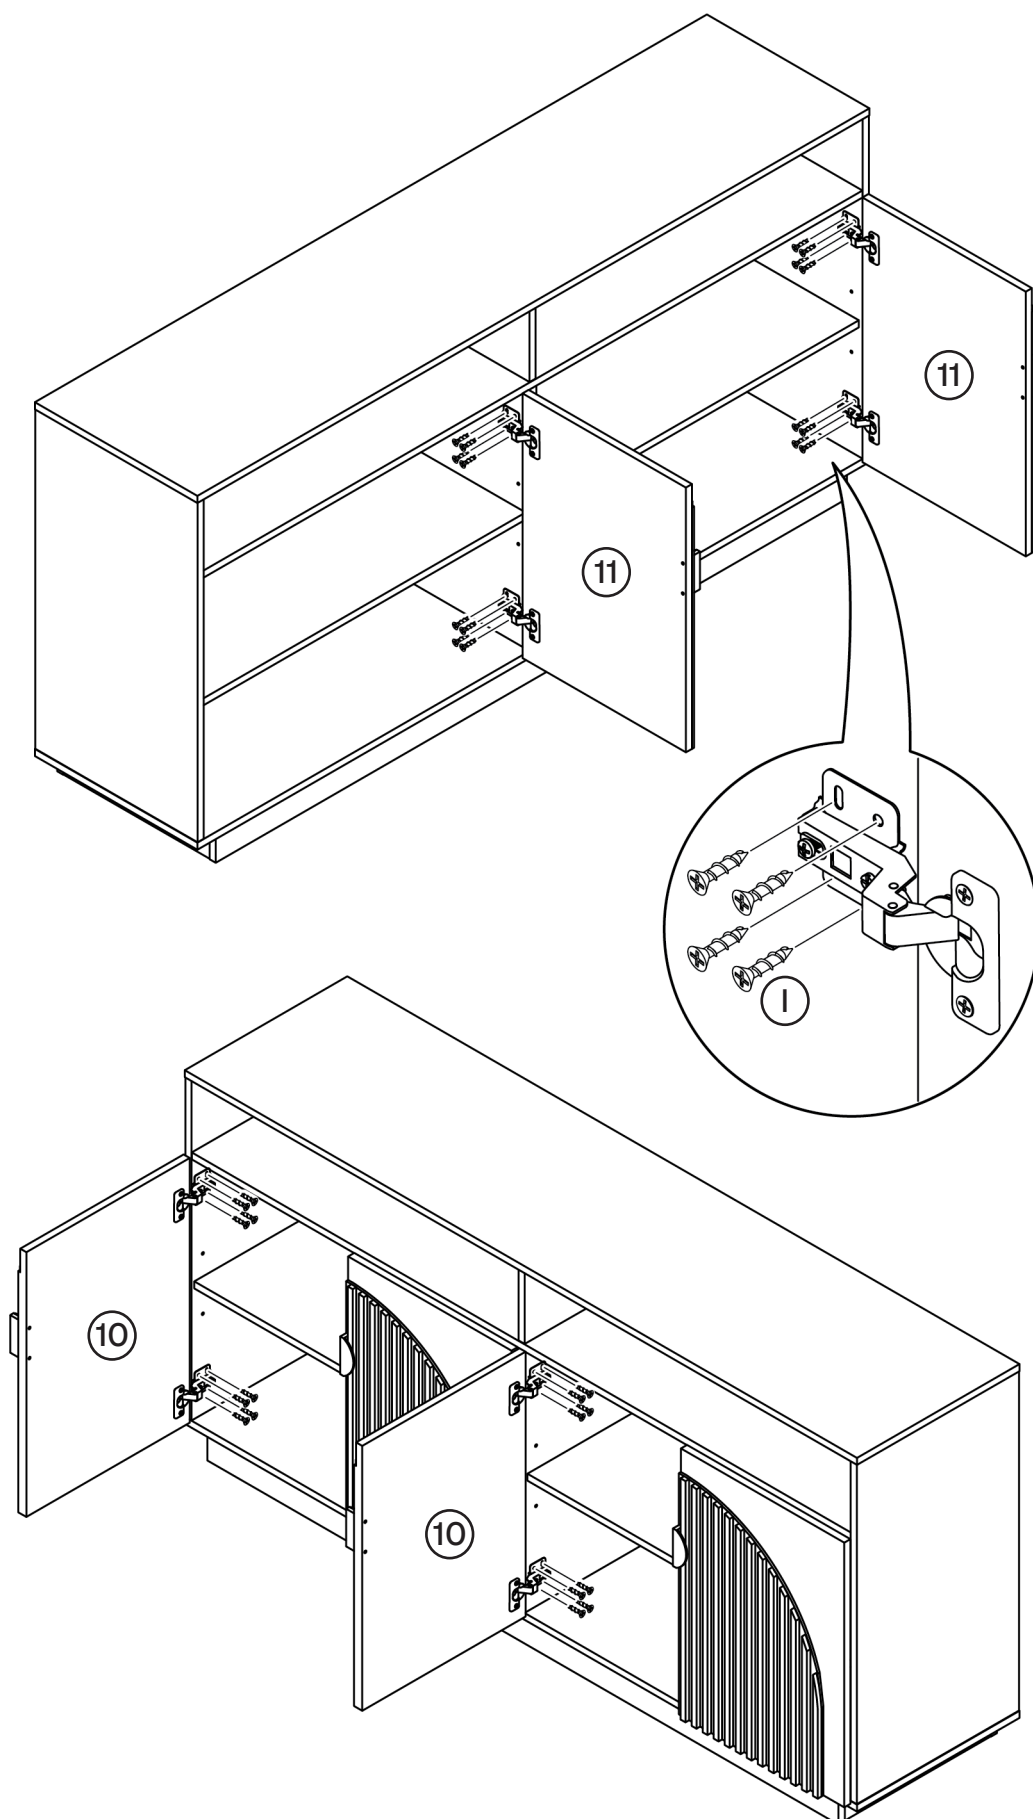


i

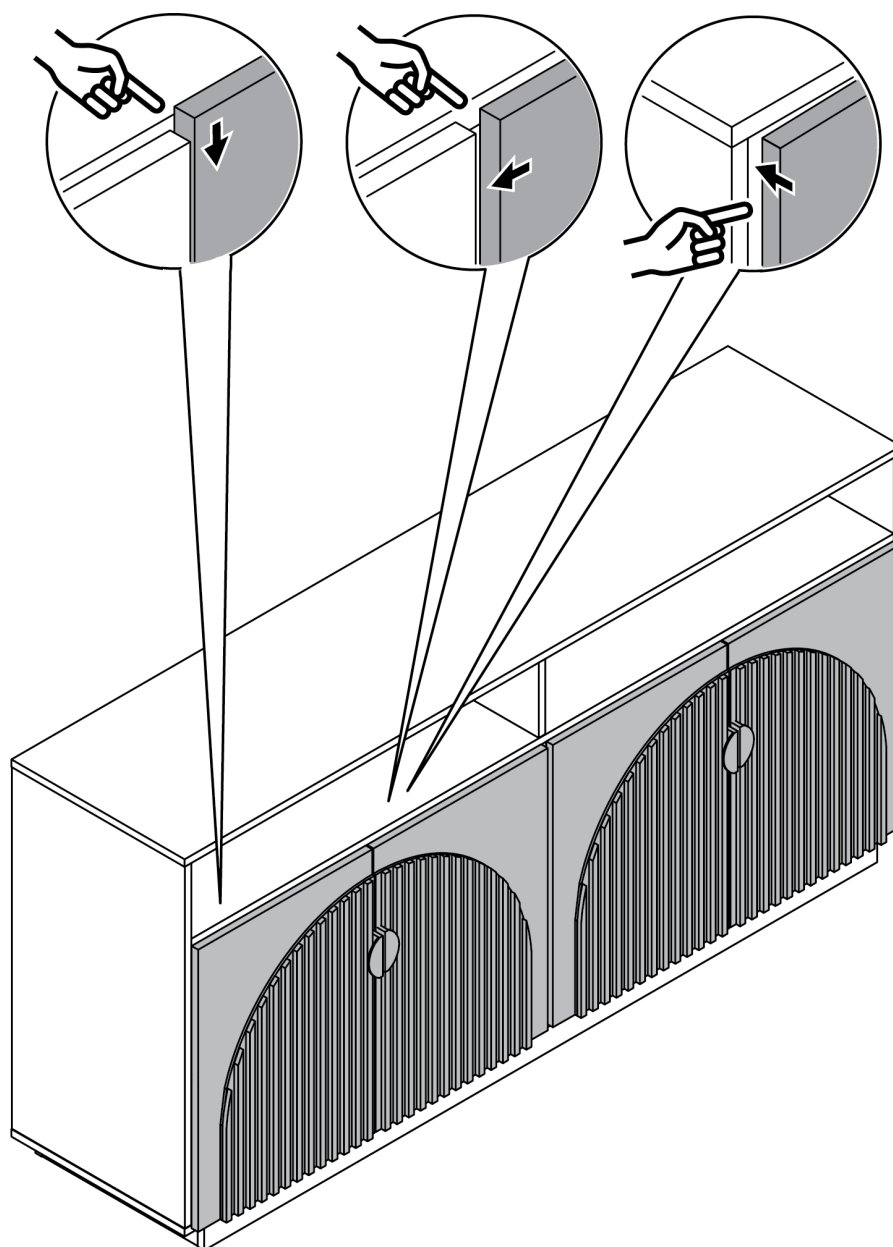 
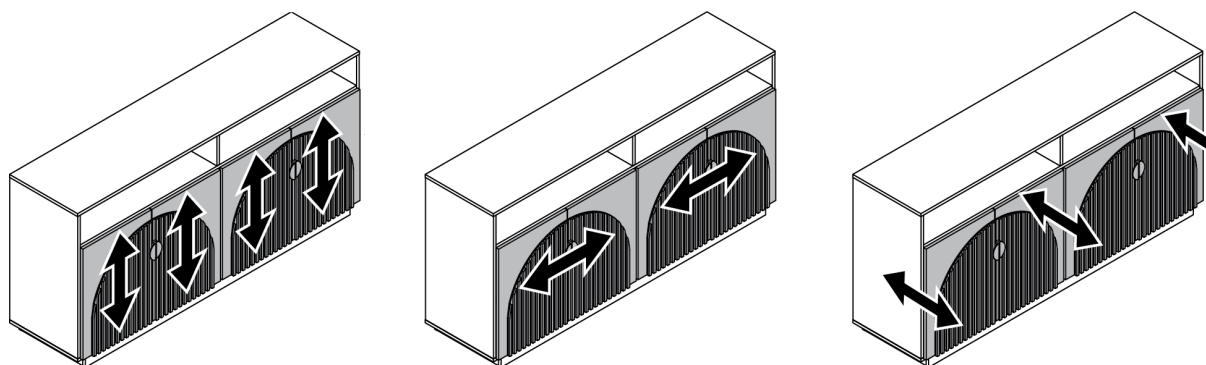 


Adjust the door hinge if there is excessive gaps or height difference between the cabinet doors and/or the cabinet. Adjust both the top and bottom hinge on the same door for best result.

 
 
 
 
i

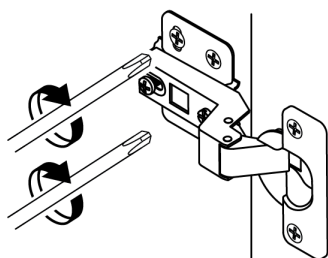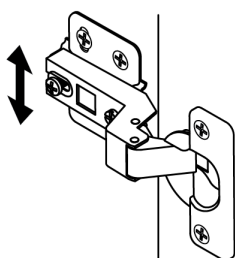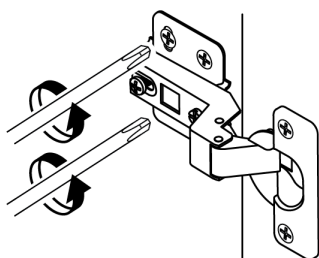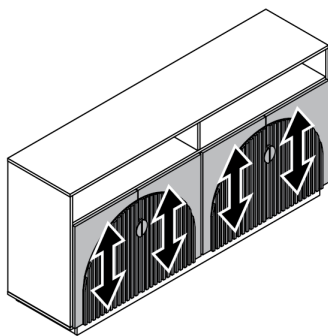

  Loosen the screws on the mounting plate to adjust the door **up and down**.

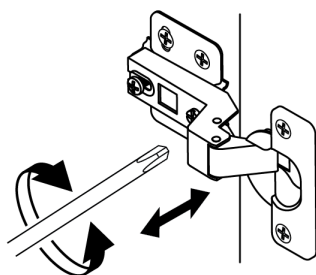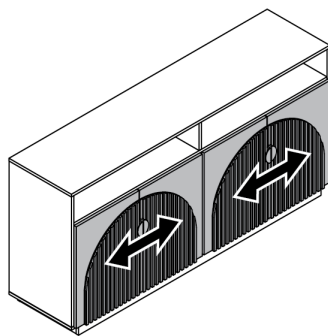

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

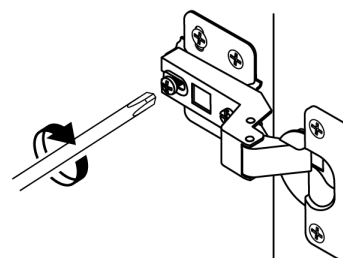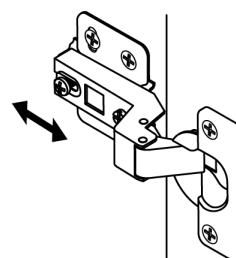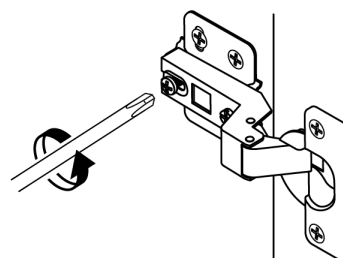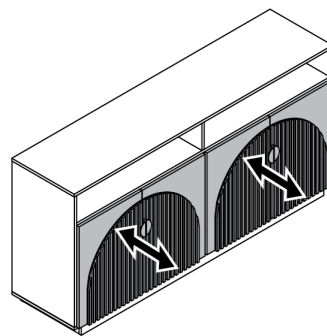

Loosen the screws on the hinge arm to adjust the door **in and out**.

29

 
Attaching anti-tipping straps



O 2x



Q 2x

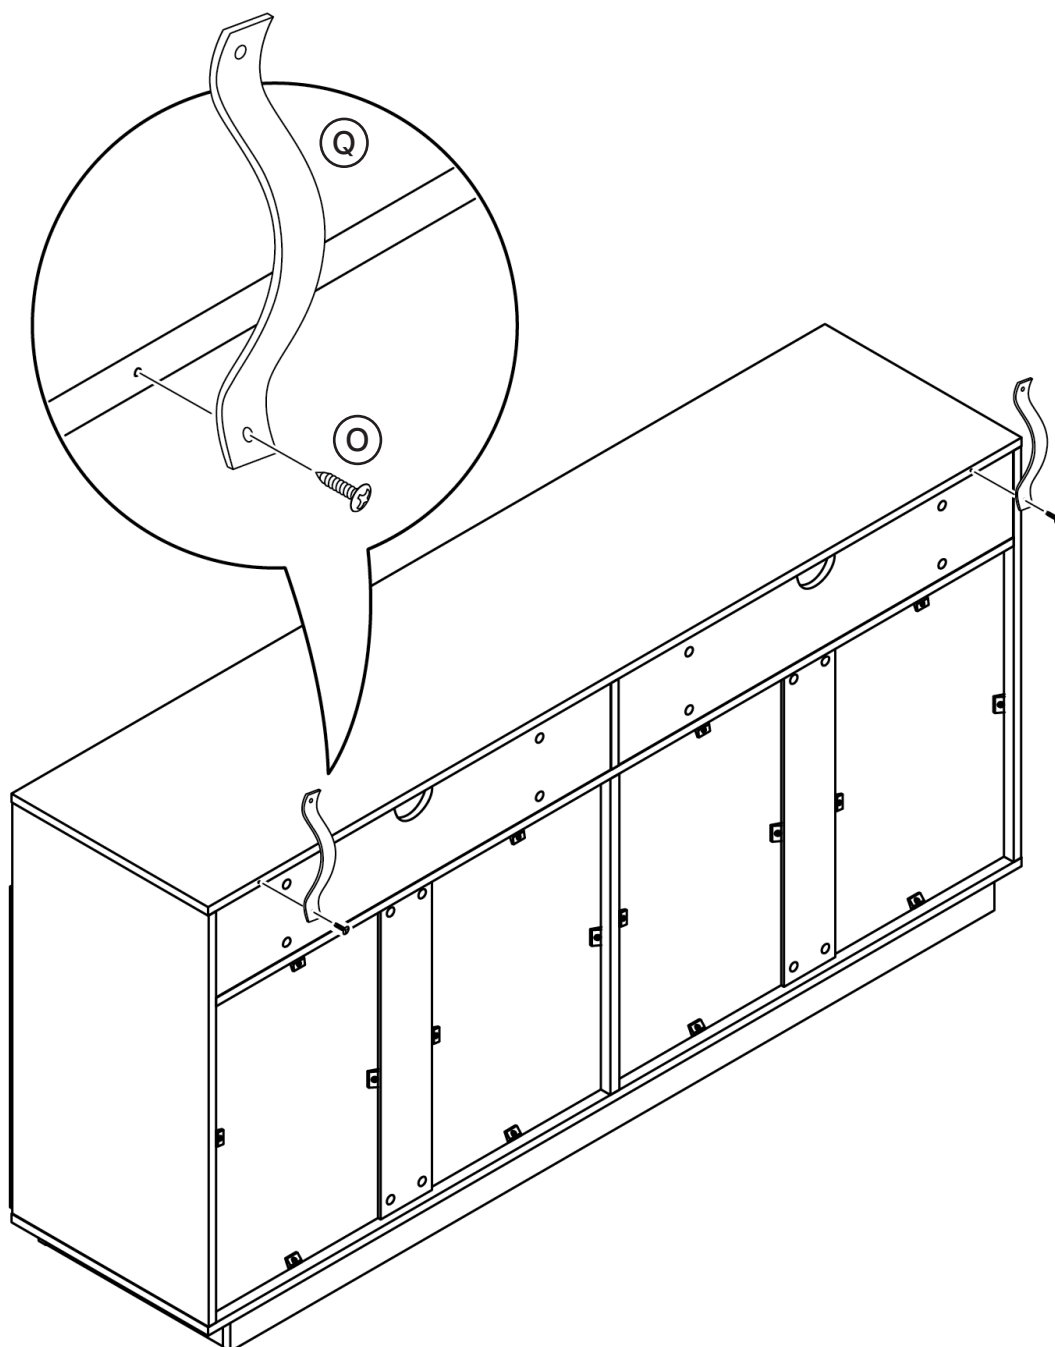


30



Affixing the TV stand to a wall



 N 2x



P 2x

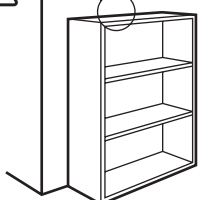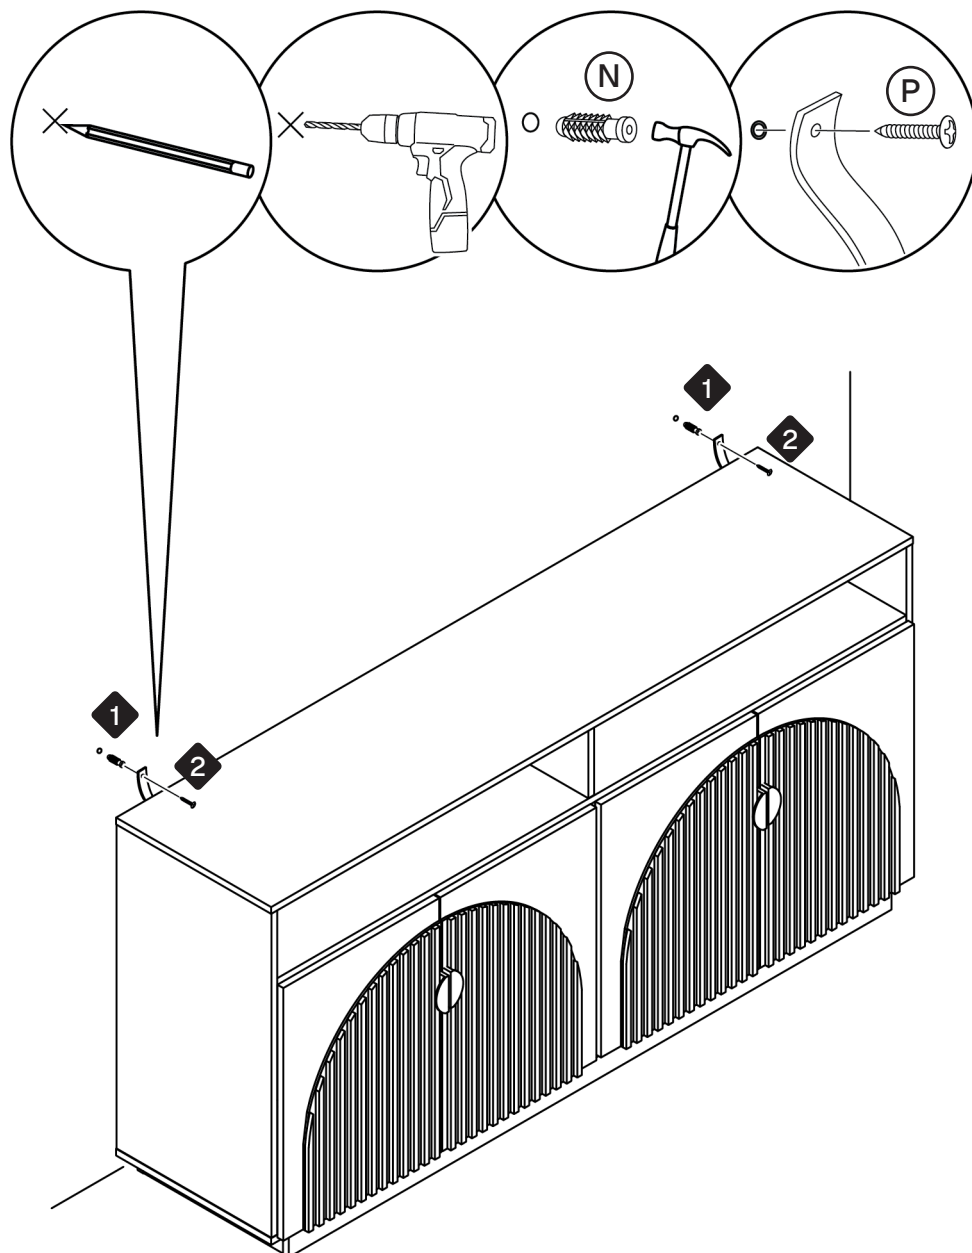  

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.

1. Mark the drilling positions on the wall.
2. Drill pilot holes at the marked locations.
3. Insert wall anchors into the pilot holes.
4. Secure the anti-tipping strap to the wall with provided screws.



WARNING

For use with televisions weighing 70lbs (31.8kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



NOTICE

The recommended maximum width of the television is 70 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.

Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.