 


HIGH BOY TV STAND

42" Maximum Flat Panel Television
100 lb. Maximum Capacity

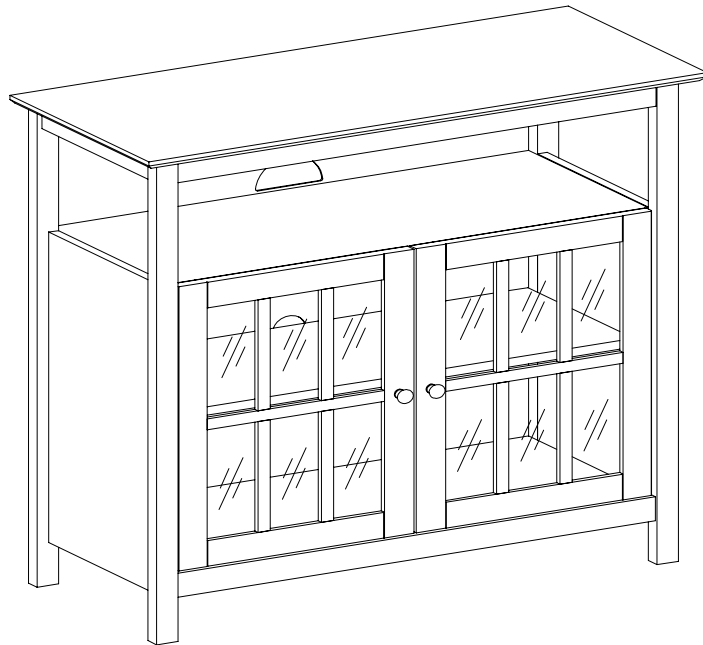




 

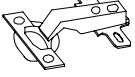





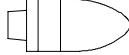

Please do not return to the store

. Broken or Missing Parts?



 

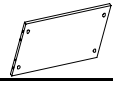
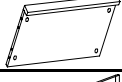


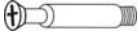
. Need help with Assembly?

If you have any questions just call or email us

HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	WOOD DOWEL (Φ8X30mmL)		14PCS
B	CAM LOCK (Φ15*9mmL)		14PCS
C	CAM BOLT (Φ6.5*35mmL)		14PCS
D	SMALL SCREW (Φ7*14mmL)		24PCS
E	MEDIUM SCREW (Φ7*16mmL)		16PCS
F	DOOR HINGE		4PCS
G	KNOB		2PCS
H	KNOB SCREW (Φ4*20mmL)		2PCS
I	SHELF SUPPORT		4PCS
J	WIRE CAP		1PC
K	COLOR STICK		1PC
L	WOOD GLUE		1PC
M	ALEN WRENCH		1PC

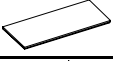PARTS LIST

CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	LEFT SIDE PANEL		1PC
③	RIGHT SIDE PANEL		1PC
④	FRONT CROSSBAR		1PC
⑤	MIDDLE PANEL		1PC
⑥	BOTTOM PANEL		1PC
⑦	DOOR		2PCS
⑧	ADJUSTABLE SHELF		1PC
⑨	BACK PANEL		1PC

STEP 1

HARDWARE
NEEDED


A x 5
B x 5
C x 5

1.) Assemble unit laying on its side, on a soft surface.

2.) Attach Bottom Panel (6) and Middle Panel (5) to Right Side Panel (3) using Wood Dowels (A), Cam Bolts (C), and Cam Locks (B) as shown.

** Refer to Camlock Assembly Below**

 3.) Attach Front Cross Bar (4) to Right Side Panel (3) using care not to bend.

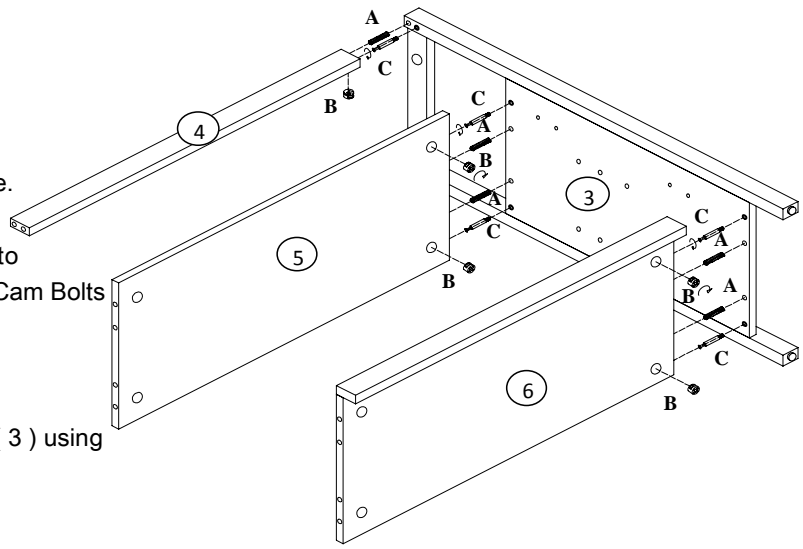


STEP 2

HARDWARE
NEEDED

A x 5
B x 5
C x 5

 1.) Attach Left Side Panel (2) to Assembly using Wood Dowels (A), Cam Bolts (C), and Cam Locks (B) as shown.

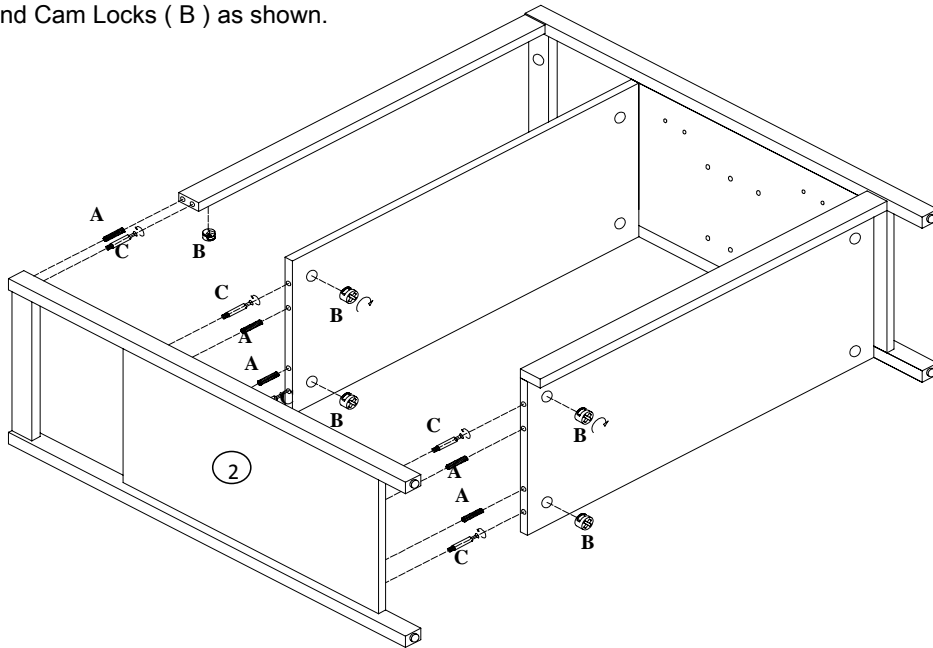


Assembling the unit with cam and wood dowels.

Gently screw cam dowel into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole. Add 2nd drop of glue to top of dowel.	Connect to second panel by inserting dowels into holes.	Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.

STEP 3HARDWARE
NEEDED

 A x 4
B x 4
C x 4

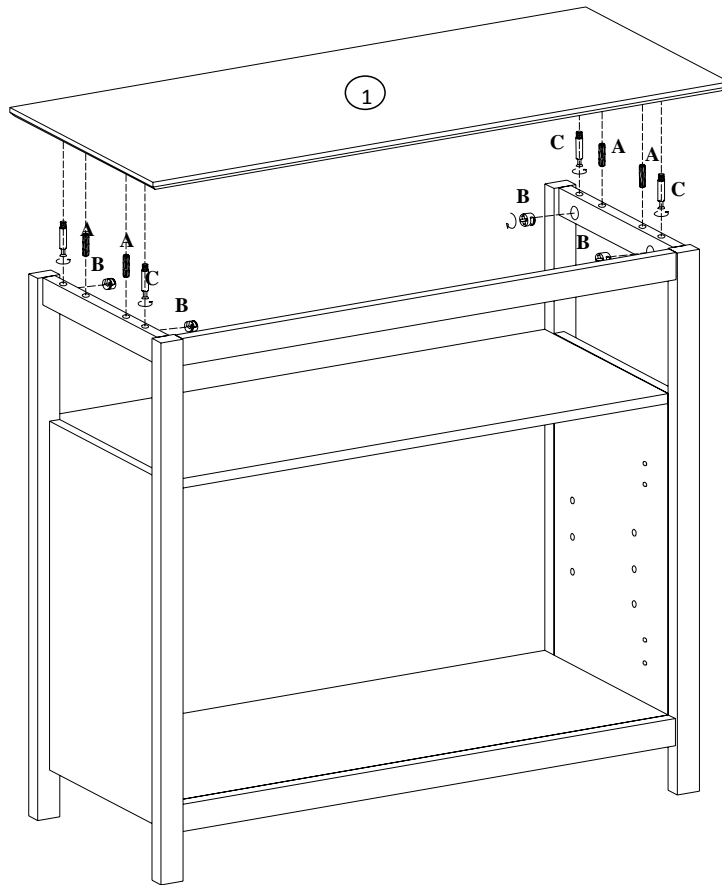


- 1.) Place unit upright and attach Top Panel (1) using Wood Dowels (A), Cam Bolts (C), and Cam Locks (B) as shown.

STEP 4HARDWARE
NEEDED


E x 8
F x 4

 - 1.) Attach Door Hinges (F) to Doors (7) using Medium Screws (E). Use care not to over tighten.

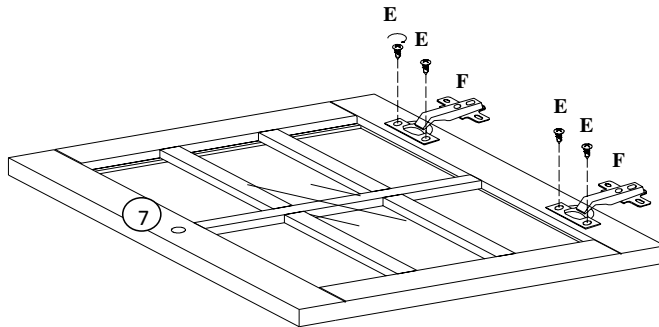

STEP 5

HARDWARE	E x 8
NEEDED	G x 2
	H x 2

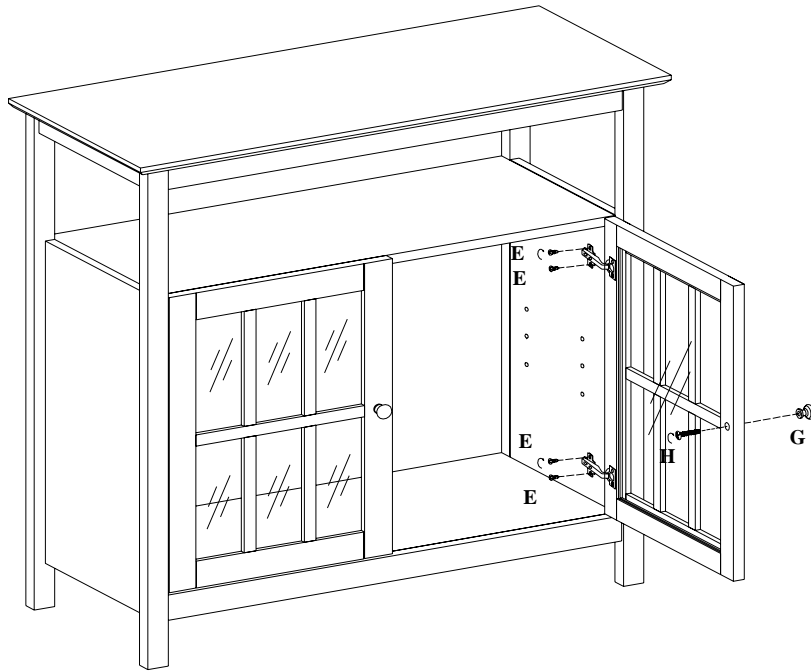 

1.) Attach Doors (7) to unit using Medium Screws (E).



2.) Attach Knobs (G) to Doors using Knob Screws (H).

**After Final Assembly, Adjust Hinge Screws for Better Alignment **

  STEP 6

HARDWARE	J x 1
NEEDED	

- 1.) Carefully pull apart Wire Cap (J) into Two pieces if needed.
- 2.) Align each half of the Wire Cap with pre-cut openings in both sides of Back Panel (9). Firmly push together until snapped into place.

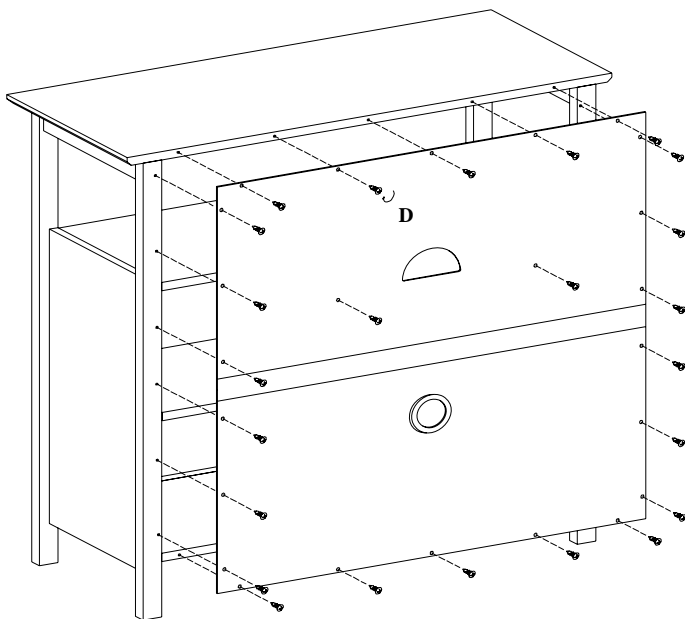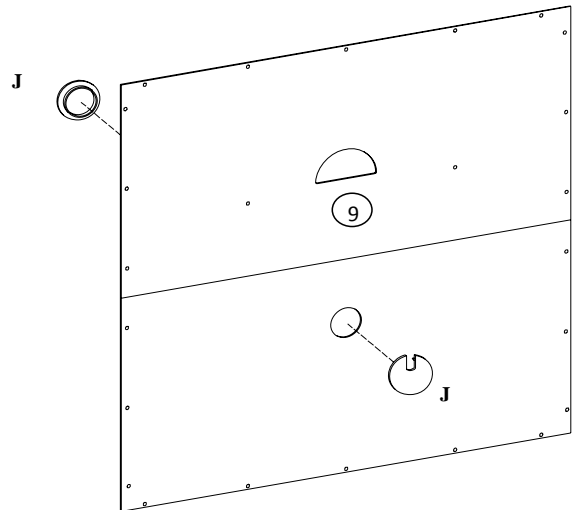


STEP 7


HARDWARE	D x 24
NEEDED	

- 1.) Attach Back Panel (9) to unit by using Small Screws (D).

 STEP 8 **HARDWARE** **I x 4**
NEEDED

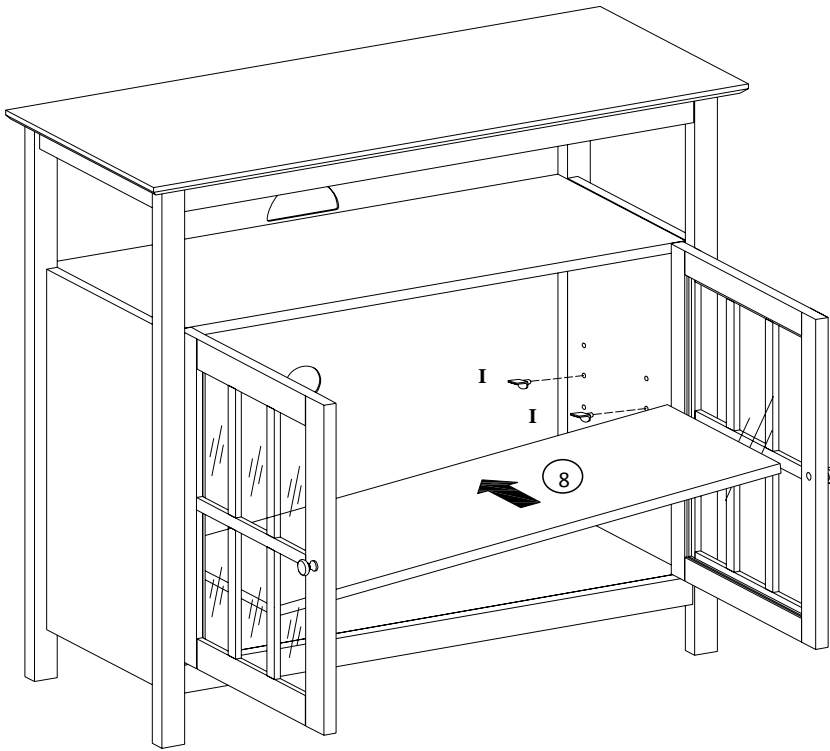

 - 1.) Insert Shelf Supports (I) into desired position holes in side panels.
- 2.) On a slight angle, carefully slide Adjustable Shelf (8) into unit and on top of Shelf Supports (I).

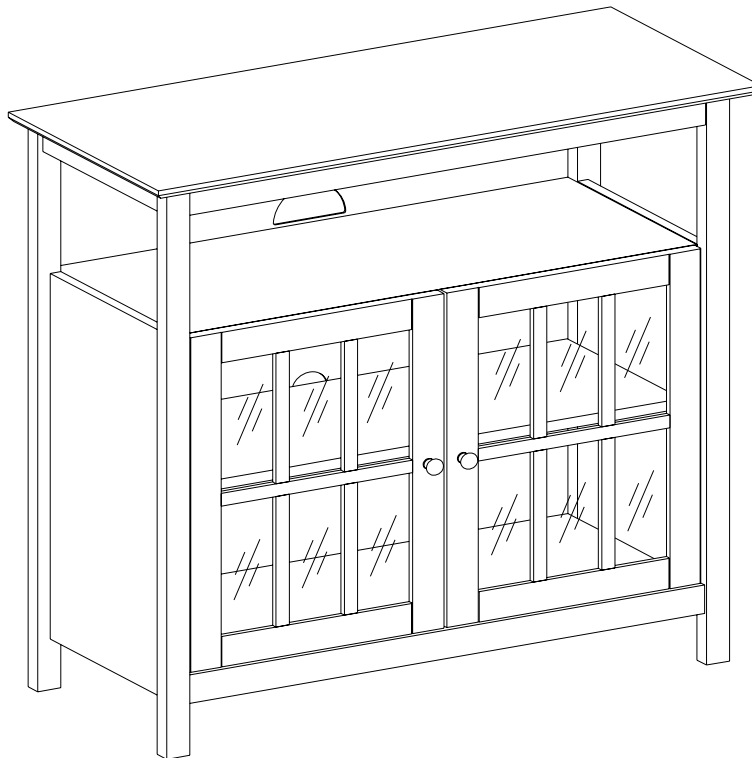

Enjoy your new piece of Quality Furniture!