 


# Wardrobe

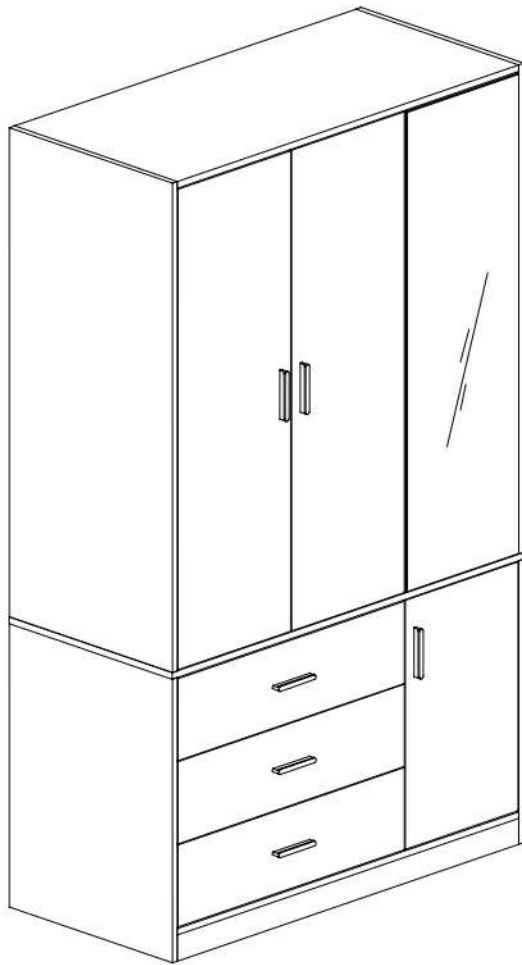

1/22

## **IMPORTANT INFORMATION!**

· please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

## **AVOID SCRATCHES!**

· In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

## **IMPROVE EFFICIENCY!**

· Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

## **IMPORTANT!**

 
· It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. for glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

· Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

 
## **ANTI-TOPPLE WARNING!**

Overtumed furniture can cause serious or fatal crush injuries. to prevent tipping over, be sure to use the wall attachment, if not included with this product, please purchase the wall attachment that fit your wall. if unsure, seek professional advice. please read and follow each step of the instructions carefully.

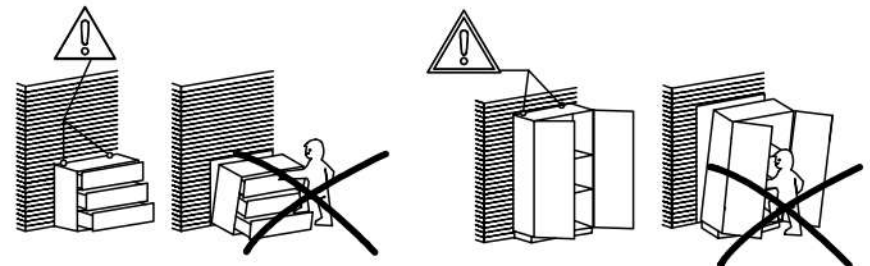 








 













2/22

 
Please prepare the following tools



when installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Ax64  Ø6 x 34mm	Bx64  Ø15 x 10mm	Cx26  Ø8 x 40mm	Dx106  Ø3.5 x 14mm	Ex26  Ø3.5 x 20mm
Fx12  Ø3.5 x 35mm	Gx6  96mm	Hx12  Ø4 x 18mm	Ix4  40x18x12mm	Jx10  Ø13 x 4mm
Kx2 	Lx26  14x13x10mm	Mx2  45 x 15x14mm	Nx1  84 X45X11MM	Zx3  350mm
Yx2  Ø35mm	Y1x6  Ø35mm	X x 1  1112mm	X1x1  578mm	Wx1  677mm
W1x1  346mm				

3/22

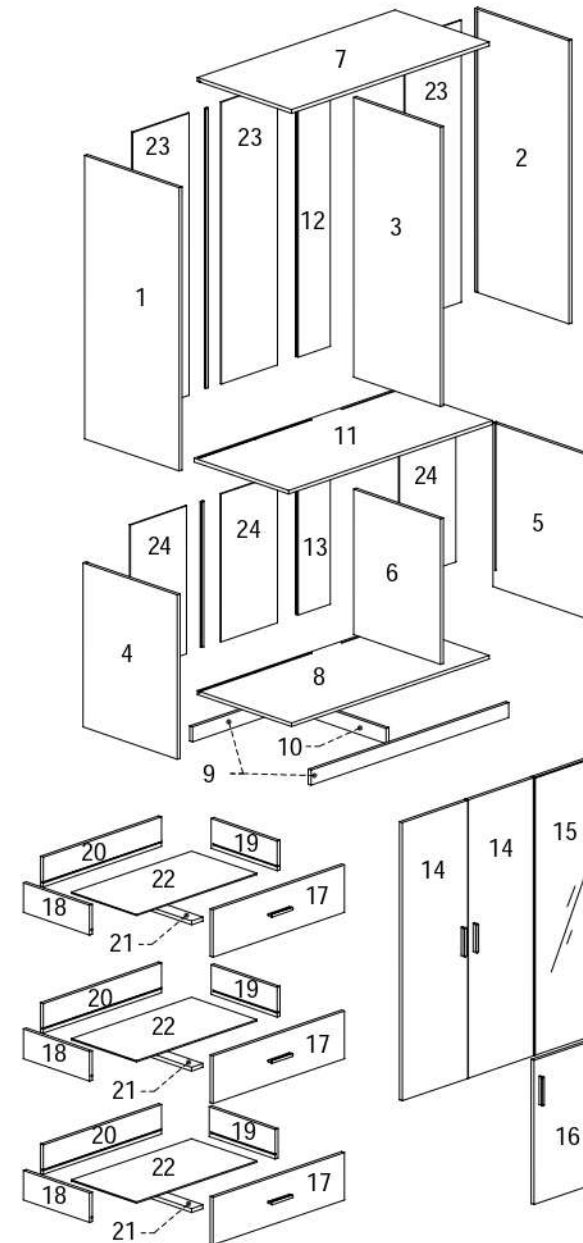 


4/22

 
**Slides Must be Separated Before Assembly.**  
**After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
 Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.  
 Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

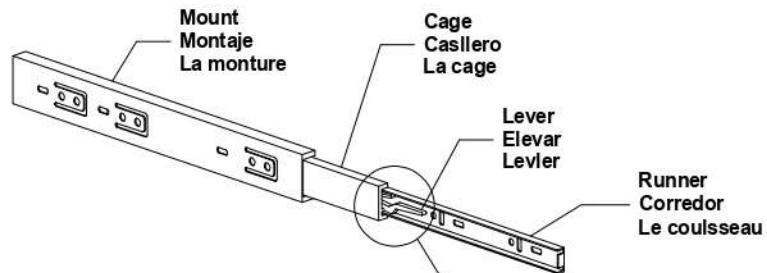

**Step 1: Extend slide**  
 Extender la dapositiva  
 Étendre la dapositive

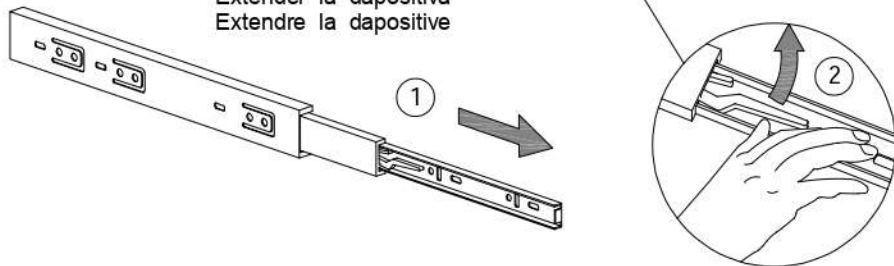

**Step 3: Remove Runner**  
 Quitar el corredor  
 Enlever le coureur

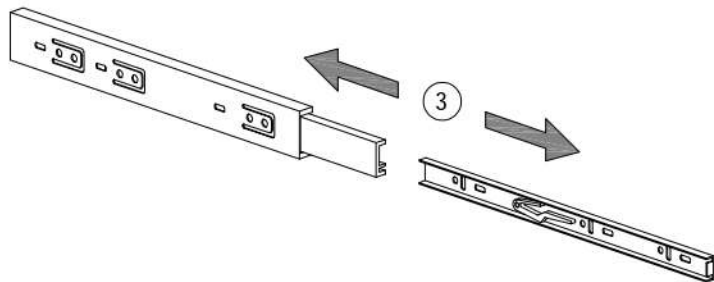

**Step 2: Push Lever Up**  
 Empujar hacia arriba  
 Lever le levier

**1**

 
 
 
Ax64

Bx64



Ø6 x 34mm

 
 
Ø15 x 10mm

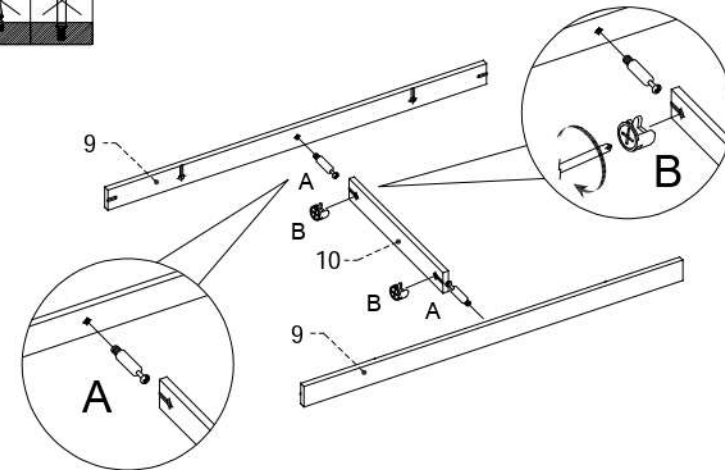 




 
**2**

Ax64

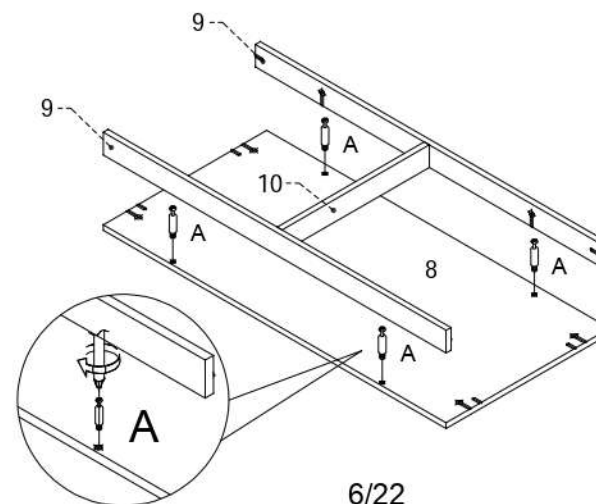 
Ø6 x 34mm



 
<b>3</b>	Zx3	Dx106	
	 350mm	 Ø3.5 x 14mm	

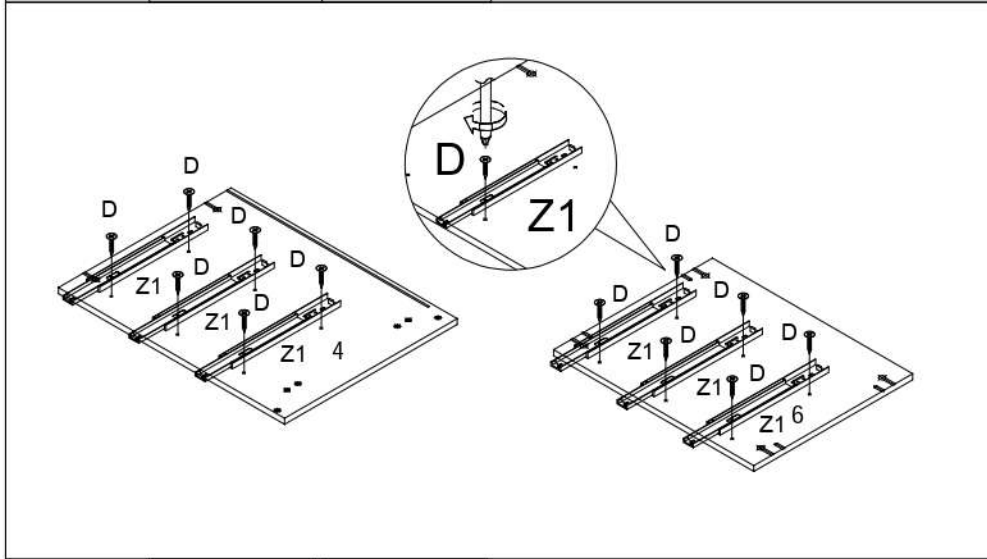

 
<b>4</b>	Bx64	Cx26	 
	 Ø15 x 10mm	 Ø8 x 40mm	

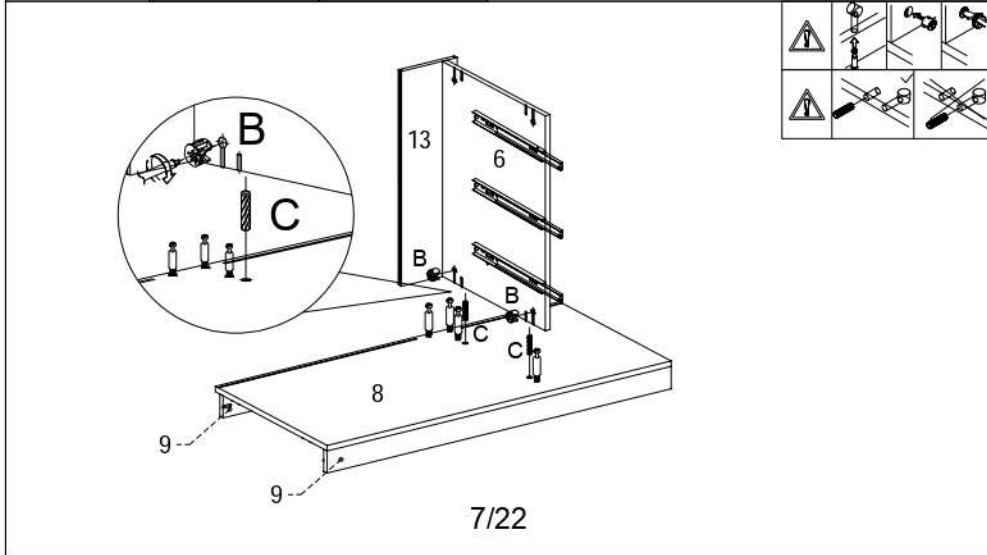


 


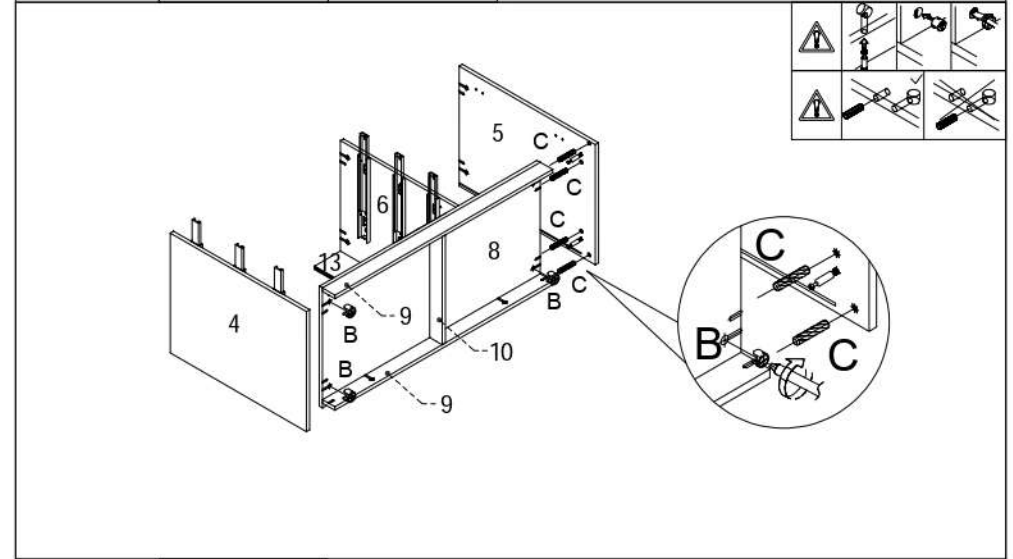 
<b>5</b>	Bx64	Cx26	 
	 Ø15 x 10mm	 Ø8 x 40mm	

 


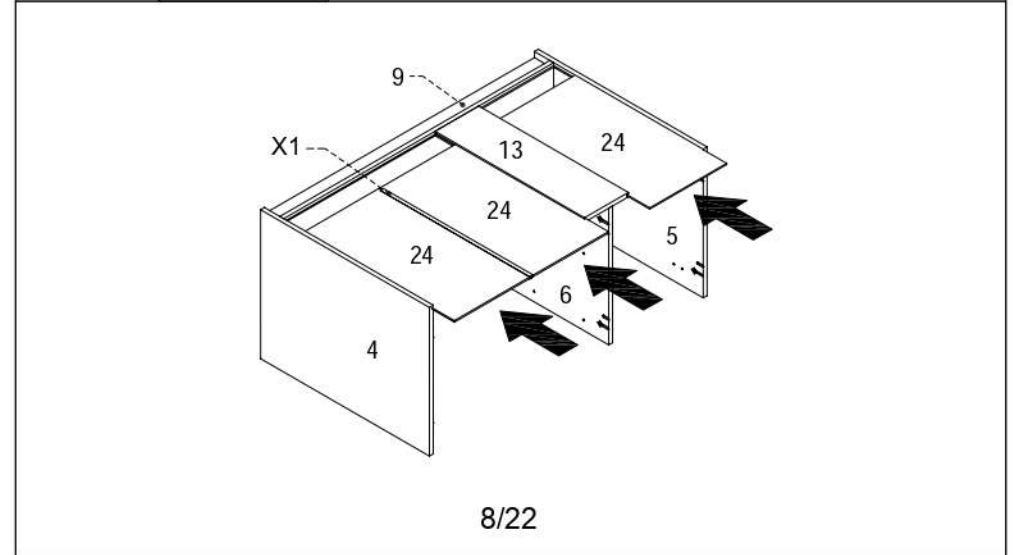


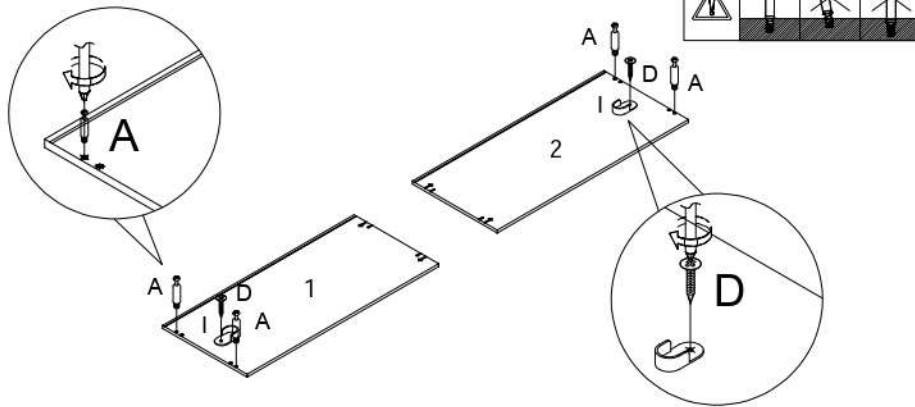 
<b>6</b>	X1x1	 
	 578mm	



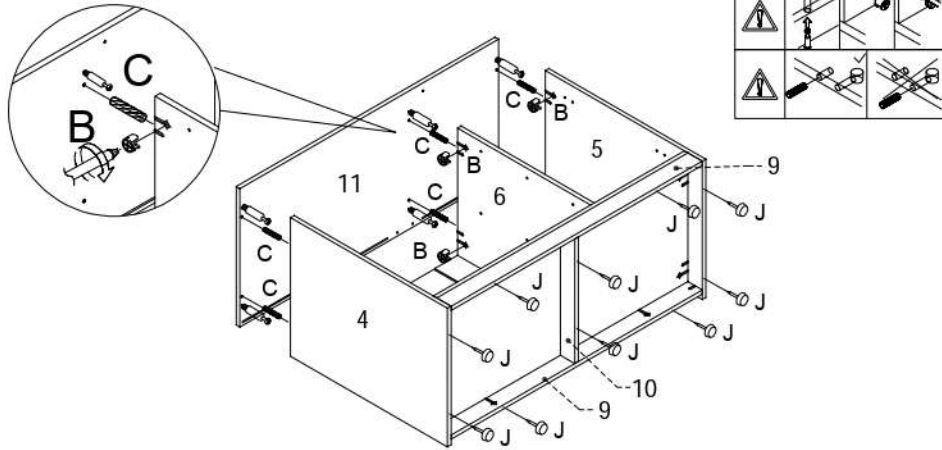 


<b>7</b>	Bx64	Cx26	Jx10	
	 Ø15 x 10mm	 Ø8 x 40mm	 Ø13 x 4mm	

 



<b>8</b>	Ax64	Ix4	Dx106	
	 Ø6 x 34mm	 40x18x12mm	 Ø3.5 x 14mm	

 


9/22

<b>9</b>	Ix4	Dx106	
	 40x18x12mm	 Ø3.5 x 14mm	

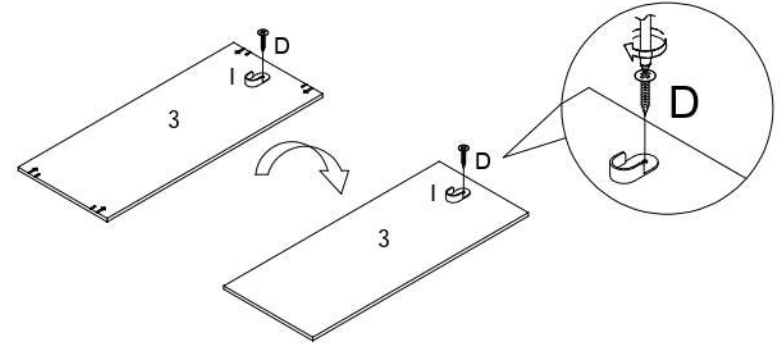 


<b>10</b>	Bx64	Cx26	
	 Ø15 x 10mm	 Ø8 x 40mm	

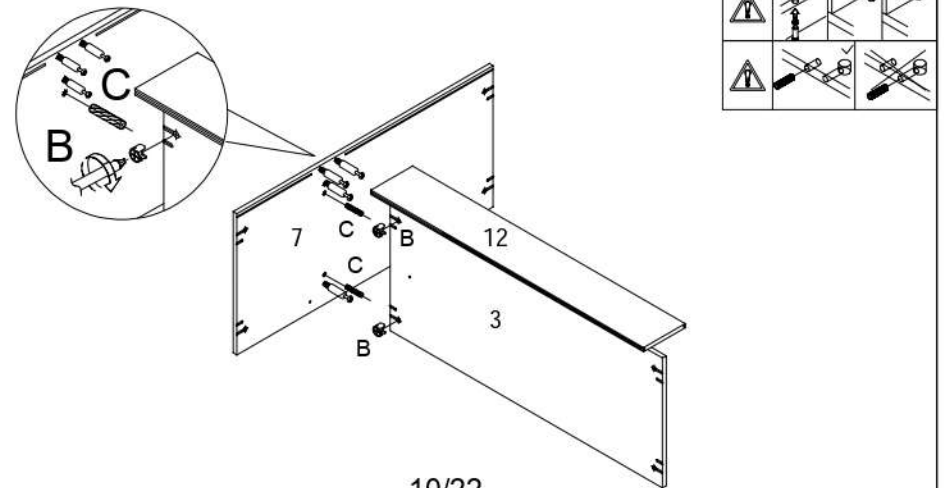 


10/22

 
<b>11</b>	Bx64	Cx26	
	 Ø15 x 10mm	 Ø8 x 40mm	

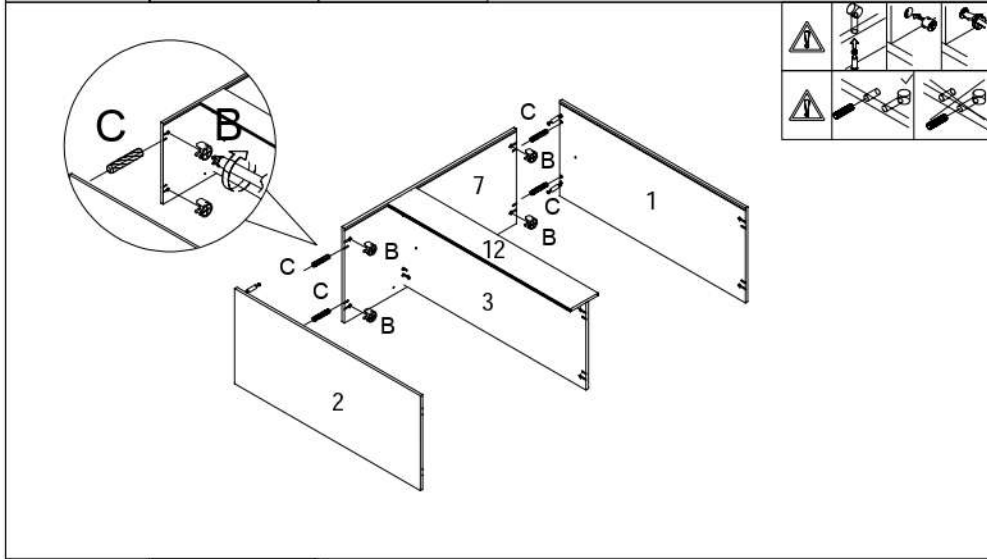 


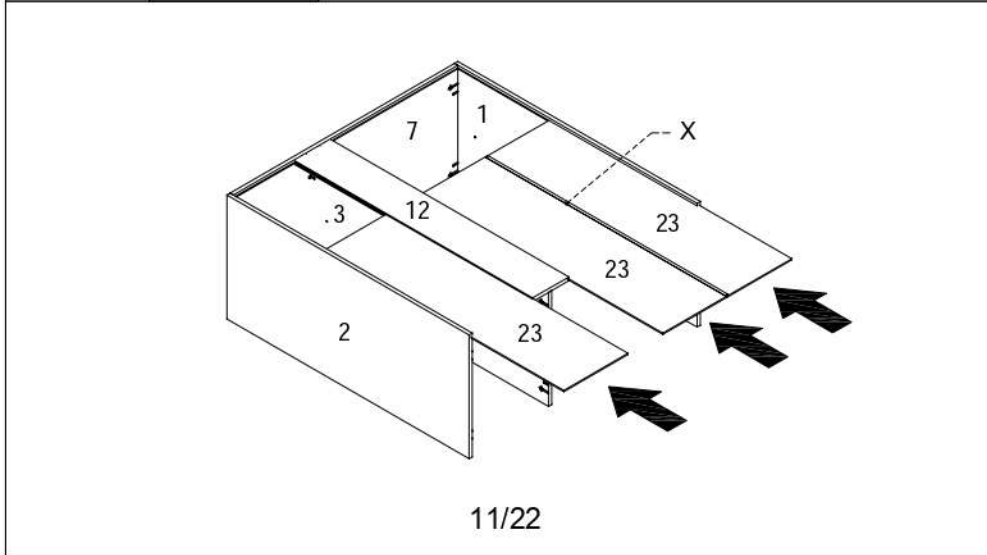


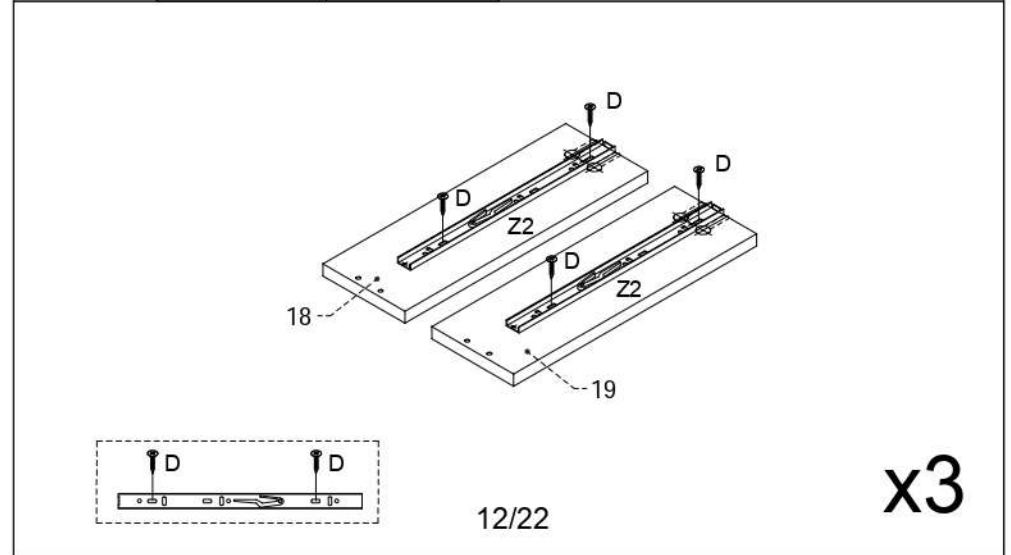 
<b>12</b>	X x 1	 1112mm

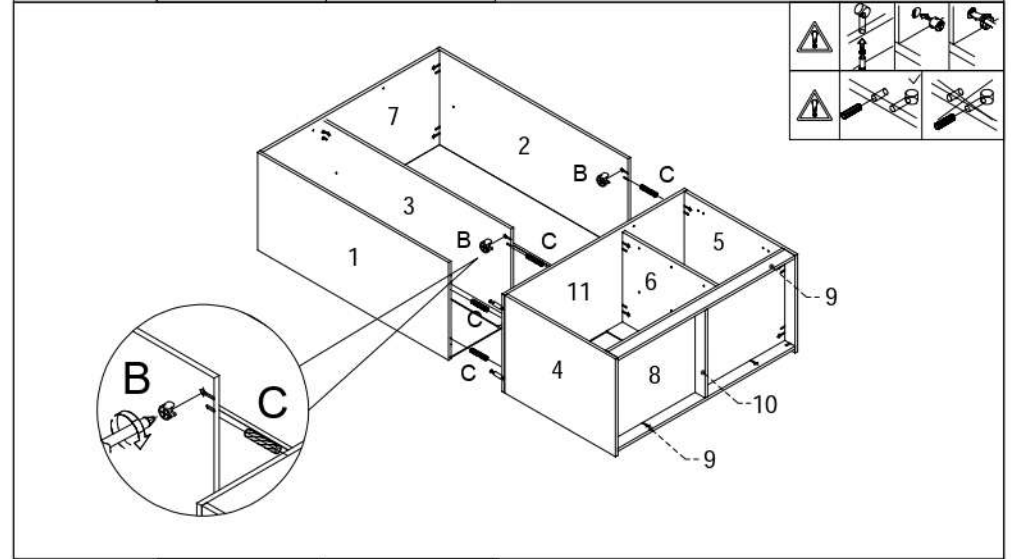

<b>13</b>	Bx64	Cx26	
	 Ø15 x 10mm	 Ø8 x 40mm	



<b>14</b>	Dx106	Zx3	
	 Ø3.5 x 14mm	 Z1  Z2 350mm	

 
 


# 15

Fx12



Ø3.5 x 35mm

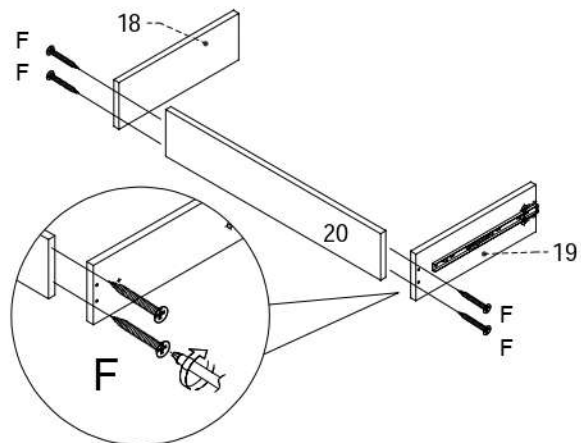

## x3

# 17

Ax64

 


Ø6 x 34mm

Bx64

 


Ø15 x 10mm

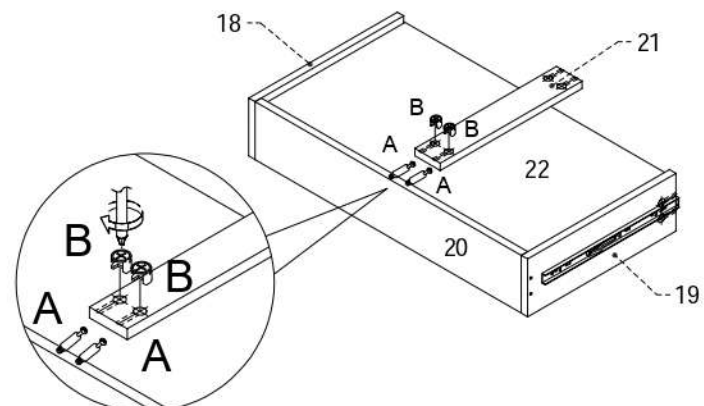

## x3

# 16

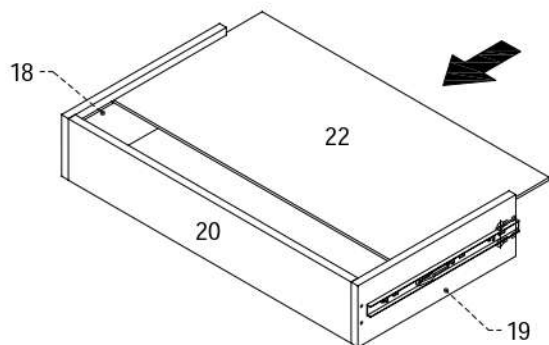

13/22

 
## x3

# 18

Ax64



Ø6 x 34mm

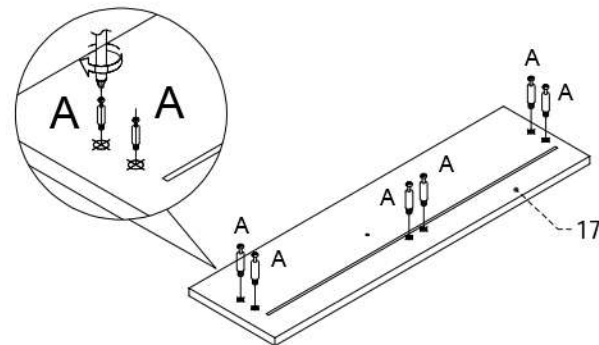

14/22

 
 
## x3

19

Bx64

 


Ø15 x 10mm

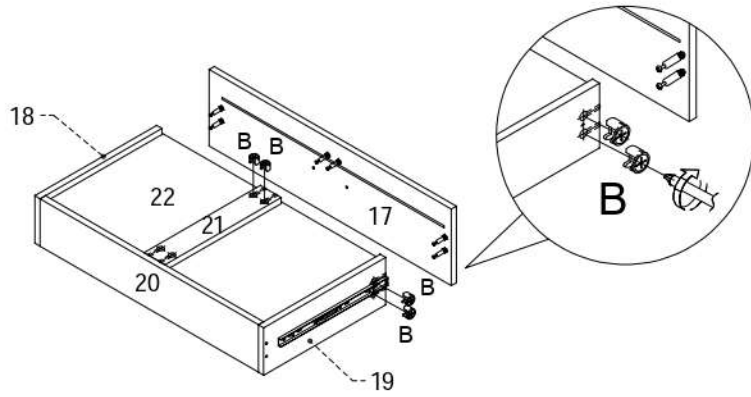

x3

21

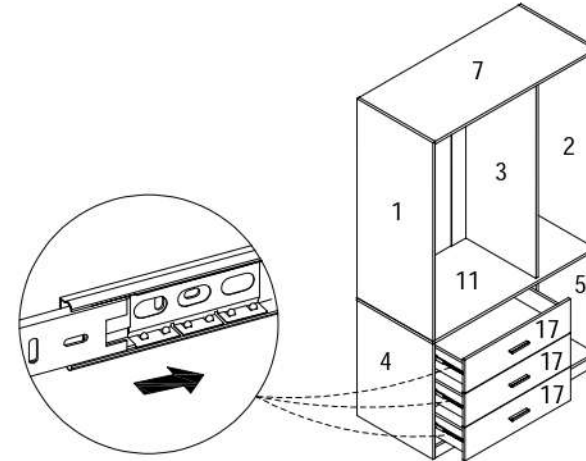

20

Gx6

 
 


96mm

Hx12



Ø4 x 18mm

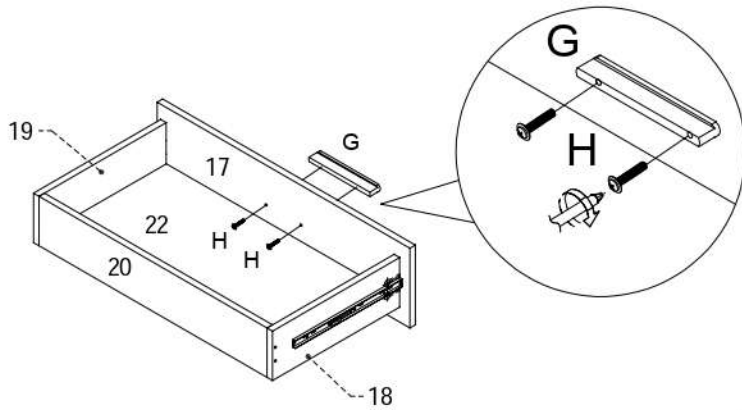

15/22

x3

22

Wx1

 


677mm

 


W1x1

 


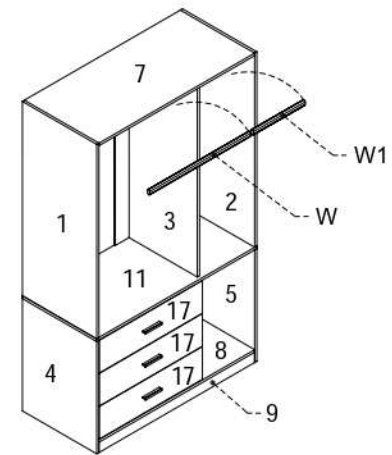 


346mm

 


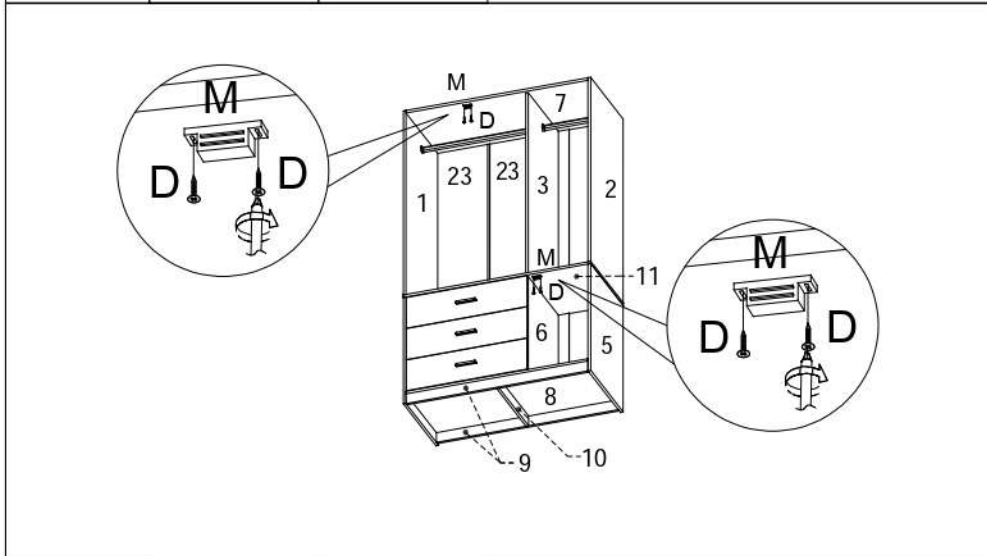 



16/22

 
<b>23</b>	Mx2	Dx106	
	 45 x15x14mm	 Ø3.5 x 14mm	

 


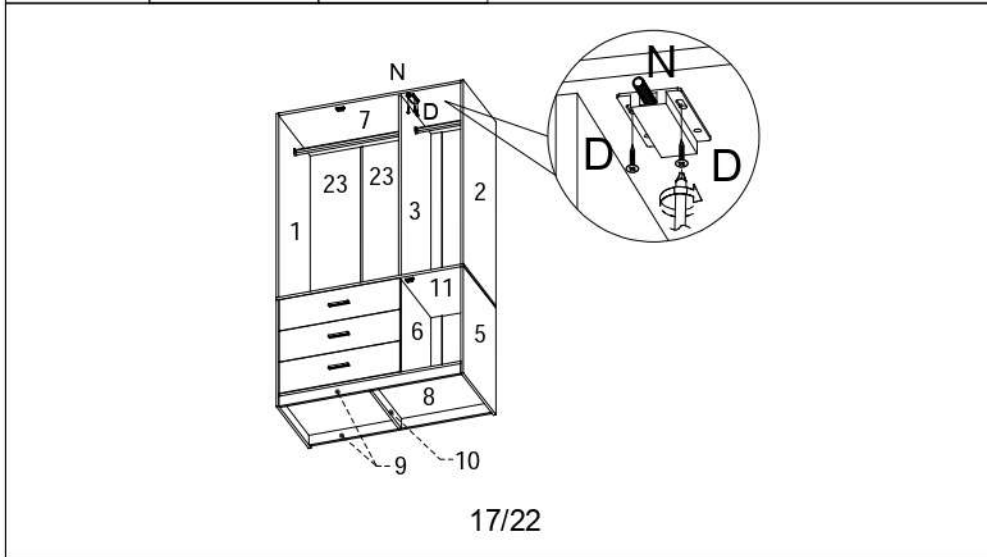

 
<b>24</b>	Nx1	Dx106	
	 84 x45x11mm	 Ø3.5 x 14mm	

 


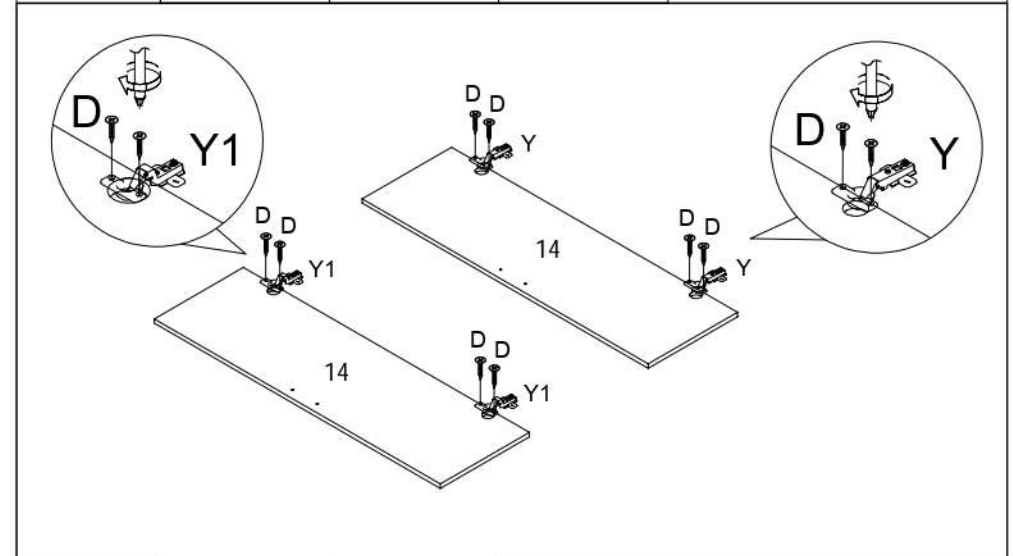

 
<b>25</b>	Yx2	Y1x6	Dx106	
	 Ø35mm	 Ø35mm	 Ø3.5 x 14mm	

 


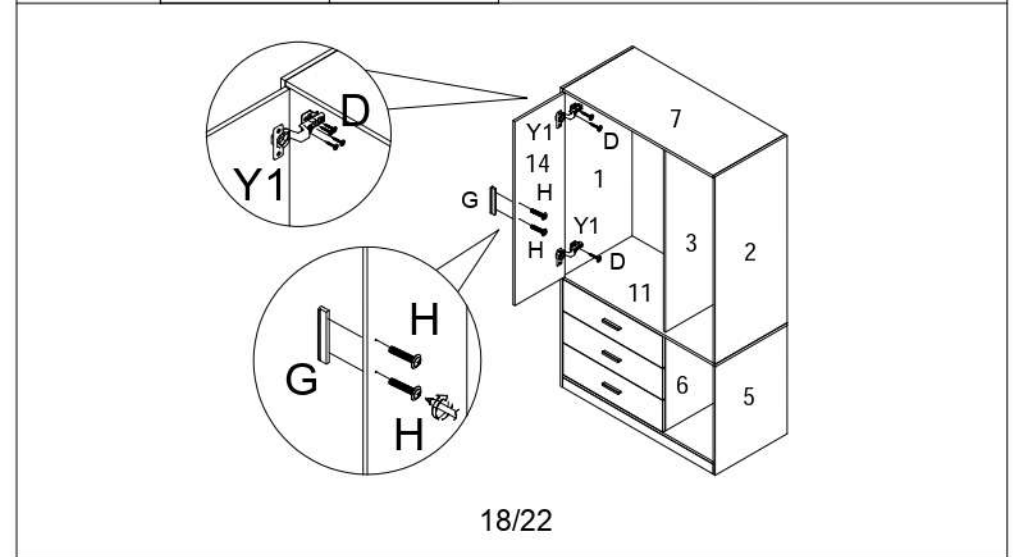

 
<b>26</b>	Gx6	Hx12	
	 96mm	 Ø4 x 18mm	

 


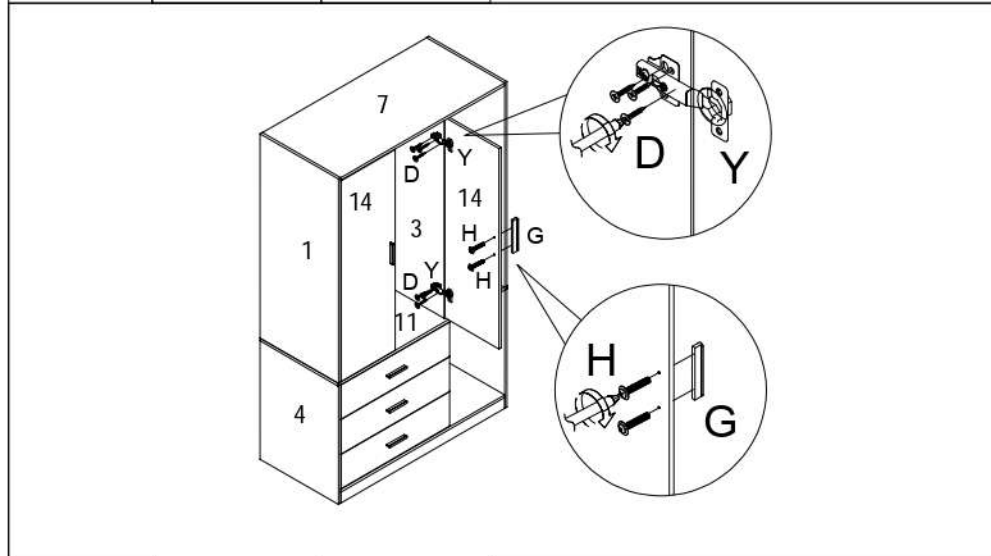

 
<b>27</b>	Gx6	Hx12	
	 96mm	 Ø4 x 18mm	

 


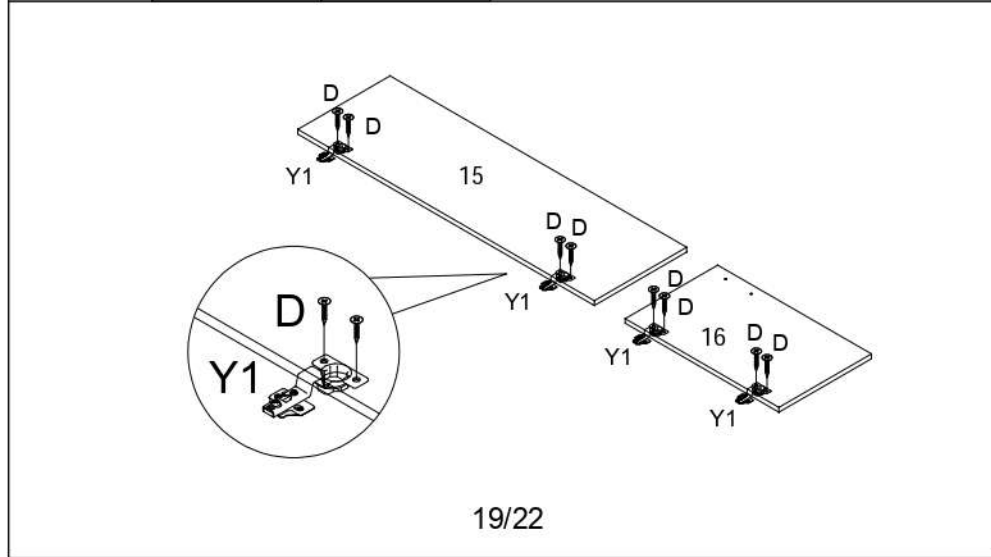

 
<b>28</b>	Y1x6	Dx106	
	 Ø35mm	 Ø3.5 x 14mm	

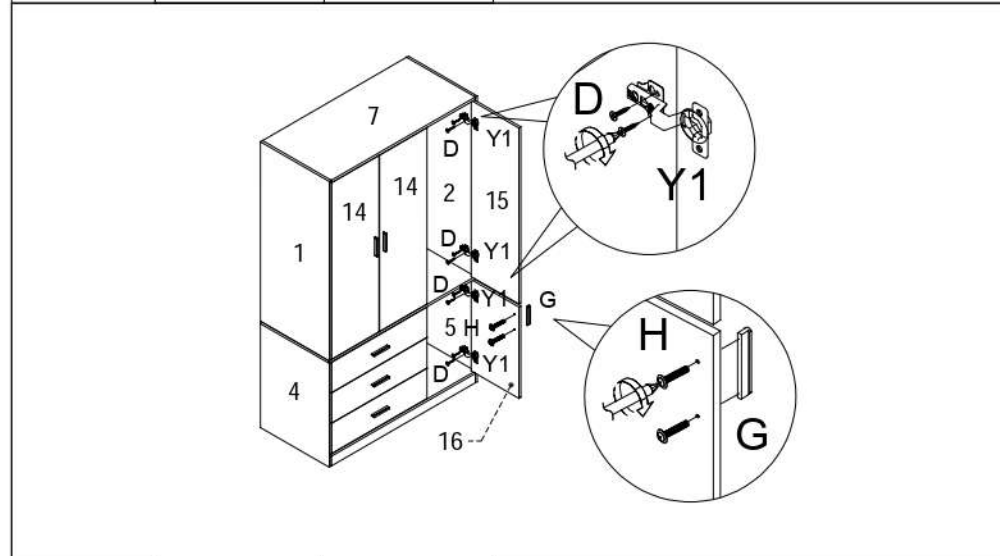

<b>29</b>	Gx6	Hx12	
	 96mm	 Ø4 x 18mm	

 
 


<b>30</b>	Lx26	Ex26	
	 14x13x10mm	 Ø3.5 x 20mm	

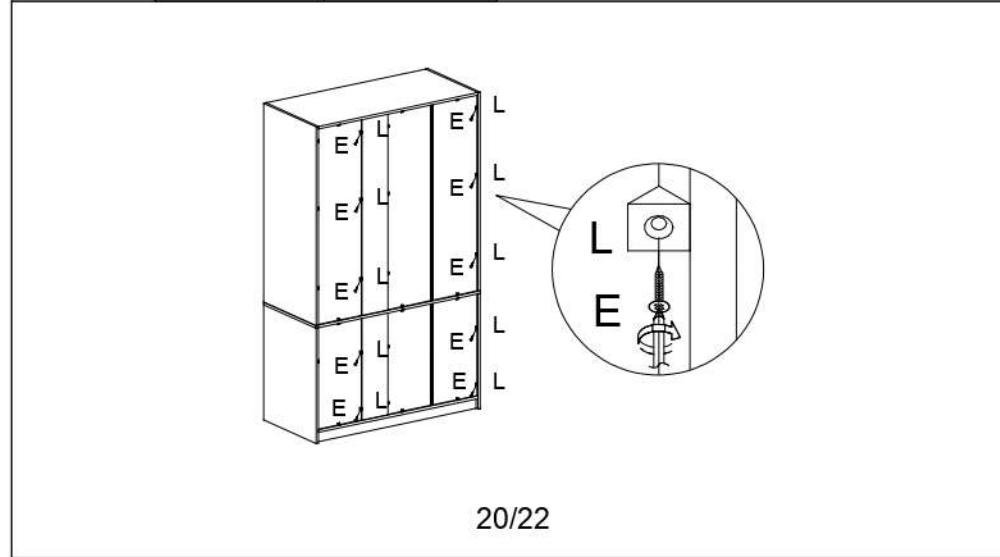

31

 
 
Kx2

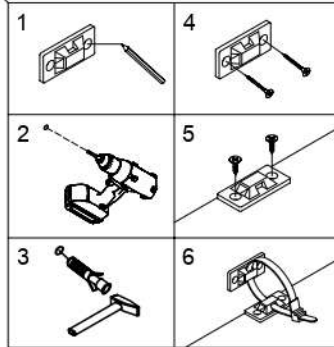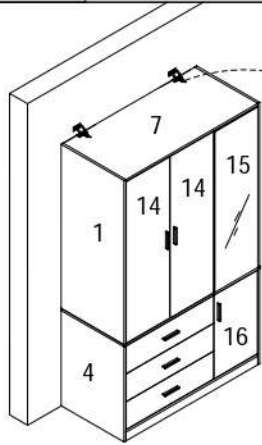

 
 
32

## Adjust & Align Door Hinges

### Up & Down Adjustment

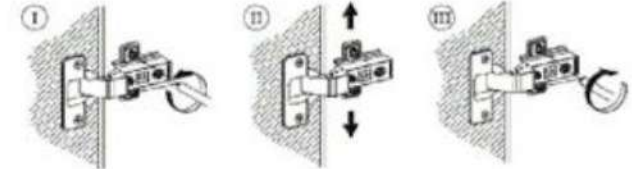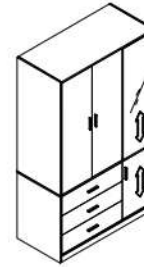

### Left & Right Adjustment

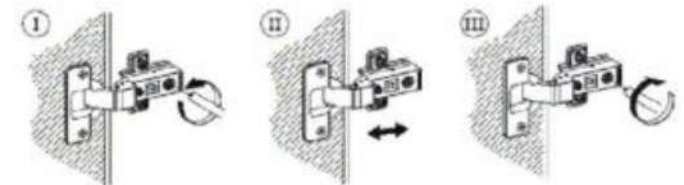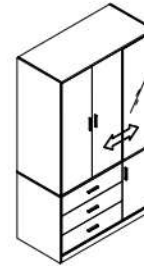

### Forward & Back Adjustment



# WARRANTY

## **WARRANTY CLAIMS**

·There is a 30-day warranty for broken furniture or any other problems that do not work properly.the warranty will start from the date of purchase which must be verified by proof of purchase.

·The product must be used in accordance with the instructions provided.for health reasons.

·For other reasons,if the furniture needs to be returned,it must be cleaned and dried and operated within 30 days of receipt.

## ***Type of Warranty Claim***

·Failure to follow the furniture instructions will invalidate the warranty.attention please.

·Does not include damage during installation,but includes damage during transportation.

## ***Scope of responsibility***

·Shall not bear any responsibility for misuse or user damage and /or loss of parts during the installation of furniture.

·After using,the damage and scratches of the furniture are not covered by the warranty.

## ***The Warranty Relates to All bought in The us and Covers The Following areas***

·Sheet parts:1 month from the date of purchase.

·Electrical parts:1 month from the date of purchase.