


GM-1045

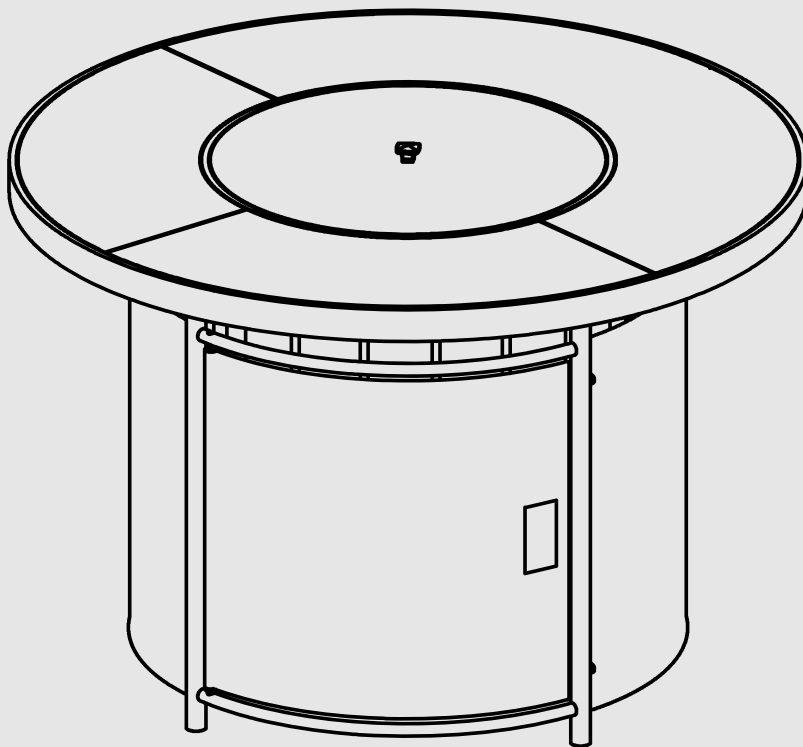

Barbuda Firepit Table

EN

SAFETY INSTRUCTIONS AND WARNINGS:

- The product is to be used exclusively for its intended purpose.
- Regularly check the condition and functionality of the product. If you notice any damage, the product should no longer be used.
- Only use the product on solid and level ground.
- Make sure the product is positioned securely.
- **WARNING!** Risk of clamping/crushing fingers during assembly and disassembly of the product.

CLEANING AND MAINTENANCE

The effects of the weather can cause slight alterations to the appearance of the garden furniture. Please store the garden furniture in a dry place during winter. To clean the piece of furniture, use a damp cloth and for more stubborn dirt use a mild soap solution and a soft brush. Never use aggressive cleaning agents, pressure washers or steam jets to clean the product. To clean the cushion/seat cover quickly, use a damp soft cloth. Some stains can be removed with a mild soap solution and a soft brush. Never use abrasive cleaning agents or solvents. Make sure that the cushion filling does not become wet and that no moisture damage or mould can build up on the inside! When it rains or there is moisture in the air, the cushions and pads should be taken indoors and stored in a protected and dry location. Cushions/pads that have become wet should be allowed to dry out completely. Do not fill damp cushions/pads! The covers can be removed, allowing them to be washed in the washing machine. Remove the cover, turn it inside out and zip close. Wash the cover with similar colours in the washing machine.

IMPORTANT:

Be sure to read the washing instructions on the sewn-in care label on the covers!

FR

INDICATIONS DE SÉCURITÉ ET AVERTISSEMENT :

L'article doit uniquement être utilisé conformément à l'usage prévu.

- Vérifiez régulièrement l'état et le bon fonctionnement de l'article. Si vous constatez des dommages, l'article ne doit plus être utilisé.
- N'utilisez l'article que sur une surface plane et rigide.
- Veillez à ce que l'article soit stable.
- **ATTENTION !** Risque de coincement /d'écrasement lors du montage et du démontage de l'article.

NETTOYAGE ET ENTRETIEN

Les intempéries peuvent modifier légèrement l'aspect des meubles de jardin. Entrez les meubles de jardin au sec pendant l'hiver. Pour nettoyer les meubles de jardin, utilisez un chiffon humide et doux. En cas de salissures tenaces, utilisez une brosse souple et un savon doux. Ne nettoyez jamais les meubles de jardin avec des détergents agressifs, un nettoyeur à haute pression ou un jet de vapeur. Ne nettoyez jamais les meubles de jardin avec des détergents agressifs, un nettoyeur à haute pression ou un jet de vapeur. Utilisez un chiffon humide et doux pour nettoyer rapidement les housses de coussin/de siège. Les taches individuelles peuvent être éliminées à l'aide d'un savon doux et d'une brosse souple. Ne jamais nettoyer avec des détergents ou solvants agressifs. Veillez à ce que les rembourrages de coussin/de garniture ne soient pas mouillés et que des détériorations dues à l'humidité et des moisissures n'apparaissent pas à l'intérieur! Par temps humide ou pluvieux, rentrez les coussins/garnitures et les entreposez dans un lieu sec et protégé.

Bien laisser sécher les coussins/garnitures mouillés. Ne pas recouvrir des coussins/garnitures mouillés! Les housses peuvent être retirées afin de les nettoyer en machine. Retirez les housses, retournez-les et fermez les fermetures à glissière. Lavez les housses en machine avec du linge de la même couleur.

IMPORTANT:

Lors du nettoyage des housses, respectez impérativement les instructions d'entretien présentes sur l'étiquette cousue!

ES

INDICACIONES DE SEGURIDAD Y ADVERTENCIAS:

- Utilice el artículo exclusivamente conforme a las instrucciones de uso del mismo.
- Compruebe periódicamente el estado y la función del artículo. En caso de que observe daños, deje de utilizarlo.
- Use el artículo únicamente sobre una superficie plana y firme.
- Asegúrese de que el artículo está estable.
- **¡ATENCIÓN!** Existe riesgo de atrapamiento o aplastamiento al montar y desmontar el artículo.

LIMPIEZA Y MANTENIMIENTO




Las condiciones meteorológicas pueden cambiar la apariencia de los muebles de jardín. Durante el invierno, almacene los muebles de jardín en un lugar seco. Para limpiar los muebles de jardín, use un paño suave y húmedo, y para la suciedad más difícil, use una solución jabonosa y un cepillo suave. No limpie nunca los muebles de jardín con detergentes agresivos, con un limpiador de alta presión o con un chorro de vapor. Para limpiar rápidamente los cojines/las fundas de los asientos, use un paño suave y húmedo. Las manchas superficiales se pueden eliminar con una solución jabonosa y un cepillo suave. No las limpie en ningún caso con detergentes abrasivos ni disolventes. Asegúrese de que el relleno de los cojines/las colchonetas no se moja y de que no se crea moho ni se generan daños por la humedad en el interior. Cuando llueva y haya un clima húmedo, meta dentro de casa los cojines/las colchonetas y guárdelos en un lugar seco y protegido. Deje que se sequen bien los cojines/las colchonetas húmedos o mojados. ¡No use cojines ni colchonetas húmedos!

Para limpiar debidamente las fundas en la lavadora, extraígalas. Retire las fundas, deles la vuelta y cierre la cremallera. Ponga las fundas con colores similares en la lavadora.








IMPORTANTE:

Cuando limpie las fundas, asegúrese sobre todo de comprobar primero las indicaciones de mantenimiento de la etiqueta.

Need Help?


 1-909-348-5495 greemotionusa.com support@greemotionusa.com    /greemotionUSA

PARTS

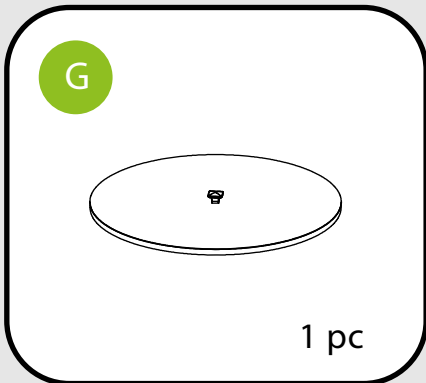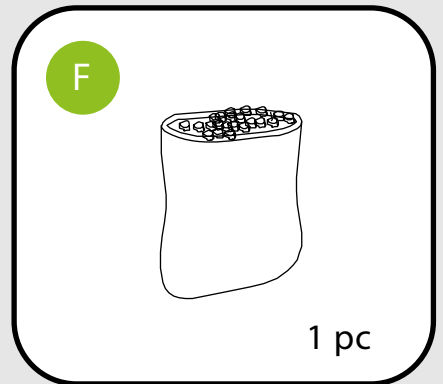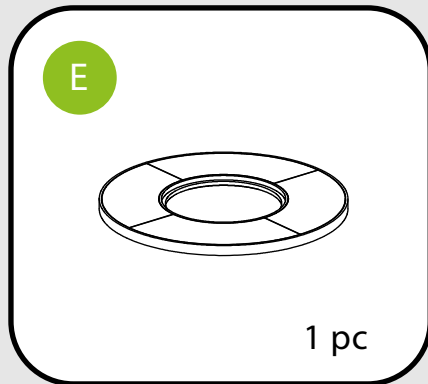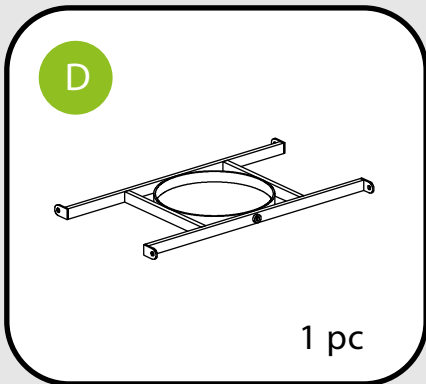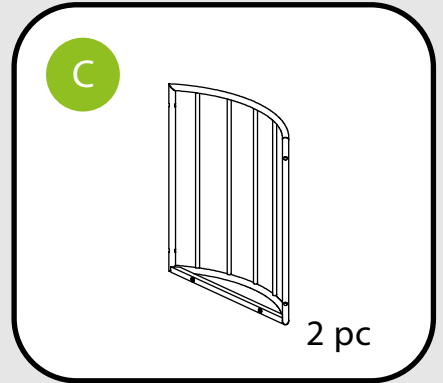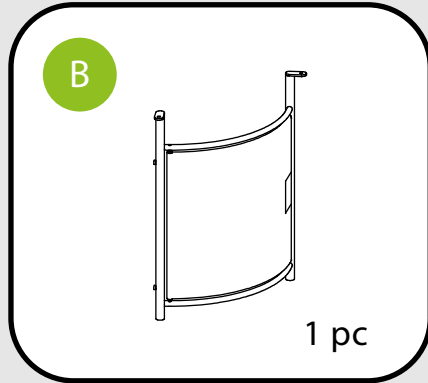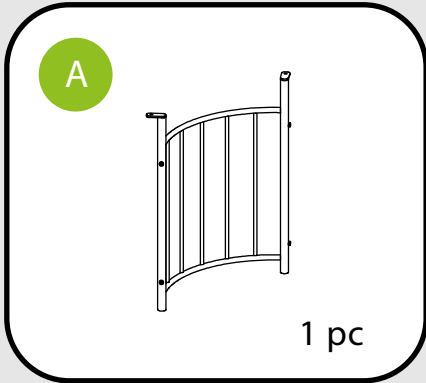

HARDWARE


AA

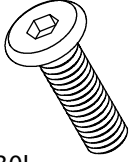

M6x30L

8 pc


BB

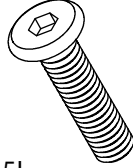

M6x15L

4 pc


CC

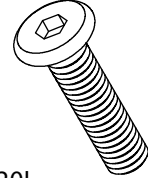

M6x20L

4 pc

DD

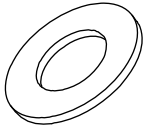

16 pc

EE




1 pc

ASSEMBLY INSTRUCTIONS

1


Align Back (A) with Sides (C). Secure with washer (DD) and bolt (AA) using supplied Allen key (EE).

Align Door (B) between Sides (C). Secure with washer (DD) and bolt (AA) using supplied Allen key (EE).

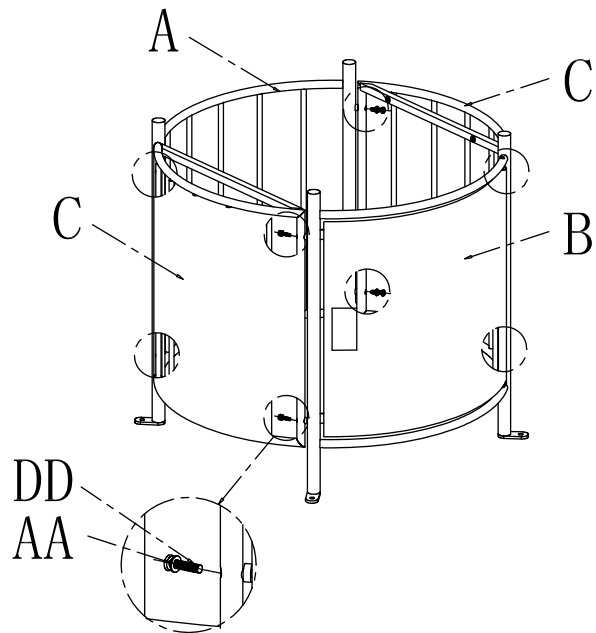

2


Fasten Cross Brace (D) to bottom of Sides (C). Secure with washer (DD) and bolt (BB) using supplied Allen key (EE).

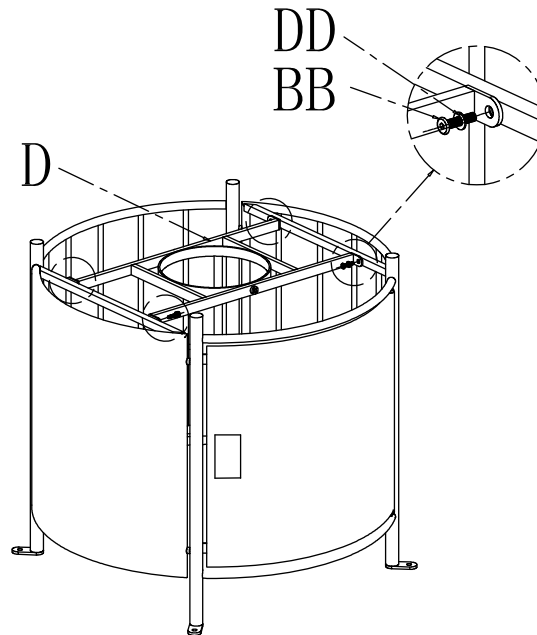

ASSEMBLY INSTRUCTIONS

3

Align assembled base on face-down Table (E).
Secure washer (DD) and bolt (CC) using
supplied Allen key (EE).

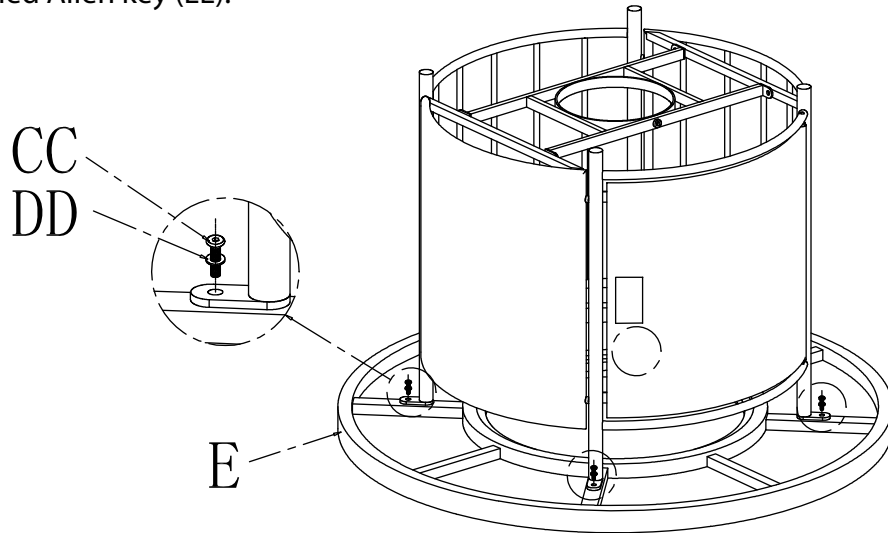


4

Open Door (B) and place the
tank onto the bottom frame (D).
Secure in place by using the
plastic screw.

Attach the table's burning
system to the tank by rotating
clockwise to its connector.

Note:

Secure the tank in place by
turning the plastic screw
clockwise as illustrated.

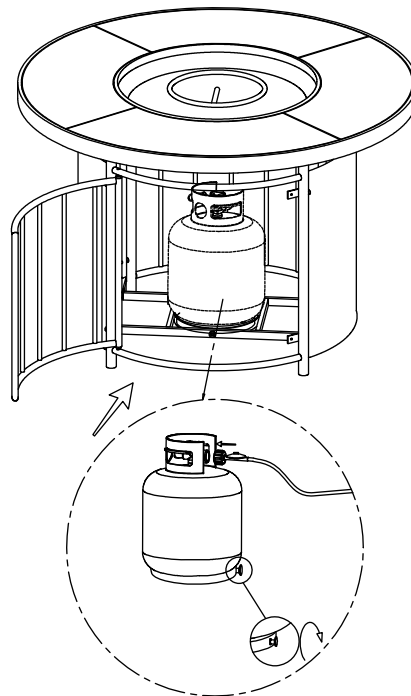


ASSEMBLY INSTRUCTIONS


5

Scatter the provided Rocks (F) into the steel bowl.

Note:
The fire shield on the burner system must be exposed as illustrated.

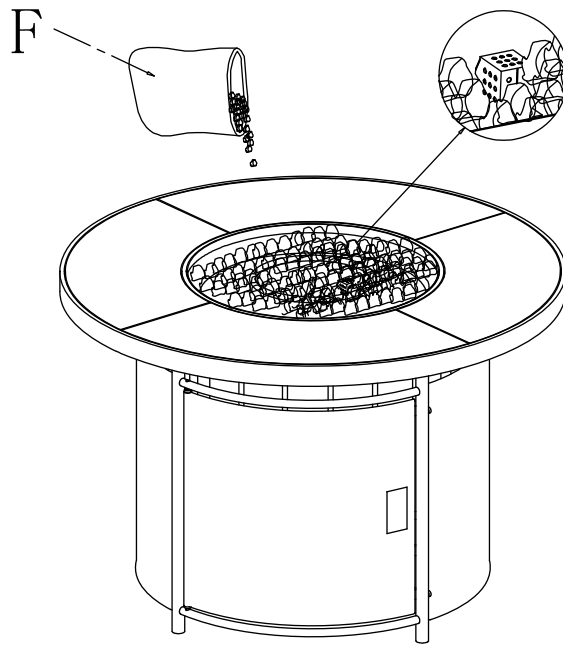

6

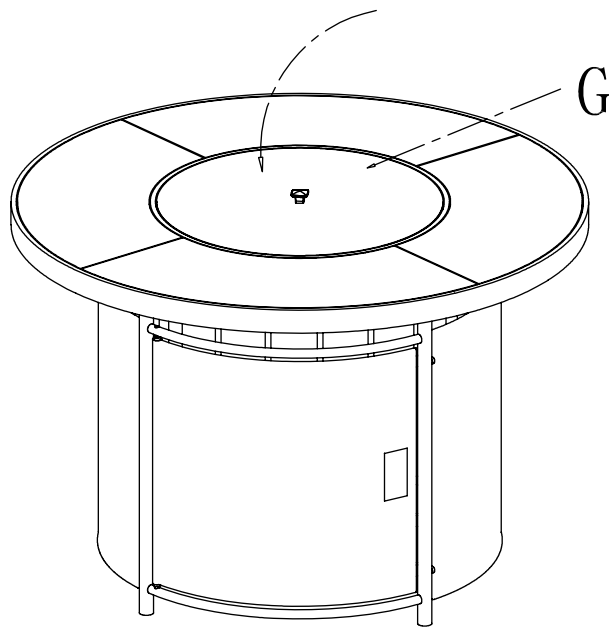


Place the Cover (G) onto the center of the Table (E).

Note:
In order to protect the burner system, when the fire is not in use and/or on rain days, the cover should be used.


Finished

SWITCH USAGE INSTRUCTIONS

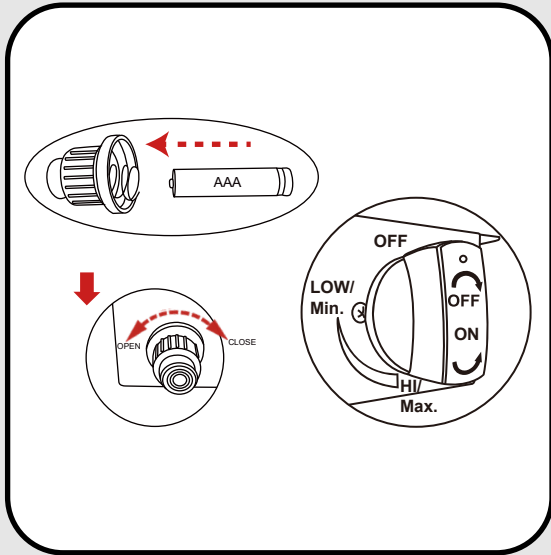

Step 1: Lighting

Open the igniter button and install an AAA battery (not included), then secure the cap back on. Before use, make sure that the control knob is in the "OFF" position. Turn the propane cylinder gas valve to fully open position. Press down on the control knob and turn counter clockwise to the "LOW" position. Push in the gas control knob all the way and hold. Continue to press the ignition button for 15 seconds.

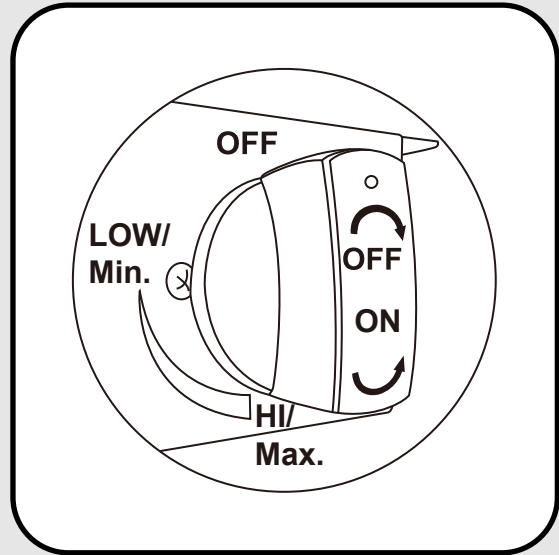

Step 2: Adjusting and Shutting Down

If the burner is not lit, press down the control knob and turn clockwise to the "OFF" position. Repeat step 1 after 5 minutes. When the burner is lit, press down the control knob and turn it to the desired heat output position between "LOW" and "HIGH". Press down and turn the control knob clockwise to the "OFF" position to shut down the appliance. Turn off the cylinder gas valve.

Note: To extinguish the flame, push the control knob in and rotate clockwise.

CARE AND MAINTENANCE:

1. Do not use aerosol polish or any other flammable material to clean the burner while it is in use.
2. Inspect and clean the burner regularly. Use a wire-bristle brush to clean the burner surface. A straightened paper clip is useful to remove debris or rust from the small burner ports.
3. Wash frame parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or any other solvents on the frame parts.
4. Inspect and tighten all of the bolts and fasteners on a regular basis to ensure the proper performance and safety of your appliance.
5. When not in use, we recommend that it be stored in a dry and secure area. Always disconnect the propane gas tank first and store it safely outside.
6. The minimum clearance from the sides, rear, and top of unit to adjacent combustible construction: 2' (61 cm) from the sides, 2' (61 cm) from the rear, and 5' (152.5 cm) from the top.
7. Improper lighting operations will cause serious injury and explosion.

TYPES OF GAS

Min. Gas supply for input Adj.
Maximum Inlet Pressure
Manifold Pressure
Gas Rating

PROPANE GAS

25 psi
250 psi
11 in.w.c
46,000 Btu/hr

Caution:

The gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 inches water column.