



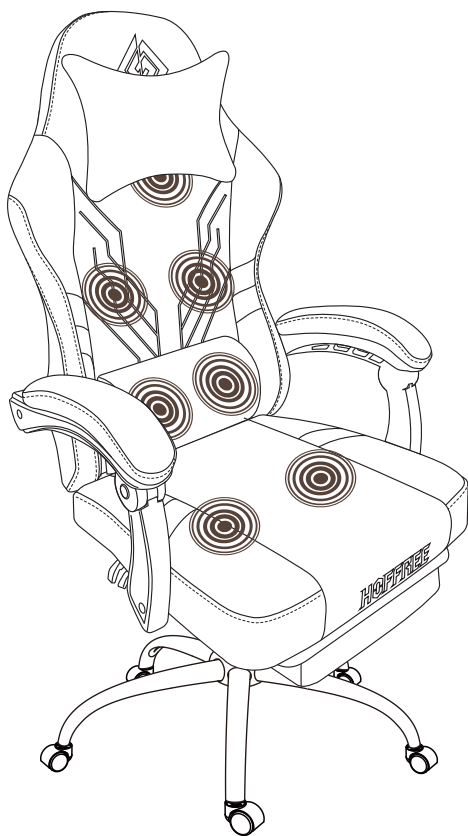

Gaming

User Manual

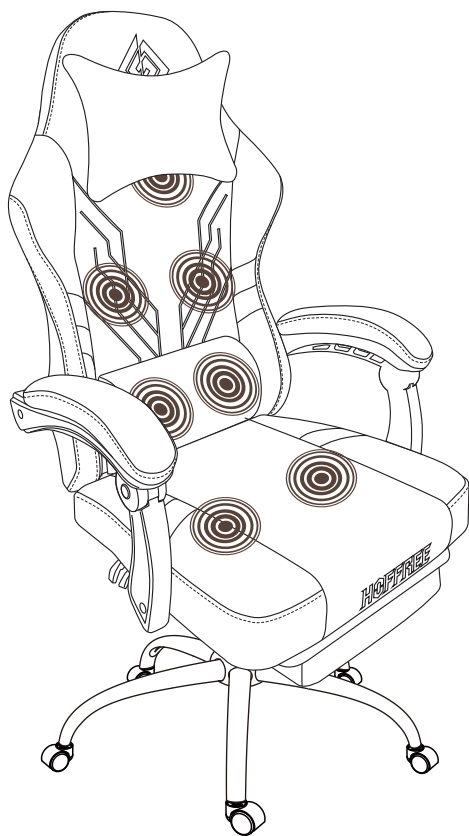

ATTENTION

 
 
 
 
 
 
 
 
The four screws marked as "J" in the screw pack are an additional set of special anti loosening screws that can prevent the armrest from loosening, but the screws are not easy to unscrew after installation.

Before use, please first connect the controller and then plug in the power cord. Gently press the power switch to start operation, and when you want to stop using it, simply touch the power switch again.

If the controller malfunctions during use, please stop using it immediately. First, disconnect the power, unplug the power connector, and then unplug the controller connector. Then, reconnect the controller connector and plug in the power cord one by one to test if the functionality has returned to normal. If these actions do not restore the product to normal operation, please stop using it immediately and contact the seller.


Note: When not using this product for an extended period, please disconnect the power.

PACKING LIST


Ax1 	Bx1 	Cx1 	C1x5 	Dx1 	
Gx1 	Hx5 	Jx1 	Kx1 	Lx1 	
M-Lx1 	M-Rx1 	Rx1 	Ox1 	Px2 	
Wx1 	I-1x1 	I-2x1 	Ux4 	Vx10  M6x14	
Xx4  M6x20	Sx4  M6x25	Ex2  M6x30	Zx3  M6x40	Tx4  M8x40	Yx1  M5x10

INSTALLATION


1

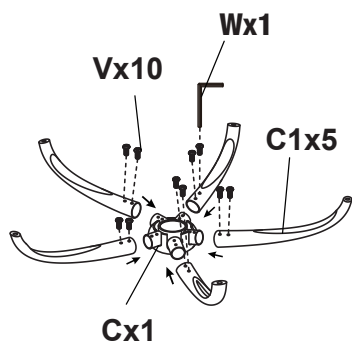


2

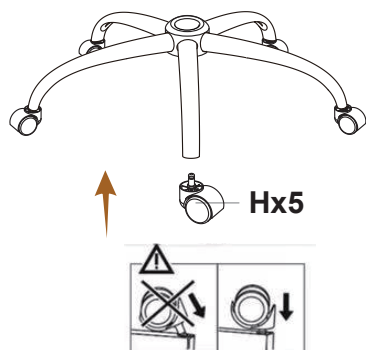


3

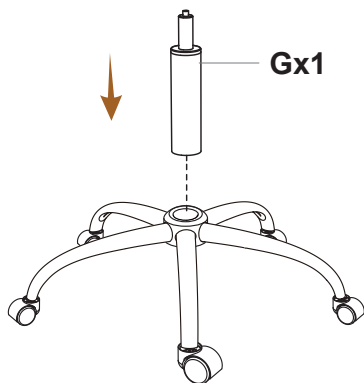

4

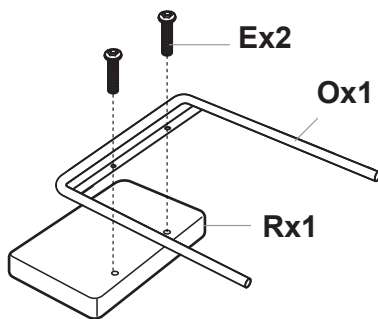


INSTALLATION

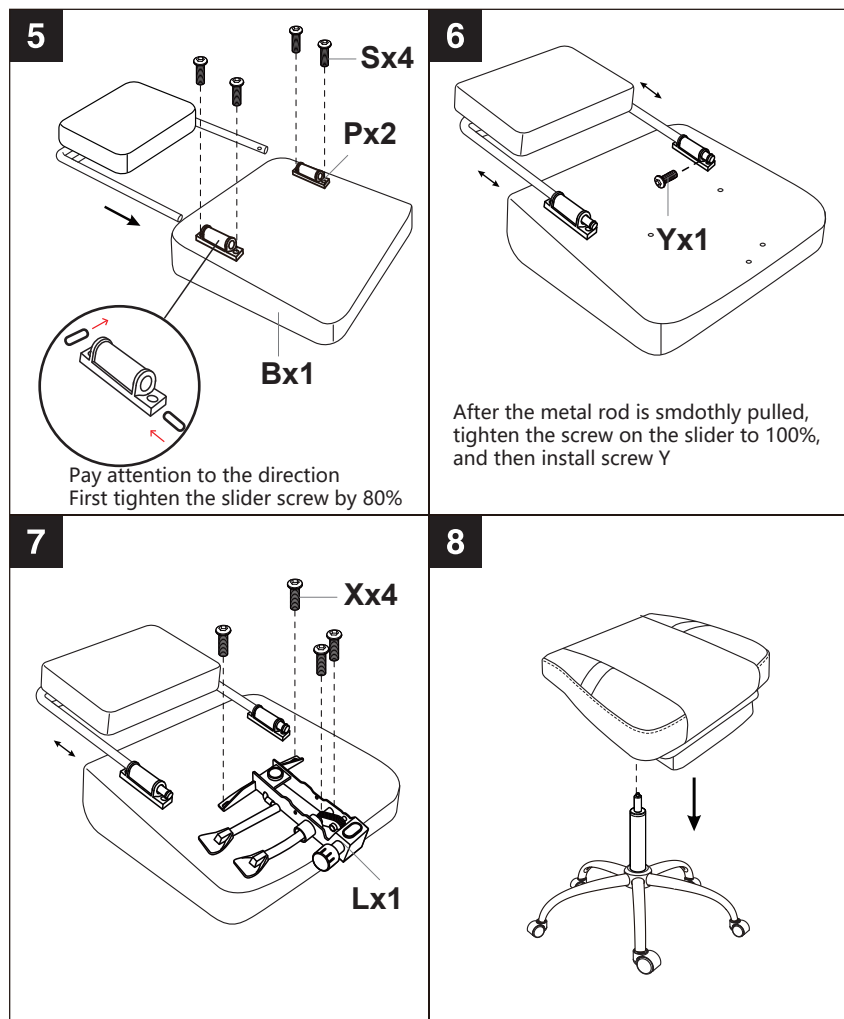

Turn the direction of the wide hole of the slider outward, pre install 80% of the slider screw, insert the metal rod into the slider, pull and pull several times to make the metal rod smooth, and then tighten all the screws


INSTALLATION

9

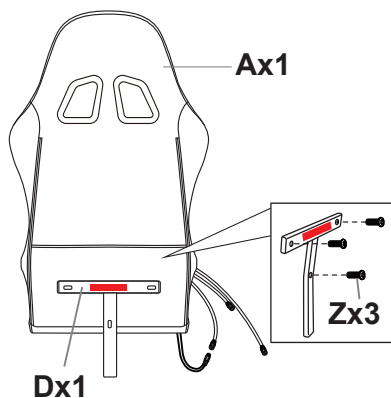


10


Match Colors: Connect plugs of the same color (Red to Red, Black to Black).

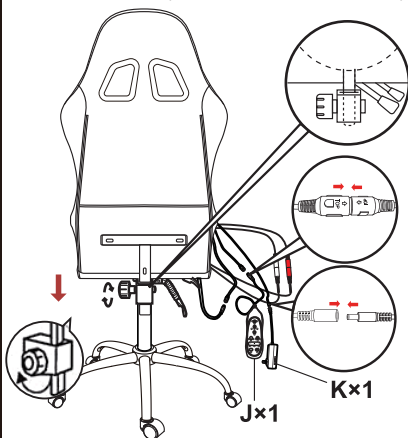

11

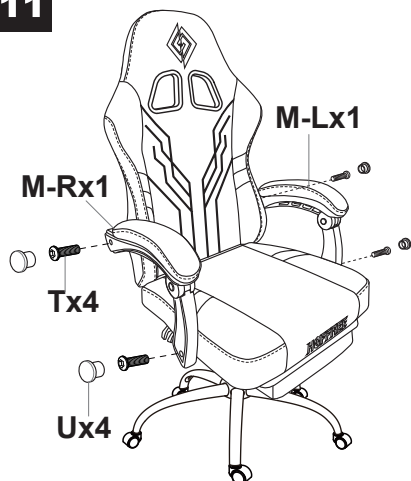

12

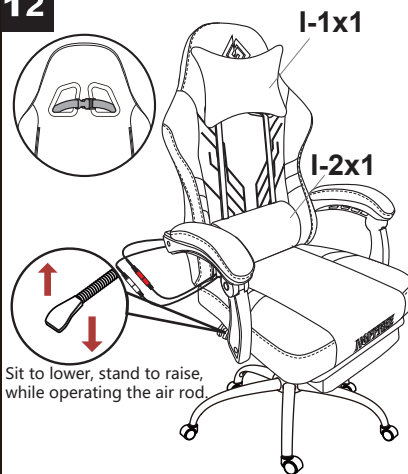

TROUBLESHOOTING

Fault conditions	Possible causes	Exclusion method
The product is shaking and unstable	1. Wrong screw installation 2. The screw is broken 3. Check that the screws are not tightened in place	1. According to the instruction manual, install the correct screw in the correct position 2. To replace, use the included spare screws 3. Tighten the loose screws

REMOTE CONTROL FUNCTION OF REMOTE

READ ALL INSTRUCTIONS
BEFORE USING THE ITEM



VOLTAGE PARAMETERS:


1. Voltage: AC110-240V DC12V
2. Current: 1.5A
3. Power: 12W
4. Voltage Grade: Class III
5. Frequency: 50-60Hz

PRODUCT FEATURE

- Heating massage
- 7 Vibration Motors
- 3 Massaging modes
- 3 Massaging intensity
- Four massage zones, each zone can be operated individually
- The default timing is 15-30-60 min selection

HOW TO USE

1、Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet(see Figure A)

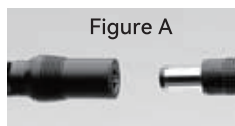

2、 Turn the unit ON by pressing the POWER button once, The LED will illuminate when power is on, To turn off a massage, press the button again.

3、NECK、BACK、LUMBAR、THIGH Turn on the massage in each zone by pressing the NECK、BACK、LUMBAR or THIGH buttons. LEDs will illuminate when each zone is activated. To turn off a zone, press the button again.

4、 To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates

PULSE---for deep tapping massage

PRESS---provides rapid tapping massage

WAVE----for a gradual, side-to-side vibrating massage

5、 5、 To change the massage intensity press the INTENSITY button. The LED for HIGH or Mid or LOW intensities will illuminate when chosen.

NOTE: Discontinue use immediately if you feel any discomfort or pain.

6、 NOTE: for your benefit, the massage chair is equipped with an auto shut-off feature that .

7、 DO NOT use for more than 60 minutes of continuous use

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1、 This product is for use on a 12V circuit. Make sure that the product is connected to an outlet having the same configuration as the plug.
- 2、 Always unplug the massager from the power source after use, and before cleaning.
- 3、 Do not reach for massager if it has fallen into water. Unplug immediately.
- 4、 An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
- 5、 Do not use outdoors.
- 6、 Do not carry this appliance by supplied cord as a handle.
- 7、 Keep the cord away from heated surfaces.
- 8、 Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- 9、 This unit is not a toy. Children should not use it or play with it.
- 10、 Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11、 Do not use near eyes or other highly sensitive areas.
- 12、 To disconnect, push "POWER" key to "OFF" place, make sure all functions stopped, then remove plug from outlet.
- 13、 Keep cord away from heated surfaces.
- 14、 Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN:

- Insure the unit is unplugged from the power source, and allow to cool before cleaning.
- Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120°Cto clean the unit.
- To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.

FCC statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MADE IN CHINA