 
 
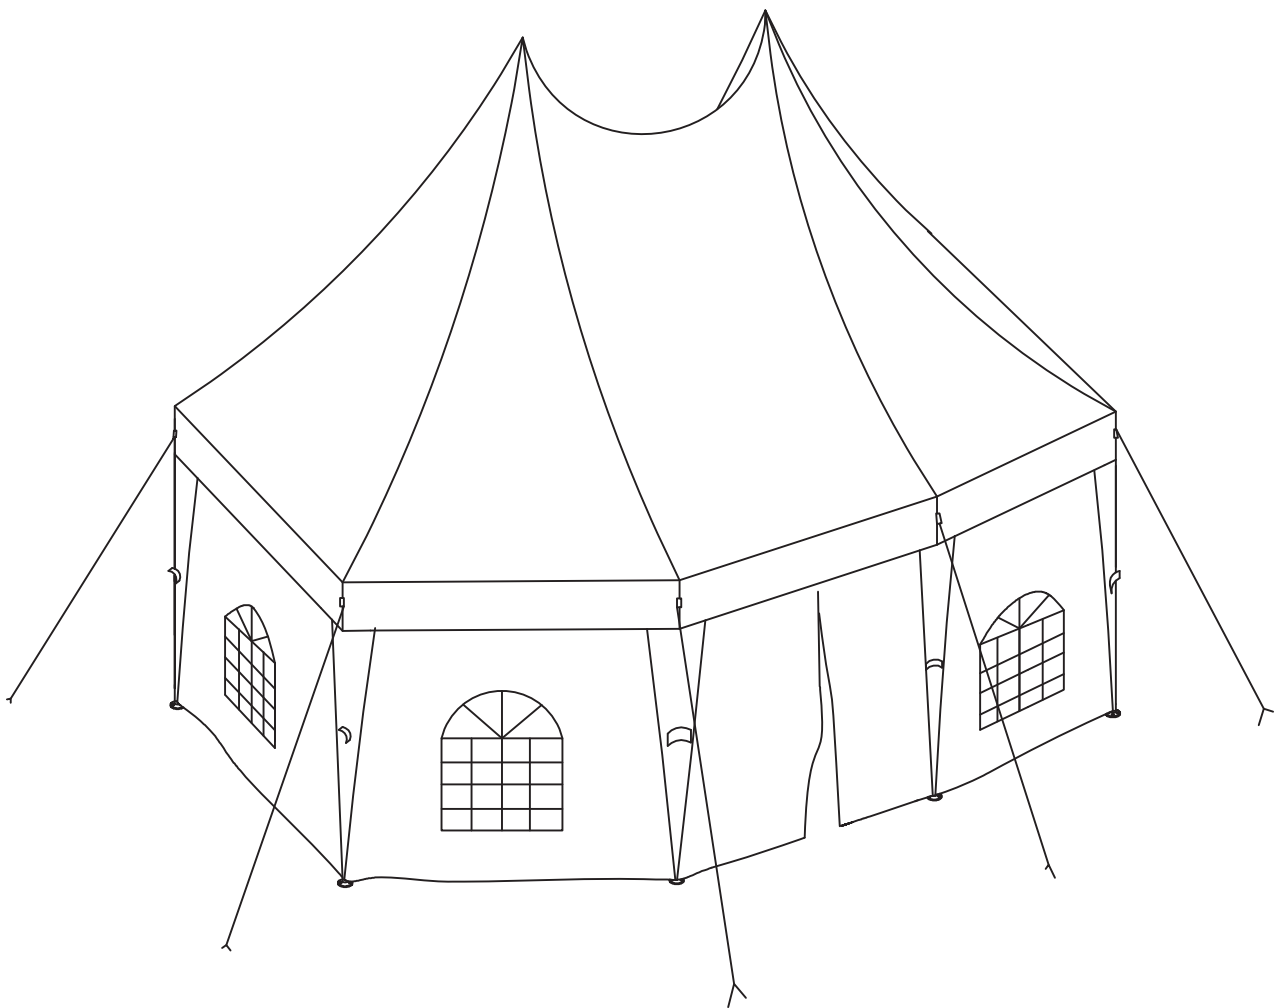 
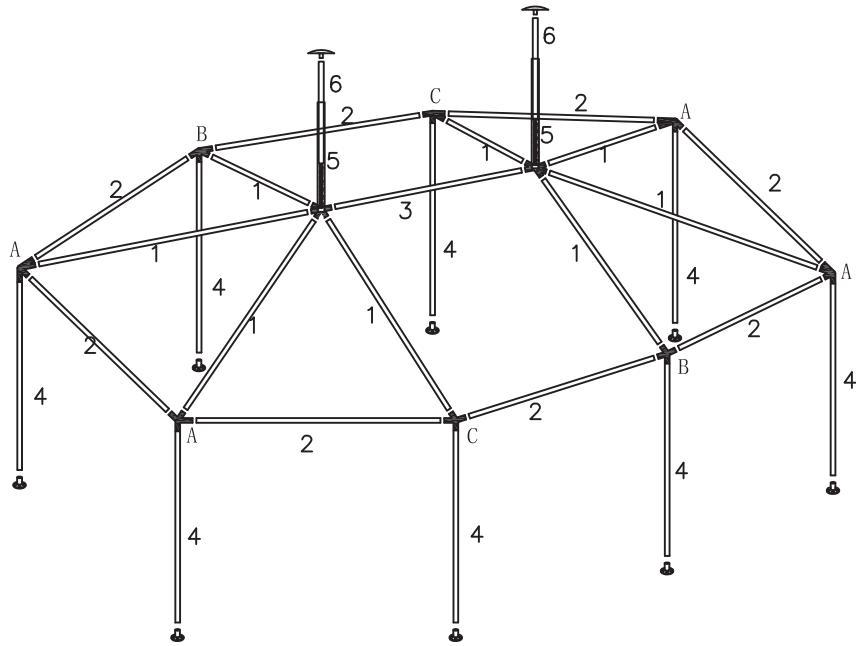 
 
 
 


ASSEMBLY INSTRUCTIONS


20x15FT Party Tent






1#	 Steel Pipe#1	8pcs	A	 $\phi 34$	4pcs
2#	 Steel Pipe#2	8pcs	B	 $\phi 34$	2pcs
3#	 Steel Pipe#3	1pc	C	 $\phi 34$	2pcs
4#	 Steel Pipe#4	8pcs	D	 $\phi 34$	2pcs
5#	 Steel Pipe#5	2pcs	E	 $\phi 38$	8pcs
6#	 Steel Pipe#6	2pcs	F	 Roof Cover	1pc
L	 Rope	8pcs	G	 Window Sidewall	6pcs
M	 Bungee Balls	60pcs	H	 Zipper Sidewall	2pcs
N	 L Type peg $\phi 4.8 \times 160\text{mm}$	24pcs	I	 Top Support Plate	2pcs
O	 M8*50	8pcs	J	 Spring $\phi 32 \times 300\text{mm}$	2pcs
P	 M6*50	2pcs			2pcs

 1.

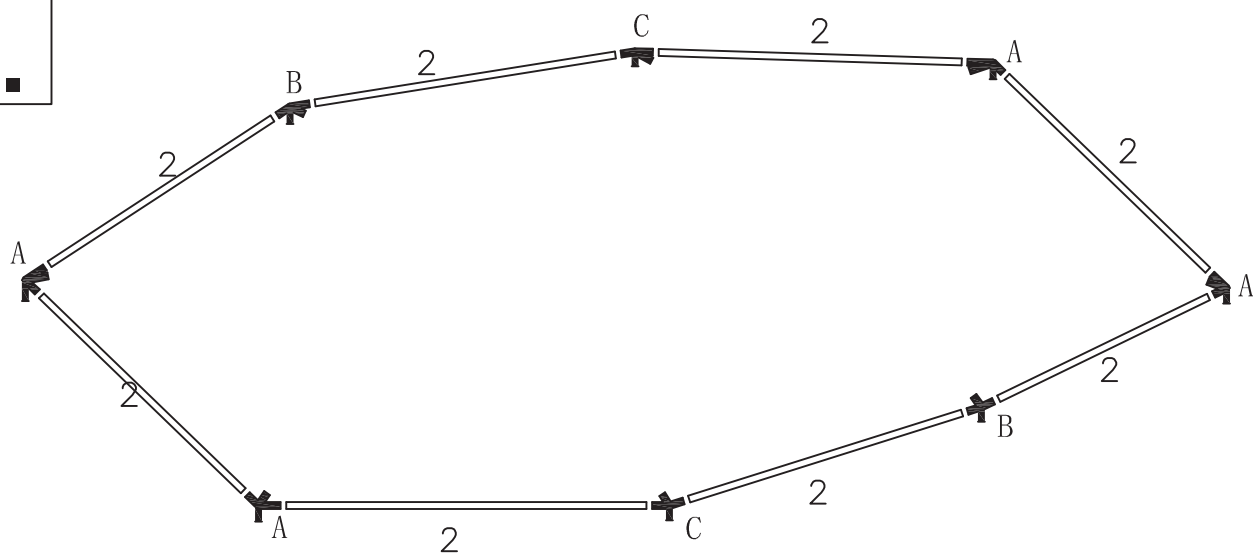


Assemble the upper frame and the roof frame using Pole#2& the Connector A,B,C

 2.

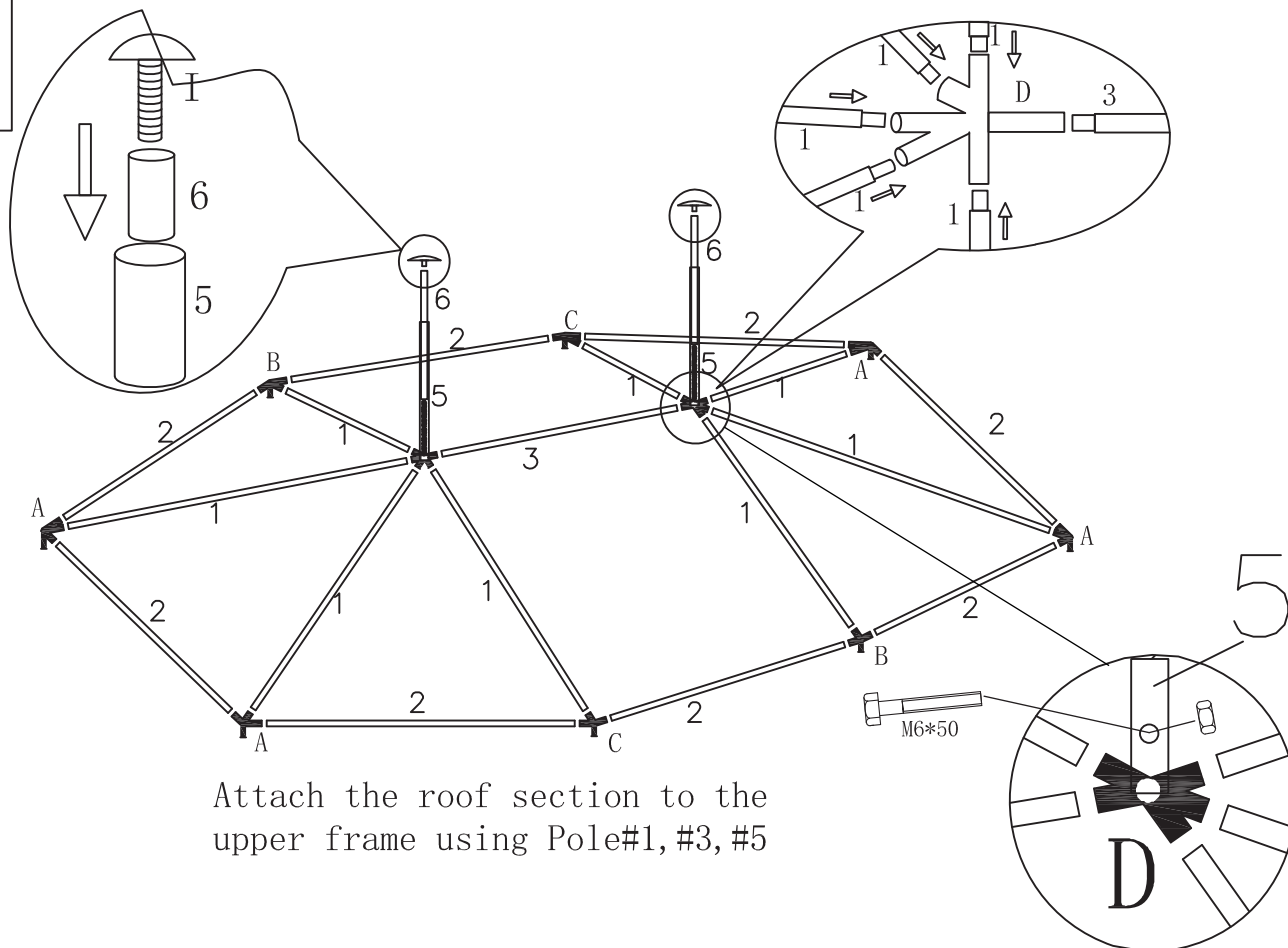


Attach the roof section to the upper frame using Pole#1, #3, #5

3.

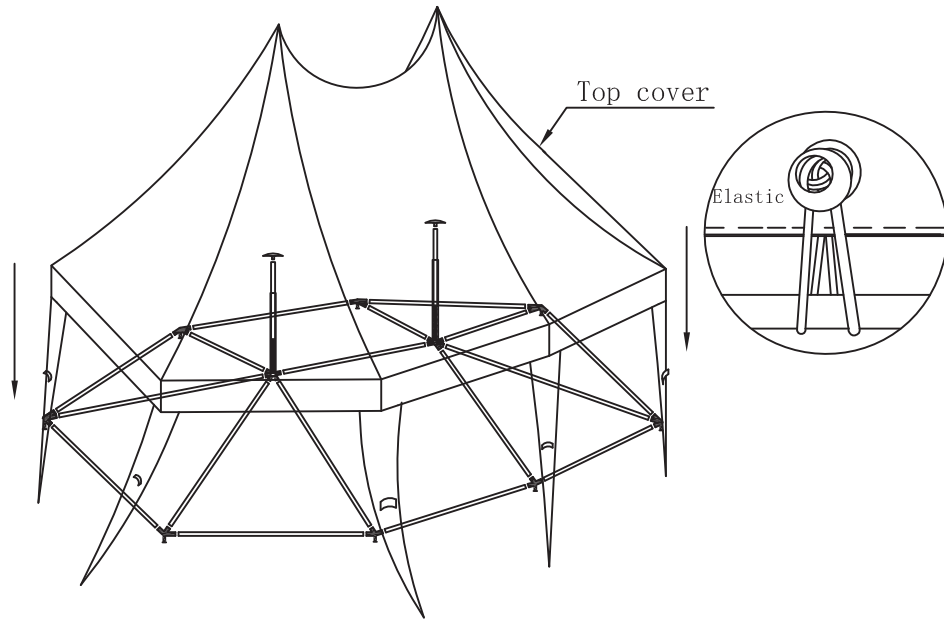


Place the cover tightly over the frame and use the elastic balls to flx the cover and steel frame tightly

4.

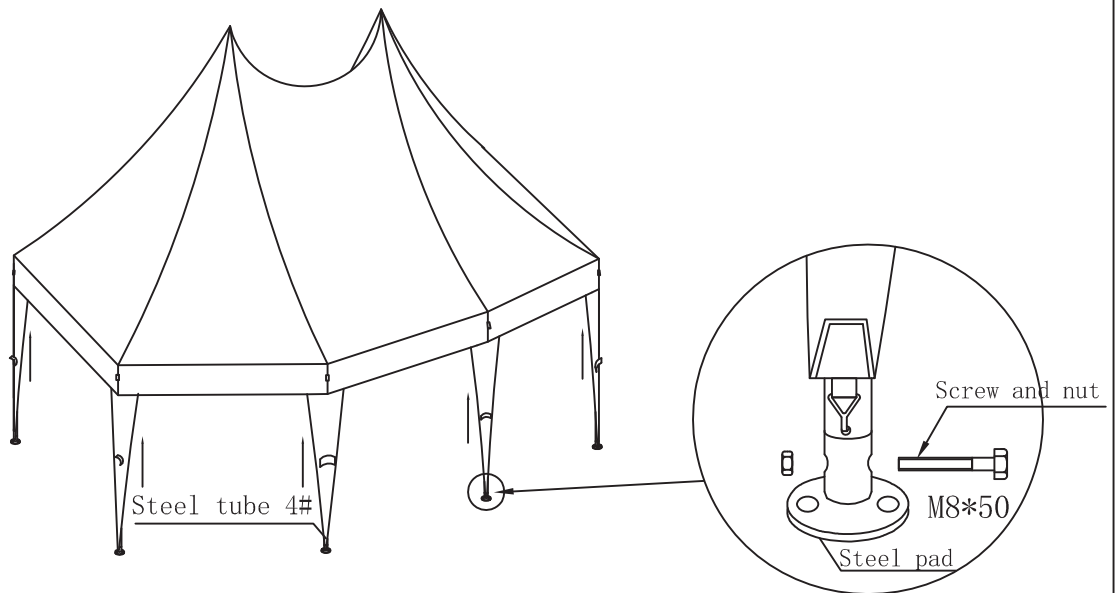

Place pole#4, into the remaining outlet lf the Connector a,b,c and ensur the Foot Bases are at the base,use the included M8*50 Screw and nut to fix the legs and foot bases.Attach the hooks of the leg cover into the tube holes near the feet,if the cover becomes loose,tighten by moving the hook to a lover hole.

5.

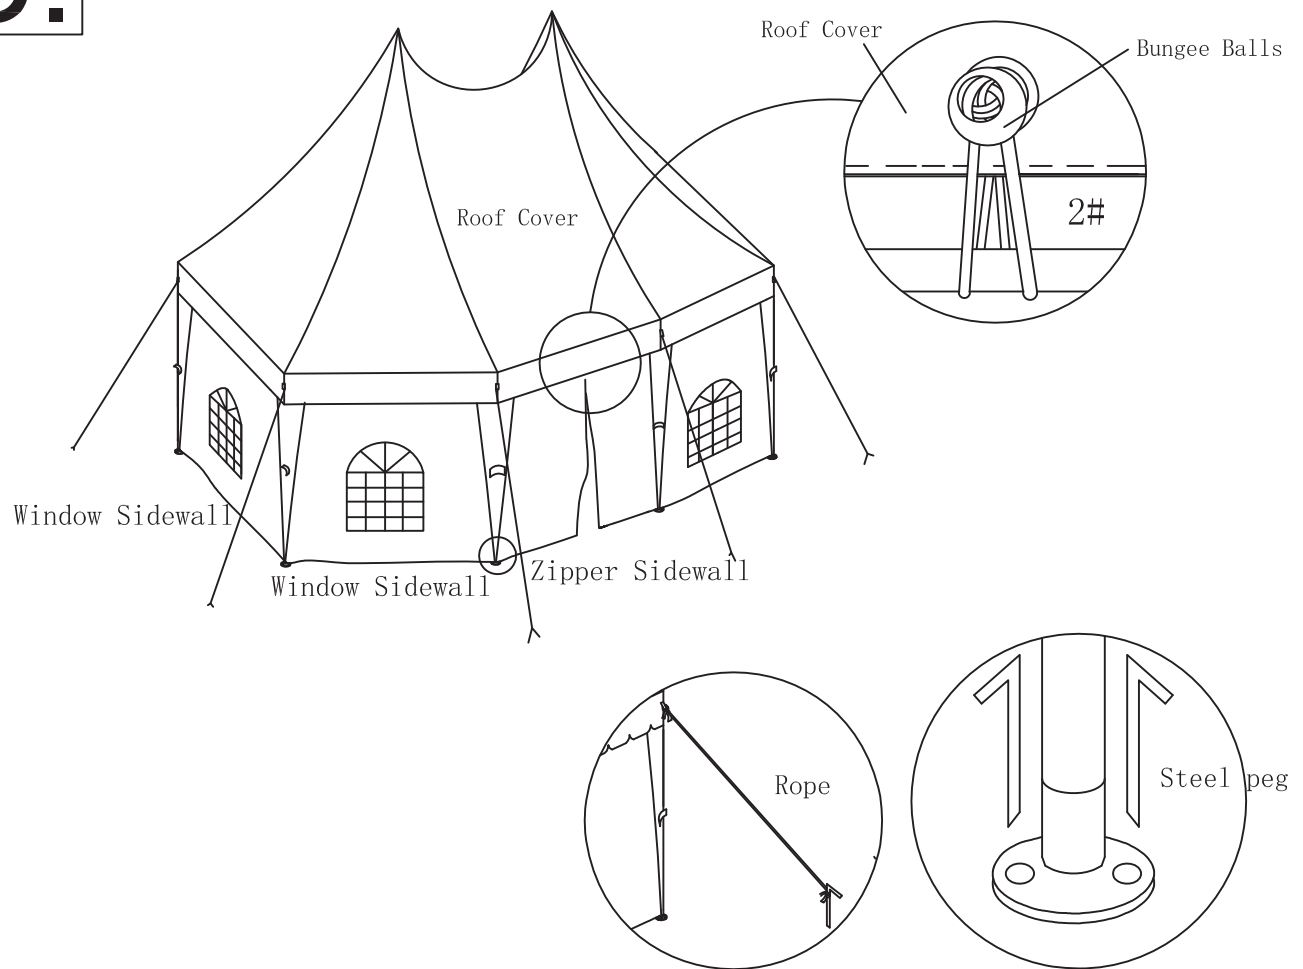

Hang the side walls to the leg poles by the velcros. All 8 PCS sidewalls (include 6 pcs window sidewalls & 2 pcs zipper sidewall) can be hung or took down separately. Then secure the tent with Ropes and stakes. We recommend the Stakes are at a 45 degree angle in the ground facing away from the tent to ensure maximum tension.