
# PACKING DIAGRAM -SHADE .CA TITLE 20--CARDBOARD -CARDBOARD -FINIAL, HARP & RUBBER WASHER (3) POLES AND (2) CONNECTORS. -SWING ARM ASSEMBLY -STYROFOAM: 12 KGS. -CARDBOARD BASE-

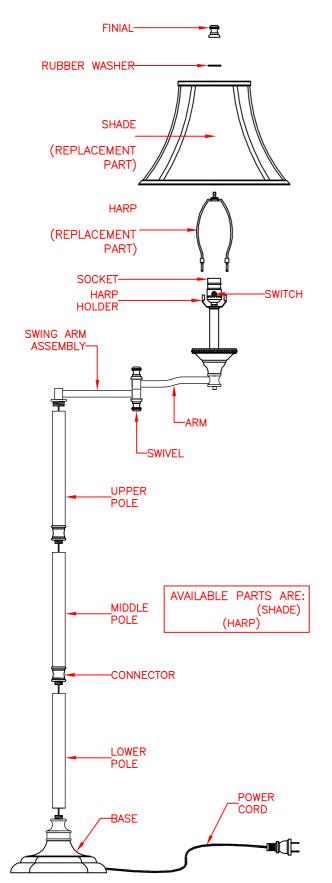

## **ASSEMBLY INSTRUCTIONS**

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO **ASSEMBLY.** 

THIS LAMP SHOULD TAKE APPROXIMATELY 10 MINUTES TO **ASSEMBLE.** 

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE LAMP
YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FINIAL, RUBBER WASHER, SHADE, HARP, SWING ARM ASSEMBLY, (3) POLES AND BASE. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

#### ASSEMBLE THE LAMP

- 1. CAREFULLY ORGANIZE AND PLACE ALL PARTS ON A SMOOTH, FLAT SURFACE LINE UP ALL OF THE PARTS ACCORDING TO THE ASSEMBLY DIAGRAM.
- 2. SCREW LOWER POLE TO TOP OF BASE.
- 3. SCREW MIDDLE POLE TO TOP OF LOWER POLE.
- 4. SCREW UPPER POLE TO TOP OF MIDDLE POLE.
- 5. SCREW SWING ARM ASSEMBLY TO TOP OF UPPER POLE.
- 6. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE ENDS INTO THE HARP HOLDER.
- 7. PLACE SHADE ONTO HARP, THEN SECURE WITH RUBBER WASHER AND FINIAL.
- 8. INSTALL 150 WATT MAXIMUM MEDIUM BASE TYPE "A" 3-WAY BULB (NOT INCLUDED) INTO SOCKET.
- 9. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.

#### **BULB REPLACEMENT**

- 1. BEFORE REPLACING THE BULB, BE SURE THAT THE SHADE AND BULB ARE COOL AND LAMP IS UNPLUGGED.
- 2. UNSCREW EXISTING BULB FROM SOCKET AND REPLACE WITH A NEW BULB. PLUG POWER SUPPLY CORD BACK INTO OUTLET.

#### TROUBLE SHOOTING

- 1. IF YOUR LAMP DOES NOT LIGHT, CHECK PLUG AT THE OUTLET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED.
- 2. IF LAMP STILL DOES NOT LIGHT, UNPLUG FROM OUTLET, CHECK THE BULB FOR A BROKEN FILAMENT. REPLACE BULB IF NECESSARY, PLUG IN LAMP AND TURN IT ON.
- 3. IF THE LAMP STILL DOES NOT LIGHT, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

### IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

