 


Assembly Instructions

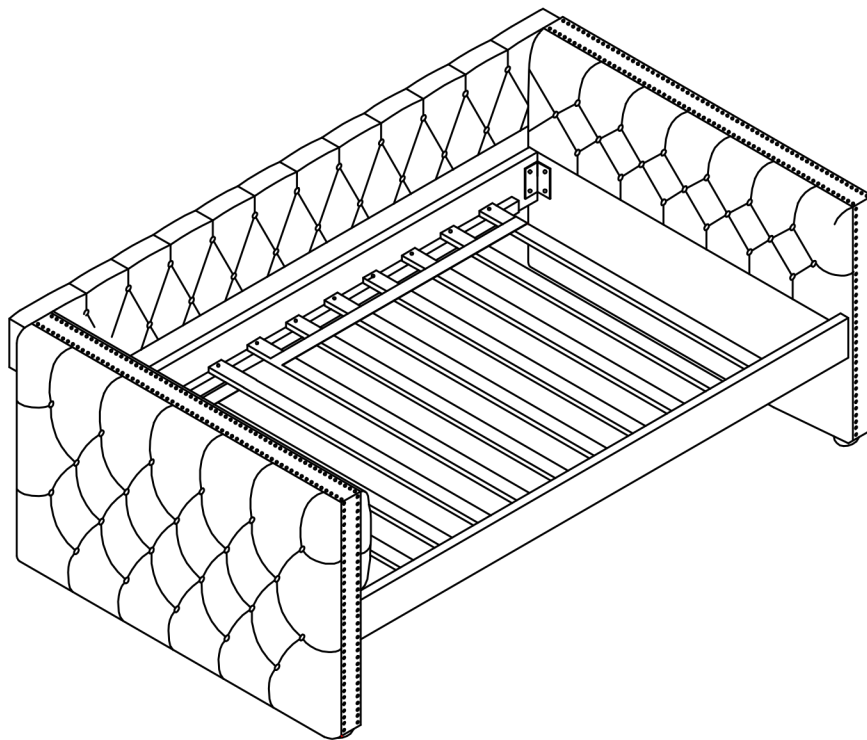

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

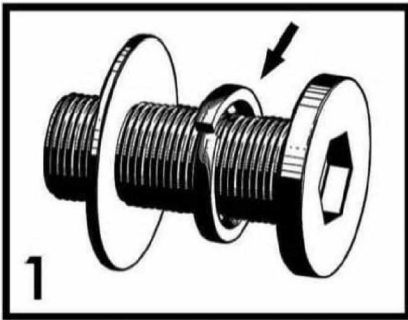

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

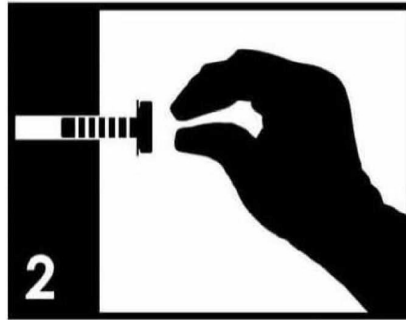

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

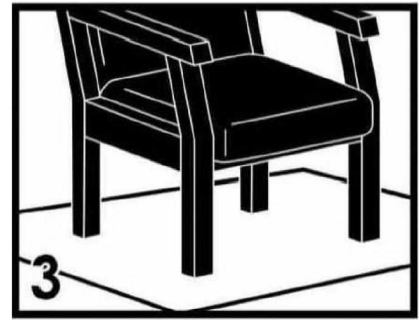

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

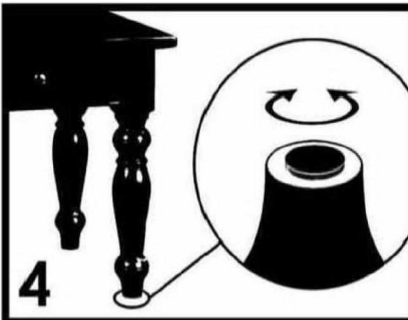

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

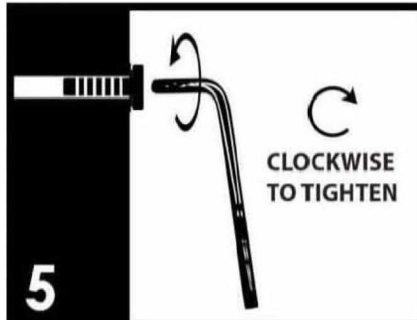

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

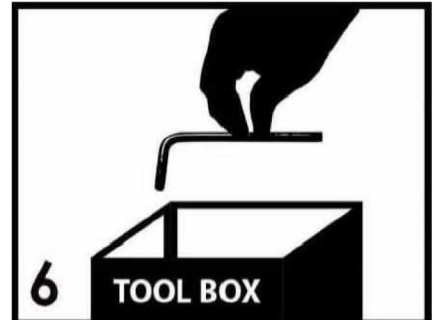


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

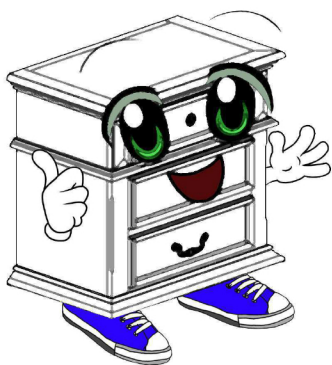


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 
Parts List

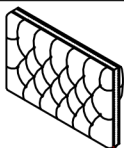

#1 x 1pc
Left Arm

 

#2 x 1pc
Right Arm

 

#3 x 1pc
Back Rest



#4 x 2pcs
Slats For Daybed



#5 x 1pc
Back Rail



#6 x 1pc
Front Rail



#7 x 1pc
Middle Slat

Hardware List



#A x 4pcs
Bracket 90*45*3.0Tmm



#B x 1pc
Allen Wrench



#C x 20pcs
Lock Washer



#D x 20pcs
Flat Washer



#E x 8pcs
Bolt 5/16"*1-1/2"



#F x 8pcs
Bolt 5/16"*3/4"



#G x 4pcs
Bolt 5/16"*2-1/2"



 
#H x 30pcs
Screw M8*1-1/4"



#1

#C x 16pcs
#D x 16pcs
#E x 8pcs
#F x 8pcs


Prepare 16 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#F,E). Align back/front rail (#5,6) to the end of the left/right arm (#1,2), then align bracket (#A) to the holes of the rails (#5,6) and arms (#1,2). Secure holes on the rails (#5,6) with bolts (#F) and secure holes on the arms (#1,2) with bolts (#E).

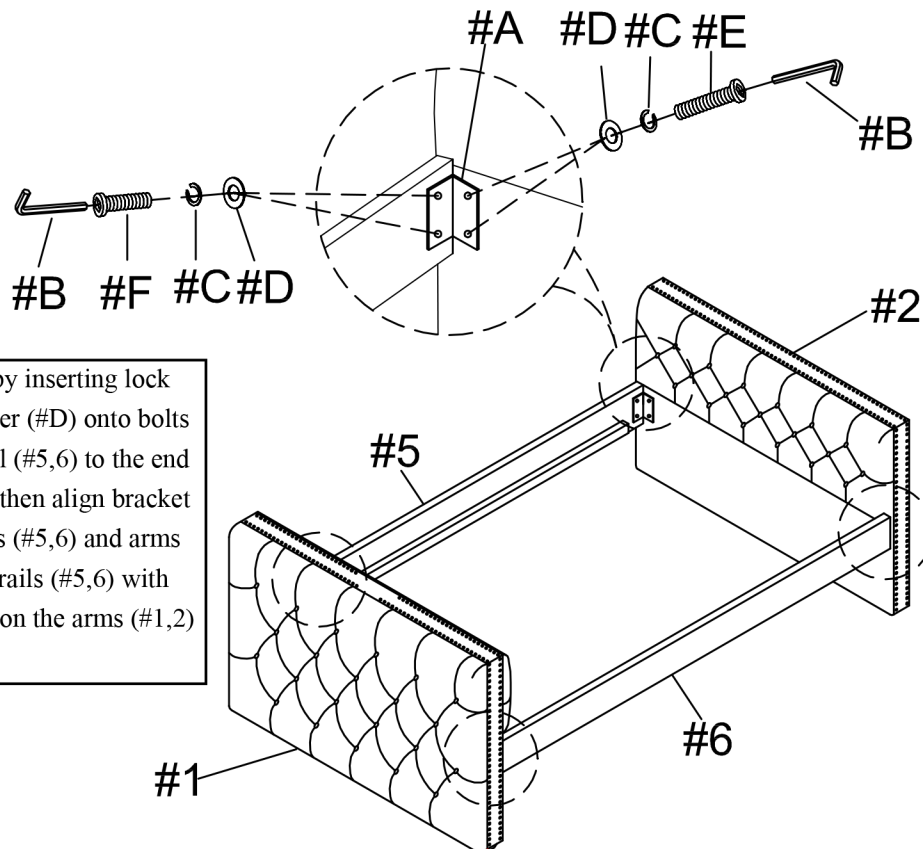

#2


#C x 4pcs
#D x 4pcs
#G x 4pcs

 Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#G). Align back rest (#3) to the holes of the arms (#1,2). Secure with bolts (#G).

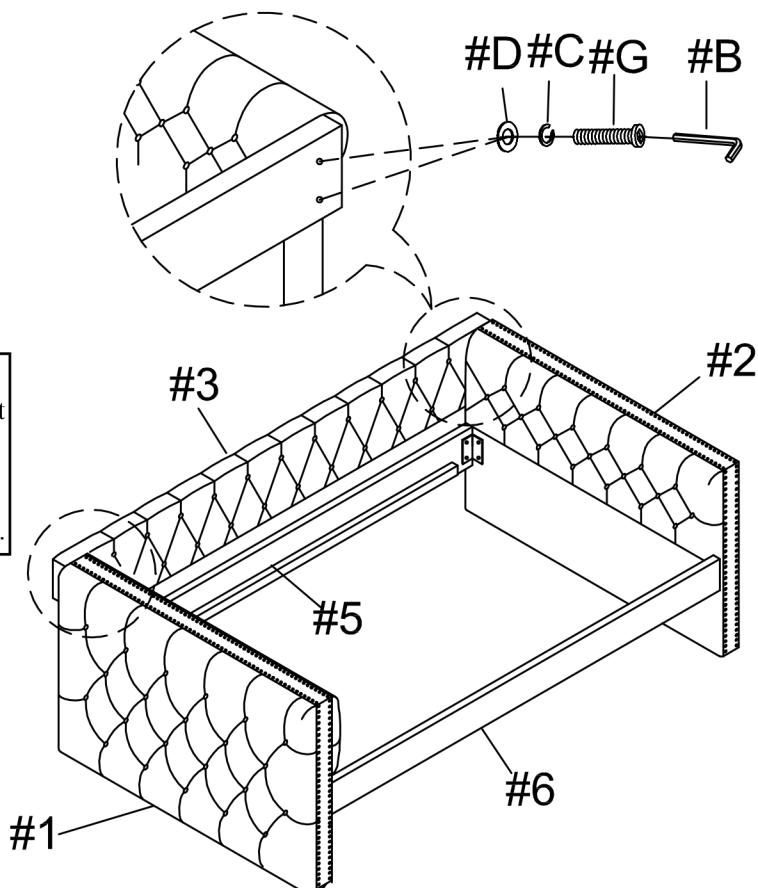




#H x 30pcs

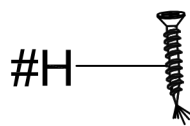 

 Align middle slat (#7) to the center of the daybed, then align slats (#4) next to the middle slat (#7). Secure with screws (#H).

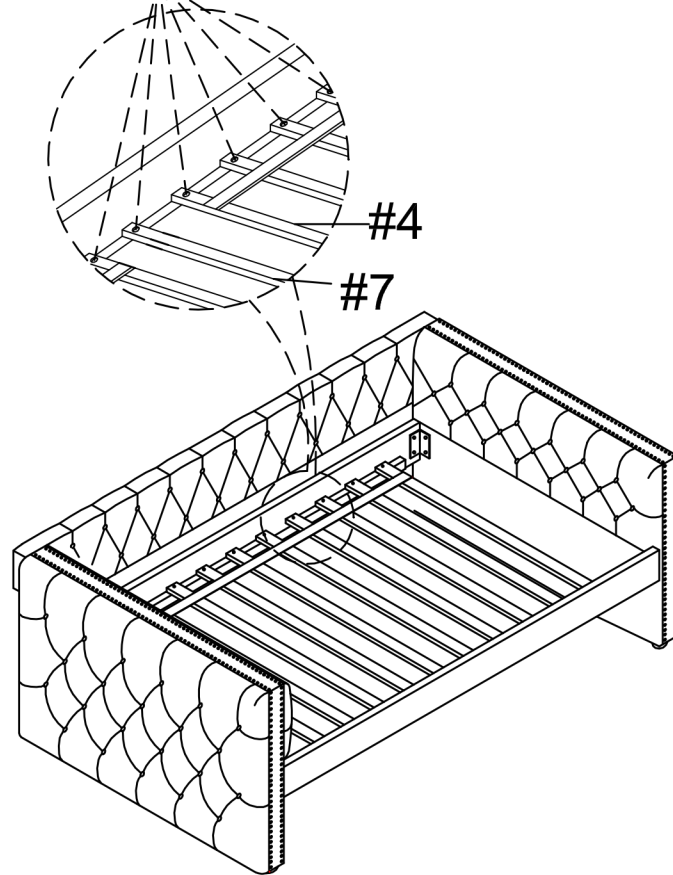

Assembly Completed

