


Assembly Manual



 
 

 
Dual Motor Layflat Power Recliner with Heat and Ventilation

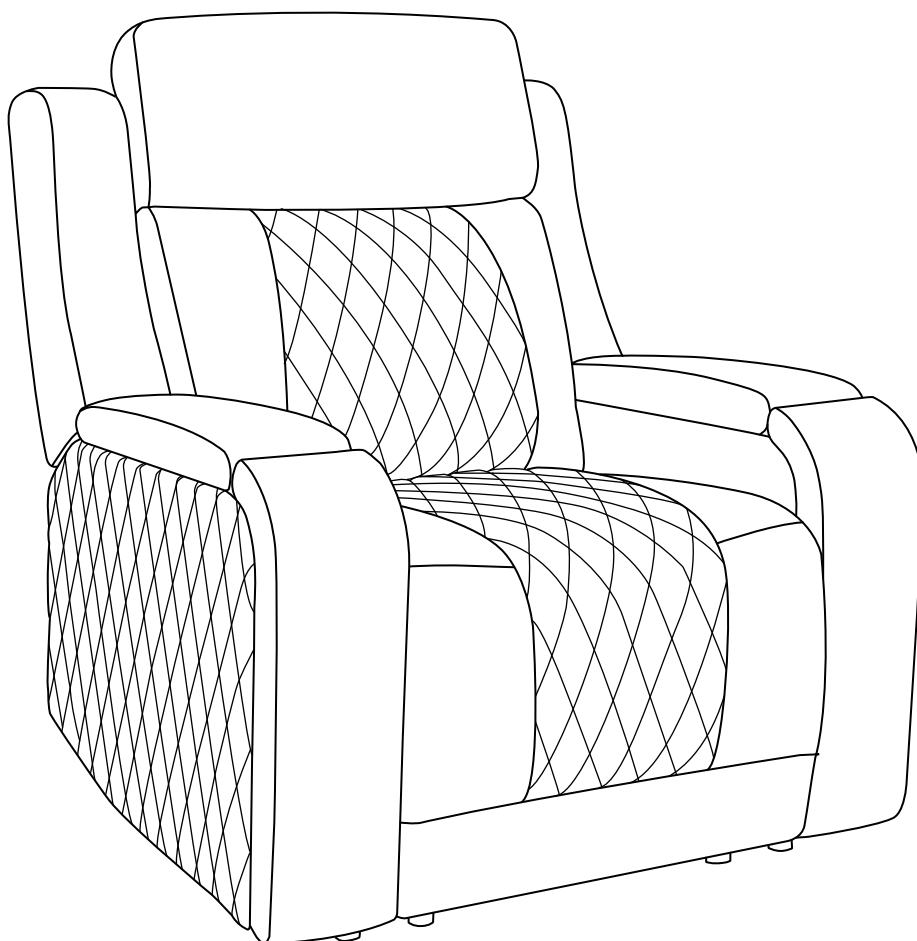

CAUTION


THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Count parts before assembling.

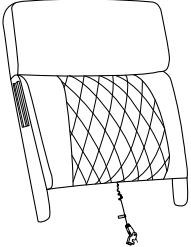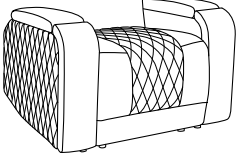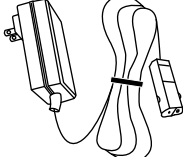A 1pc 	B 1pc 	C 1pc 
Backrest	Seat	Left Wing
D 1pc 	E 1pc 	F 2pc 
Right Wing	Power Supply	Cup holder


Step 1

Cut the plastic ties to remove the hardware pack (Includes: Power Supply (E) and Cup holders (F)). Locate the Left Wing (C) and Right Wing (D) at the bottom of the Seat (B), then take them out.

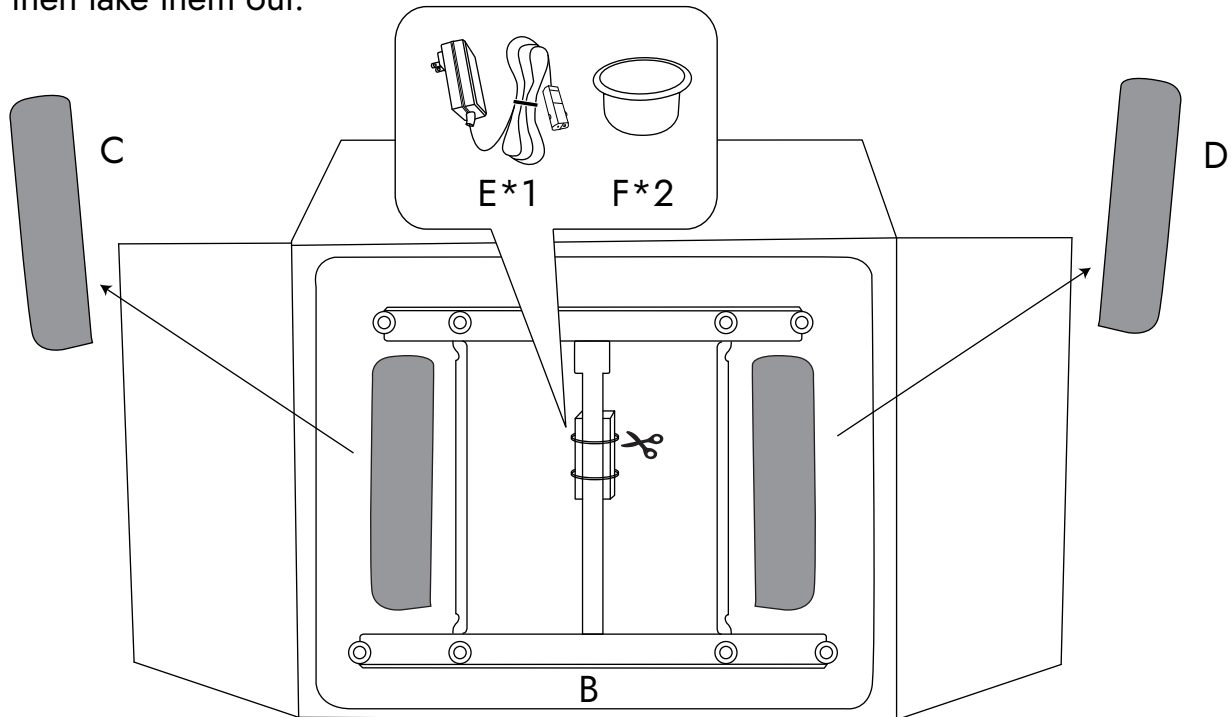


Step 2

Zip up the Backrest (A) and the Seat (B) together.

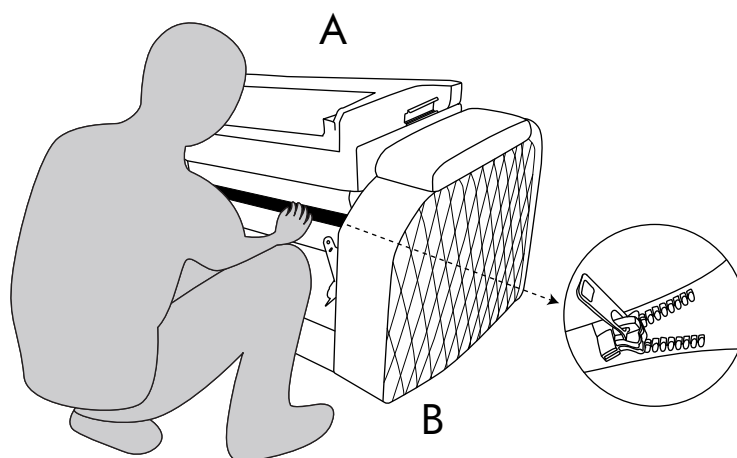


Step 3

Slide the Backrest (A) into the metallic quick connectors of the Seat (B). Push down the Backrest (A) firmly until each side is locked into place and an audible “click” is heard.

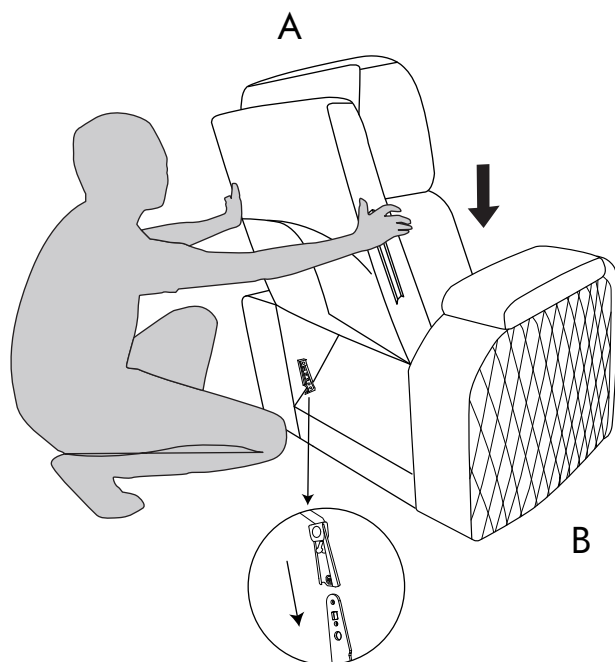


Step 4

Slide the Left Wing (C) and Right Wing (D) into the Backrest (A).

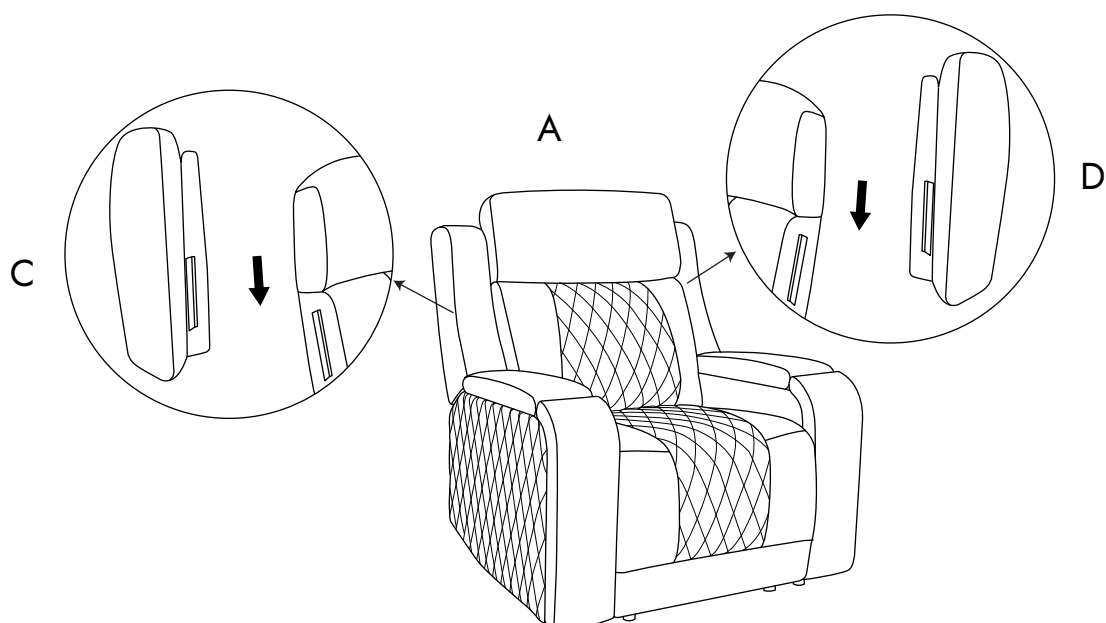


Step 5

Connect all the wires by matching the colors (green to green, red to red, and black to black) at the back of the Seat (B).

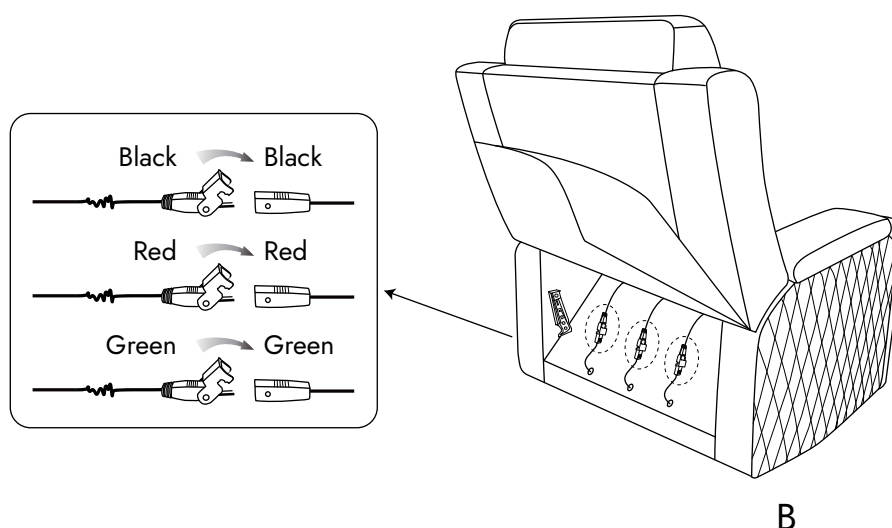


Step 6

Attach the back cover to the bottom of the Seat (B) with Velcro.

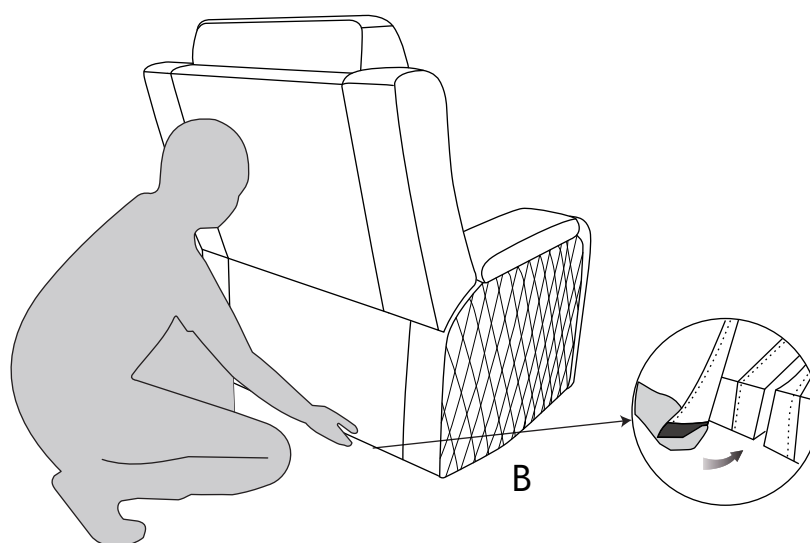


Step 7

Locate the Power Supply (E) and connect to its corresponding receiver on the base of the Seat (B).

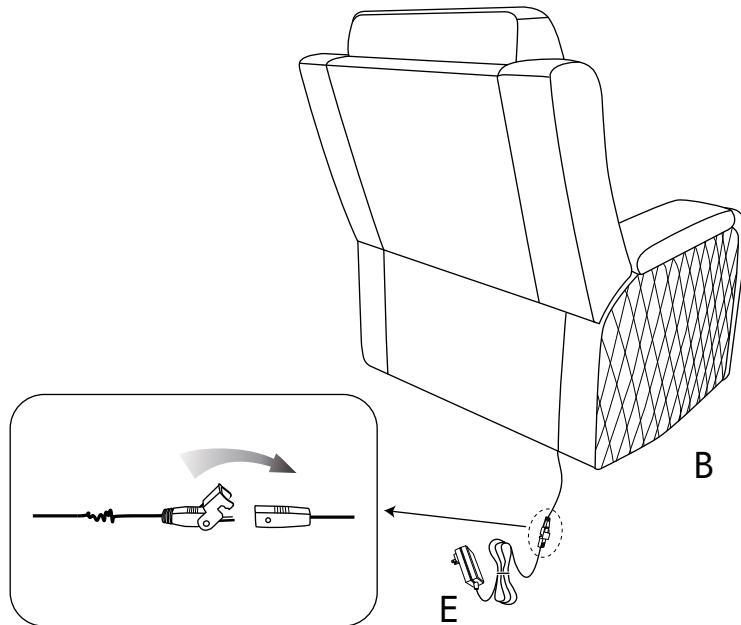


Step 8

Plug the Power Supply (E) into the power outlet.

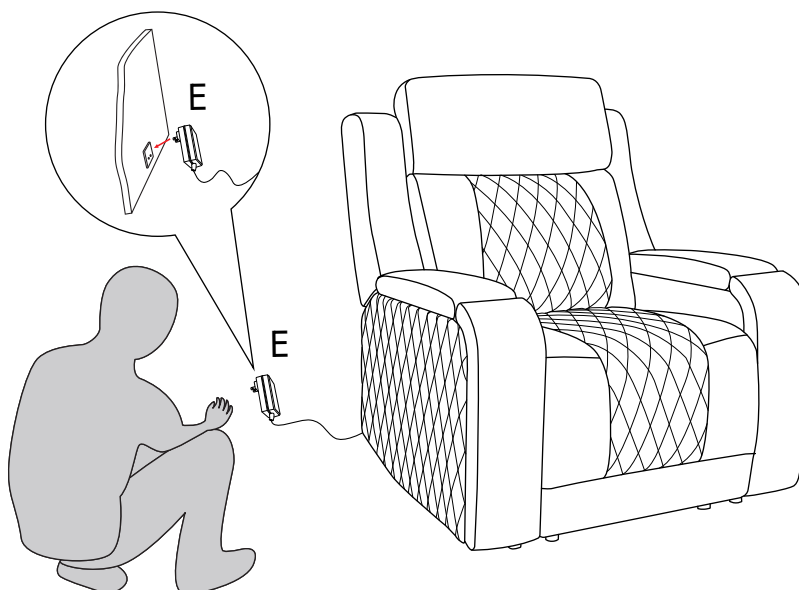

Step 9

Then you can start your adjustment of the recliner by keys inside the arms.

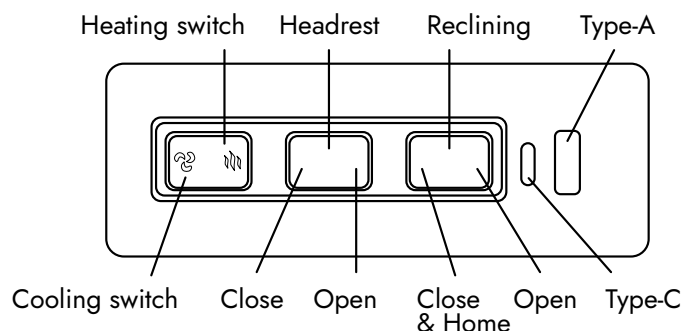

Heating and Cooling System Operating Instructions

(1). Heating on key: Quick-touch this key to turn on the heating function, continuous quick-touch this key to switch the heat intensity from high to low and switch on / off;

The red indicator light in order: High - > Medium - > Low - > Close ...

(2). Cooling on key: Quick-touch this key to turn on the fan function, continuous quick-touch this key to switch the cooling intensity from strong to weak and switch on / off;

The blue indicator light in order: Strong - > Medium - > Weak - > Close ...

(3). The system working schedule is 30 minutes. After 30 minutes, it will be off automatically.

Step 10

Open the front side of the armrest and install the cup holder (F) .

Attention: When installing the cup holder, please make sure to push it all the way in with force. When the cup holder is in a loose state, it may get stuck in the front baffle, causing the armrest to fail to open and close properly.

Then open it when you need to use it and close it when you don't.

