 
 


 

 



 
 
 
Corona Straight Computer Desk

 
 
 
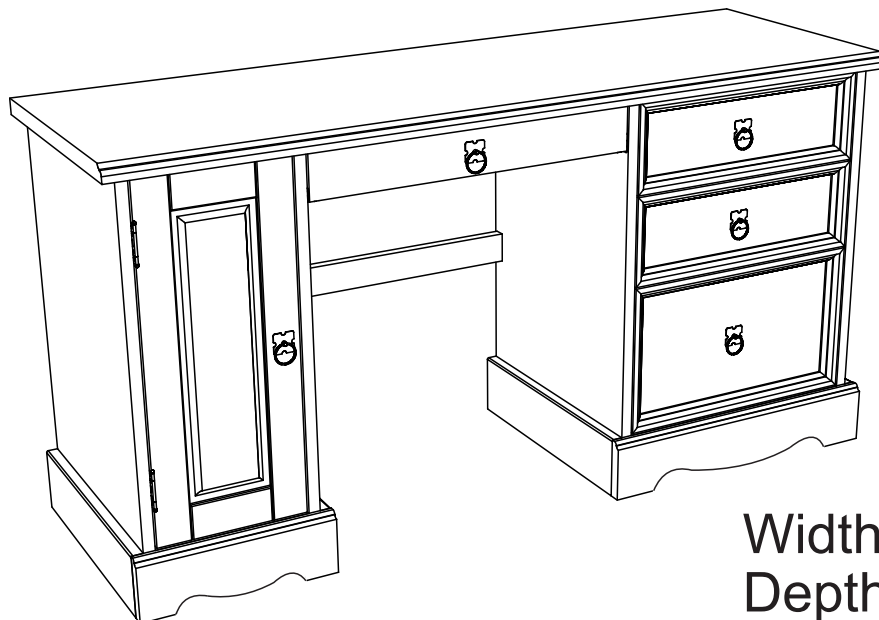 



 
 


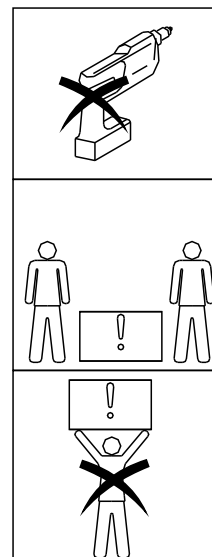


Width = 145,2
Depth = 48,2
Height = 74



- Please check that all fittings are correct before assembling the item.
- Replacement parts can be supplied for any damages to the item.
- Please keep all packaging until the item is assembled as we will require information from this if replacement parts are required.
- If you have any questions regarding the assembly of your item please call or email.






A	 Ø 8,0x25	30
B	 BLACK Ø 3,0x14	22
C	 BLACK Ø 3,5x14	04
D	 Ø 3,5x30	26
E	 Ø 4,0x25	10
F	 8x8	26
G	 BLACK	02
H	 BLACK	02
I	 BLACK	02

J	BLACK  300mm	01
K	BLACK  300mm	01
L	BLACK  300mm	01
M	BLACK  300mm	01
N	BLACK 	05
O		05
P		01
Q	 Ø 3,0x30	28
R	 Ø 8,0x20	12
S	 Ø 4,0x25	18
Y		01

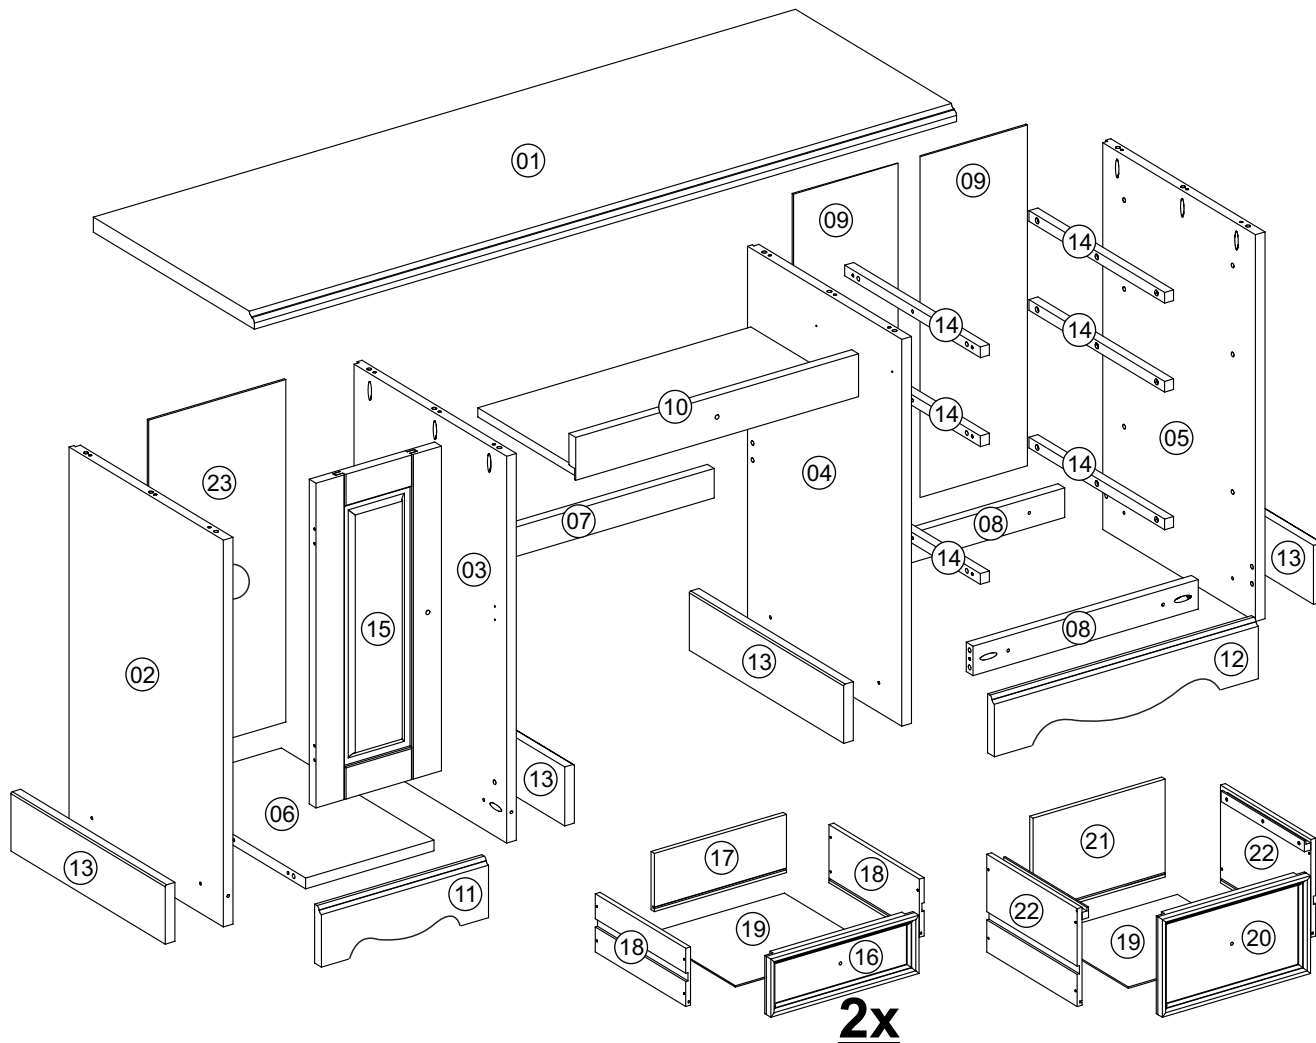 


01	Top Panel	01
02	External Left Side	01
03	Internal Left Side	01
04	Internal Right Side	01
05	External Right Side	01
06	Bottom	01
07	Large Crossbeam	01
08	Back Crossbeam	02
09	Small Back Panel	02
10	Keyboard Shelf	01
11	Small Front Foot	01
12	Large Front Foot	01


13	Side Foot	04
14	Drawer Runner	06
15	Door	01
16	Small Drawer Front	02
17	Small Drawer Back	02
18	Small Drawer Side	04
19	Drawer Bottom	03
20	Large Drawer Front	01
21	Large Drawer Back	01
22	Large Drawer Side	02
23	Back Panel	01

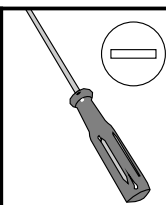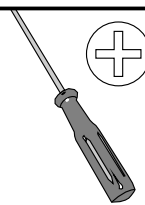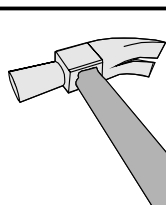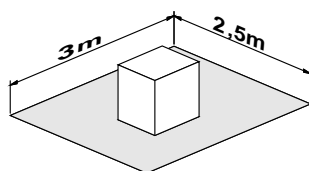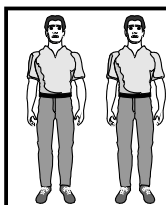     



01

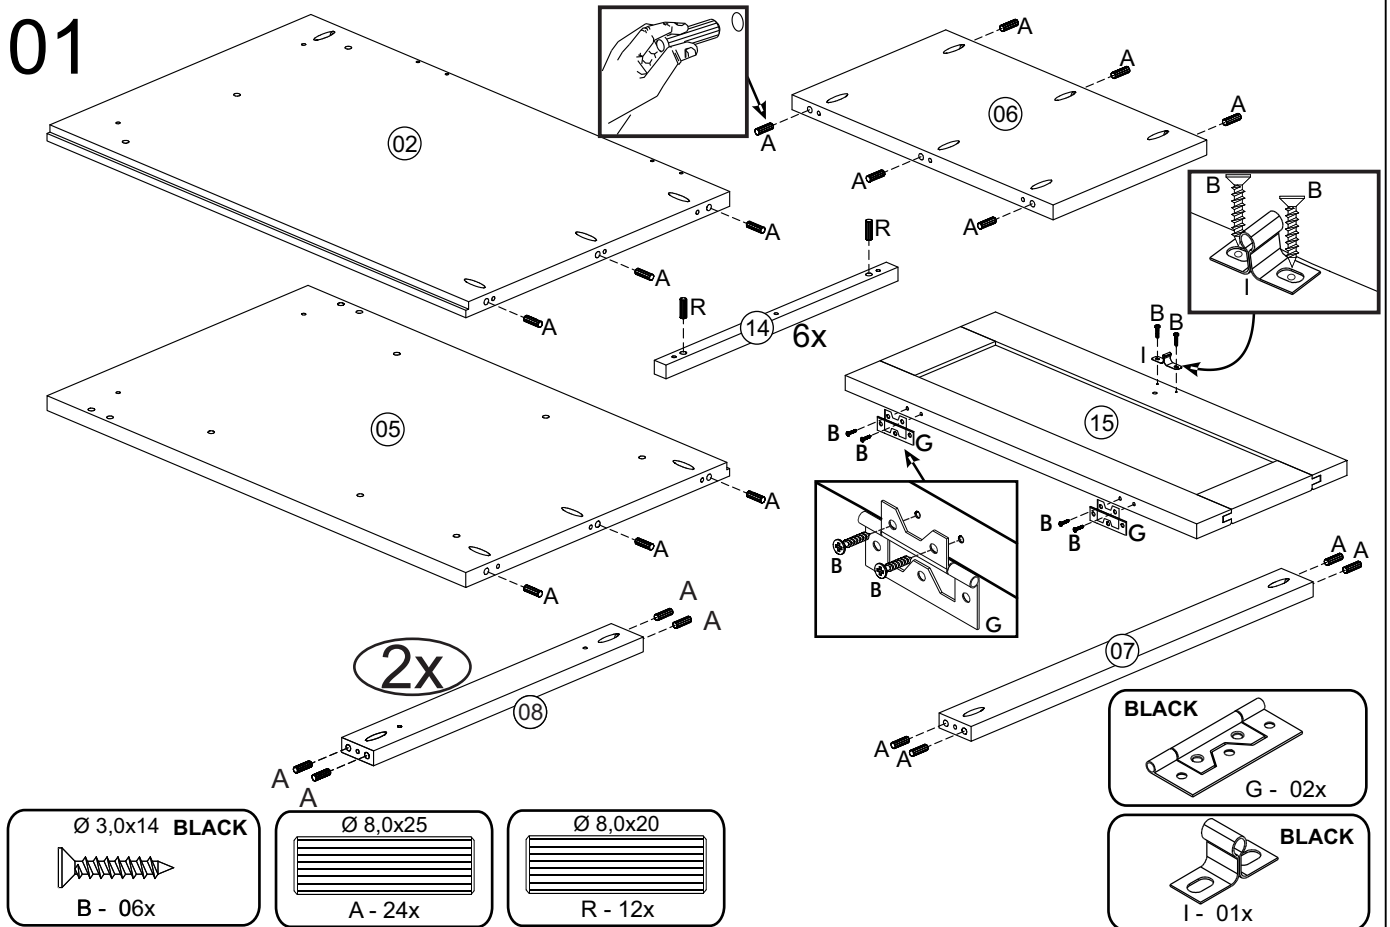 




02

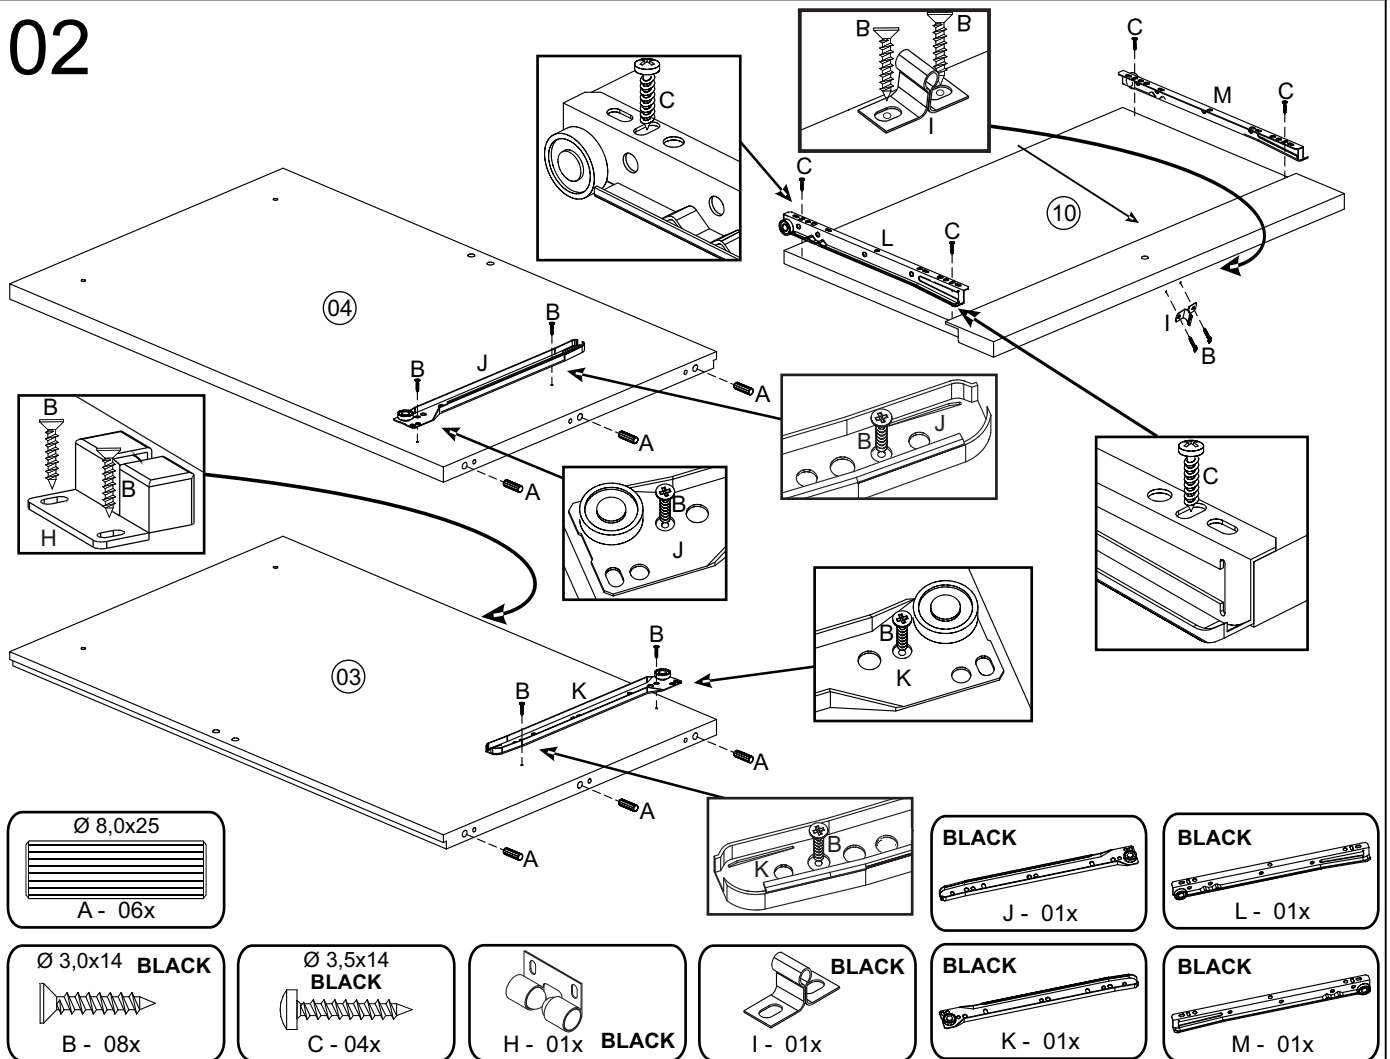 





03

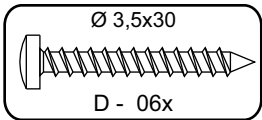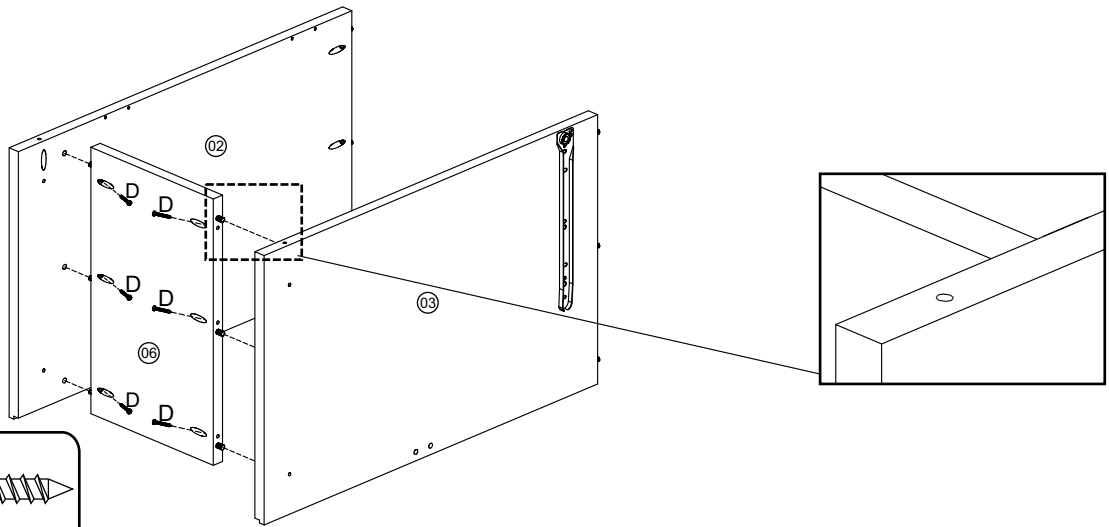  



04

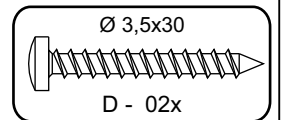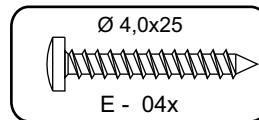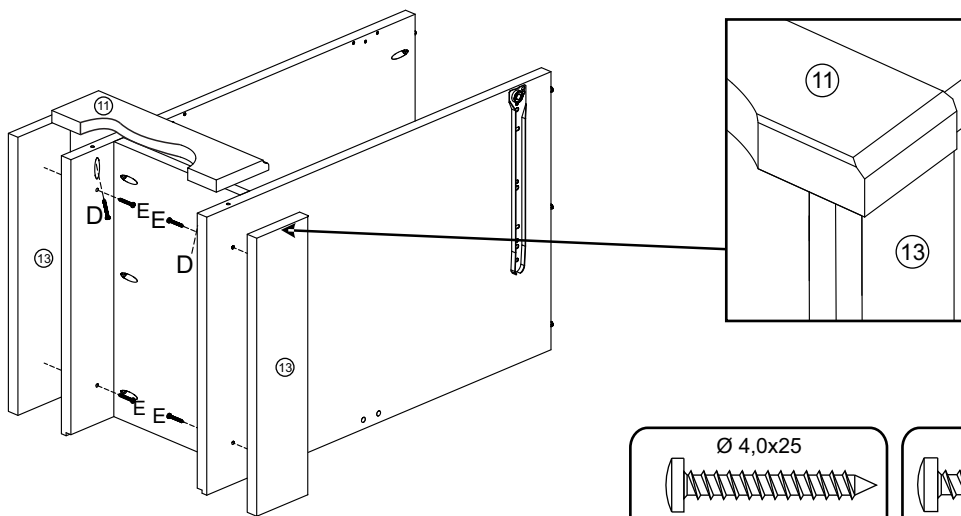   



05

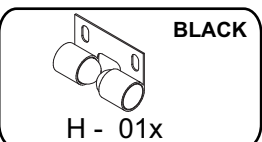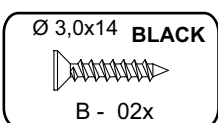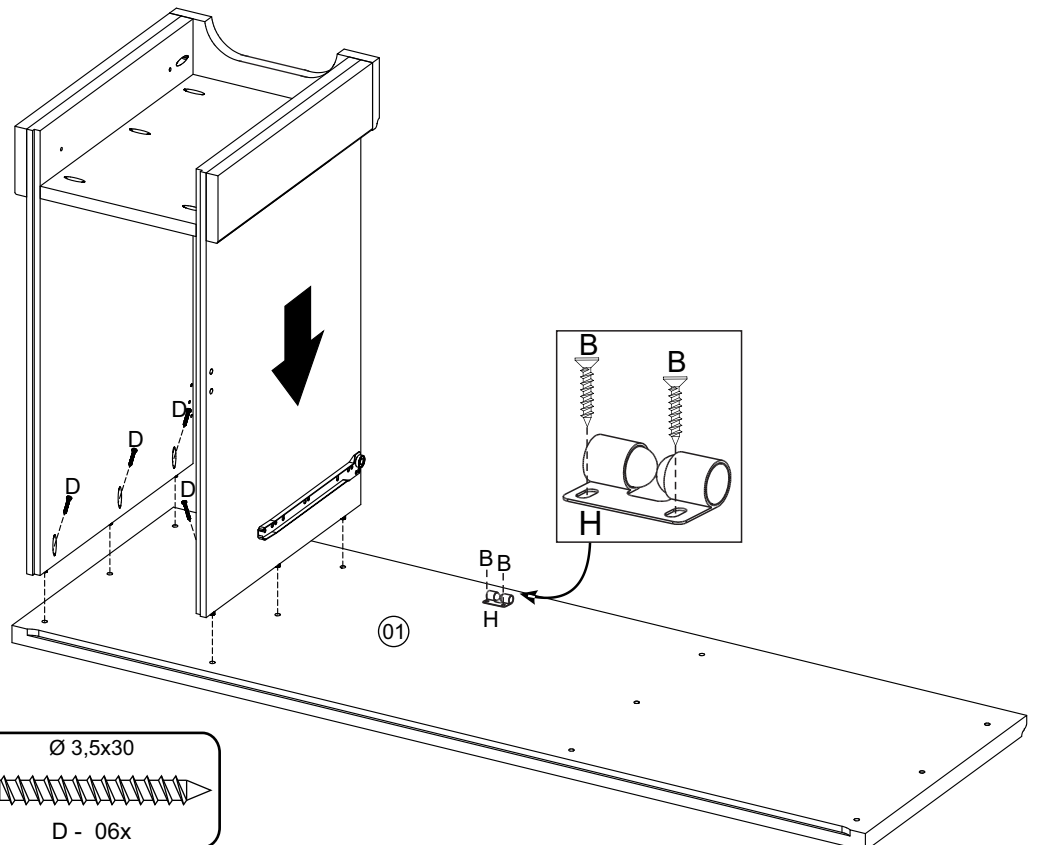    



06

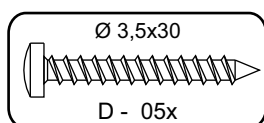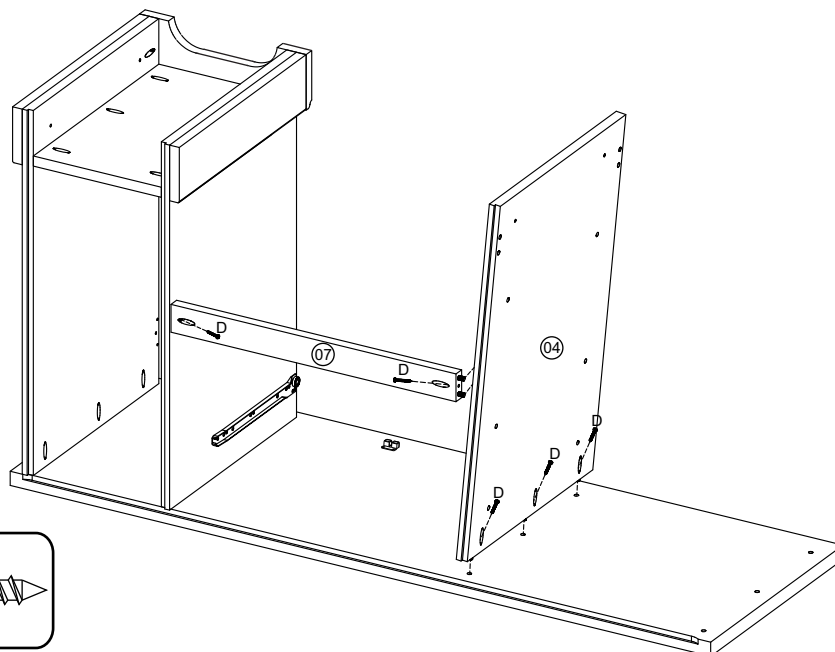  



07

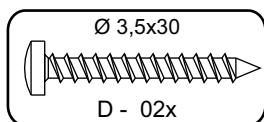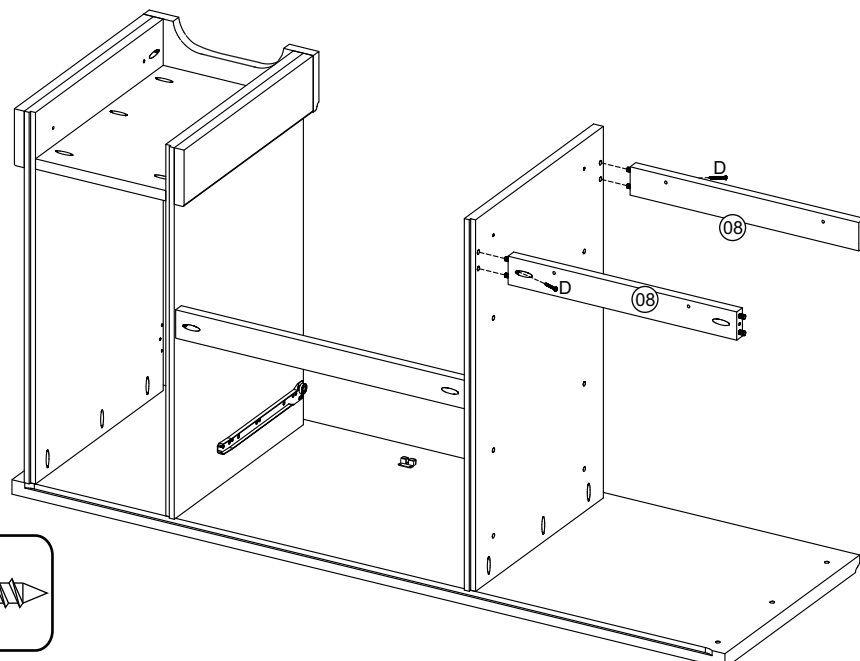  





08

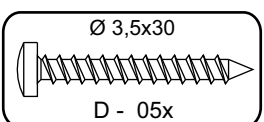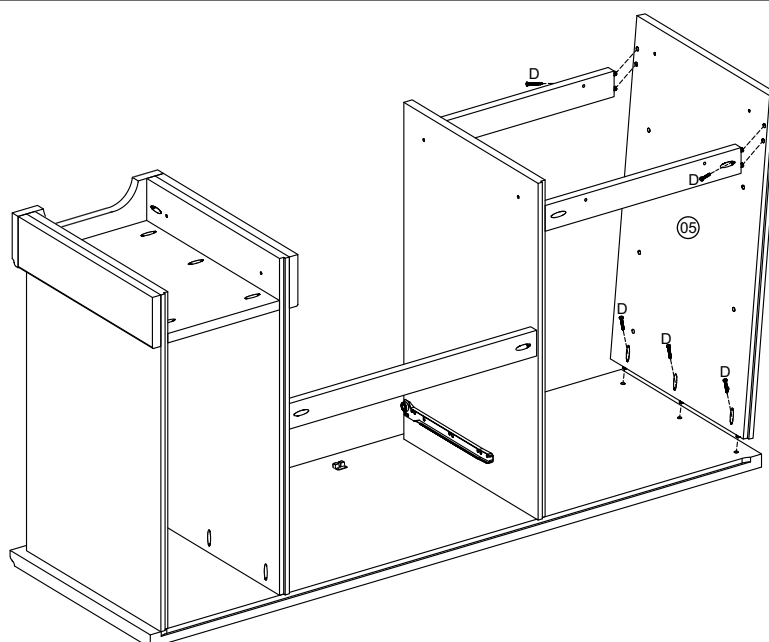  



09

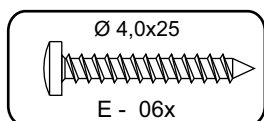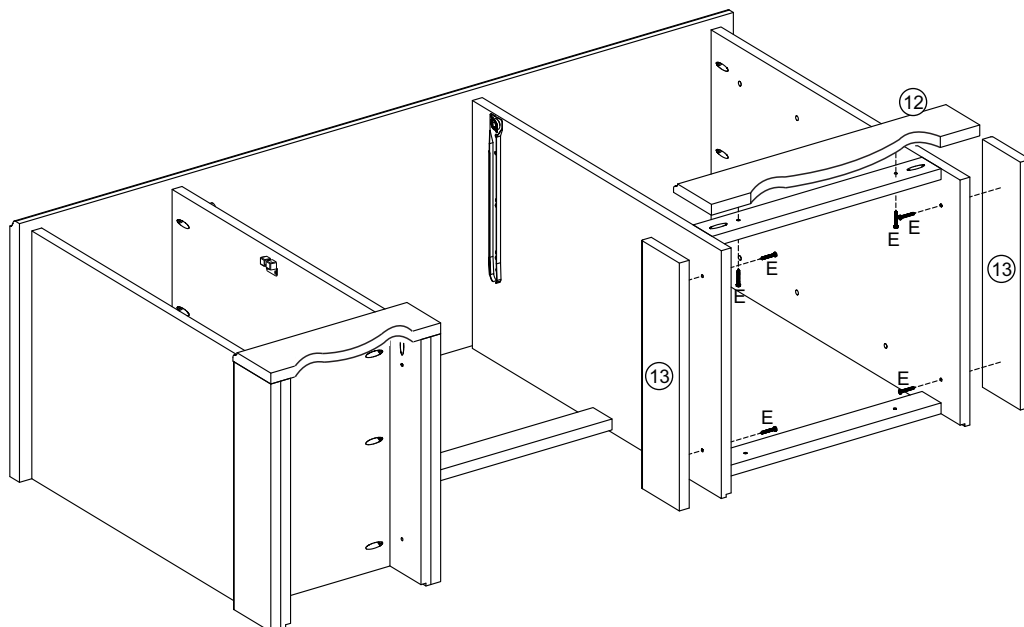  

10

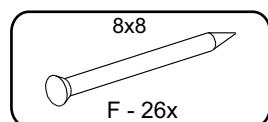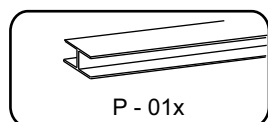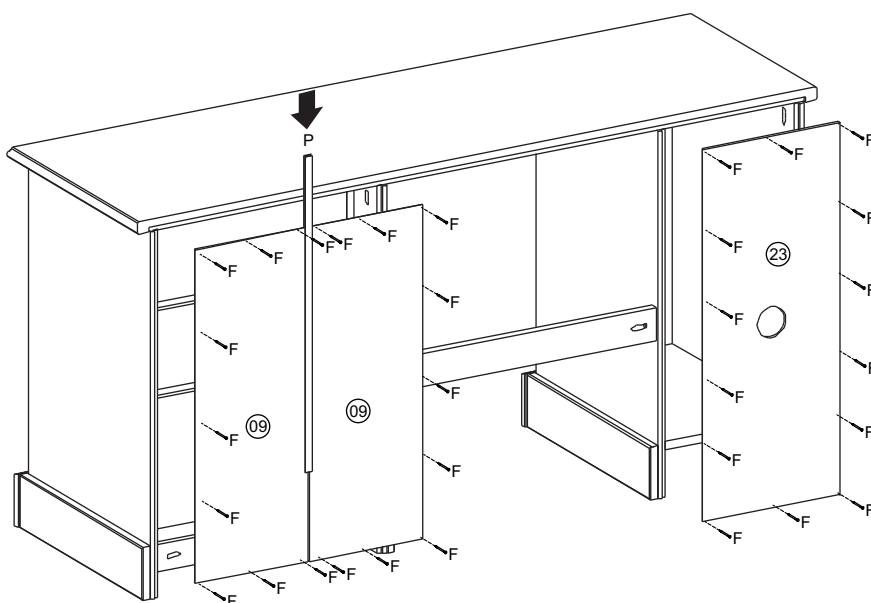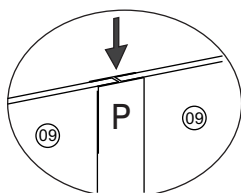    

11

 
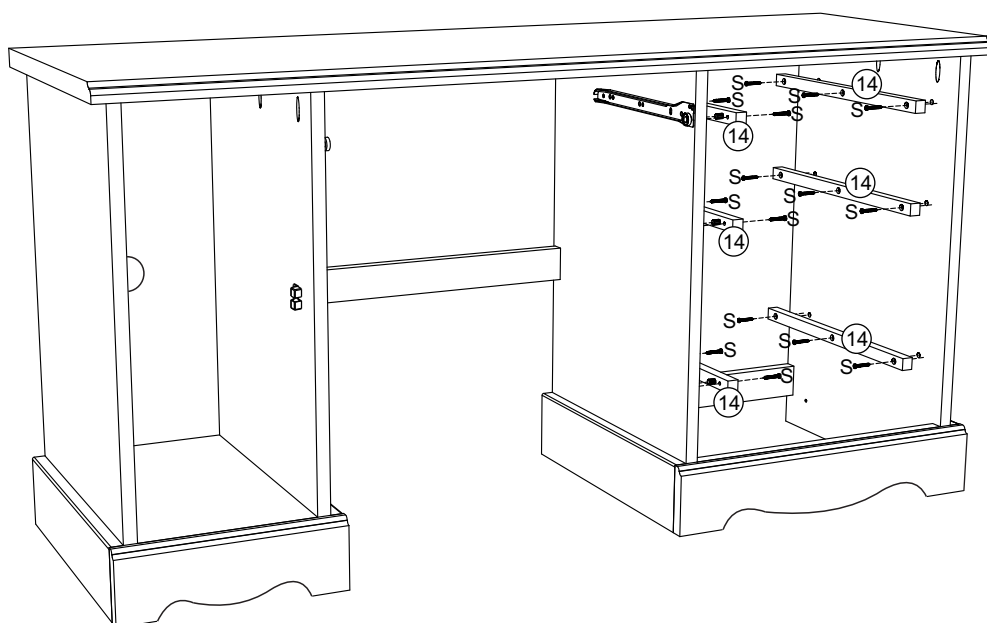 


12









Ø 3,0x14 **BLACK**



  B - 06x

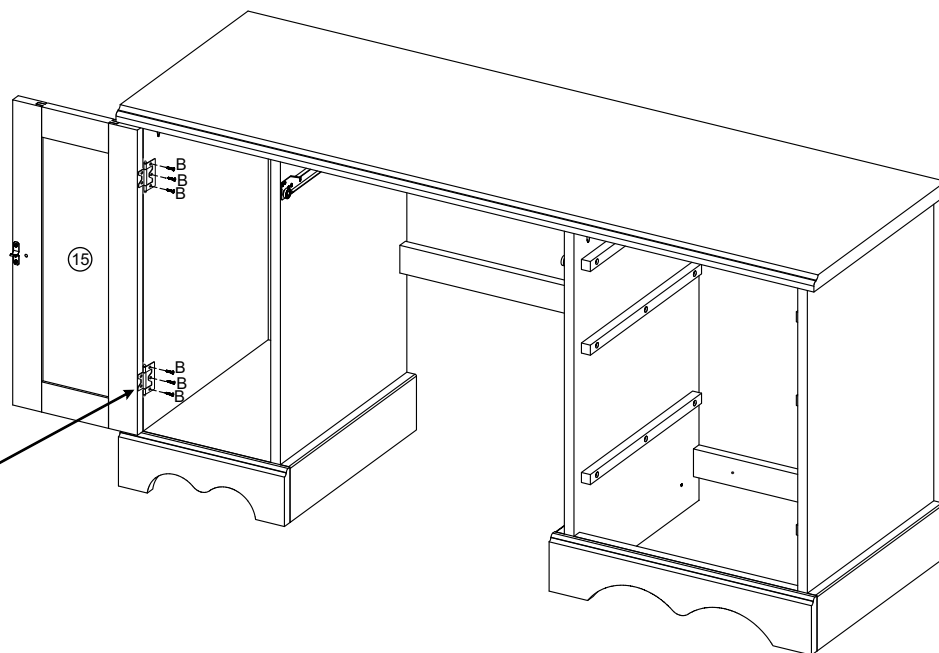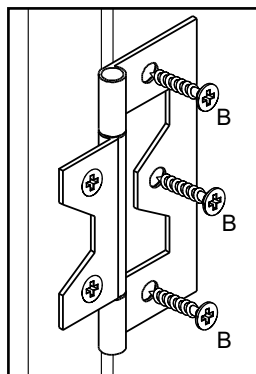


13

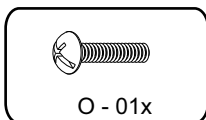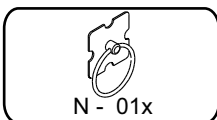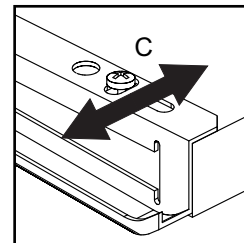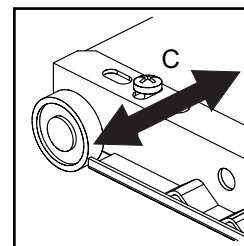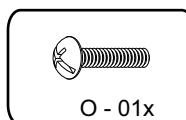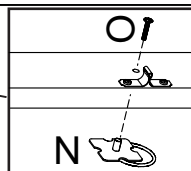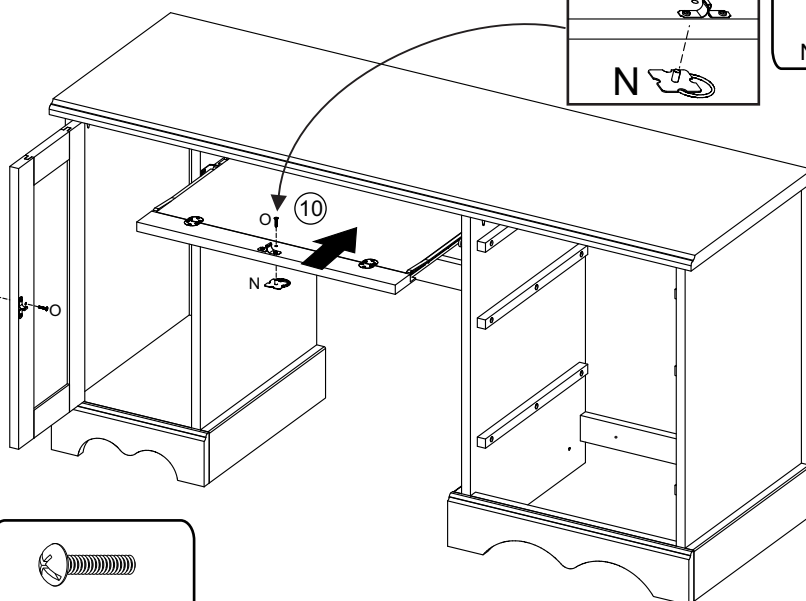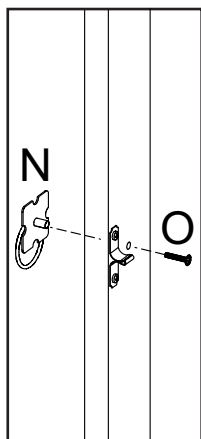        

14 - 2x

 Ø 3,0x30








Q - 16x


O - 02x



    
 
N - 02x

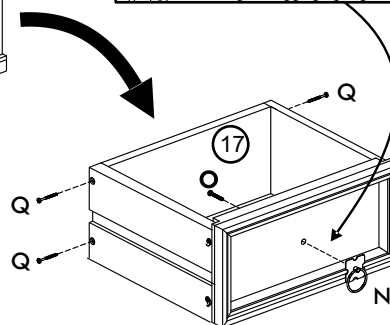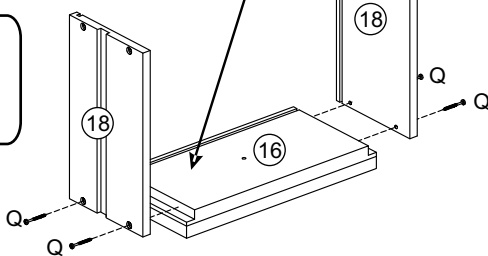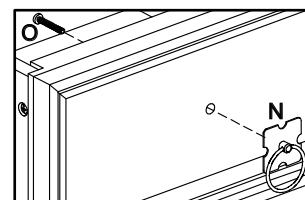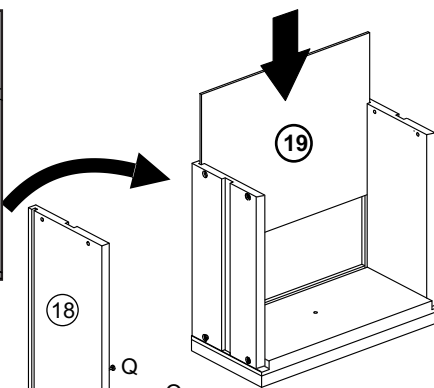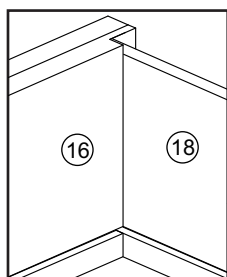



15

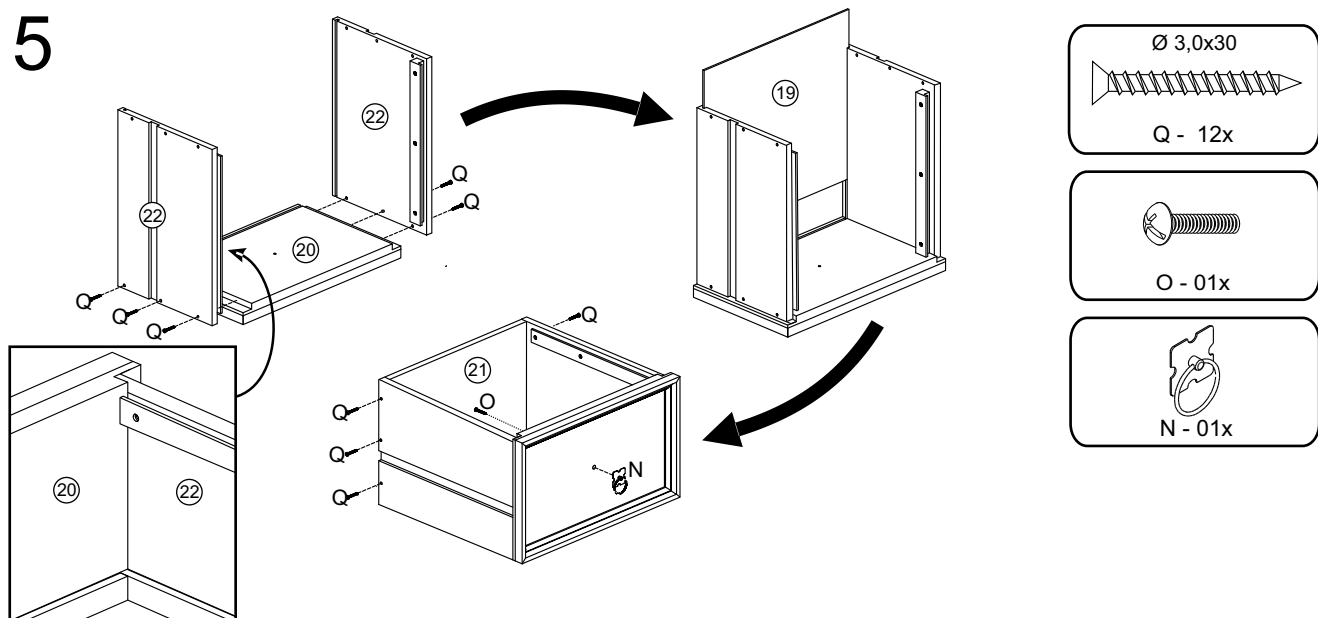 

16

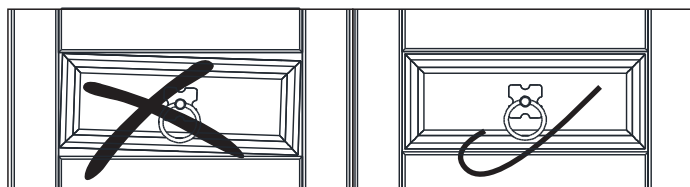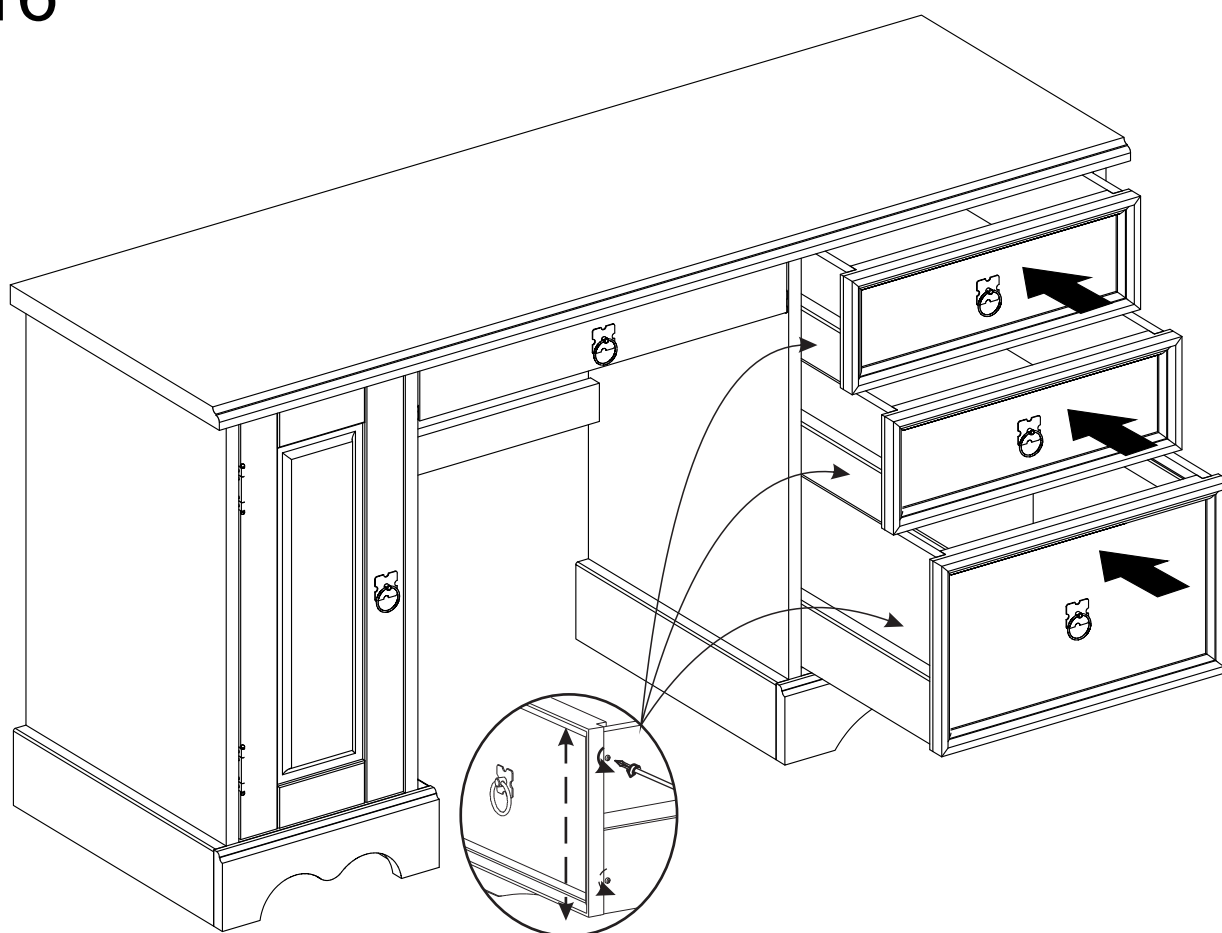  

17

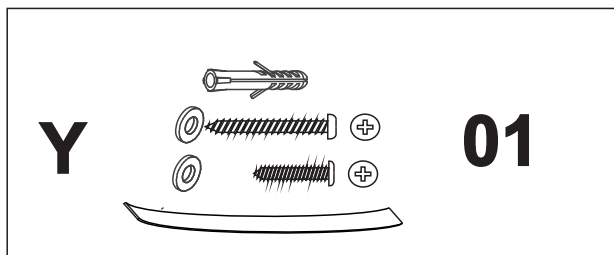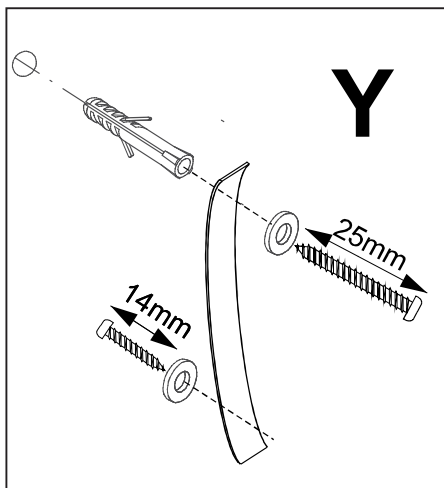  

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, IT WILL REQUIRE SPECIAL FITTINGS (NOT SUPPLIED).

- Place the fixing strip against the wall and mark the position for drilling hole.
- Drill a hole in the wall to a depth of 30mm by using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.