USER MANUAL



LP1503 Hanging LED Area Light





Operation Instructions

On/Off: Press and release green power button (opposite of the diffused lens).

Cycle Modes: Press power button repeatedly to cycle through modes (Low/Medium/High).



Battery Replacement

The LP1503 uses 3 AAA batteries. To replace the batteries, turn the black plastic base counterclockwise to loosen it, then gently pull base away from the lens to remove it. Remove the old batteries and insert new batteries according to the (+/-) symbols in the battery tubes. For best

results, we recommend using brand new alkaline batteries that are the same voltage and brand. Re-attach the base by aligning the arrow on the green ring

around the lens with the "Open" arrow printed on the base. Lightly press the lens and base together, then turn clockwise until tight.



If you know it will be a while between uses, we suggest removing the batteries from the lantern and storing it in a dry, protected place.

Product Warranty

The LP178 has a Limited 90-Day Warranty Against Manufacturer's Defects from time of purchase.

For warranty claims please contact us by calling 801-553-8886 or sending an email to info@simpleproducts.com

IUXPRO.COM 14725 S Porter Rockwell Blvd Ste C 866.553.8886 Bluffdale, UT 84065

Features

Compact-durable design

Diffused lens area light

High quality collapsible carabiner

Magnetic base

Lightweight

IPX4 waterproof rating

Batteries included (3 AAA)

	ANSI/PLATO FL1 STANDARD			
	31/2	U		
MODES	LUMENS	RUN TIME	BEAM DISTANCE	
High	118 lm	5h 15m	15m	
Medium	75 lm	9h	11m	
Low	35 lm	20h	7m	