ASSEMBLY INSTRUCTIONS MODEL: DINING CHAIR

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the curton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched. CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.


PARTS LIST (FOR 2 NOS, OF CHAIRS)

NO.	COMPONENT	QTY.
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	FRONT LEGS	4

HARDWARE LIST (FOR 2 NOS, OF CHAIRS)

NO.	DESCRIPTION		QTY
Hl	M6 x 40 JCBC SCREW	(Constant)	4
H2	M6 x 60 JCBC SCREW	() menumen	8
НЗ	M6 x 80 JCBC SCREW	0	8
H4	SPRING WASHER	9	20
H5	FLAT WASHER	0	20
H6	ALLEN KEY	7	1
H7	NAIL LEG	-0	8



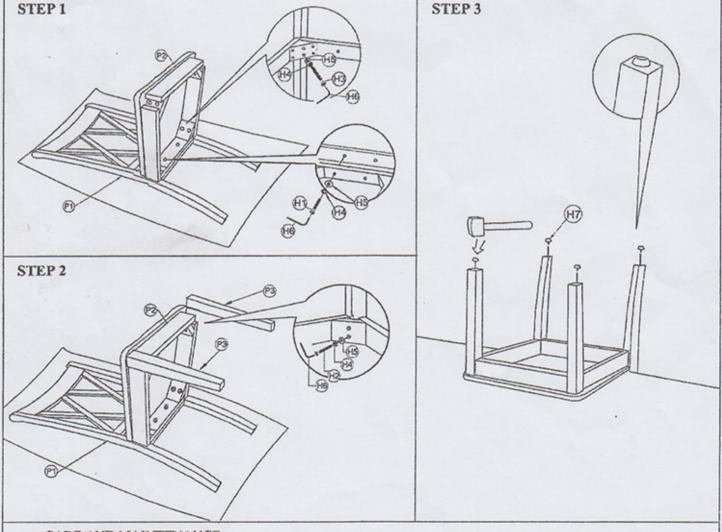

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.

CLEANING

 Clean with damp cloth and mild detergent. Do not use bleech or abrasive products.
Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted. FITTINGS