 


Assembly Instructions

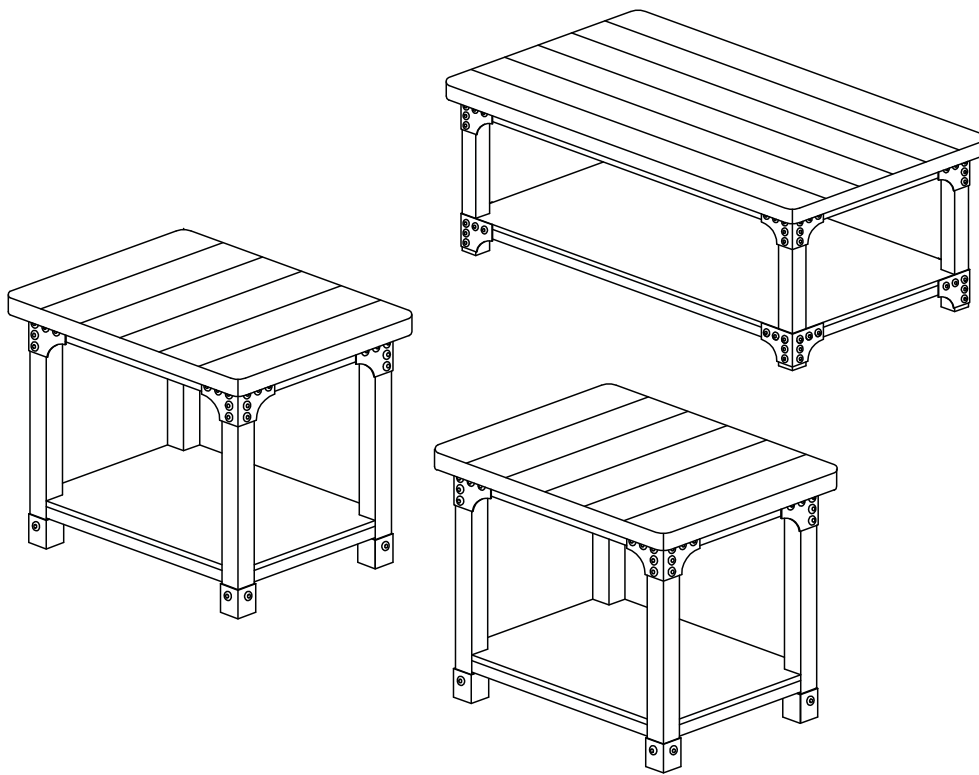 


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

Tools Required For Assembly:


Allen Wrench



EASY



 DIFFICULT

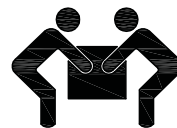


2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 BASIC ASSEMBLY TECHNIQUES

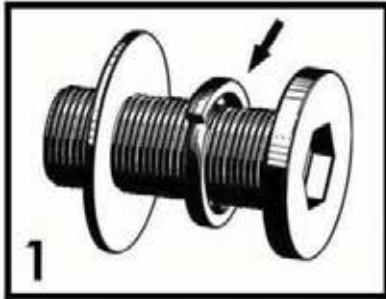


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

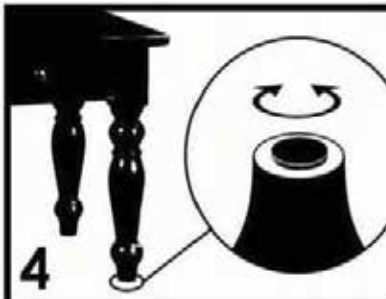

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

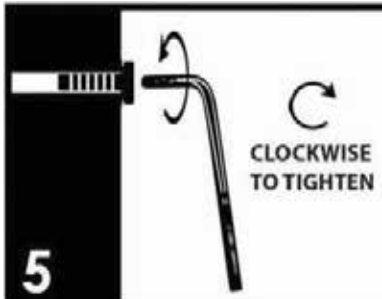


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

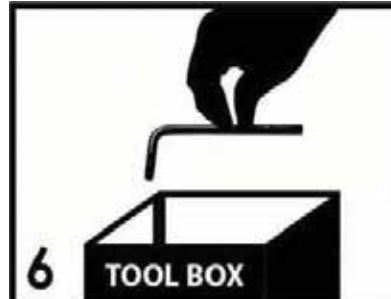

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

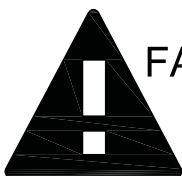


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 
Parts List

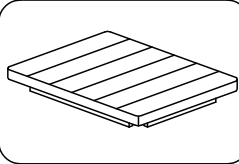


#1 x 2pcs
End table top

 


#2 x 8pcs
End table leg

 


#3 x 2pcs
End table shelf

 

#4 x 1pc
Coffee table top

 


#5 x 4pcs
Coffee table Leg

 

#6 x 1pc
Coffee table shelf

 Hardware List



#A x 36pcs
Bolt 1/4"X2-3/8"



#B x 36pcs
Lock Washer



#C x 36pcs
Flat Washer



#D x 1pc
Allen Wrench



#1

 
#Ax6pcs
#Bx6pcs
#Cx6pcs

1. Carefully place the end table top (#1) face down onto a protected surface.

2. Prepare 4 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).

X2

3. Align the top of 3 end table legs (#2) to corner holes on the end table top (#1). Then insert 2 bolt assemblies into each corner and secure using the Allen wrench (#D).

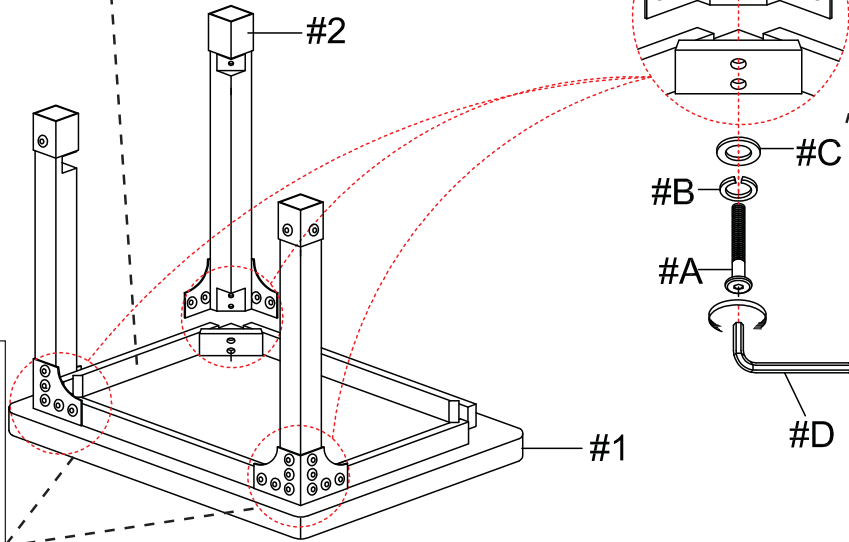


#2

#Ax3pcs
#Bx3pcs
#Cx3pcs

2. Align the end table shelf (#3) to the holes along the top of three end table legs (#2), then insert a bolt assembly into each corner and secure using the Allen wrench (#D).

 1. Prepare 3 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).



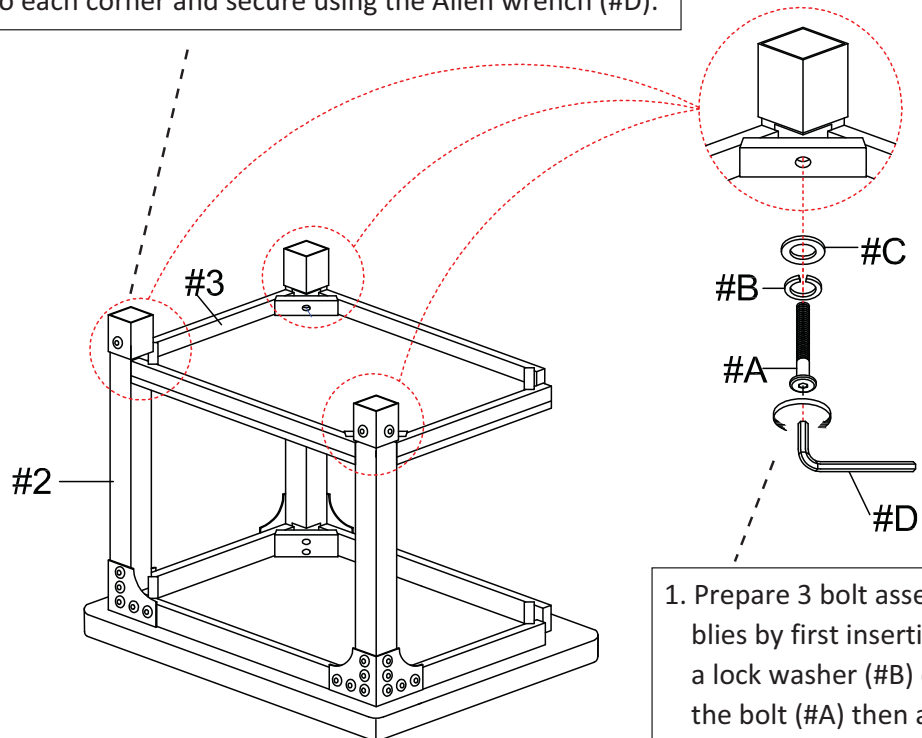




#Ax3pcs
#Bx3pcs
#Cx3pcs

1. Prepare 3 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).

   2. Align the fourth leg (#2) to the last corner. Insert a bolt assembly to the top corner and 2 into the bottom corner. Secure using the Allen wrench (#D).

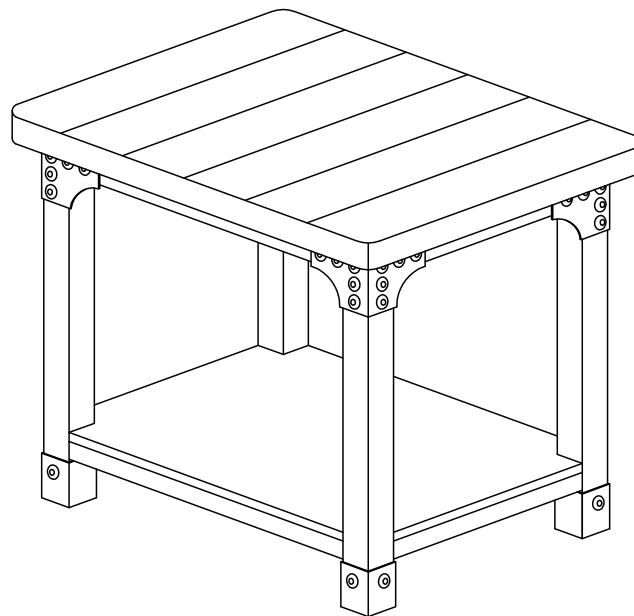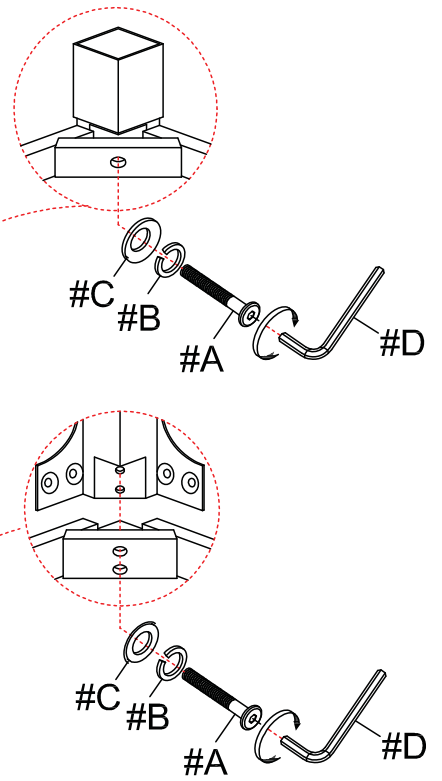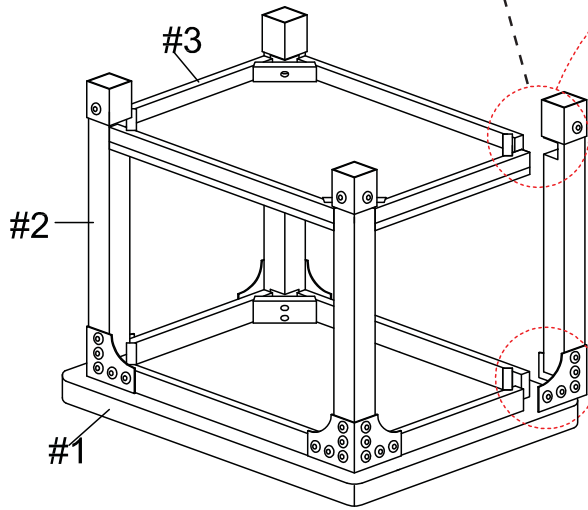


ASSEMBLY IS COMPLETED



#Ax6pcs
#Bx6pcs
#Cx6pcs

 1. Carefully place the coffee table top (#1) face down onto a protected surface.

2. Prepare 4 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).

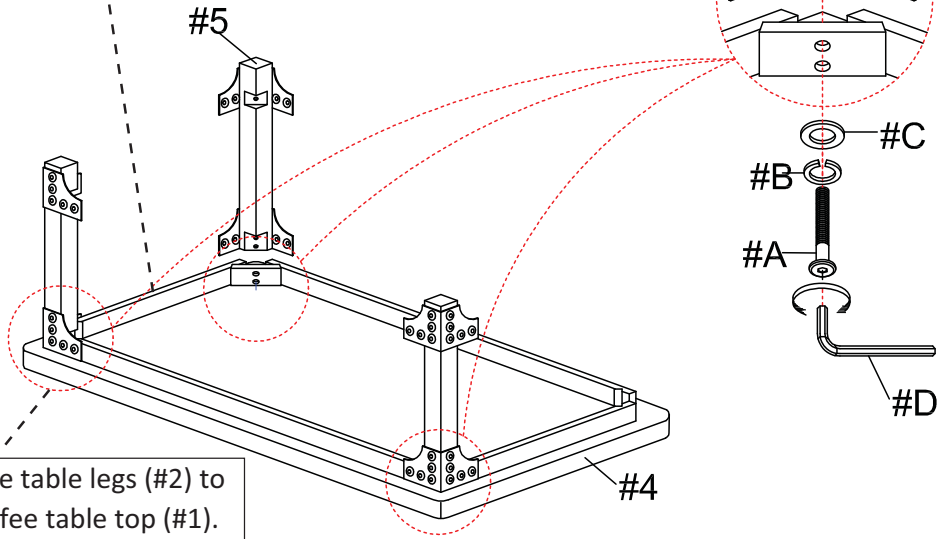


3. Align the top of 3 coffee table legs (#2) to corner holes on the coffee table top (#1). Then insert 2 bolt assemblies into each corner and secure using the Allen wrench.



#Ax3pcs
#Bx3pcs
#Cx3pcs

 2. Align the coffee table shelf (#3) to the holes along the top of three legs (#2), then insert a bolt assembly into each corner and secure using the Allen wrench (#D).

1. Prepare 3 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).


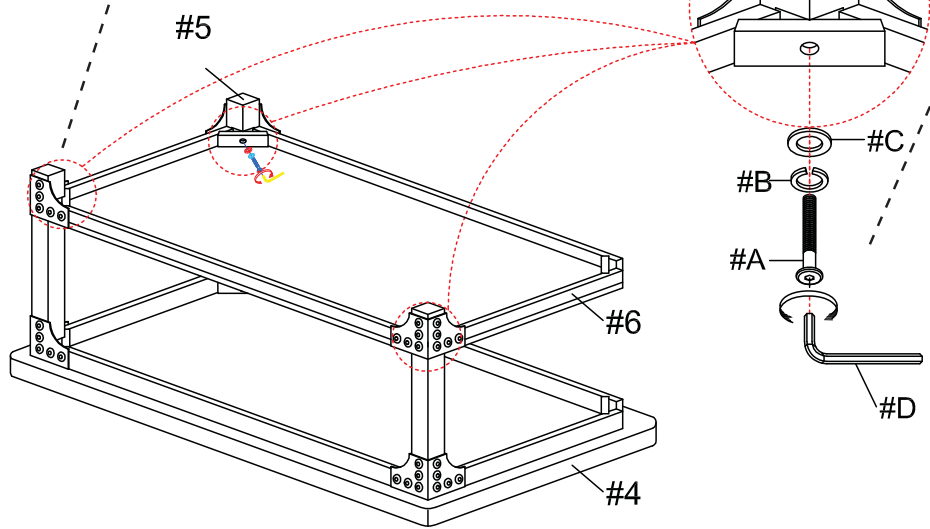




#Ax3pcs
#Bx3pcs
#Cx3pcs

1. Prepare 3 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).

  2. Align the fourth leg (#2) to the last corner. Insert a bolt assembly to the top corner and 2 into the bottom corner. Secure using the Allen wrench (#D).

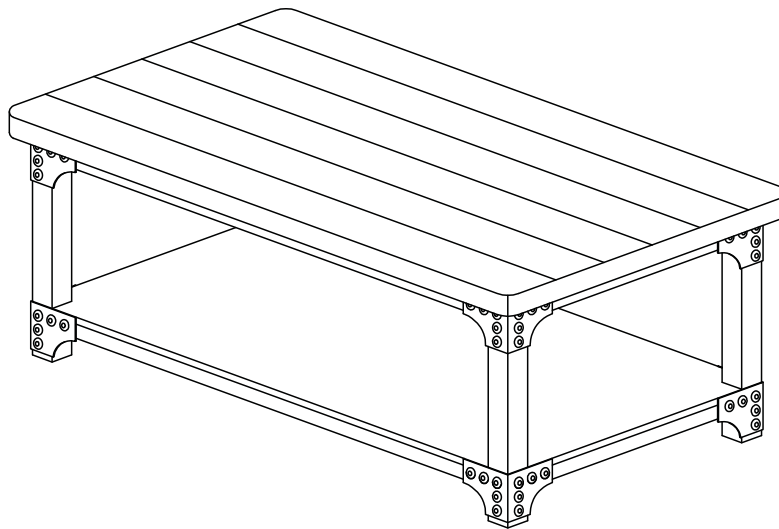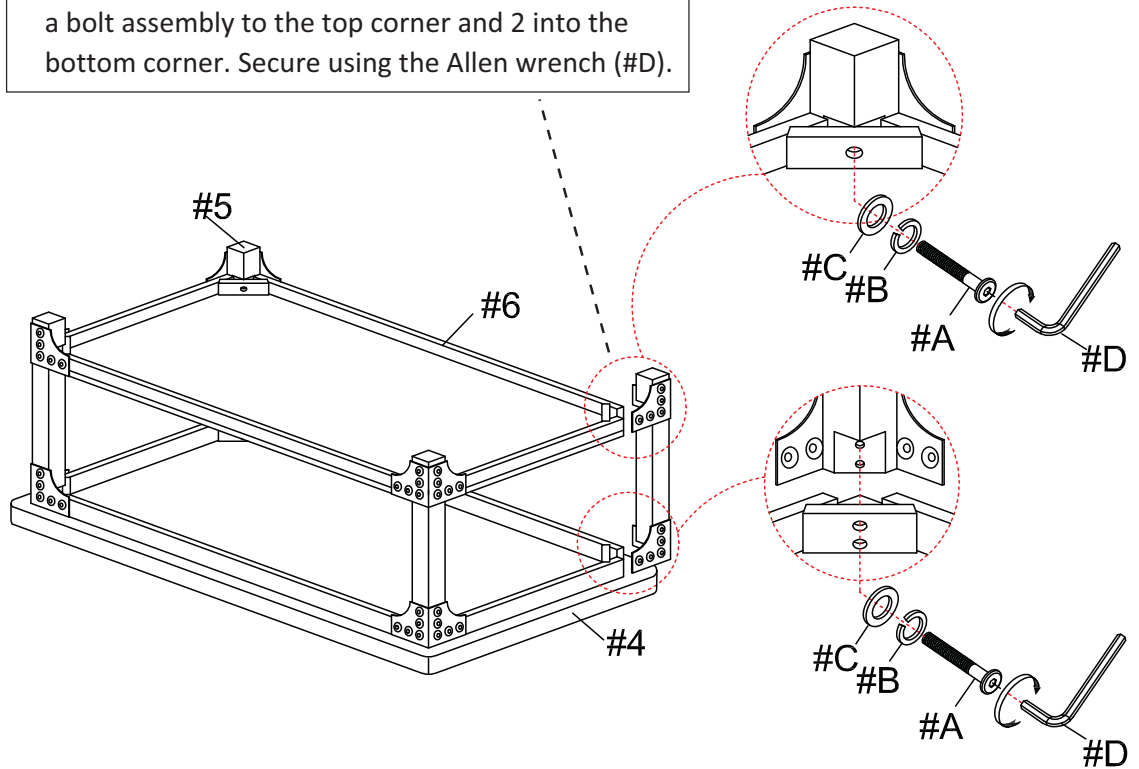

ASSEMBLY IS COMPLETED