 
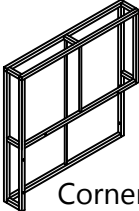 
 
 
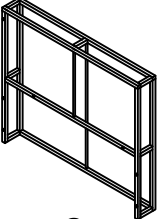 
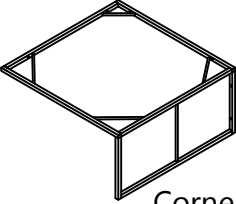 
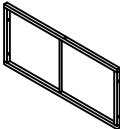 
 
 
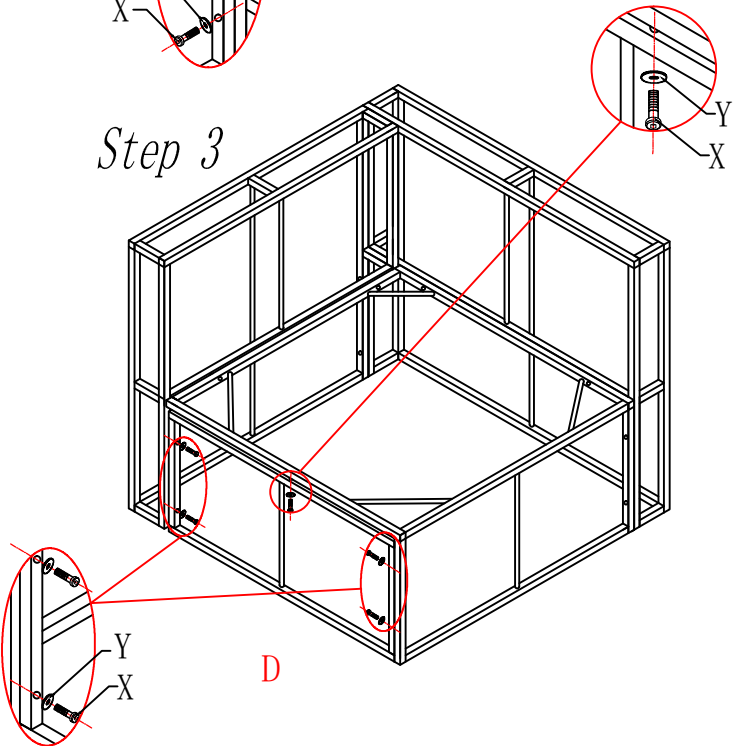 
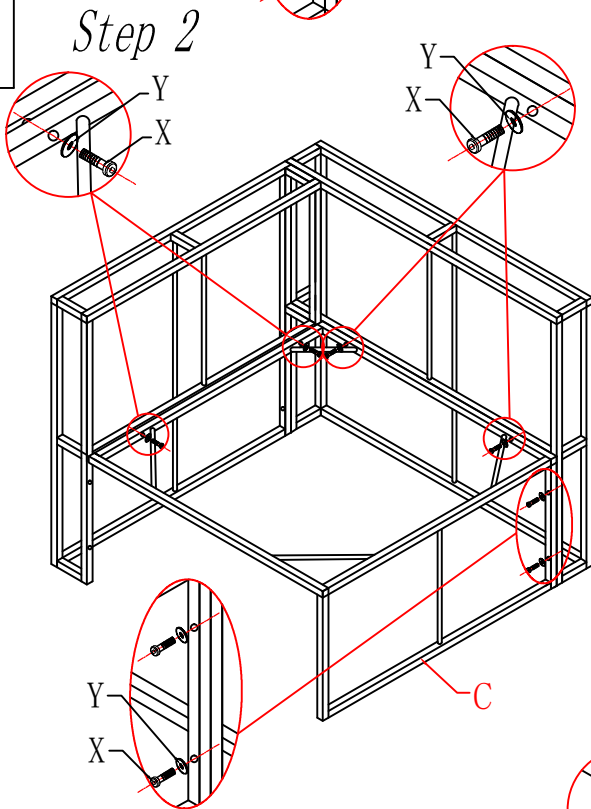 
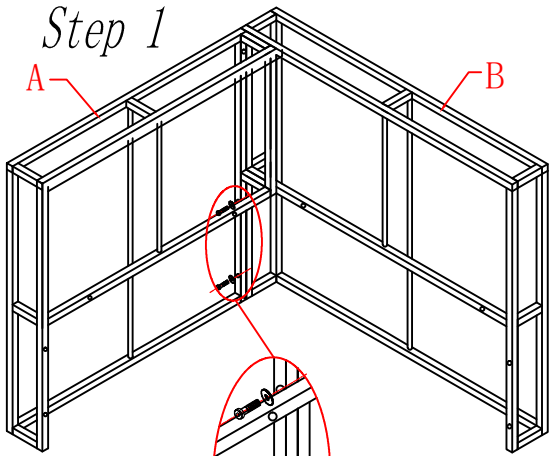 









ASSEMBLY INSTRUCTIONS

A	 Corner Back	1	 63*63*8CM	1
			 32*63*10CM	1
			 32*50*10CM	1
			 45*45CM	1
B	 Corner Armrest	1		
C	 Corner Seat	1		
D	 Side Board	1		
X	 M6*35	13		
Y		13		
Z		1		


Corner Sofa

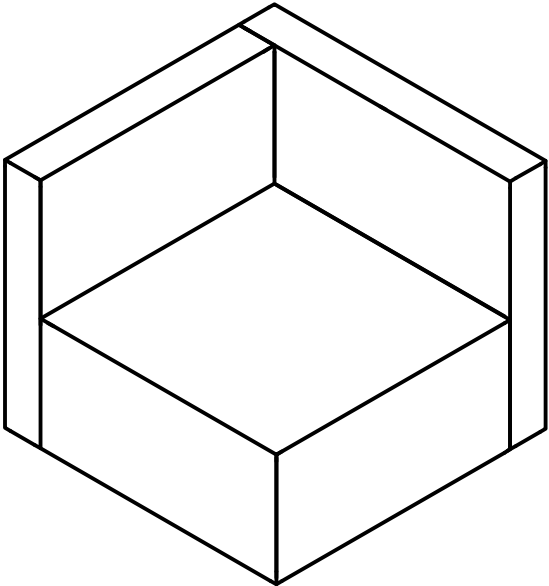

       ASSEMBLY INSTRUCTIONS

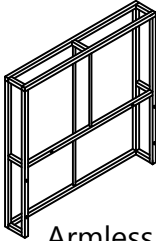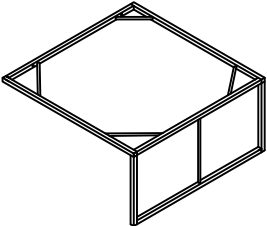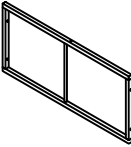


E	 Armless Back	1	 63*63*8CM	1
			 32*63*10CM	1
F	 Armless Seat	1		
D	 Side Board	2		
X	 M6*35	12		
Y	 	12		
Z	 	1		

 Armless sofa

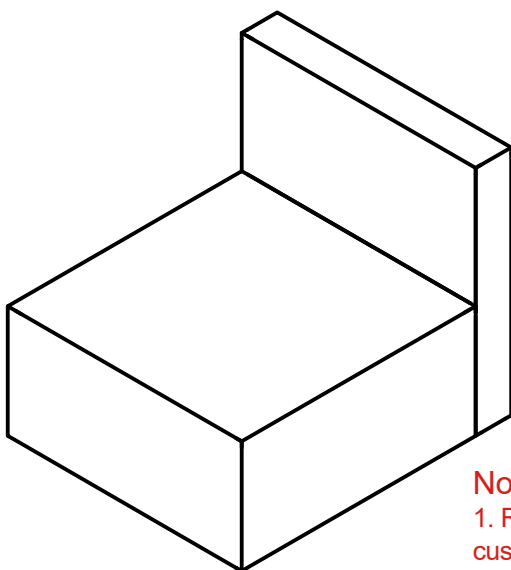

Notice:

   1. Remove the sponge from the cushion when washing.
2. Hand wash only. The washing machine and brush harm the fabric.

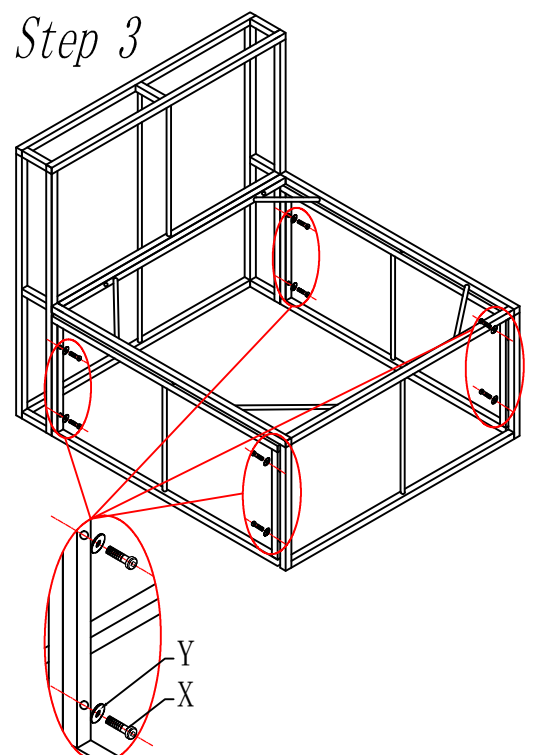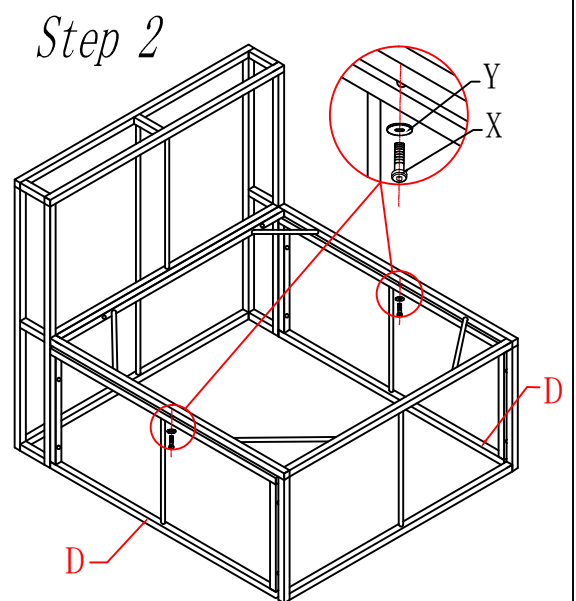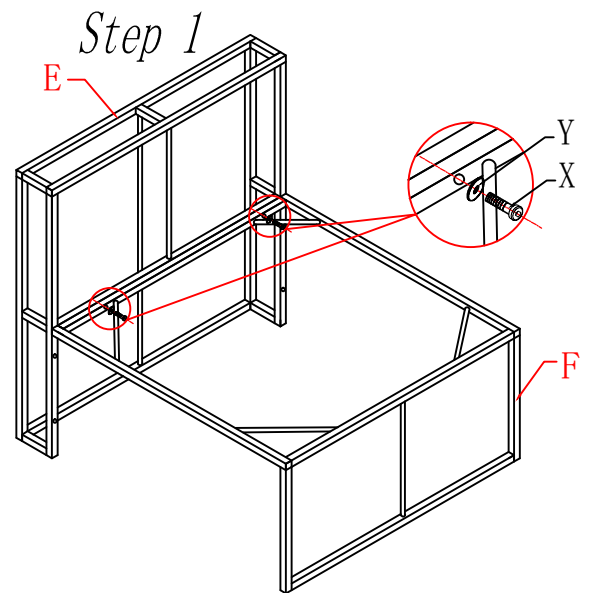

1

The cushion can be fastened to the rattan with the effective horn button.



2

Open the rattan and fasten the horn button to a chosen position.



3

Attached to a spare tape, the horn button allows the cushion to move freely.



4

Contact us for any further problems concerning the item.

