



Stellar

 
AIR




.....

TURNING VENT COVERS INTO ART


How To Install Your Stellar Air Metal Screw-In Register

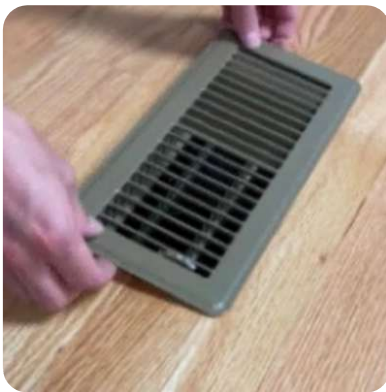


Remove standard register from floor

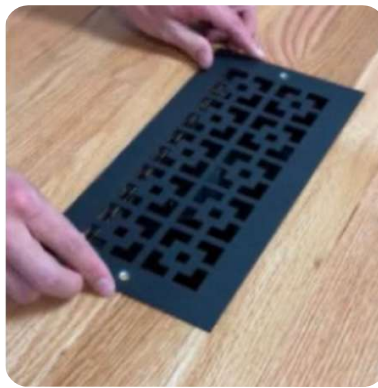 

Line up the Stellar Air register

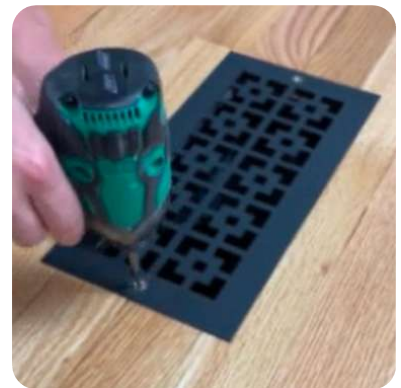 

 Screw in the registers from the pre-drill holes. If your vent does not have pre-drill holes, make sure to add before installation

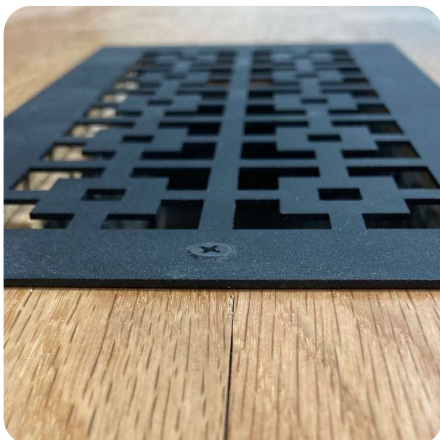

Note: If you would like your register to sit flush to your hardwood floors, you can router your floors 1/16" deep



Enjoy your Stellar Air return air register