 


INSTRUCTION MANUAL

Tower FAN

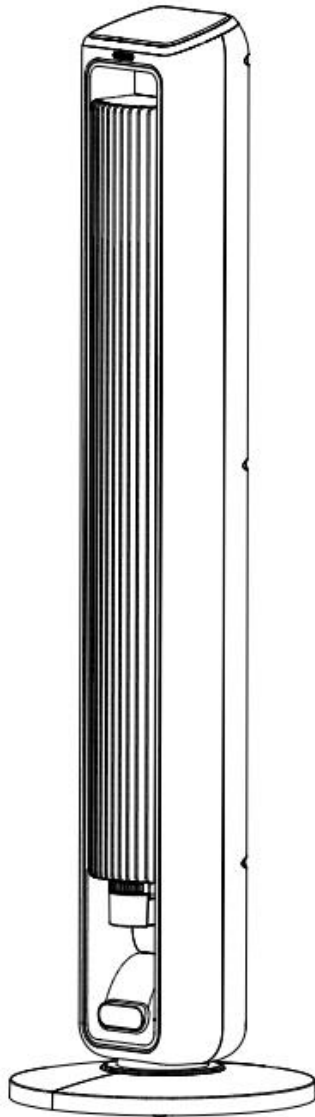

MODEL: TF-K4201R

120V~ 60Hz 50W

NOTE: Please read the manual carefully before using

INTRODUCTION

Thank you for purchasing the tower fan. Please read this user manual carefully and keep it in a safe place for future reference.

IMPORTANT SAFETY INFORMATION


1. Read all instructions carefully before using the FAN.
2. Use this FAN only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
3. Remove the package and ensure that the FAN is undamaged. In case of doubt do not use FAN and contact your supplier.
4. Do not let children play with parts of the package.
5. Before using the FAN, check if the voltage marked on the rating label corresponds to the mains in your home.
6. Extreme caution is necessary when the FAN is used by or near children or invalids and whenever the FAN is left operating unattended.
7. Avoid using extension cords as the extension cord may overheat and cause a risk of fire. Do not pull the power cord to disconnect from the power source. Always grasp the plug to pull out.
8. Do not insert any objects into the FAN as it may cause an electric shock or injury or damage to the FAN. Do not block or tamper with the FAN in any manner while it is in operation.
9. Do not leave the FAN unattended. Always unplug FAN when not in use
10. This FAN is not intended for use in wet or damp locations. Never locate a FAN where it may fall into a bathtub or other water container.
11. Do not use FAN outdoors.
12. Disconnect the fan from the mains power when not in use, and before servicing or performing any maintenance.

WARNING

- The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Main Parts


- ① Control Pane
- ② Outgoing Airflow Grill
- ③ Aroma box
- ④ Base
- ⑤ Body

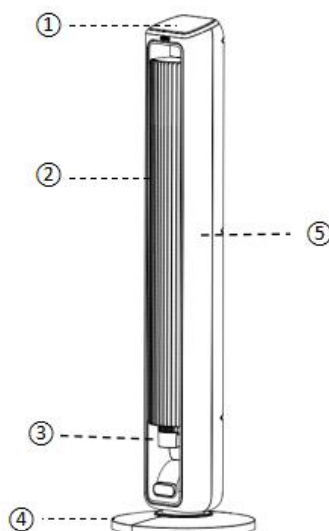

FUNCTION INSTRUCTION

The Fan can be operated by the control panel located on top of the Fan or by your remote control. The remote control is supplied with a plastic sleeve isolating the battery which must be removed before use.

Place the Fan on a stable and flat surface. Plug the Power Cord into an electrical outlet. The LED screen will display the current room temperature.

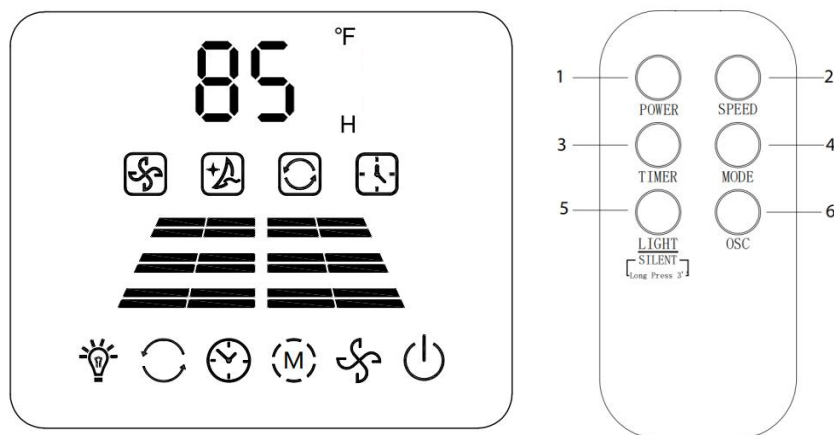

1. Power Button (Product & remote control)

Press the Power Button to turn the product ON/OFF

2. Speed Button (Product & remote control)

The product has 3 wind speeds. (low speed/medium speed/high speed) Press the Speed Button to achieve the desired speed.

3. Timer Button (Product & Remote control)

The product can be set to work from 1-15 hours. When the product is working, press the Timer Button to enter the timer setting, and continue to press the Timer Button to increase the time (hour). When the timer is set, the screen will automatically turn off after 8 seconds.

4. Mode Button (Product & Remote control)

Normal Mode Operation: 

Continue working according to the current speed.

Sleep Mode Operation: 

5. Light (Product & Remote control)

Silent Mode Button (remote control only)

Light mode Press this button to turn on the ambient light, and then press this button to turn it off.

Long-press 3s for silent mode (remote control only).

6. Oscillation (OSC): OSC Button (Product & remote control)

Press the OSC mode, the product will start to rotate, the rotation angle is 80° .


ASSEMBLY

Do not operate the tower fan without the base. The tower fan base is composed of two pieces. (Front Base and Rear base).


Step 1: The base needs to be connected together.

Step 2: Before connecting the base to the tower fan, align and then insert the plastic pin on the back of the base with the hole on the front of the base until the two pieces fit together.

Step 3: The bottom is secured with four screws.

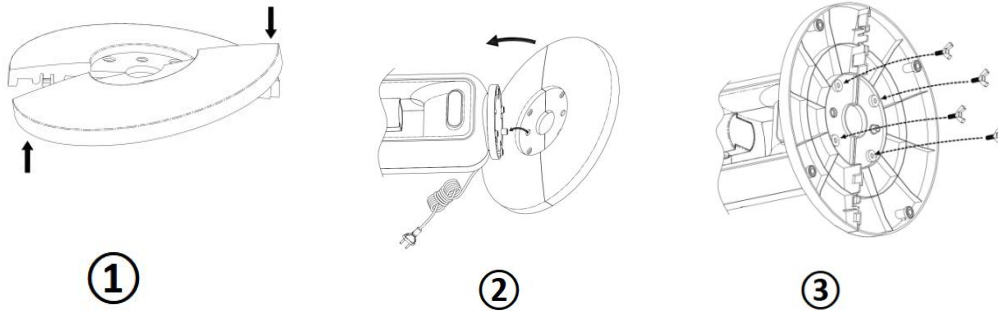


Power cord and remote control storage

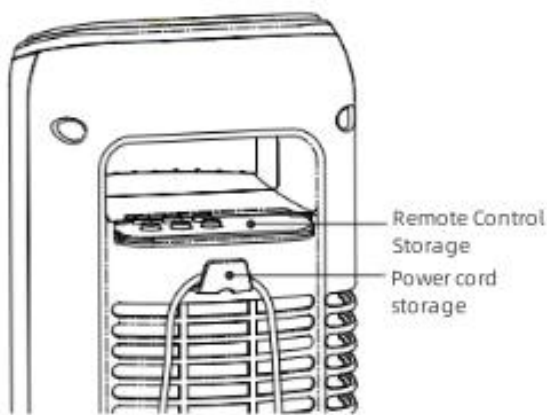

- Hang the power cord on the hook on the rear case when not in use to prevent the power cord from falling on the floor and getting dirty or scratched.
- When you are finished using the remote control, please put the remote control back into the remote control storage compartment.

Adding Aromatherapy Liquid

- The aroma cartridge is placed in the lower position of the body, as shown in the figure below. First pull out the cartridge in the direction of the arrow, and

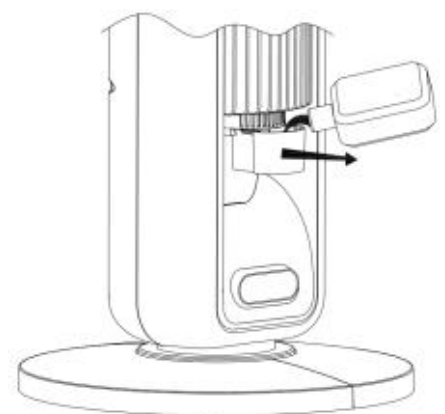


then slowly drip the aroma liquid into the cartridge, which is equipped with absorbent cotton. The volume of aromatherapy liquid added should not be more than 36 mL.

REPLACING THE BATTERIES

The remote control is powered by a Lithium Button Cell Battery (CR2025). Should the remote become unresponsive, replace the battery following the instructions below:

1. Turn over the remote and press tab A to the right.
2. Slide out the battery tray B.
3. Replace the battery with the same type, ensuring the negative side is facing upwards.

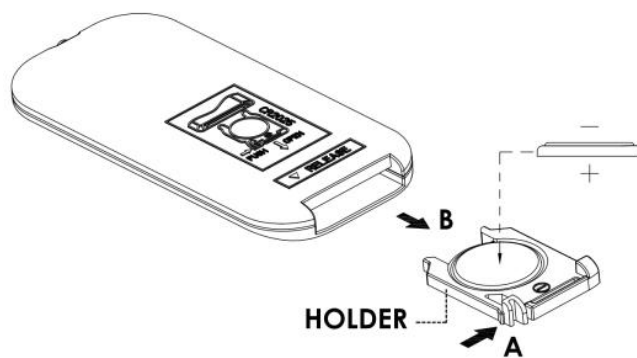

CAUTION:

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

CLEANING AND MAINTENANCE

Before cleaning the appliance, always disconnect the power plug from the receptacle.

The appliance, the power cord and the power plug should not be immersed in water or other liquids when you are cleaning them. Clean them with a dry cloth.

If it is very dirty, the outside of the appliance can be wiped carefully with a moist cloth and then dried carefully. Make sure that no moisture penetrates into the interior of the appliance.

Do not use any harsh cleaners, steel brushes, scouring powder or other hard objects to clean the appliance as these can cause scratches on the surfaces

Clean the appliance regularly.

Never use solvents, benzene or oil-based cleaners as these can damage the housing.

Re-tighten visible screw connections on the appliance regularly in order to ensure that the device is functioning properly.

	Used electric household devices 1. If you do not want to use your electrical appliance any longer, return it free of charge to a recycling depot for used electric appliances. 2. Used electric devices do not belong in the household garbage (see symbol).
	Further disposal instructions 1. Return the electrical appliance in such a condition that its later re-use or recycling is not adversely affected. Batteries must be removed in advance and the destruction of parts which contain fluids must be avoided. 2. Electrical appliances can contain harmful substances. Improper handling or damage to the appliance can lead to health problems or water or ground contamination, when the appliance is recycled later.
	This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

 WARNING	
INGESTION HAZARD: This product contains a button cell or coin battery. DEATH or serious injury can occur if ingested. A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. KEEP new and used batteries OUT OF REACH of CHILDREN Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	