

INSTRUCTION MANUAL Twin Tub Washing Machine

SKU: HA108B
HA109B

DEAR CUSTOMER

Congratulations for your purchase!
Please read this manual carefully, and keep it for future reference.
If you need extra support, please write to customerservice@asishub.co

WASHING PROCEDURE

- A) Wash the laundry**
- 1) Select the water level to the desired position.
 - 2) Select the wash program according to the laundry type. The water level will be automatically adjusted to make the water reach the expected level.
 - 3) Put in the laundry.
 - 4) Select wash duration according to the weight of laundry.
 - 5) Select the spin speed according to the weight of laundry. After each washing operation end 5', set the Wash Selector to Wash.
- B) Drain the water**
- Since the washing machine has a drain pump, the water will flow out automatically. After the washing operation, the water level will be automatically adjusted to the normal position when the water is completely gone from the Wash tub.
- C) Intermediate Spin (Removing Detergent/Dry)**
- 1) Spin the laundry from wash tub to spin tub.
 - 2) Spin to remove dissolved detergent.
- Since the washing machine has a drain pump, the water will flow out automatically. After the washing operation, the water level will be automatically adjusted to the normal position when the water is completely gone from the Wash tub.

- 2) Spin to remove dissolved detergent**
- a) An unbalanced spin tub may cause abnormal vibration and noise.
 - b) Press the laundry down firmly and place the Safety cap on top of it.
 - c) After rinsing, the outer cover of the spin tub and spin for 1 minute.


Re-arrange laundry

* An unbalanced spin tub may cause abnormal vibration and noise. If such incident occur, open the cover of the spin tub and rearrange the laundry, then continue the spinning operation.



BEFORE USING THE MACHINE

INTRODUCTION TO PARTS

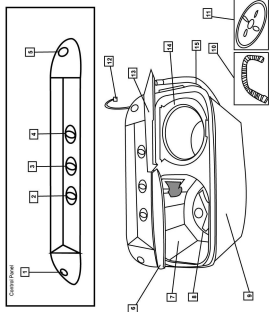

NO.	PART NAME	NO.	PART NAME
1	Water Inlet	11	Safety Cover
2	Wash Selector	12	Wash Tub
3	Wash Selector	13	Spin Tub
4	Spin Tub	14	Spin Tub Cover
5	Wash Cover	15	Wash Tub
6	Wash Tub	16	Wash Tub
7	Wash Tub	17	Wash Tub
8	Wash Tub	18	Wash Tub
9	Wash Tub	19	Wash Tub
10	Wash Tub	20	Wash Tub

WARNING

- Do not touch the hot top of the power supply cord if damaged. Do not attempt to fix it without electrical knowledge. Seek the assistance of a qualified technician.
 - Avoid children from playing near the machine.
 - Do not place the machine near water pipes, the electrical insulation and ground wires.
 - Do not wash waterproof and sports dry suits.
 - Do not put heavy or hot objects on top of the machine.
 - Do not wash laundry soaked with petrol and organic solvent.
 - Do not touch the hot top of the power supply cord if damaged. Do not attempt to fix it without electrical knowledge. Seek the assistance of a qualified technician.
 - Avoid children from playing near the machine.
 - Do not place the machine near water pipes, the electrical insulation and ground wires.
 - Do not wash waterproof and sports dry suits.
 - Do not put heavy or hot objects on top of the machine.
 - Do not wash laundry soaked with petrol and organic solvent.
- This warning should be read carefully by the user. The user should read the safety instructions, professional instructions or by manufacturers or by similar full-time staff to avoid any danger.**
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental abilities, unless they are supervised by a person responsible for their safety.
 - This appliance should be installed by a qualified person.
 - Preventing contact from blocking inlet access.


IN OPERATION

PREPARATION BEFORE WASH

- 1) Set the drain hose to drainage.

- 2) Plug the power supply cord to the mains but be sure to check first if the voltage corresponds to the rating label of the appliance. It must use American standard plug.

- 3) Insert the water inlet hose into water inlet connector.

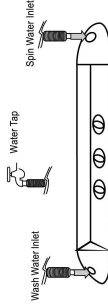

- 4) Select the water level according to the quantity of laundry by referring to water level table.

TROUBLESHOOTING

Before you call for technicians or send your machine for repair, please check from this troubleshooting list:

Phenomena	Possible Causes
The machine does not work.	<ul style="list-style-type: none"> • Is the power cut? • Is the power supply cord connected to a power outlet? • Is the polarized tongue with something?
Unable to drain.	<ul style="list-style-type: none"> • Has the drain hose being lowered? • Is the drain hose blocked? • Are there any clothes fallen outside of the spin tub? • Are there any loose articles in the wash tub?
Abnormal sound while washing.	<ul style="list-style-type: none"> • Are there any loose articles in the wash tub?
Water in the wash tub reduced.	<ul style="list-style-type: none"> • Is the ballows of the overflow filter being mis-installed?
There is abnormal sound and vibration while spinning.	<ul style="list-style-type: none"> • Is the machine place on a flat and solid ground? • Is the spinner cap being placed into the spin tub? • Are there any clothes fallen outside of the spin tub? • Are there too much laundry in the spin tub? • Are there too much laundry in the spin tub?

- * Do not attempt to repair the machine by yourself.
- * Please turn off the power or cut power cord after finished washing or spin.

- 2) Disconnect the filter. Dismantle the top of the pipe in the overflow filter.

Clean the filter completely under running water.

- 4) Installing the overflow filter.
 - Install the ballows.
 - Put up the hook at the left top.
 - Press the top to the slots as shown in picture.


Cleaning the lint filter.

- The lint filter must be used during each time of washing.
- The lint filter must be cleaned immediately each time after use.

- 1) Dismantling the lint filter. Hold the filter frame as shown in picture, gently press downward and pull out from the filter frame.

Cleaning the filter. After wash, dry it. Avoid from drying under direct sunlight.

- 3) Installing the filter. Gently push the filter in place.

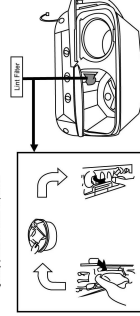

- 3) Soak Rinse

1) Place the laundry into the wash tub, and then select suitable to the amount of laundry. (Select the water level according to the amount of laundry.) Wash for 0 - 5 minutes and let it rinse.

- 4) Dry Spin

An unbalanced spin tub may cause abnormal vibration and noise. Press the laundry down firmly and place the safety cover on top of them. Press the laundry spinning duration according to the quantity of laundry. (1 minute, 3 minutes, 5 minutes)

MAINTENANCE

Please unplug the power supply cord before performing any disposal. There will be lint left behind in the overflow filter and the lint filter after washing. Please clean the filter at least once in 2 months. Please clean the filter frequently in order to maintain the top performance of the machine.

- Clean of the entire machine
- Clean the machine with soft damp cloth.
 - Do not spray water directly onto the machine.
 - If the machine is too dirty, add neutral detergent to clean spot the appearance.
 - Do not use acetone-based detergent to clean the machine, as this will spot the appearance.
- Cleaning of the overflow filter. Please clean the filter at least once in 2 months. Please clean the filter frequently in order to maintain the top performance of the machine.

