 


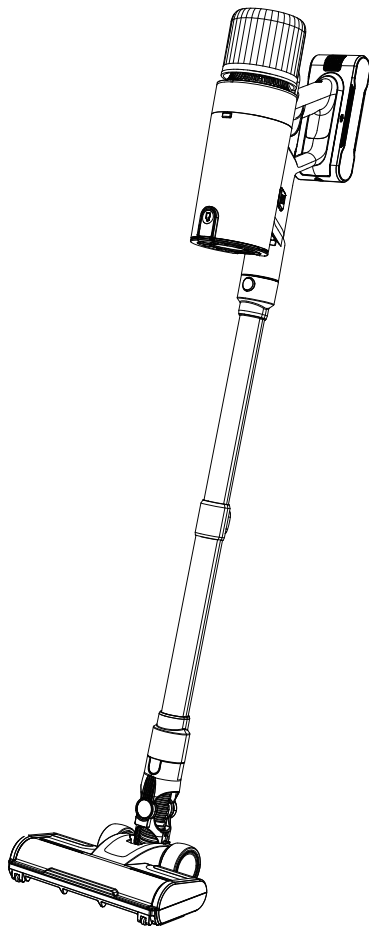

V16 Strong

CORDLESS VACUUM CLEANER

Instruction Manual




✉ US: cs@teendow.com KR: coupang@teendow.com


PRODUCT PARAMETERS

Model:	V16 Strong
Rated Voltage:	29.6V
Rated Power:	500W
Rated Current:	14A
Machine Noise:	≤ 83dBA
Charging Input AC:	110-240V 50-60hz
Charging Output AC:	36V=== 0.5A
Battery:	2200mAh
Suction Power:	120±10W
Capacity:	0.65L
Weight:	2.7Kg
Size:	125*26.5*25.5cm


PACKAGE CONTENT

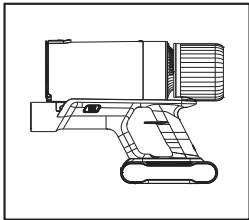


Main Body

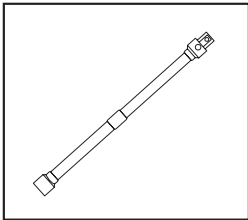


Extension Tube

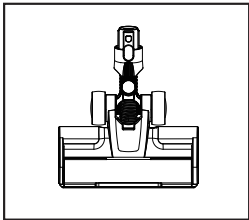


Motorized floor brush

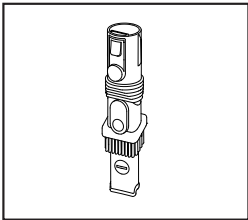


2-in-1 little flat suck

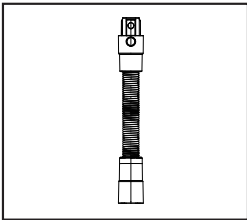


Hose

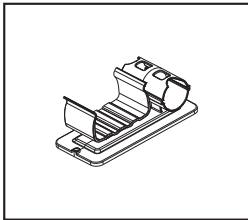


Wall Mount

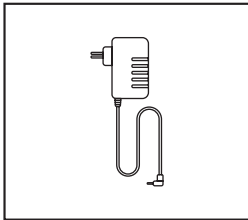


Power pack charger

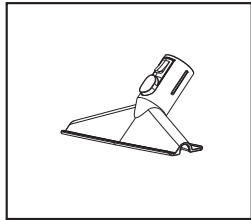

Bed Brush

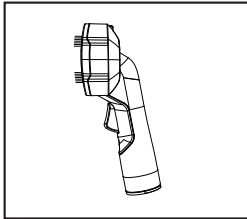

Pet brush

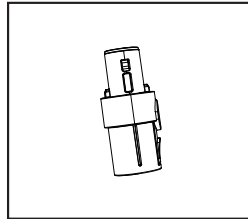


Pet brush button




User Manual

NOTE


Please use the pet brush and pet brush button together.

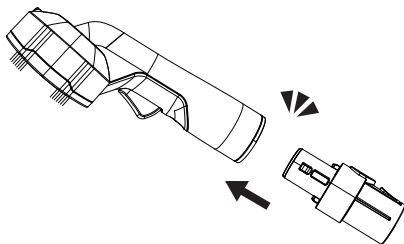

PRODUCT OVERVIEW

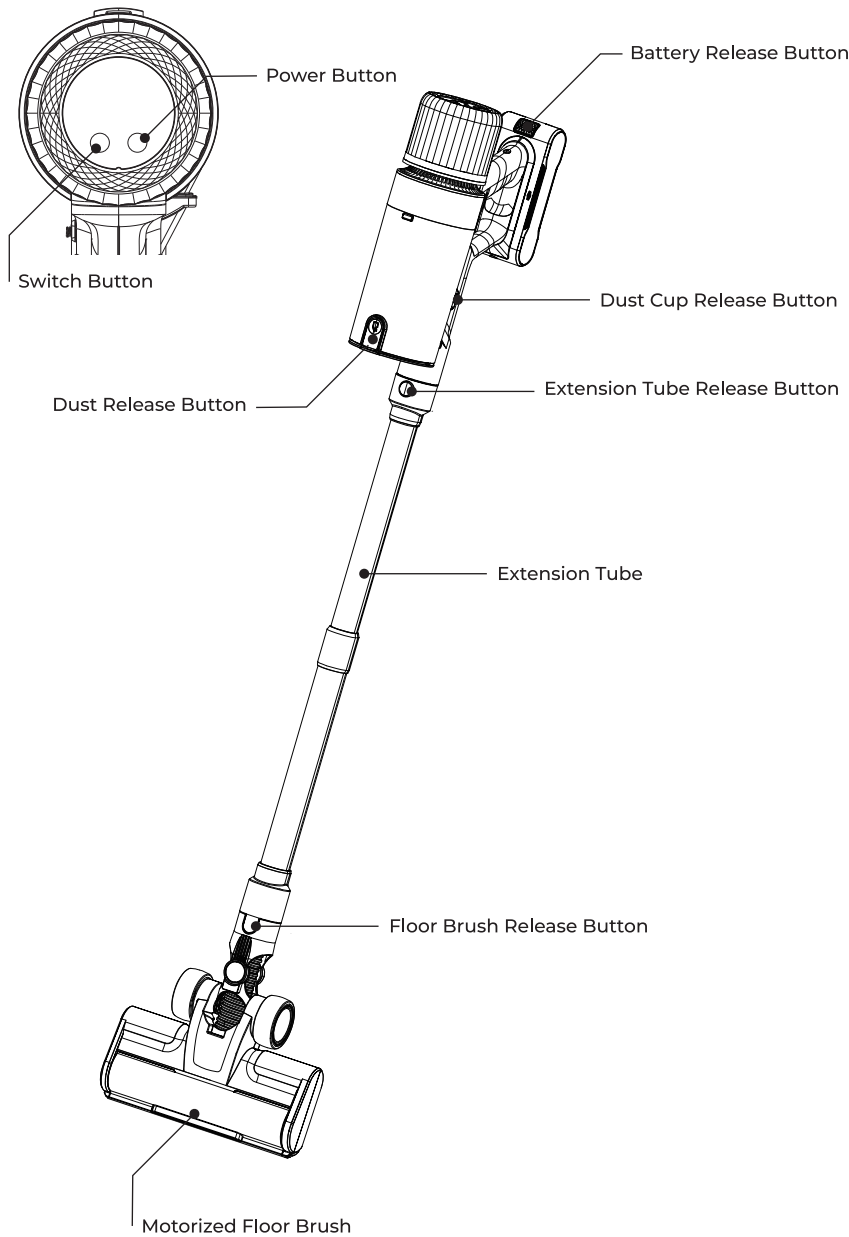


PRODUCT OPERATION

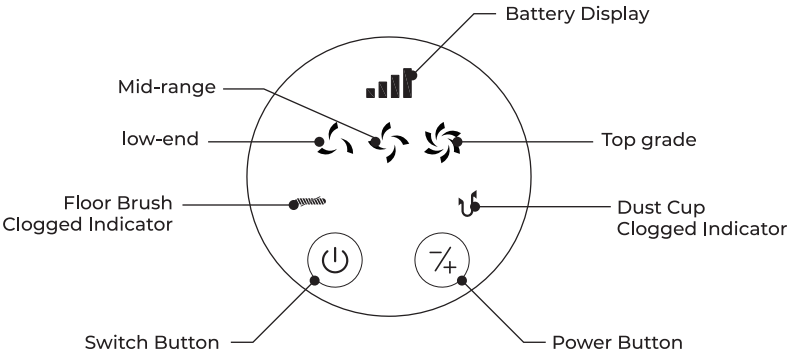


ASSEMBLING & USE

- Product Assembling and Use

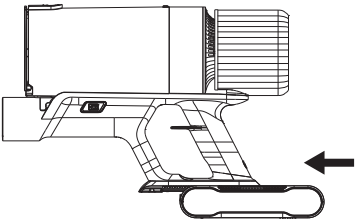

- Installing Accessories

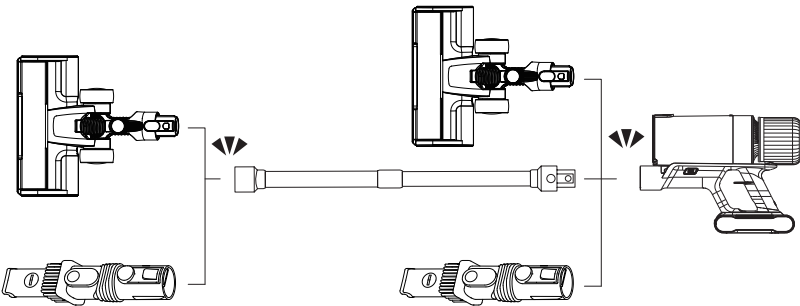


- How to Use

Before use, make sure that The battery is fully charged and fixed in place. The dust cup and filters are cleaned, dried, and fixed in place.

- Operation

Press the power button to start the machine. Press the button again to turn it off.

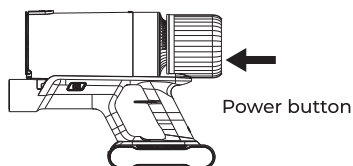


- Select Cleaning Mode

Start with 'Eco' mode. Click Switch button to switch modes.



low-end

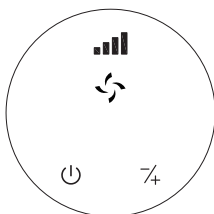

Mid-range




Top grade

CHARGING METHODS

Charging Methods


- Method 1:

The product can be charged on the storage wall-mount. The digital screen will display the charging process, and when it reaches 100%, the battery is fully charged.

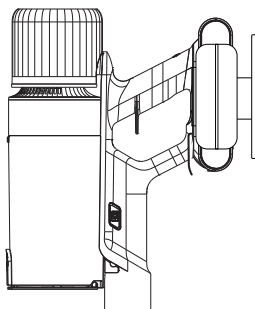

Method 2:

The battery pack can be pulled out and charged separately. The battery indicator light will flash in green. When the battery is fully charged, the green light will stay on continuously.

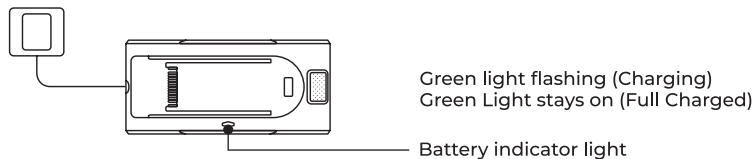


- **Wall Mount**

Hold the wall mount against the wall, aligning it with the two fixing screw holes. Secure it onto the wall using screws, and then hang the vacuum cleaner on the wall.

Warning

Please ensure there are no gas, water, or electrical cables and wires behind the mounting area.

To prevent the mount from dropping down, ensure it is firmly installed.

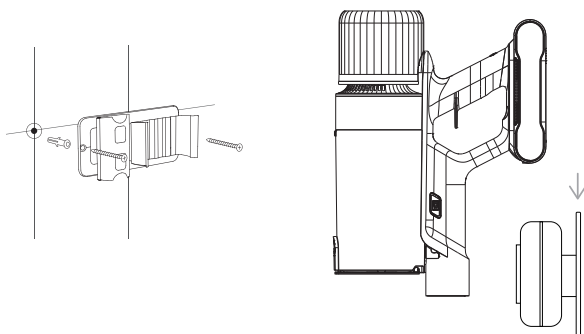


MAINTENANCE

Cleaning regularly will help to extend the service life of the vacuum cleaner.


- **Main Body Cleaning**

Turn off the power before cleaning the body. Please use a neutral detergent and wipe the body with a damp cloth. Avoid sun exposure and store in a cool, dry place.

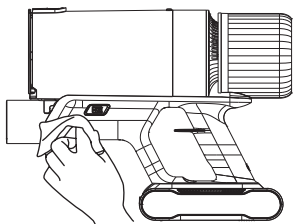


- Empty the Dust Cup

Press the dust cup release button to empty the dust. When in use, if the garbage in the dust cup exceeds the MAX line, please empty it promptly.

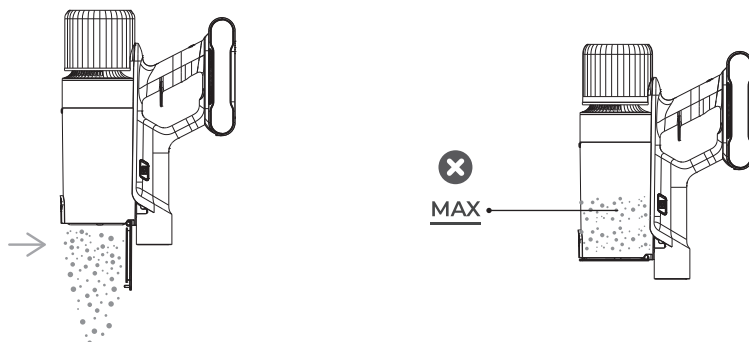

- Clean the Filter

Press and hold the dust cup release buttons on the left and right sides of the handle to remove the dust cup.

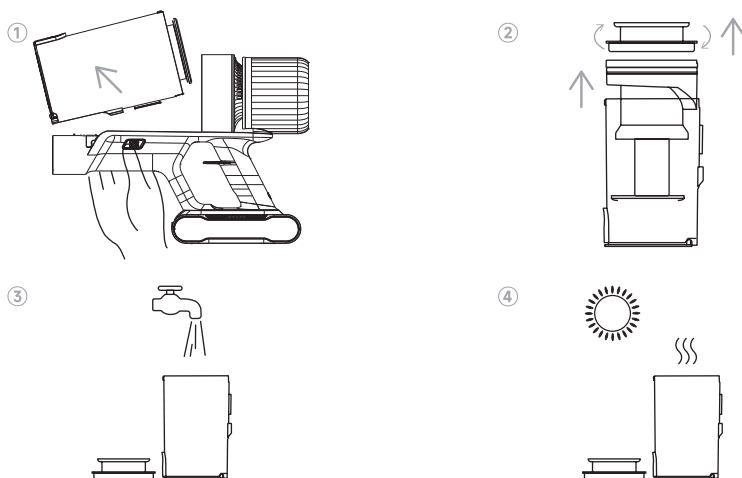


Note: The filter case and HEPA filter should be cleaned every two weeks.


If necessary, replace the HEPA filter every two months. Ensure the filters are completely dry before reassembly.

- Brush Roller Cleaning


Note: After extended use, bristles may become jammed with hair or similar build-up. It is recommended to clean the brush roller periodically to ensure efficient operation and maintain suction.

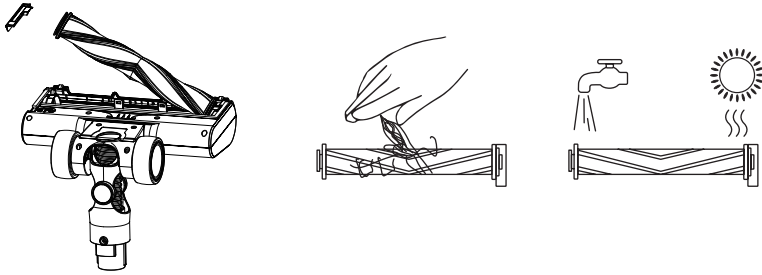


SAFETY INSTRUCTIONS

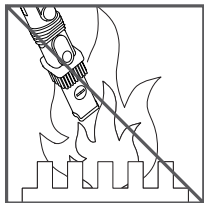


Do not use near
Flame.

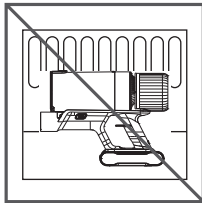


Do not store near
hot surfaces.

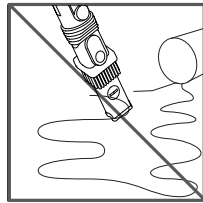


Do not vacuum
water or any liquid.

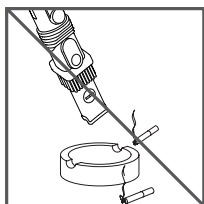

Do not vacuum
burning objects.

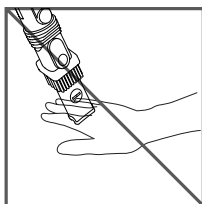

Do not place your
hand near the
vacuum inlet during
operation.

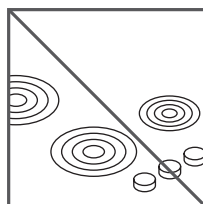

Do not place the
vacuum cleaner
near the stove.

PRODUCT TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
Weak suction power	Filter blocked or deformed.	Clean or replace the filter.
	The tube is locked by foreign objects.	Clean the extension tube.
	Air leakage from a broken brush hose.	Contact customer service for enquiry.
Unable to turn ON	The switch of the vacuum cleaner is not working.	Contact customer service for enquiry.
	The filter is blocked and triggered automatic protection.	Clean or replace the filter.
	Battery damage or short circuit in other parts.	Contact customer service for further investigation.
Floor brush does not rotate	Brush entangled with hair.	Remove hair from the roller.
	The electric floor brush is damaged or has a short circuit.	Contact customer service for enquiry.
	Short circuit in the extension tube.	Contact customer service for enquiry.
Battery cannot be charged	Loose charging port.	Reconnect charger.
	Incorrect adapter.	Use the correct adapter.
	Adaptor or battery damaged.	Contact customer service for enquiry.
Auto shutdown after power ON	Battery is not charged (wrong adaptor / loose charging port).	Reconnect charger or use the correct adapter.
	The filter system is blocked, and triggers automatic protection.	Clean or replace the filter.
	Short circuit of the extension tube or floor brush.	Contact customer service for enquiry.



Email:
cs@teendow.com

If you have any problems, please scan the QR code below to contact us directly, we will solve your problem as soon as possible!



SUCCESS COURIER SL
CALLE RIO TORMES NUM.1, PLANTA 1, DERECHA,
OFICINA 3, Fuemlabrada, Madrid, 28947 Spain



MADE IN CHINA

Address: Block A, Xinghe World Building, Bantian Street, Longgang District, Shenzhen, china