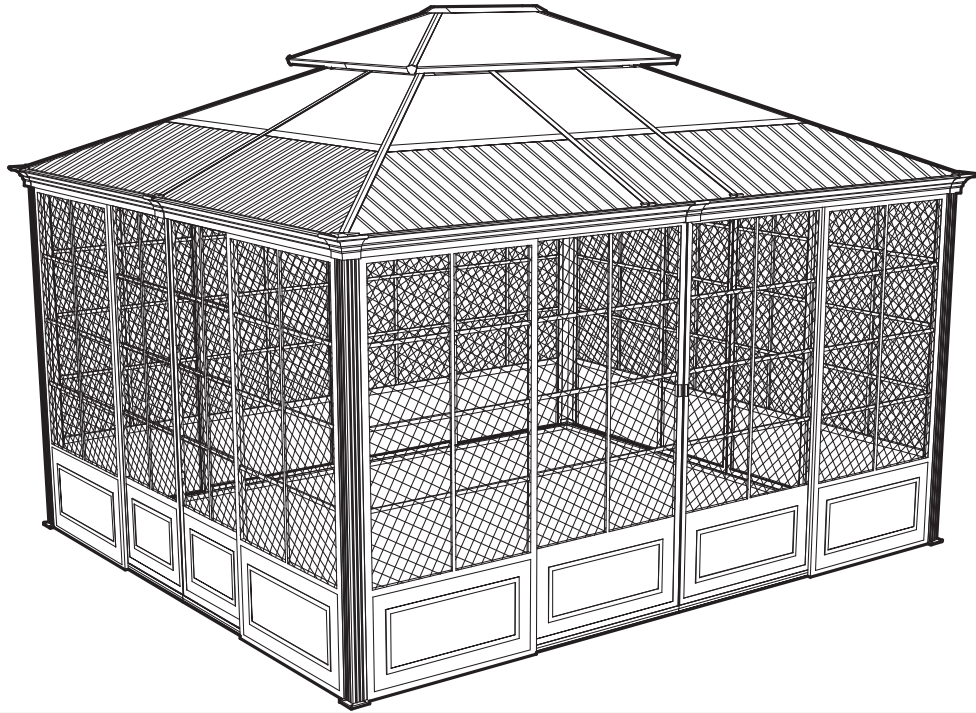 


ITEM NO.:A108000100



WE HAVE YOU IN MIND, LET US SERVE YOU!

Questions? Issues?

CONTACT US

24 hours / 7 days a week



www.sunjoyonline.com



customer.care@sunjoygroup.com

Toll Free



1-(866)-578-6569



Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

Caution! Always keep children under close supervision while they are playing around this product. Never leave children unattended. Keep pets away while setting up the gazebo.

Caution! Check municipal by-laws prior to installing the gazebo.

- This product is intended for domestic outdoor use only.
- The product should be placed and assembled on flat, horizontal ground.
- Consult with your local governing authority/local municipal codes regarding installation of temporary structures before assembly.
- Ensure there is enough clearance around the product. Before assembling the gazebo, make sure to leave a distance of not less than 6' (1.8 m) from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- Anchor the gazebo to the ground with stakes for added safety. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a concrete or wood surface, use anchors suited for these surfaces (anchors not included). Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types of soil.
- If more than one gazebo is set up, keep a minimum distance of 10' (3 m) between the gazebos.
- Any assembly or maintenance of the product must be carried out by adults only.
- Make sure there is sufficient manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Check all nuts and bolts periodically for tightness. When required, tighten them.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only.
- The gazebo is not designed to withstand harsh weather, including high winds, rain and snow. Always remove the gazebo in such heavy weather conditions, otherwise it might tip over and cause damage to the product or injuries to bystanders.
- During snow days, remove the snow at the top when the snow is thicker than 4" (10 cm).
- After a period of time, usually in 2-3 months, tighten all the bolts.
- After a period of use, rinse the ash on top of the gazebo using water. Avoid using acid or alkali wash lotion.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Falling off the gazebo can result in serious injury.
- After a few years, if the paint peels off, use paint of similar colour. It is recommended to use outdoor paint.
- Retain the original packaging to store the gazebo.
- If the product will not be used for a long period of time (e.g. winter time), it should be disassembled and stored in a clean, dry environment.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY

A1 P007600034
Long Guide (Left) 1- 2



A2 P007600035
Long Guide (Right) 1- 2



A3 P007600032
Short Guide (Left) 1- 2



A4 P007600033
Short Guide (Right) 1- 2



A5 P000500688
Guide Rail Connecting Piece - 4



B P000200273
Post- 4



C3 P002200105
Fixed Frame(Left) - 4



C4 P002200106
Fixed Frame(Right)- 4



D1 P005000235
Long Support Tube(Left)- 2



 
D2 P005000236
Long Support Tube(Right)- 2



D3 P005000237
Short Support Tube(Left)- 2



D4 P005000238
Short Support Tube(Right)- 2



D5 P000500687
Support Tube Connecting Piece- 4



E P005600153
Corner Trim - 4



F3 P004100077
Left Sliding Door(Long side) - 2



F4 P004100078
Right Sliding Door(Long side) - 2



 
G3 P004100075
Left Sliding Door(Short side) - 2



G4 P004100076
Right Sliding Door(Short side) - 2



H P003300023
Pulley - 16



J1 P007600036
Long Guide (Left) 2 - 2



J2 P007600037
Long Guide (Right) 2 - 2



J3 P007600038
Short Guide (Left) 2- 2



J4 P007600039
Short Guide (Right) 2- 2



 
J5 P005600154
Guide Rail Baffles- 4



K1 P000500686
Middle Beam Connector- 6



K2 P000500685
Slant Beam Connector - 4

 
 


 
L1 P000400587
Long Side Left Decorative Groove- 2



L2 P000400586
Long Side Right Decorative Groove- 2



 
L3	P000400585	
	Short Side Left Decorative Groove - 2	
L4	P000400584	
	Short Side Right Decorative Groove - 2	
M1	P000500681	
	Small Top Connector - 1	
N	P000900051	
	Small Tectum - 1	
P4	P000600841	
	Slant Beam for Big Roof - 4	
P5	P000600842	
	Middle Beam for Big Roof - 6	
P3	P000600838	
	Slant Beam for Small Roof - 4	
Q1	P000500684	
	Short Side of Big Top Frame - 2	
Q2	P000500683	
	Long Side of Big Top Frame - 2	
Q3	P000600840	
	Small Top Long Side Lower Pipe - 2	
Q4	P000600839	
	Small Top Short Side Lower Pipe - 2	
Q	P005800105	
	Hook - 1	
R1	P000800143	
	Sunshine Plate (Left) - 4	
R2	P000800144	
	Sunshine Plate (Right) - 4	
R3	P000800145	
	Sunshine Plate (Middle) - 2	
R4	P000700324	
	Cover Piece (Left) - 4	

R5	P000700325	
	Cover Piece (Right) - 4	
R6	P000700326	
	Cover Piece (Middle) - 2	
R7	P000800142	
	Small Top Long Side Cover Sheet - 2	
R8	P000800141	
	Small Top Short Side Cover Sheet - 2	
S1	P005600151	
	Left Baffle for Slant Beam - 4	
S2	P005600152	
	Right Baffle for Slant Beam - 4	
S3	P005600155	
	Left Baffle for Middle Beam - 6	
S4	P005600156	
	Right Baffle for Middle Beam - 6	
T	P005600150	
	Baffle for Slant Beam (Small Top) - 4	
U	P000500682	
	Decorative Groove Connecting Piece - 4	
V4	P005000233	
	Short Support Tube (Left) - 4	
V5	P005000234	
	Short Support Tube (Right) - 4	
V3	P005000232	
	Short Support Tube (Middle) - 2	
W4	P000900052	
	I-Shaped Slot (Left) - 4	
W5	P000900053	
	I-Shaped Slot (Right) - 4	
W3	P000900054	
	I-Shaped Slot (Middle) - 2	

AA

 
H010020011

Bolt M6*15 - 164+17 Spare

**BB**

 
H050010020

Flat Washer M6 - 238+24 Spare

**CC**

 
H010020015

Bolt M6*25 - 38+4 Spare

**DD**

 
H010020013

Bolt M6*35 - 16+2 Spare

**EE**

 
H010020009

Bolt M6*55 - 16+2 Spare

**FF**

 
H010020016

Bolt M6*45 - 4+1 Spare

 
**GG**

H010130001

Bolt M5*15 - 32+4 Spare

**HH**

H070010006

Stake $\Phi 8 \times 260$ - 12**WW**

H090010017

 
Wrench M6 - 2



**CAUTION!**

- Proper placement of the gazebo is essential. Do not place the product underneath electrical lines.
- Keep children under close supervision while they are playing around this product. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any part is missing.
- Do not light any fires inside or near the product!
- Stay calm if fire breaks out. Search for the nearest exit. Do not return to the gazebo before firemen allow you to do so.

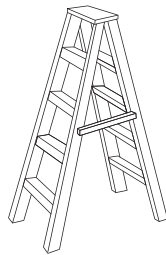 
Needed for assembly: The following tooling not included in the package



Hammer



Screwdriver

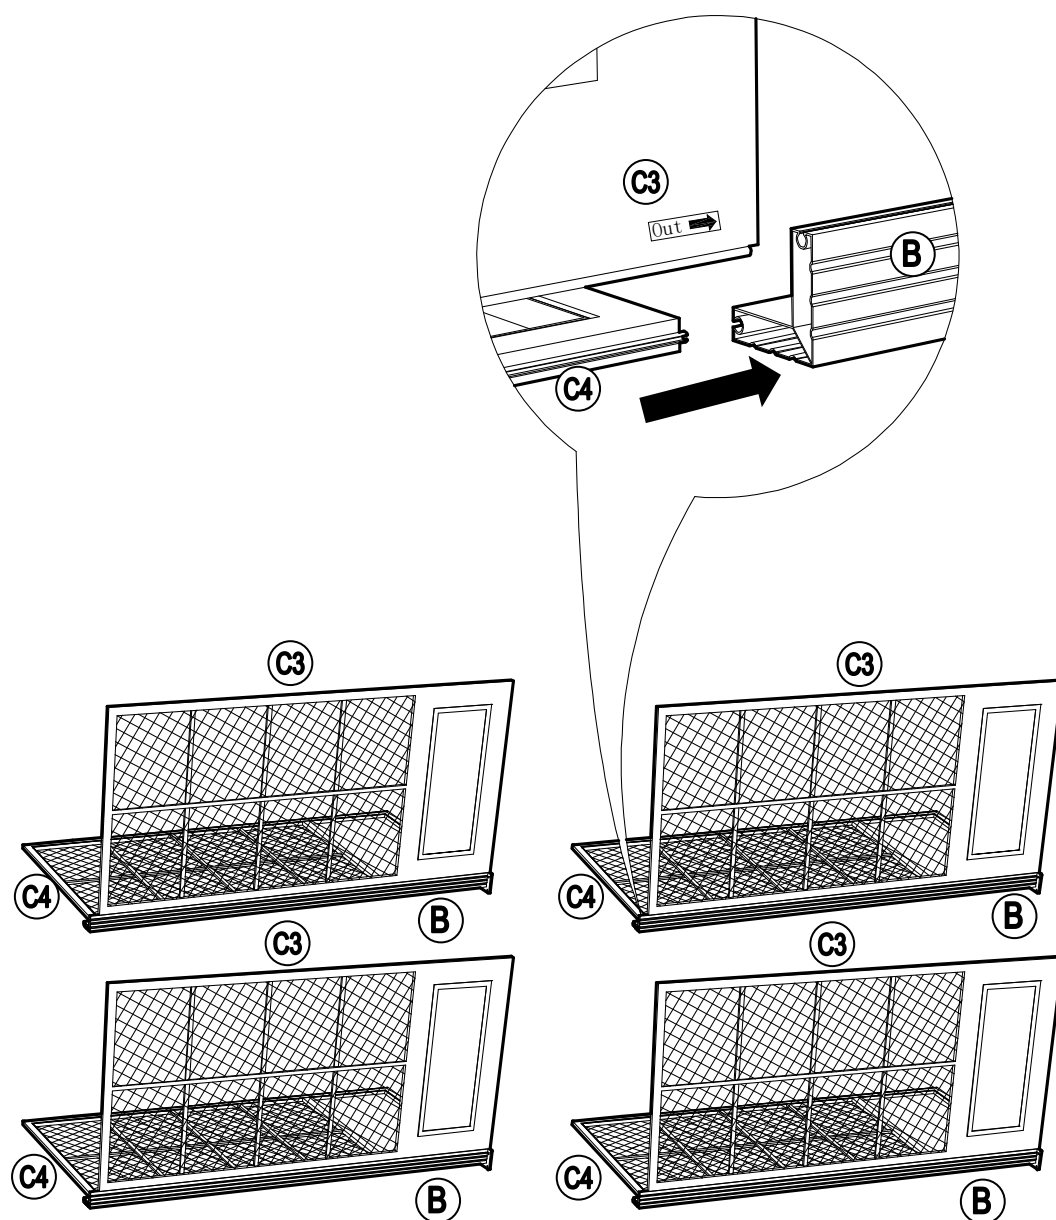 
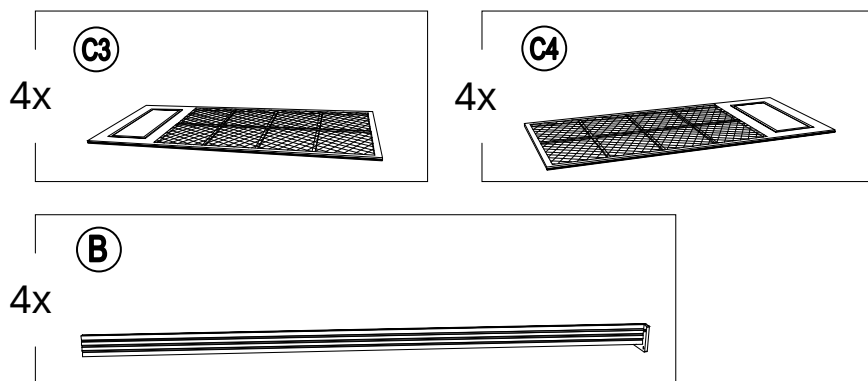 


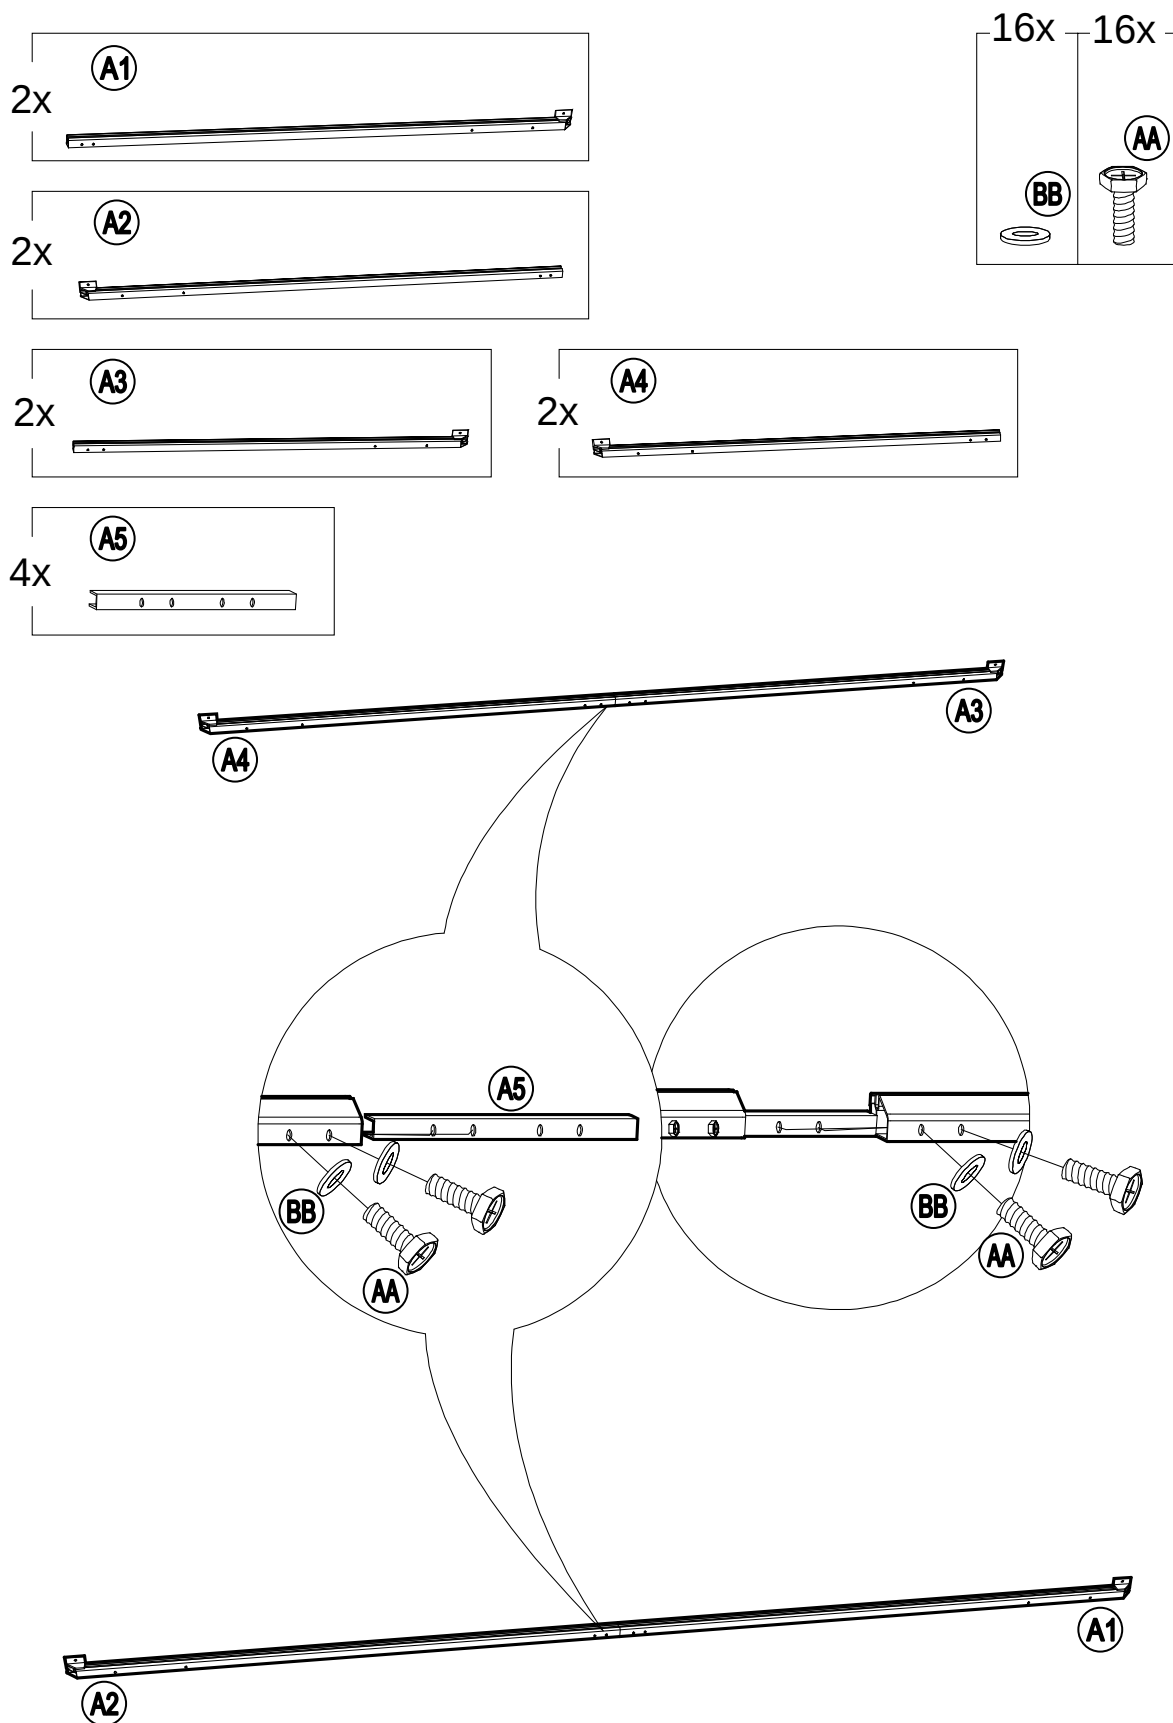 
Ladder



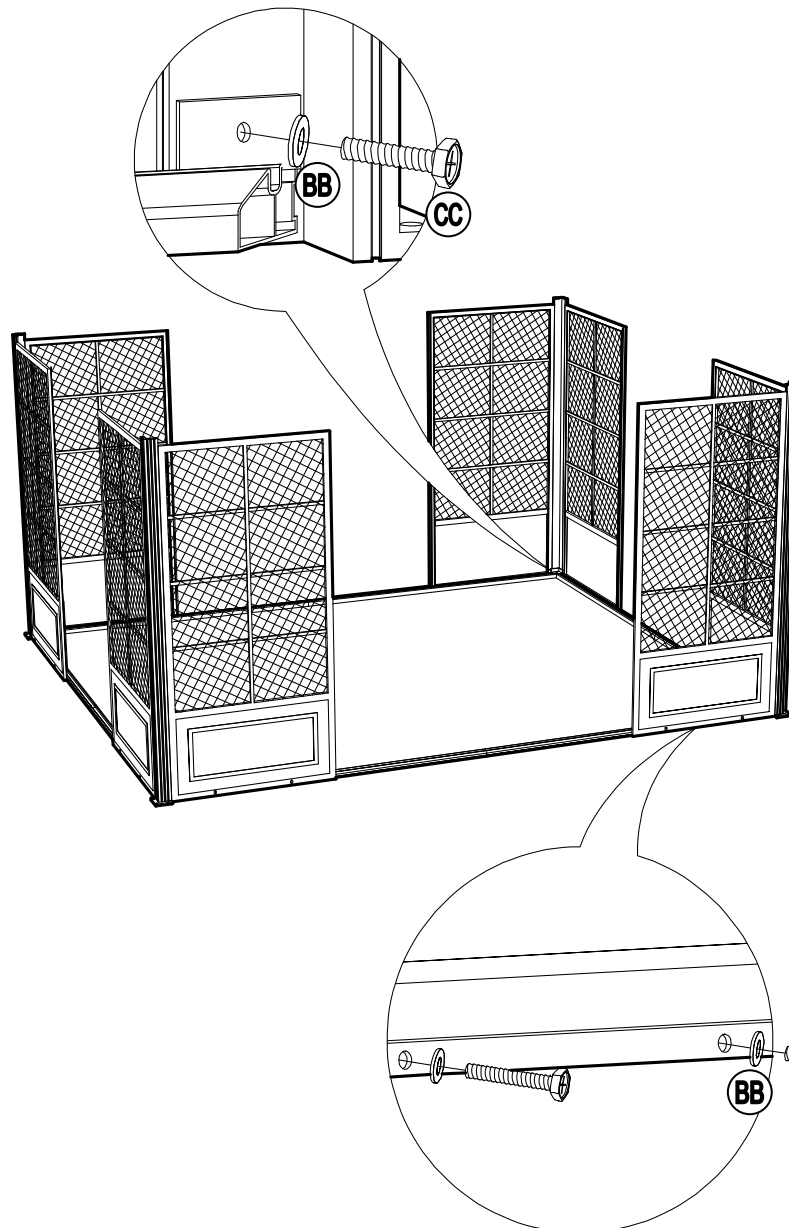 
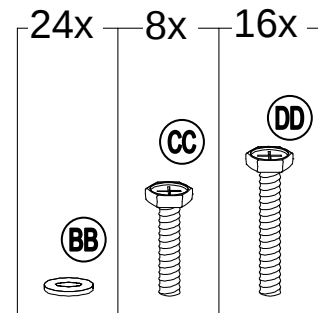 
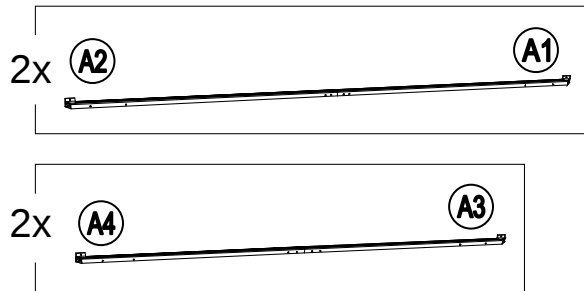 
5 people

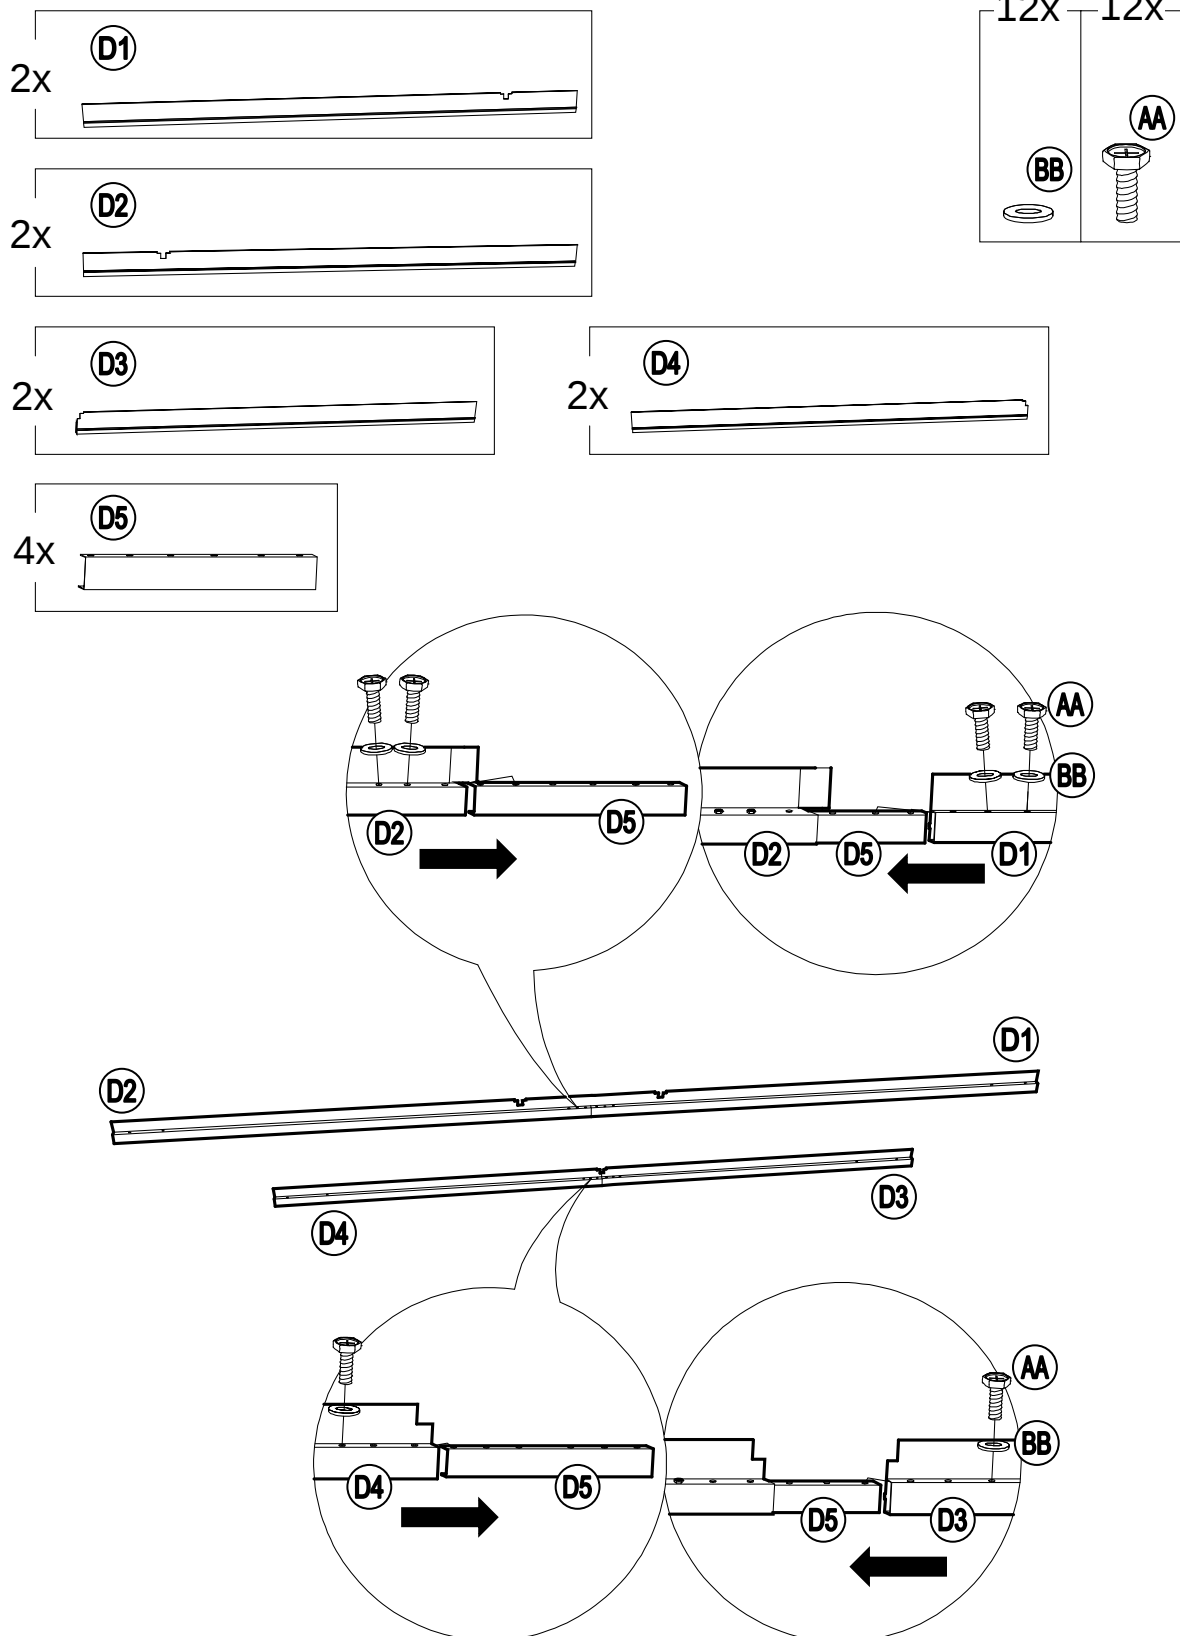 
STEP 1: Assembly of Fixed Frame and Post

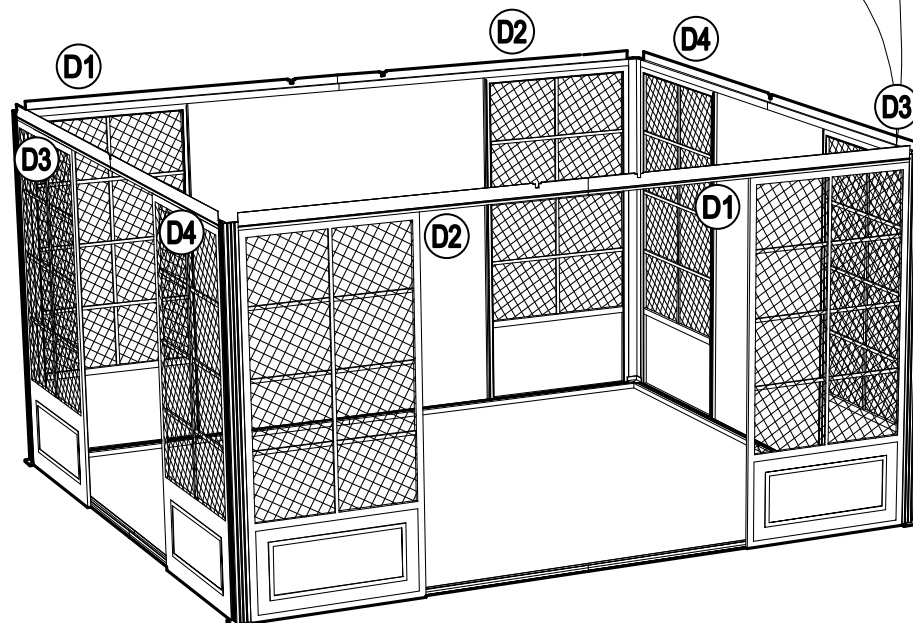 
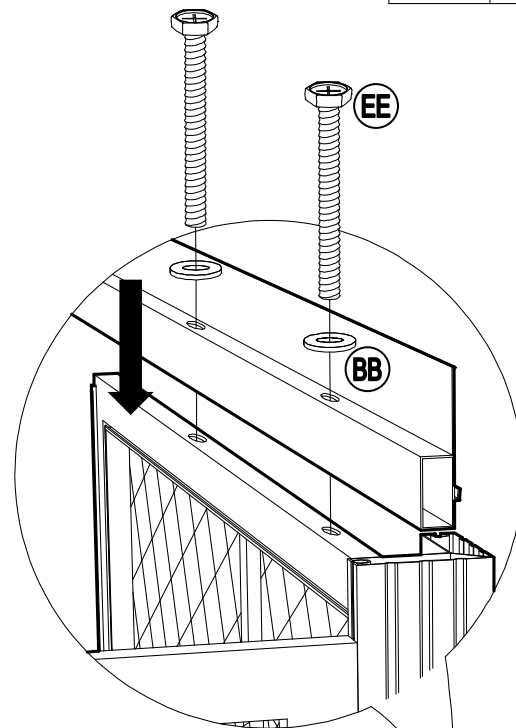 
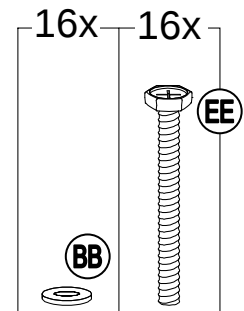 
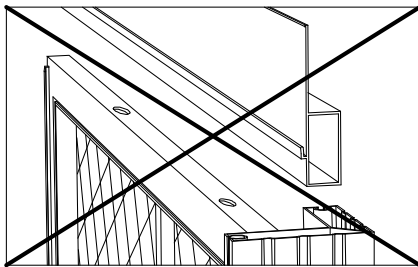 
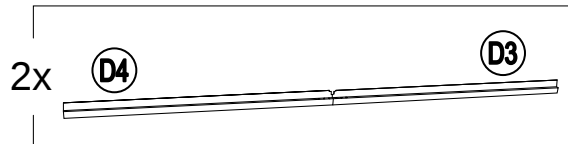 
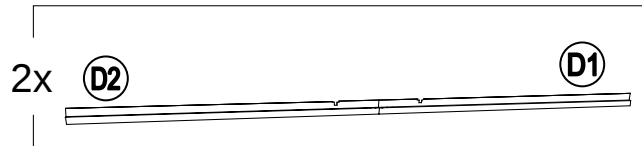 


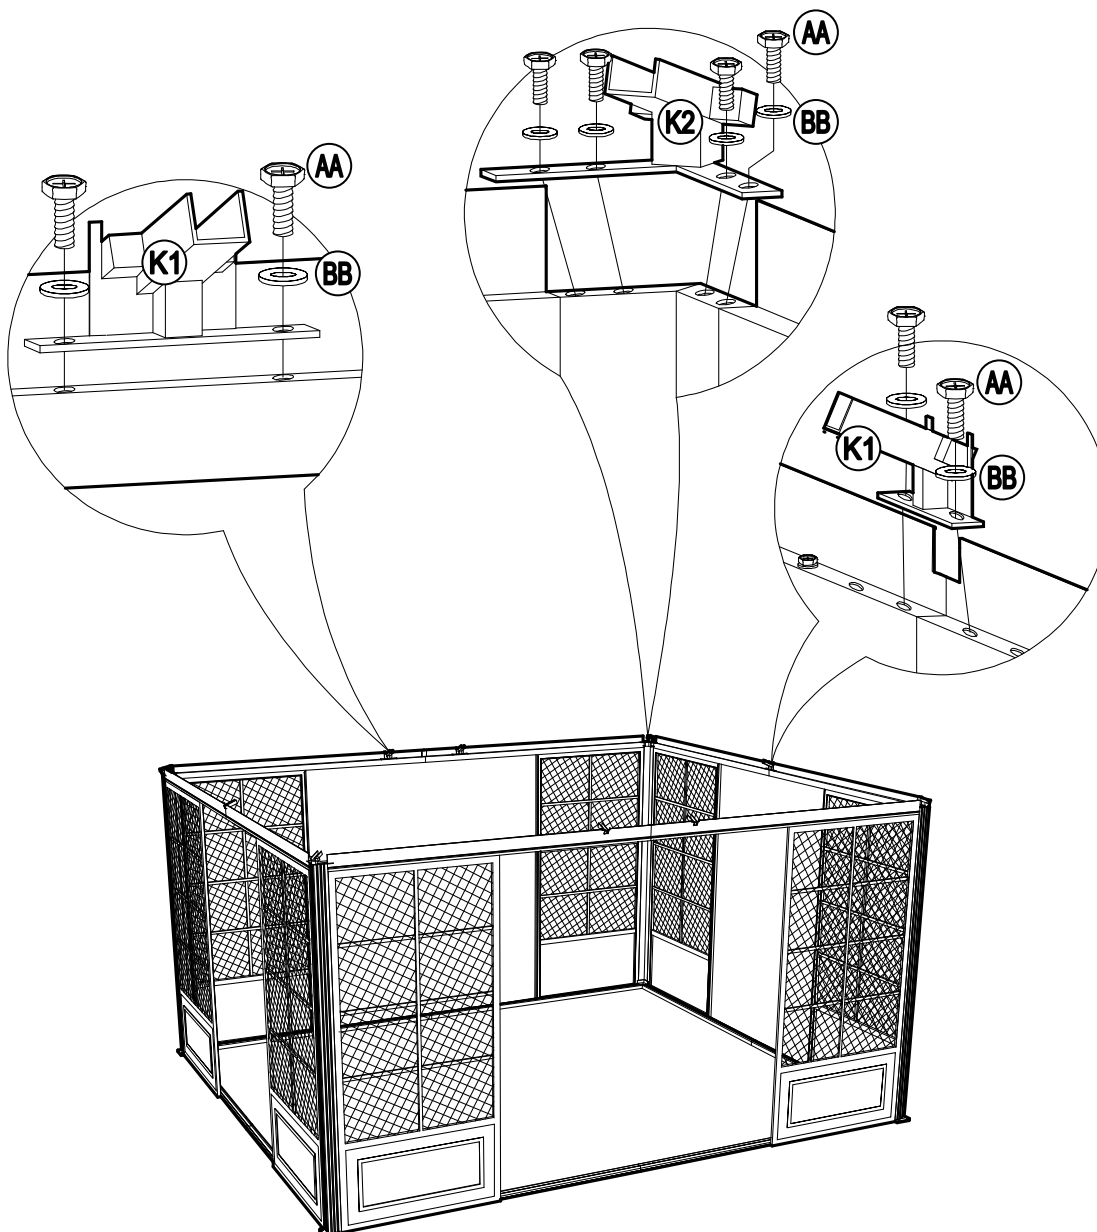 
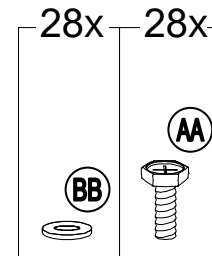 
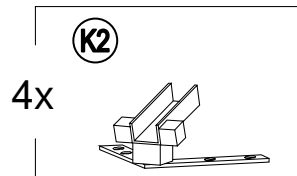 
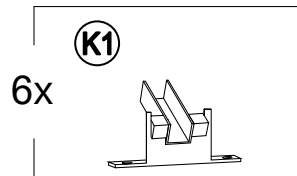 
STEP 2: Assembly of Long Guide and Short Guide

STEP 3: Assembly of Long Guide and Short Guide

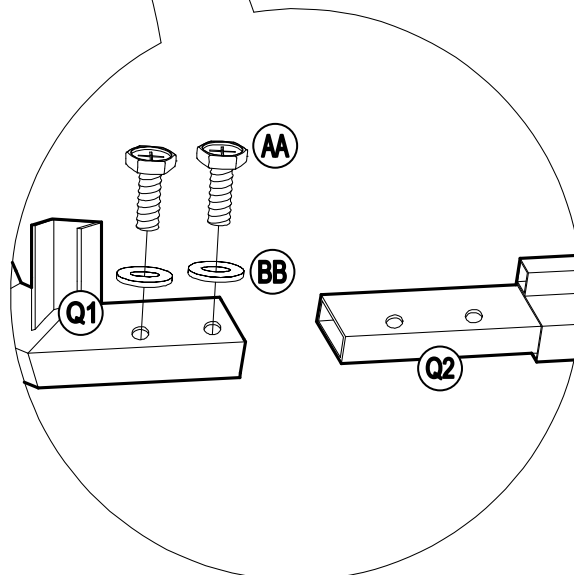 
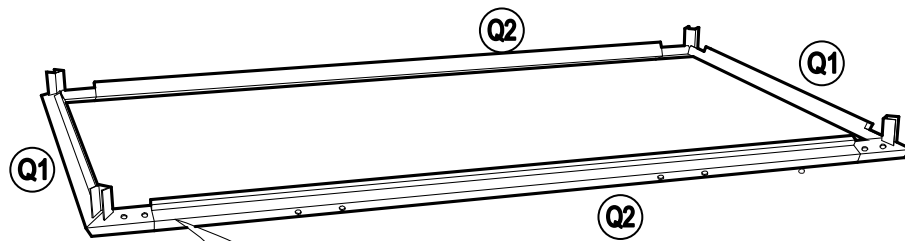 
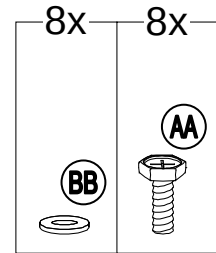 
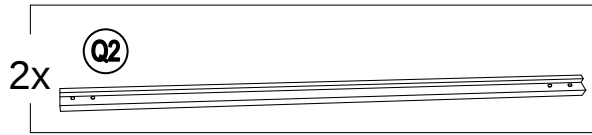 
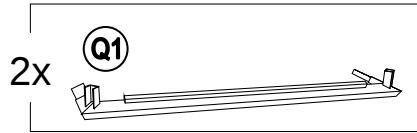 


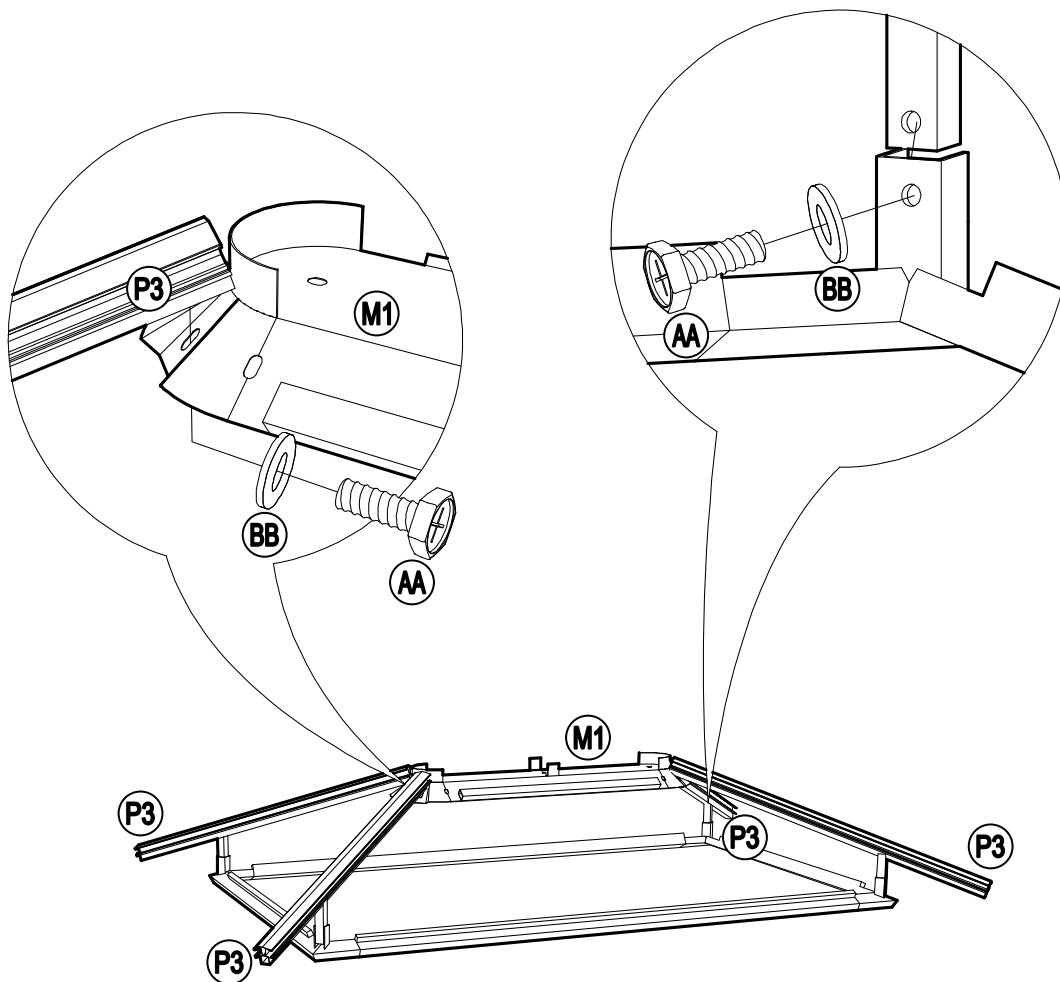 
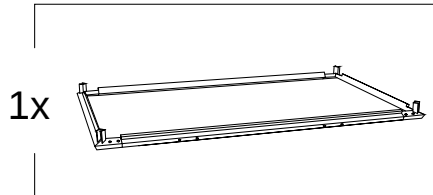 
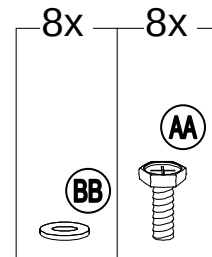 
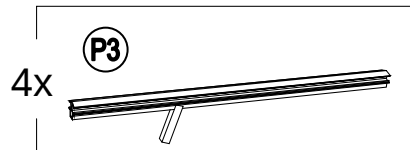 
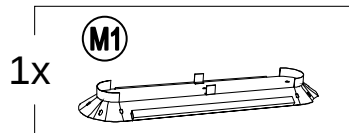 
STEP 4: Assembly of Support Tube

STEP 5: Assembly of Long Support Tube and Short Support Tube

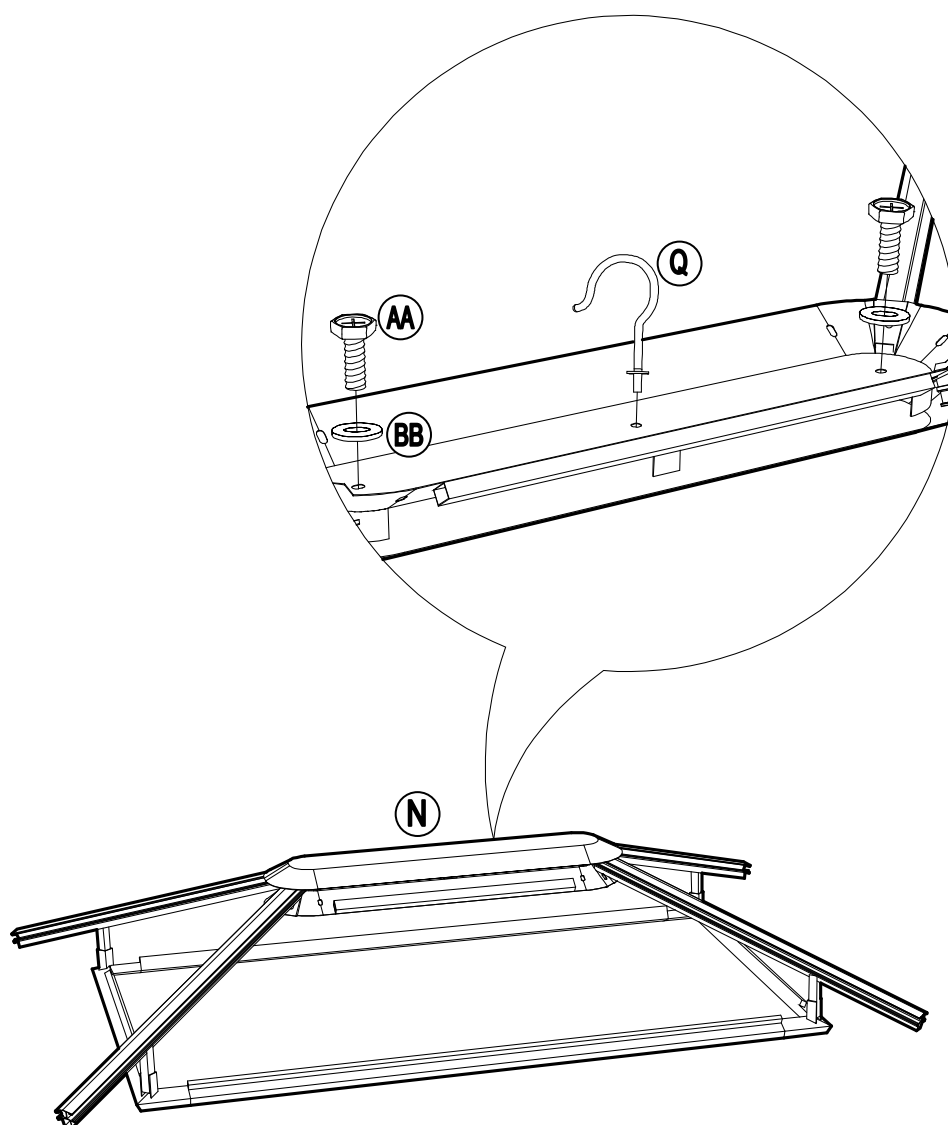 
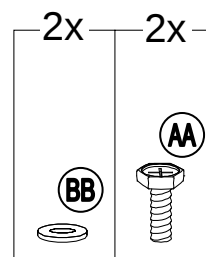 
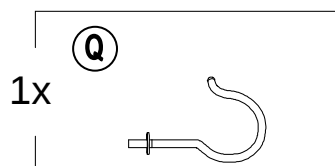 
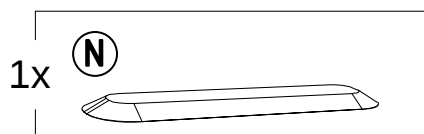 
STEP 6: Assembly of Middle Beam Connector and Slant Beam Connector

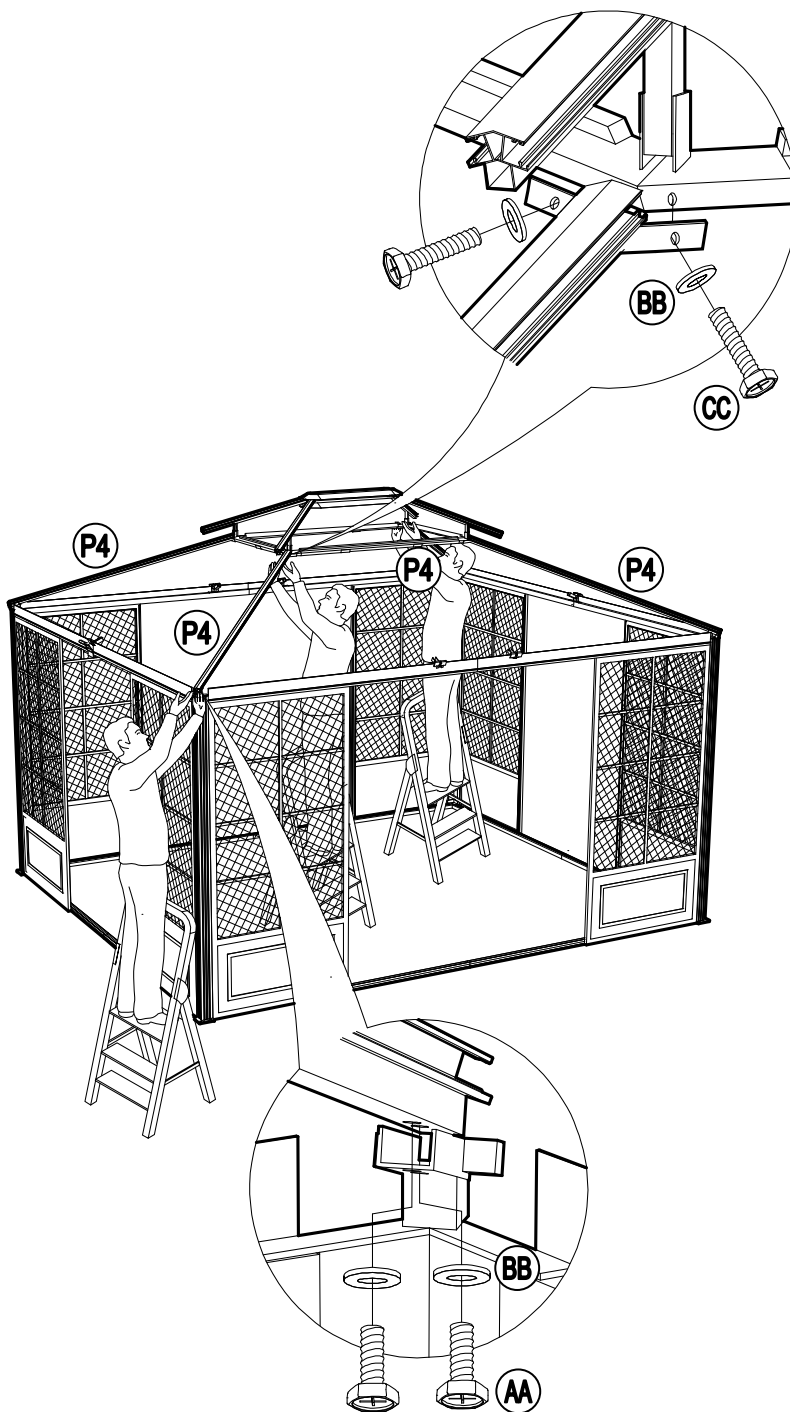 
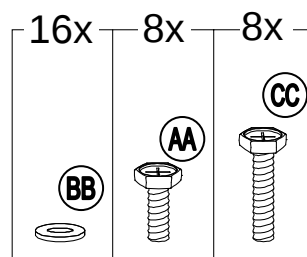 
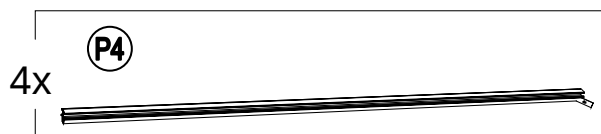 
STEP 7: Assembly of Short Side of Big Top Frame



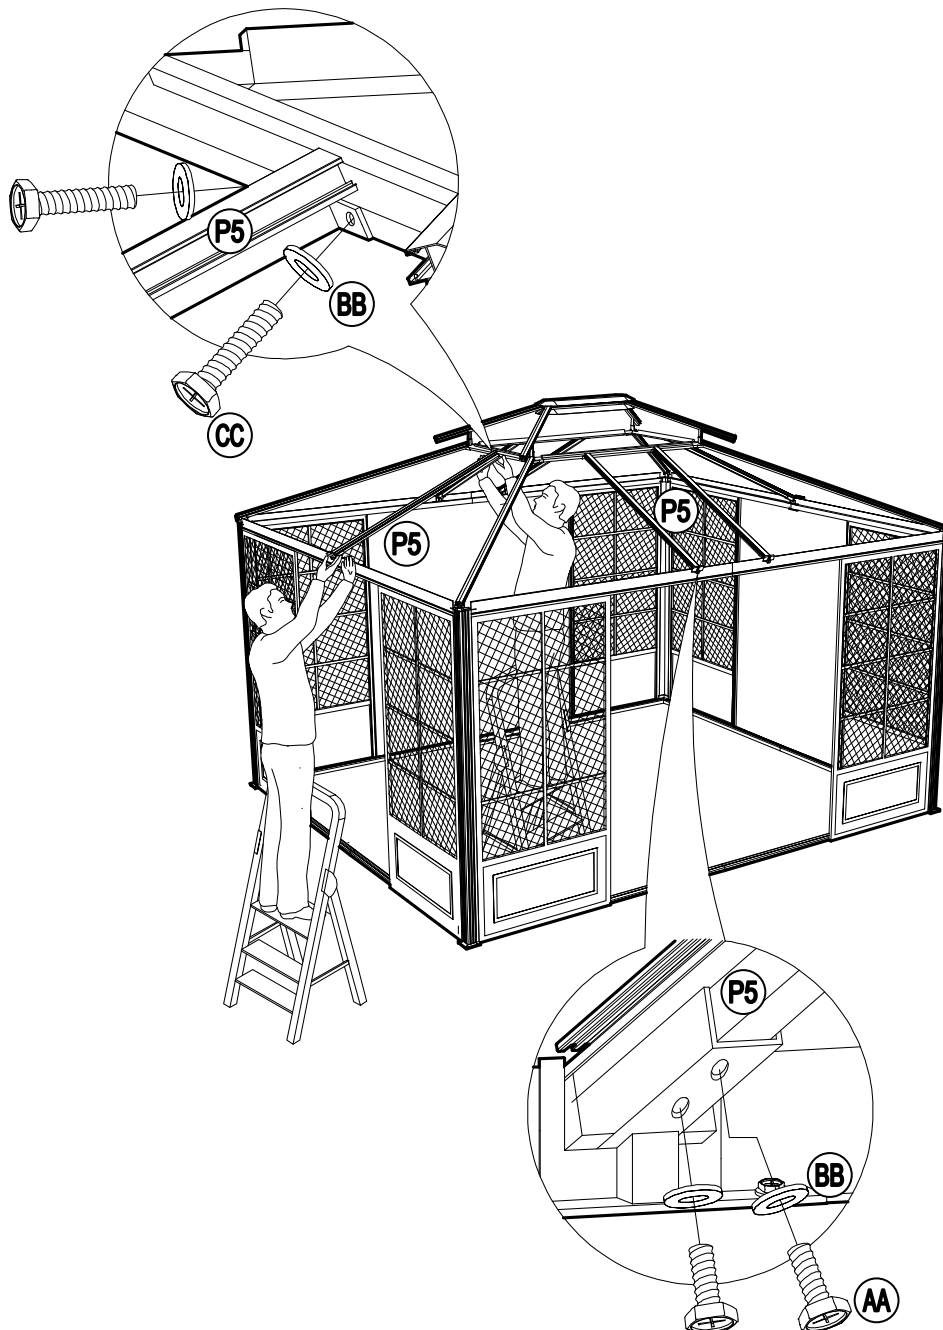 
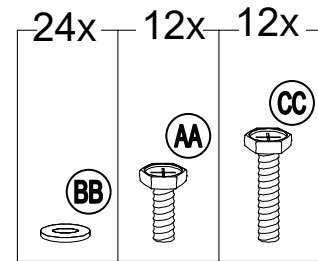 
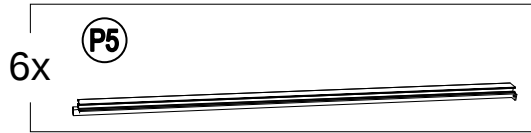 
STEP 8: Assembly of Slant Beam For Small Roof

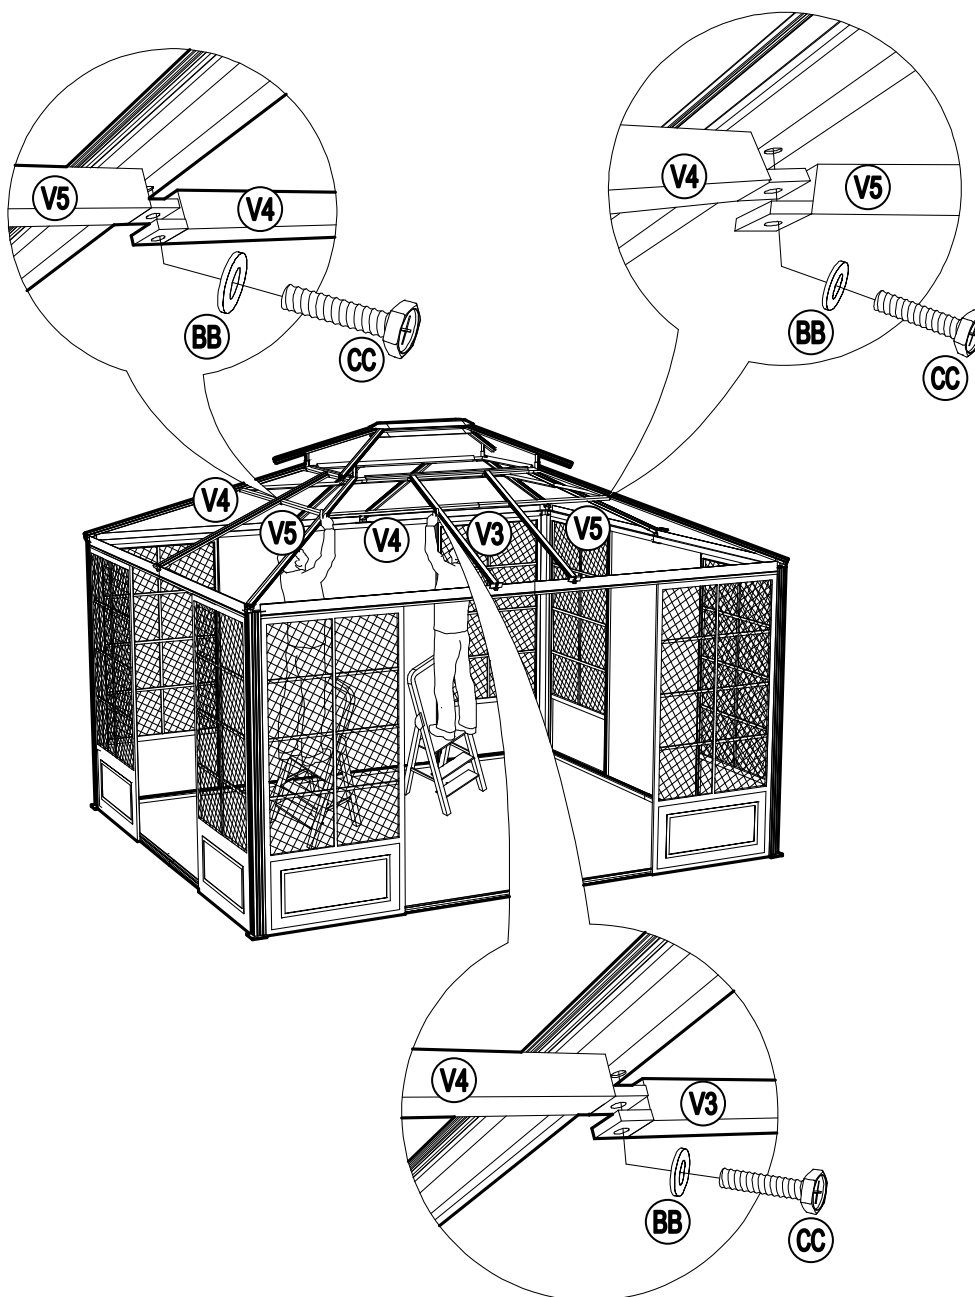 
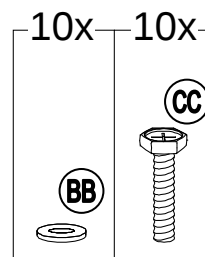 
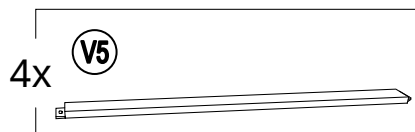 
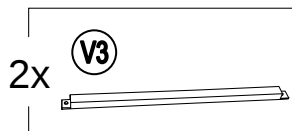 
STEP 9: Assembly of Small Tectum and Hook

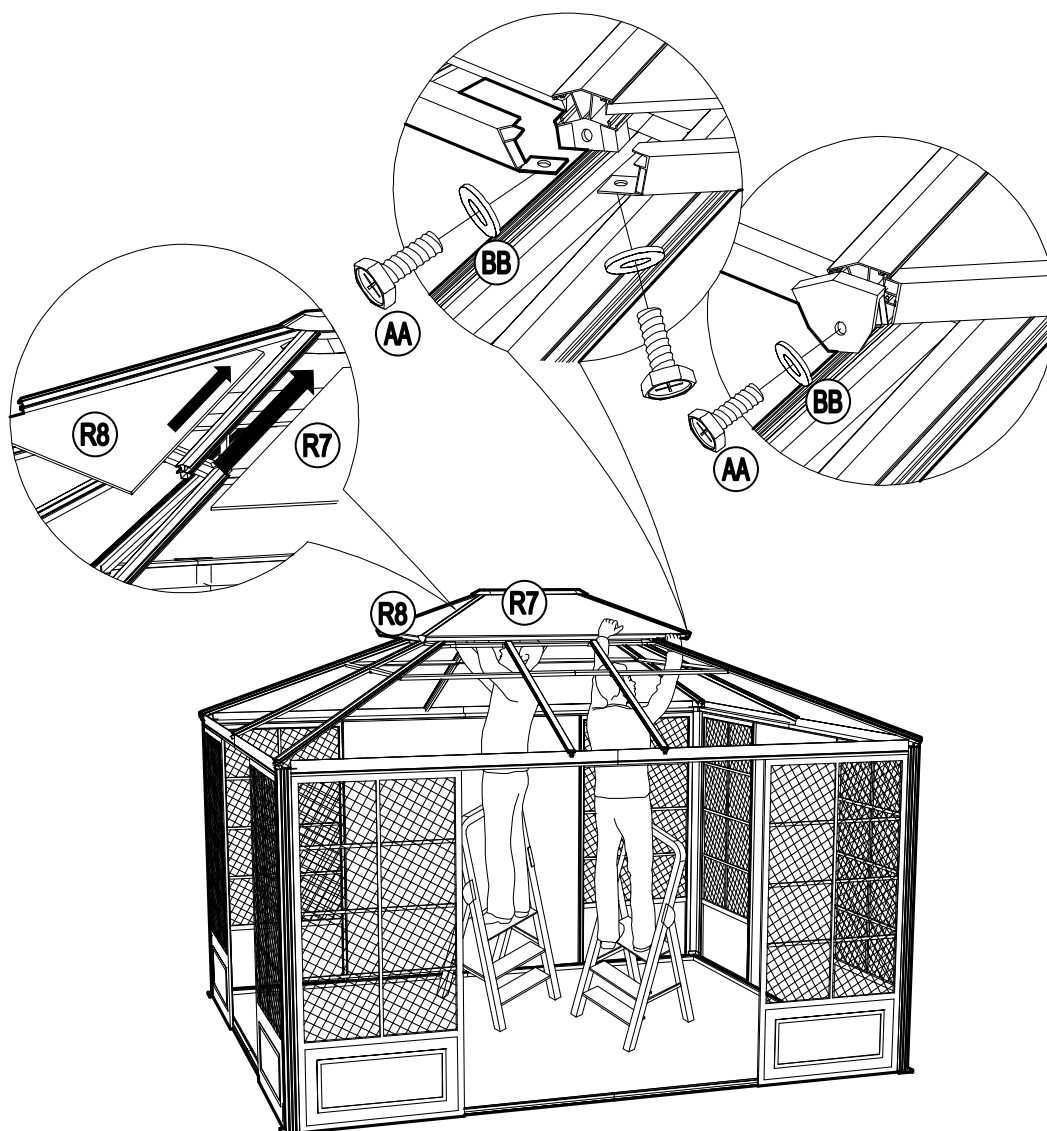 
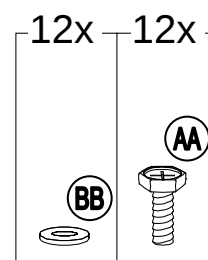 
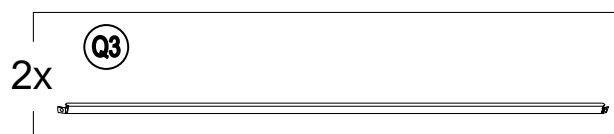 
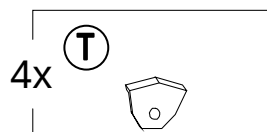 
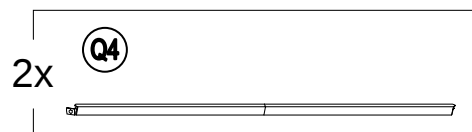 
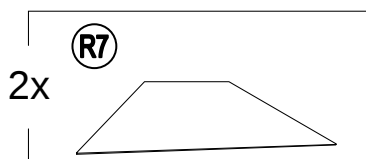 
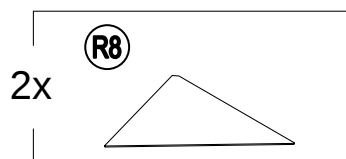 


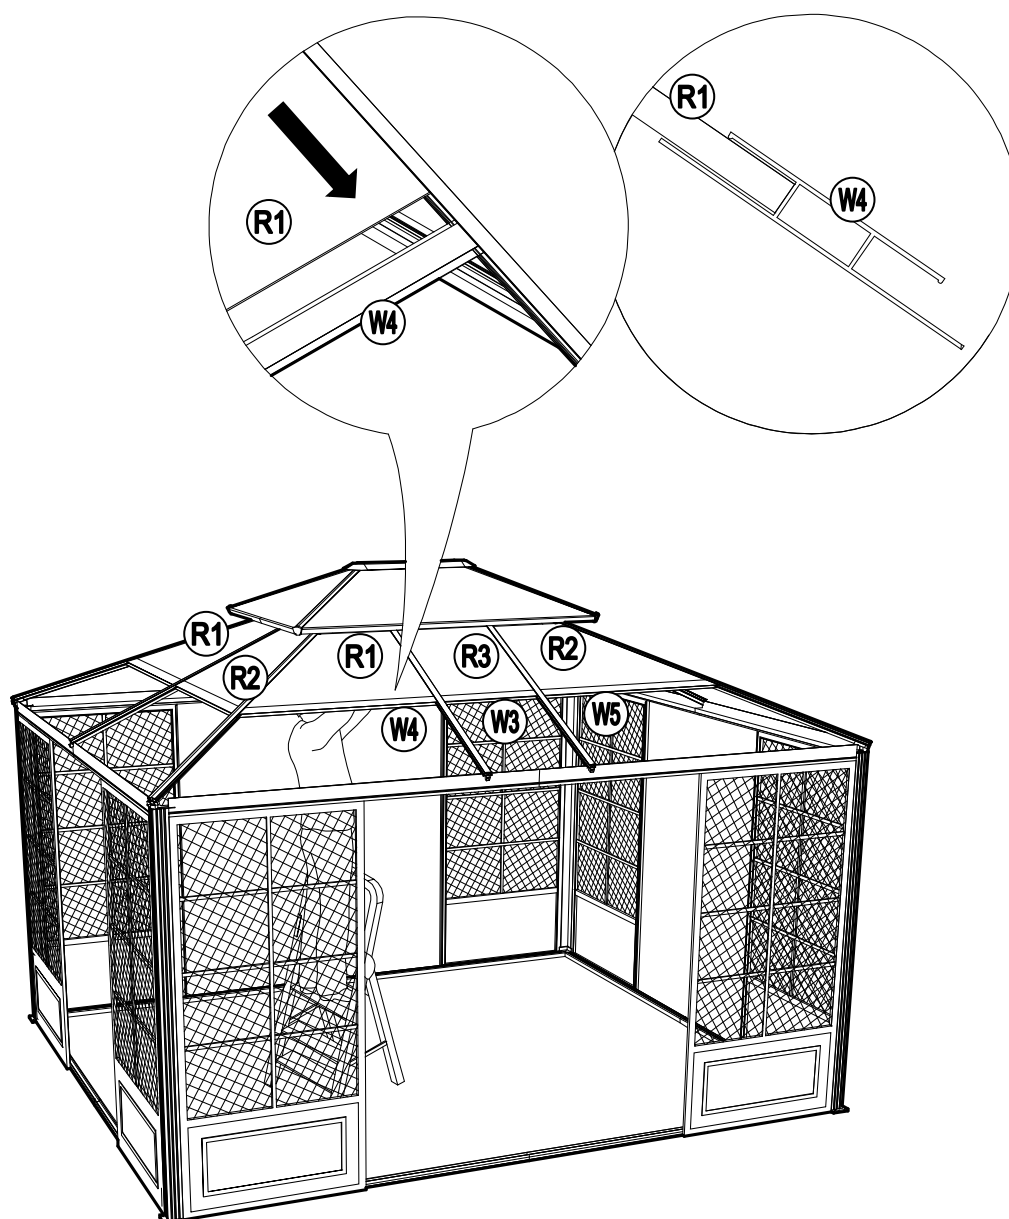 
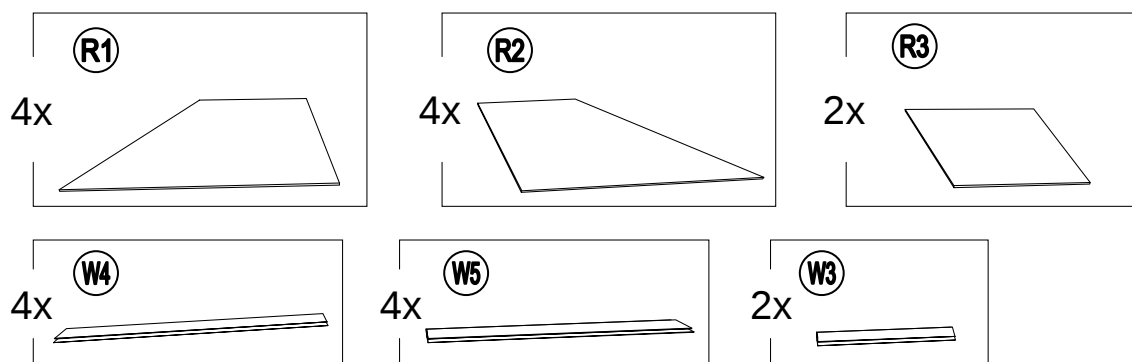 
STEP 10: Assembly of Slant Beam For Big Roof

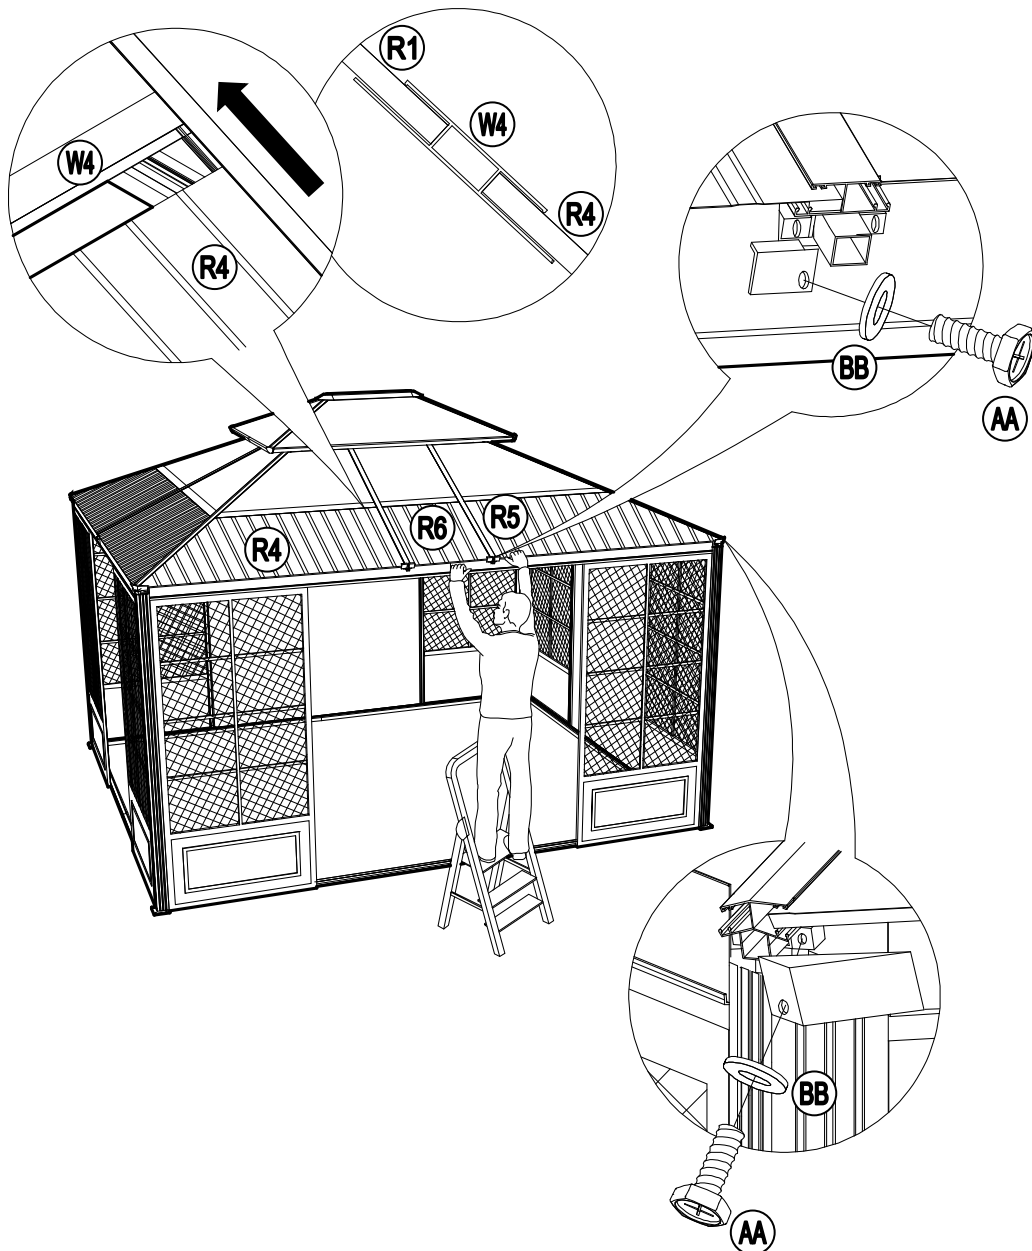 
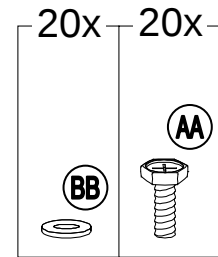 
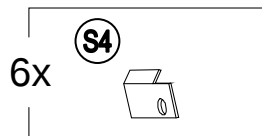 
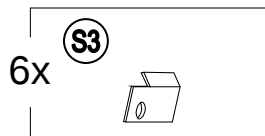 
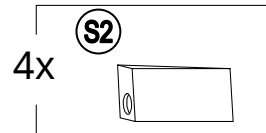 
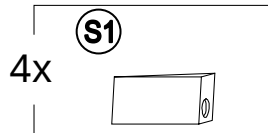 
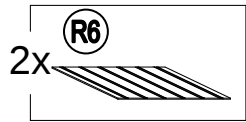 
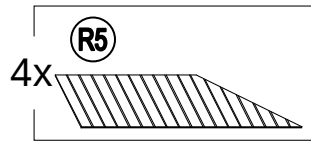 
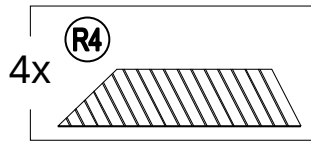 
STEP 11: Assembly of Middle Beam For Big Roof

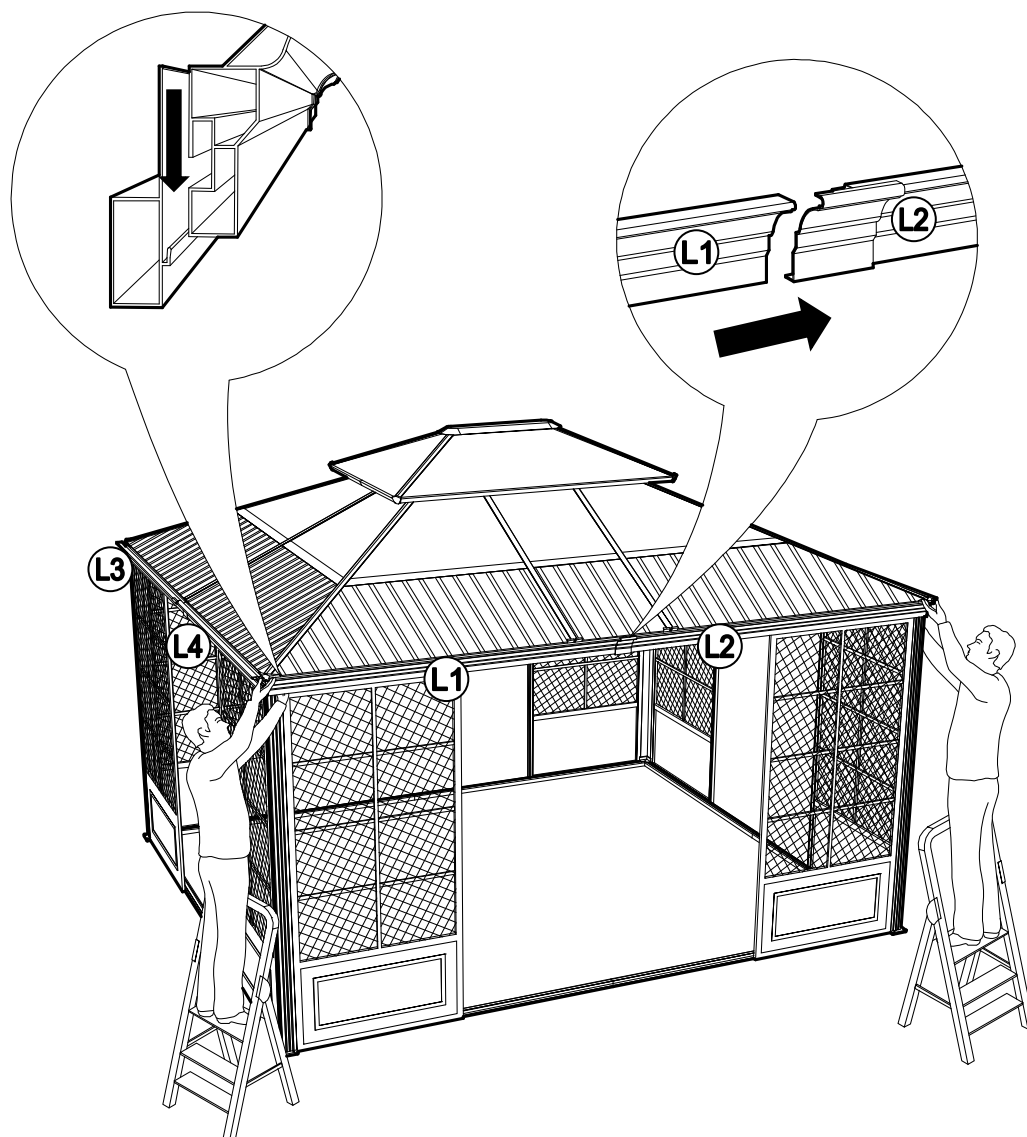 
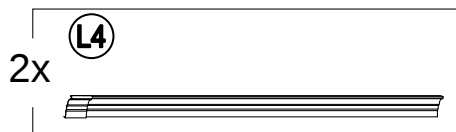 
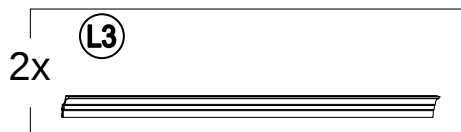 
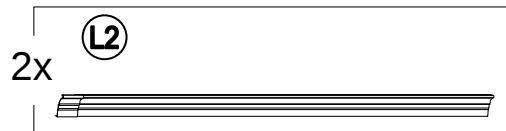 
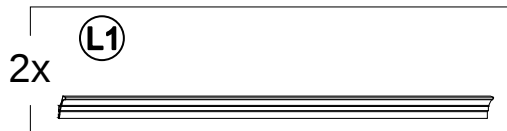 


STEP 12: Assembly of Short Support Tube

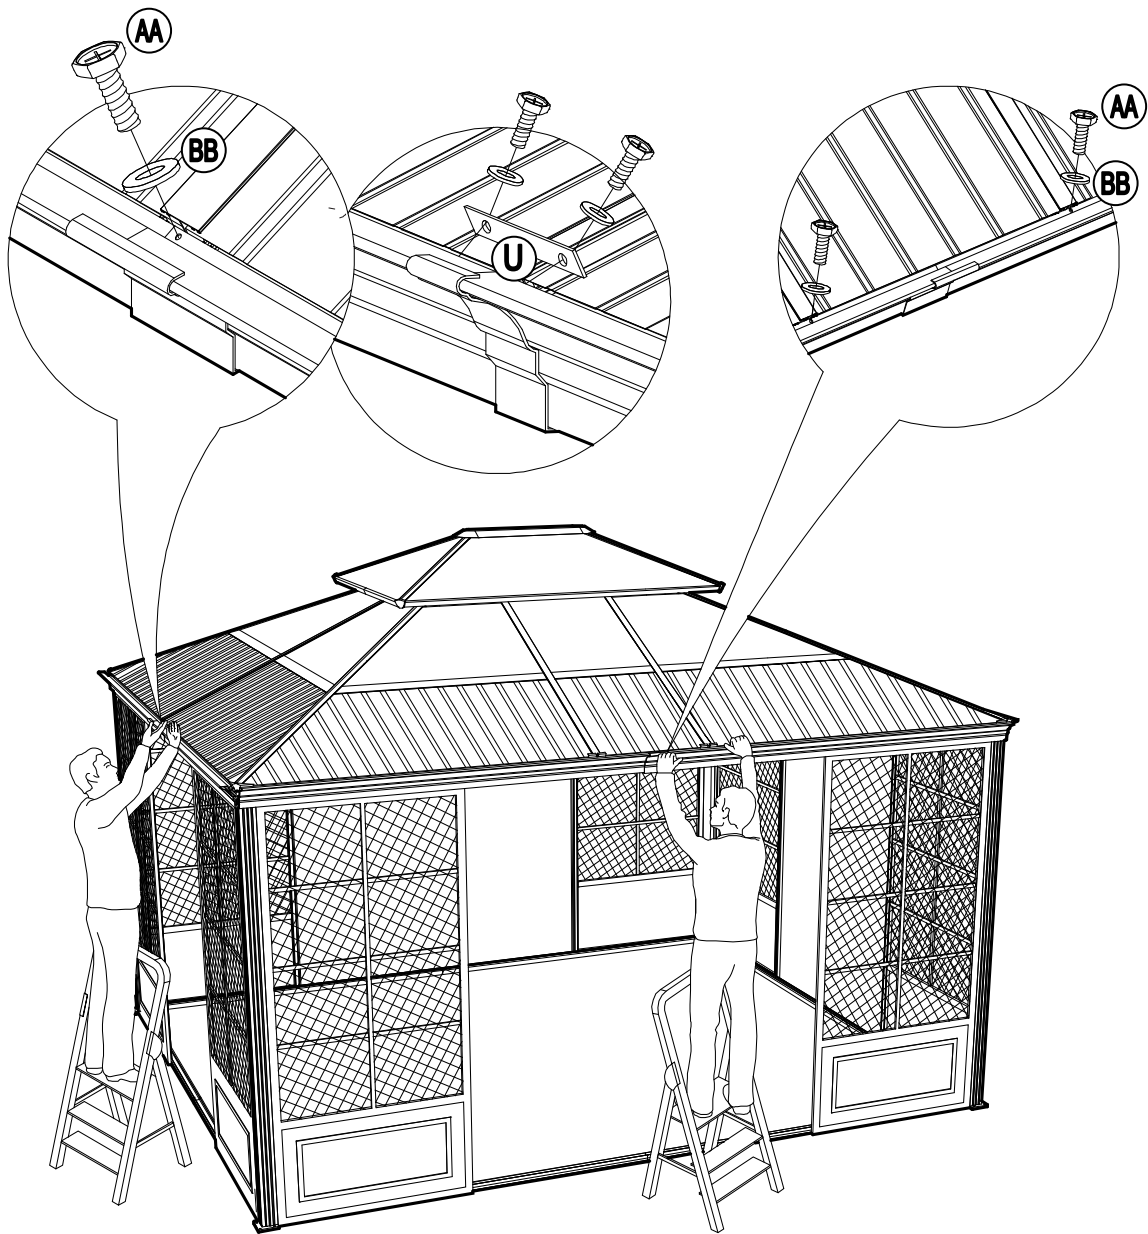 
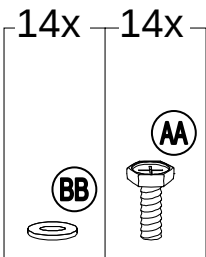 
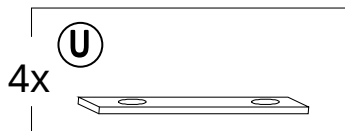 
STEP 13: Assembly of Small Top Long Side Cover Sheet

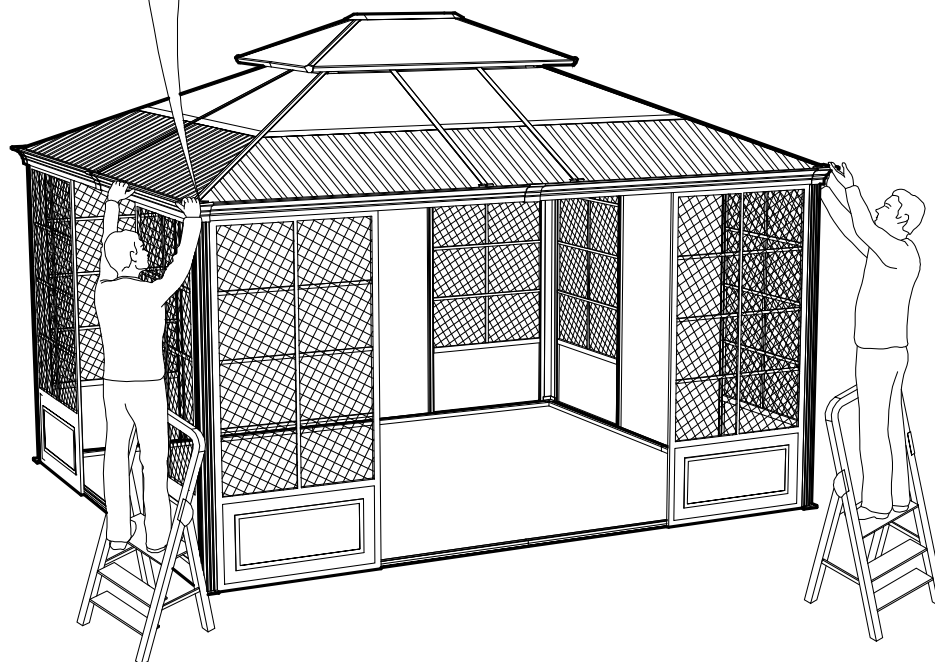 
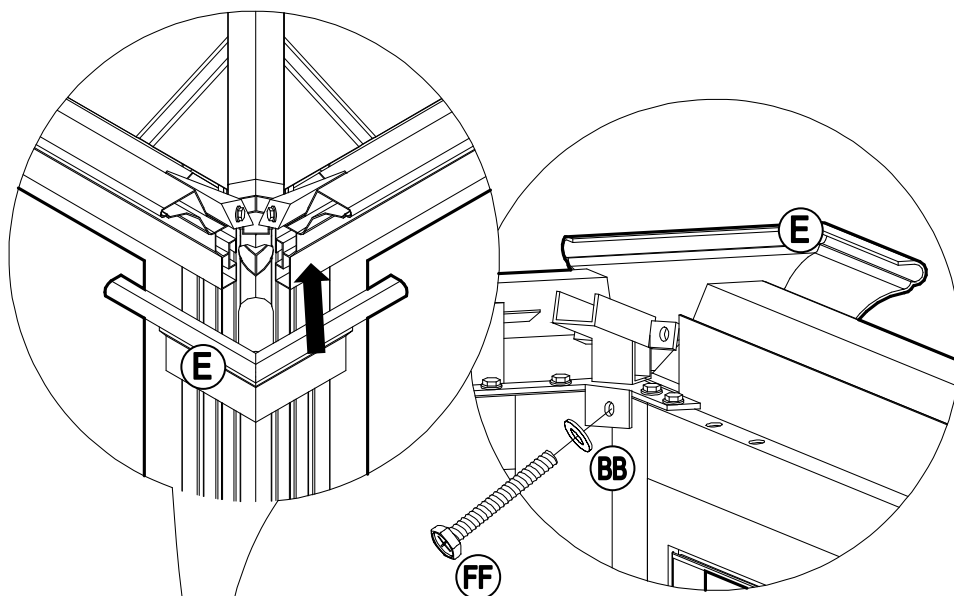 
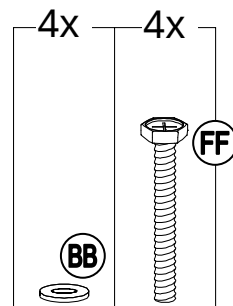 
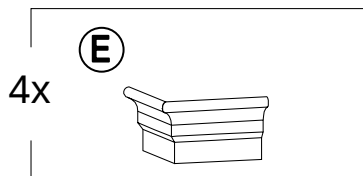 
STEP 14: Assembly of Sunshine Plate and I-Shaped Slot

STEP 15: Assembly of Left Baffle For Slant Beam and Cover Piece

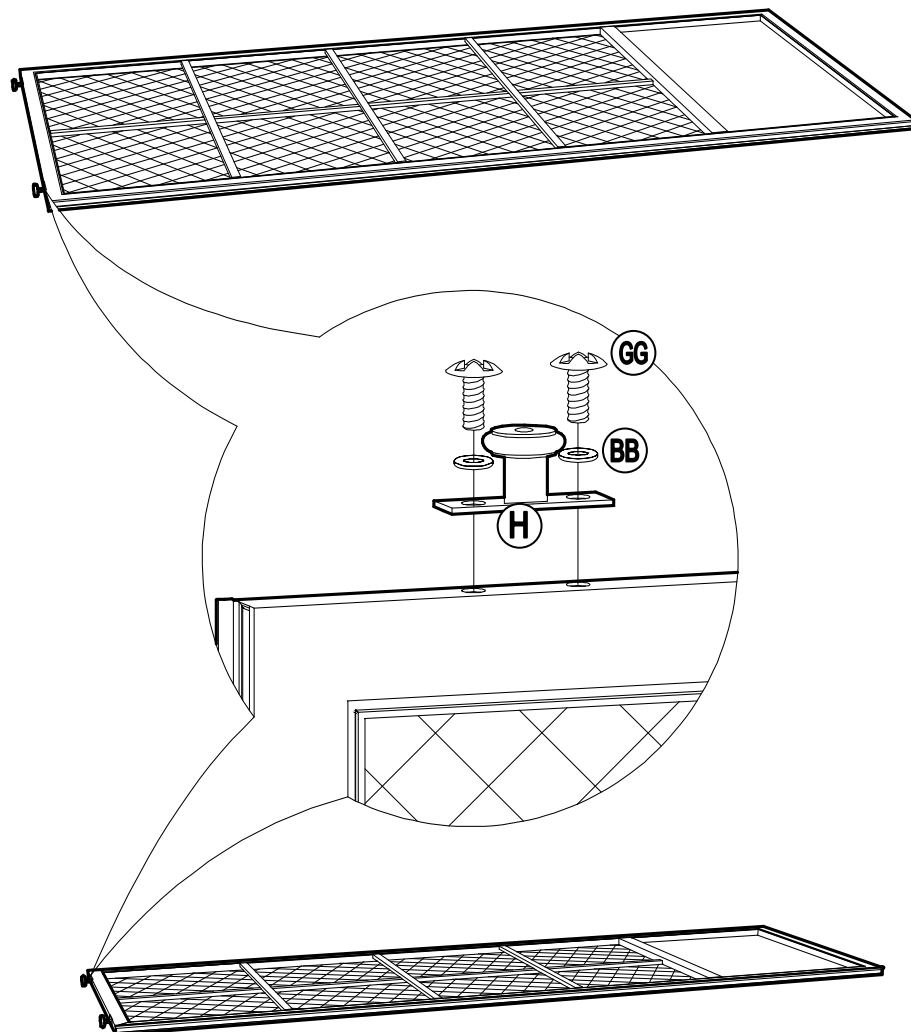 
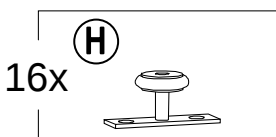 
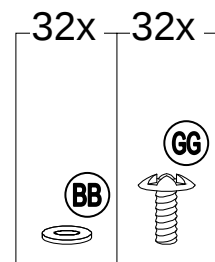 
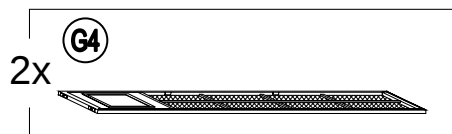 
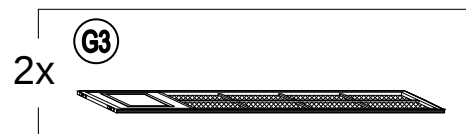 
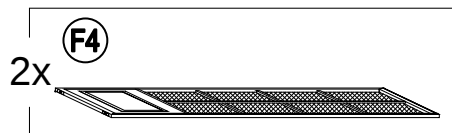 
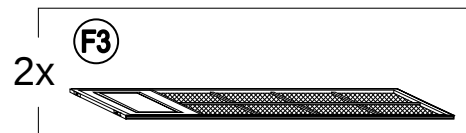 
STEP 16: Assembly of Long Side Left Decorative Groove

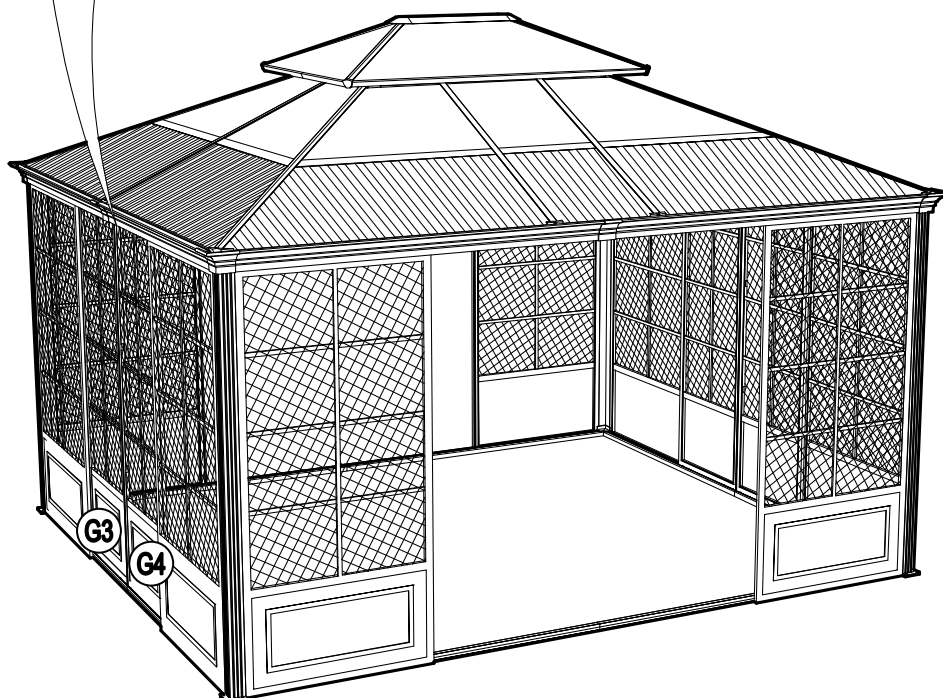 
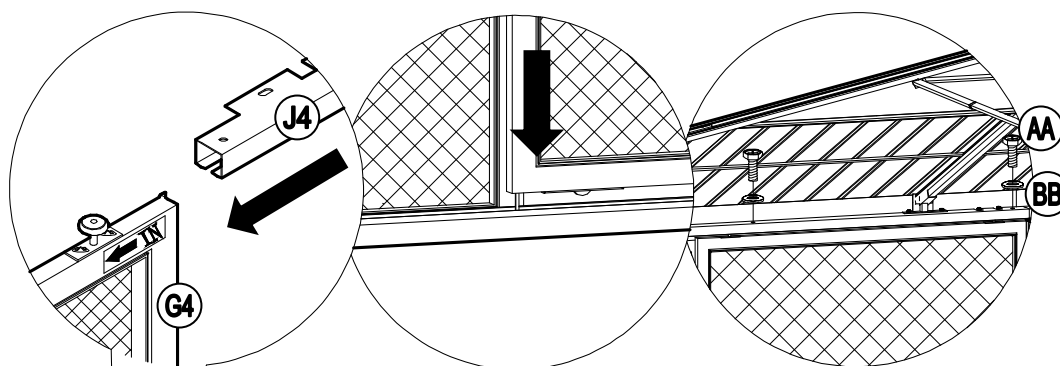 
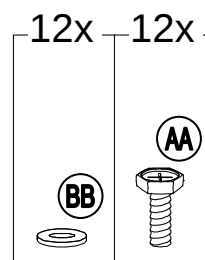 
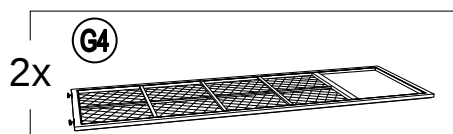 
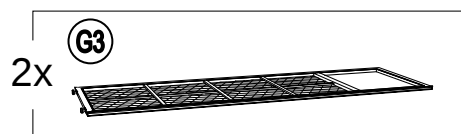 
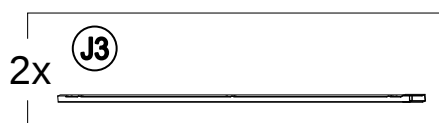 
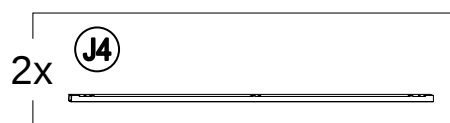 
STEP 17: Assembly of Decorative Groove Connecting Piece

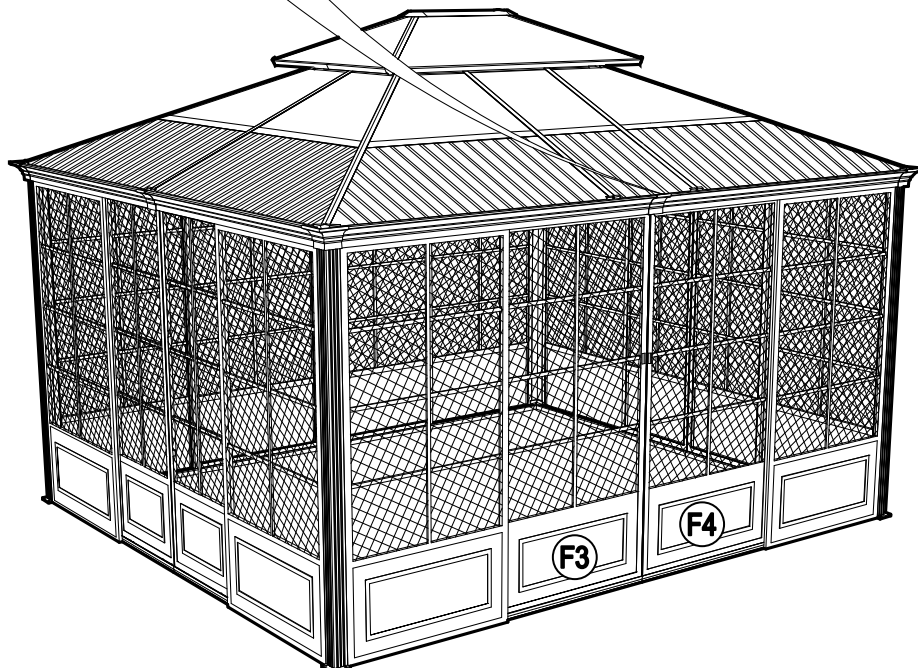 
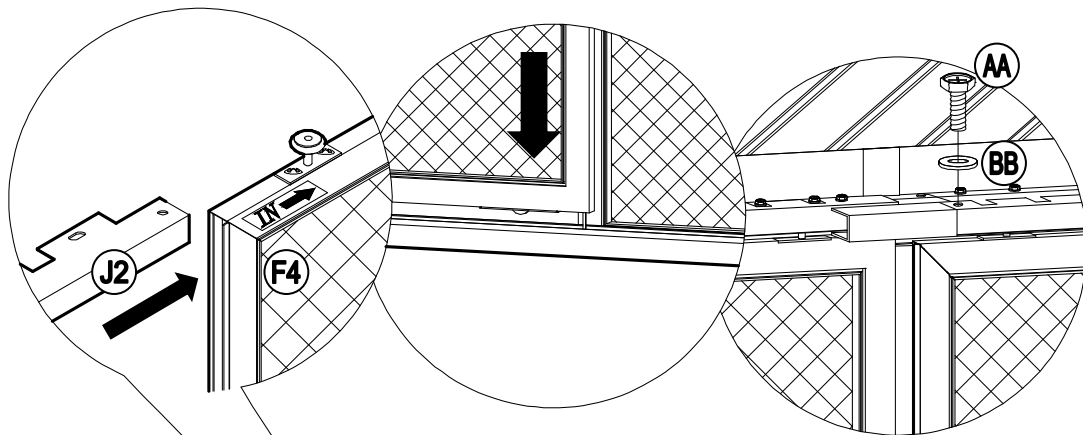 
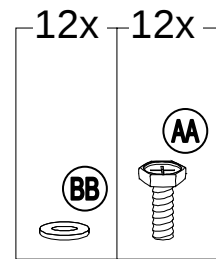 
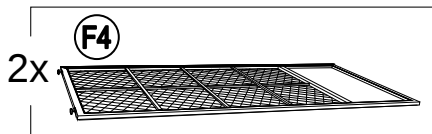 
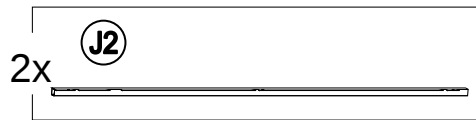 
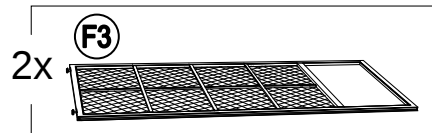 
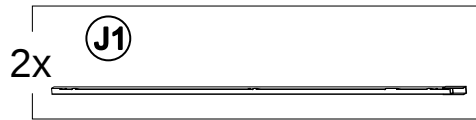 


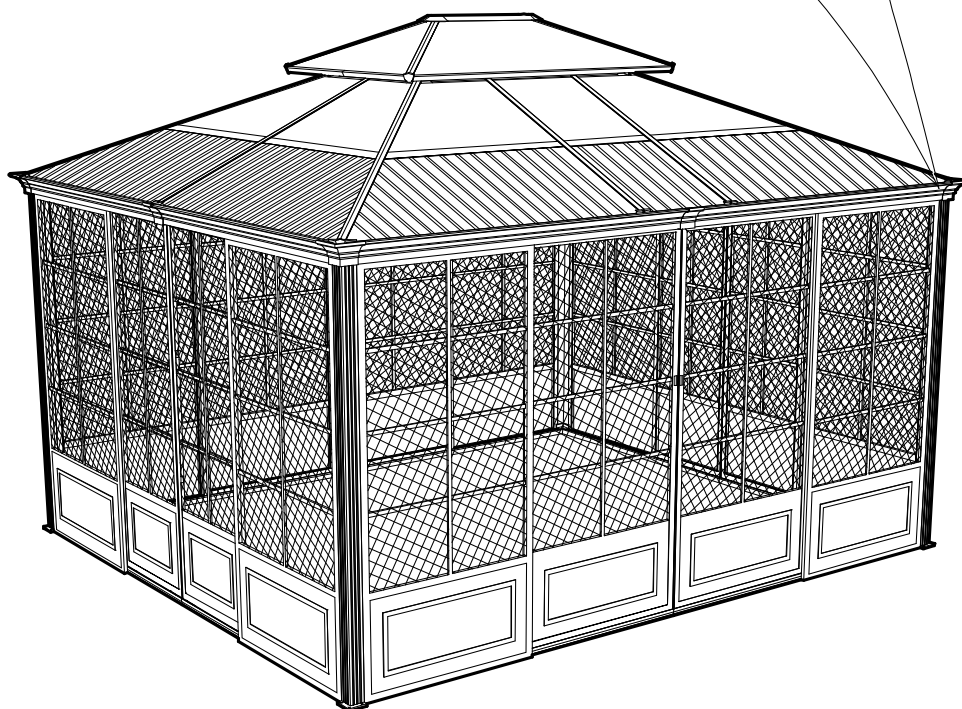 
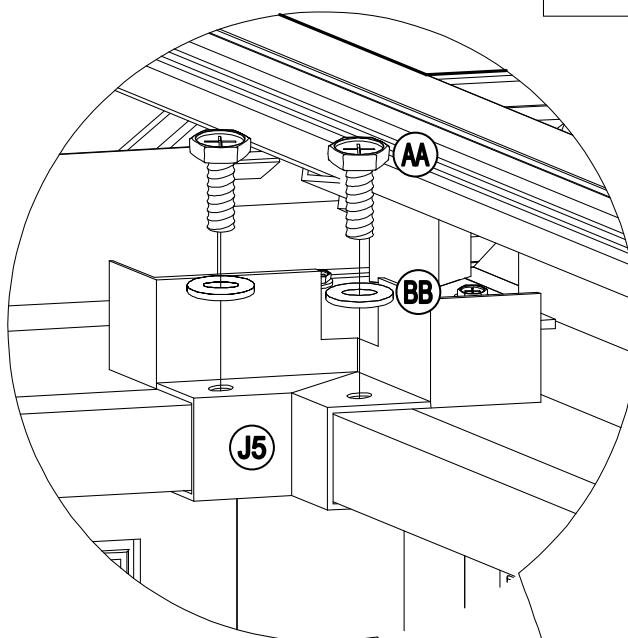 
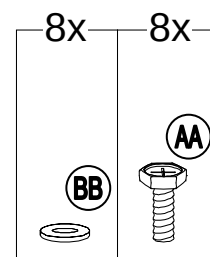 
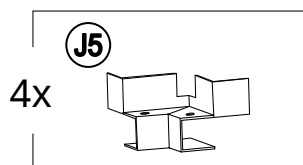 
STEP 18: Assembly of Corner Trim

STEP 19: Assembly of Sliding Door and Pulley

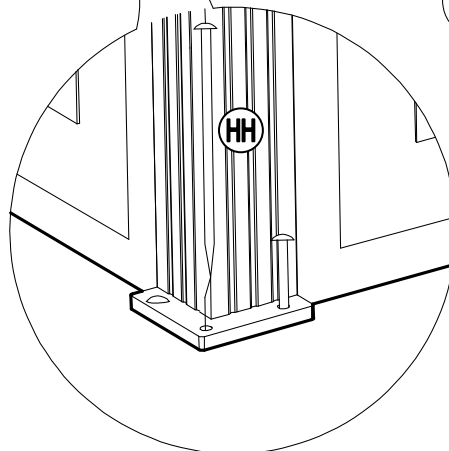 
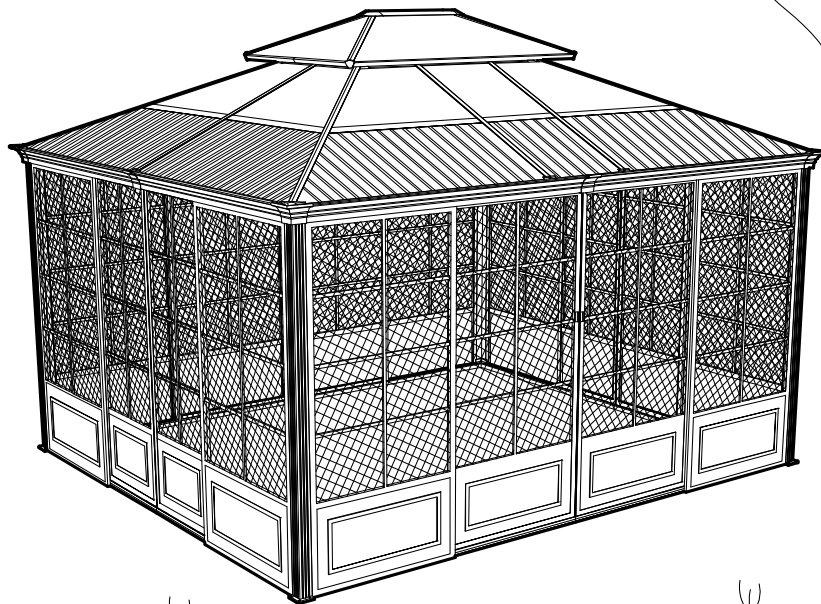 
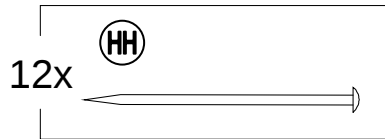 


STEP 20: Assembly of Short Guide

STEP 21: Assembly of Long Guide

STEP 22: Assembly of Guide Rail Baffles

STEP 23: Assembly of Stake



CARE AND MAINTENANCE

- Before using, clean the product completely with soft, dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely.
- Do not use strong detergent or abrasive cleaners on wood surface finish.
- Moisture and heat can damage any wood finish. Protect your furniture by using coasters and trivets. Always wipe up spilled liquid promptly and dry with a soft cloth.
- Avoid dragging sharp or rough objects across the surface of your wood furniture. Use coasters or placemats to help prevent scratches on the wood surface.
- Wood will expand and contract with seasonal humidity changes. Maintain consistent humidity levels to minimize movement in the wood and prevent warping.
- Over time, strong sunlight will change the color of the furniture. Do have curtain or window shades to block out direct strong sunlight.
- Dust regularly
- Clean with damp cloth whenever necessary.
- Periodically check and ensure that all bolts are well-tighten during use

SIX MONTHS LIMITED WARRANTY

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The manufacturer warrants this item is free of defects in material and workmanship for a period of six months. If any defect is found, please call our customer service department at 1-866-578-6569 or email at Customer.care@sunjoygroup.com for help. The manufacturer will not cover transportation or delivery costs or compensate the individual or any outside party for assembling or disassembling the product.