 


Assembly Instructions

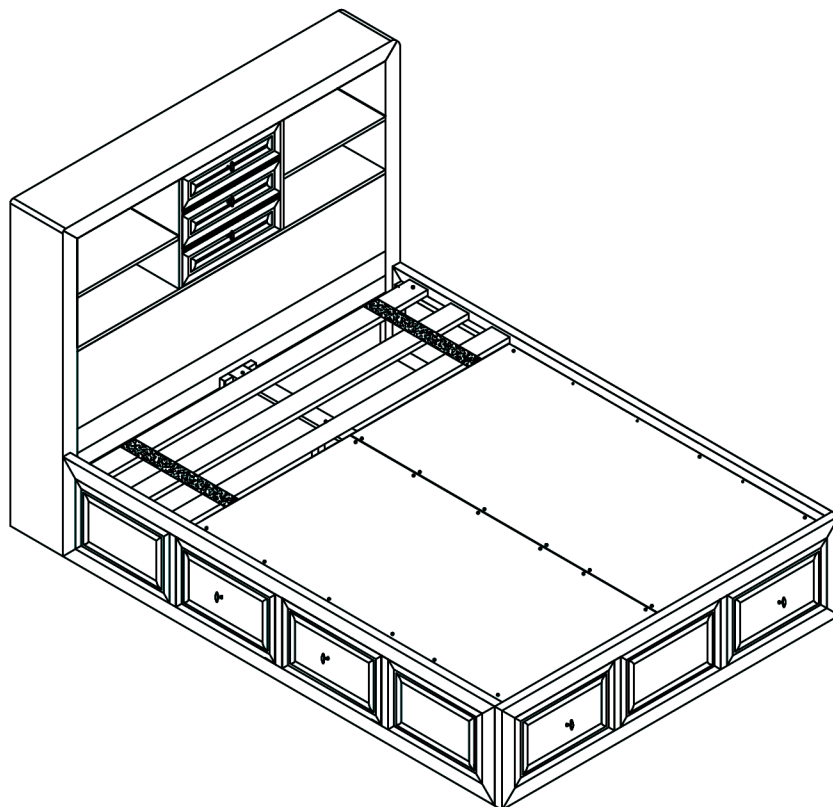

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

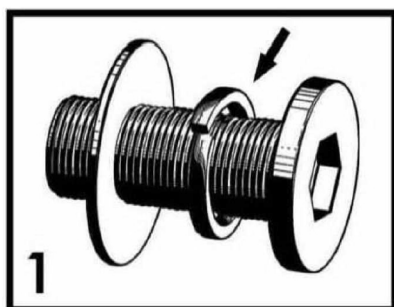


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

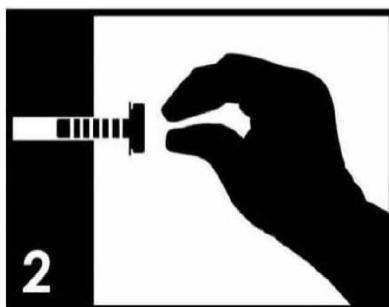


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

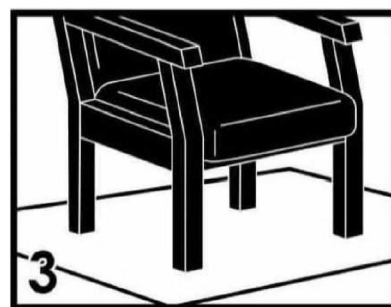


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

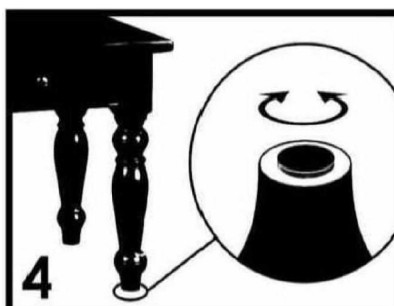

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

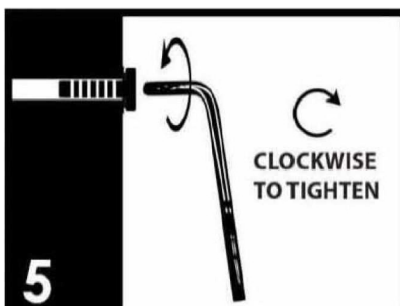

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

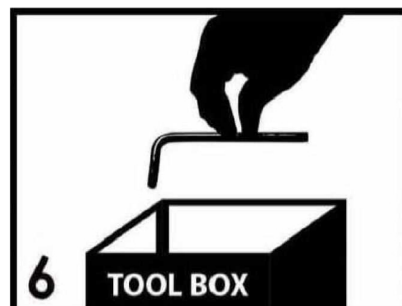


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

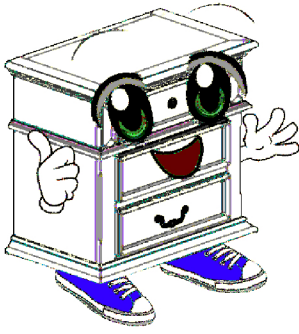


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

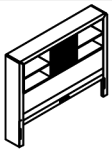


#1 x 1pc
Headboard Panel

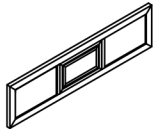


#2 x 1pc
Footboard Panel

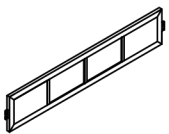 

#3 x 2pcs
Bed Rail

 


#4 x 3pcs
Support Rail

 


#5 x 4pcs
Leg Support



#6 x 1pc
Center Rail

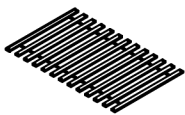


#7 x 1Set
Slats (13pcs)

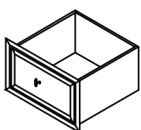

#8 x 6pcs
Drawer

 
Hardware List




#A x 22pcs
Screw (ø4 x 30mm)




#B x 24pcs
Screw (ø4 x 5/8")

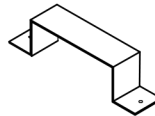

#C x 6pcs
U Shaped Lock

 

#D x 12pcs
Screw (ø4 x 3/4")

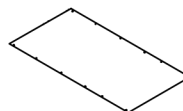


#9 x 2pcs
Dust Board




Hook each end of the bed rails (#3) onto the slots along the headboard panel (#1).

#1

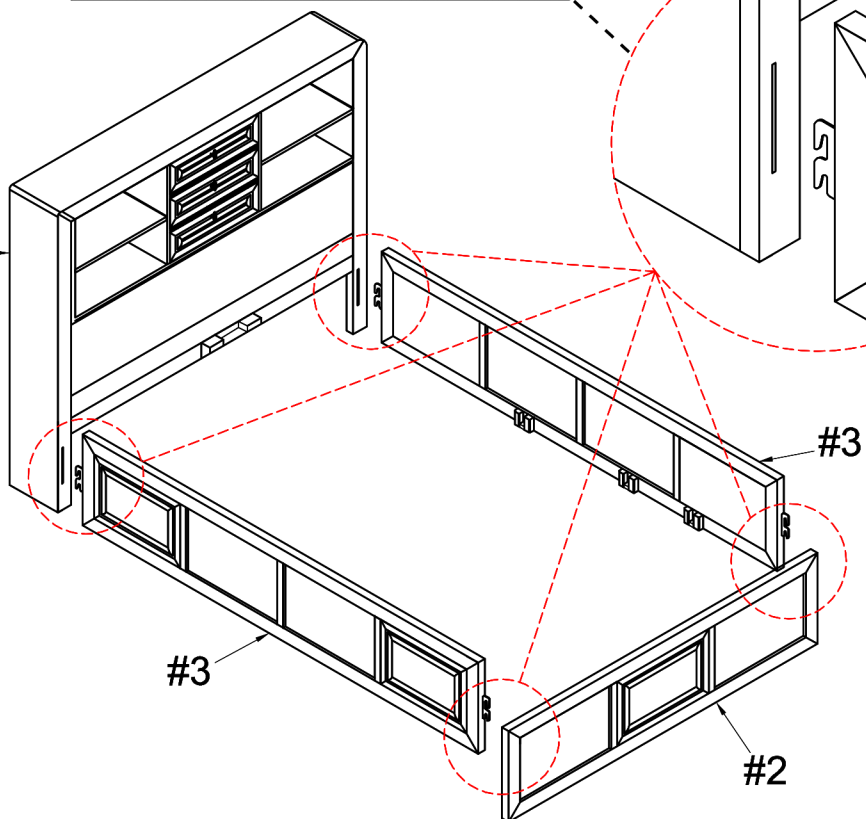

Place the support rails (#4) onto the slots along the bed rails (#3), then insert a screw (#A) into each hole. Secure using a screwdriver.

#A x 6 pcs

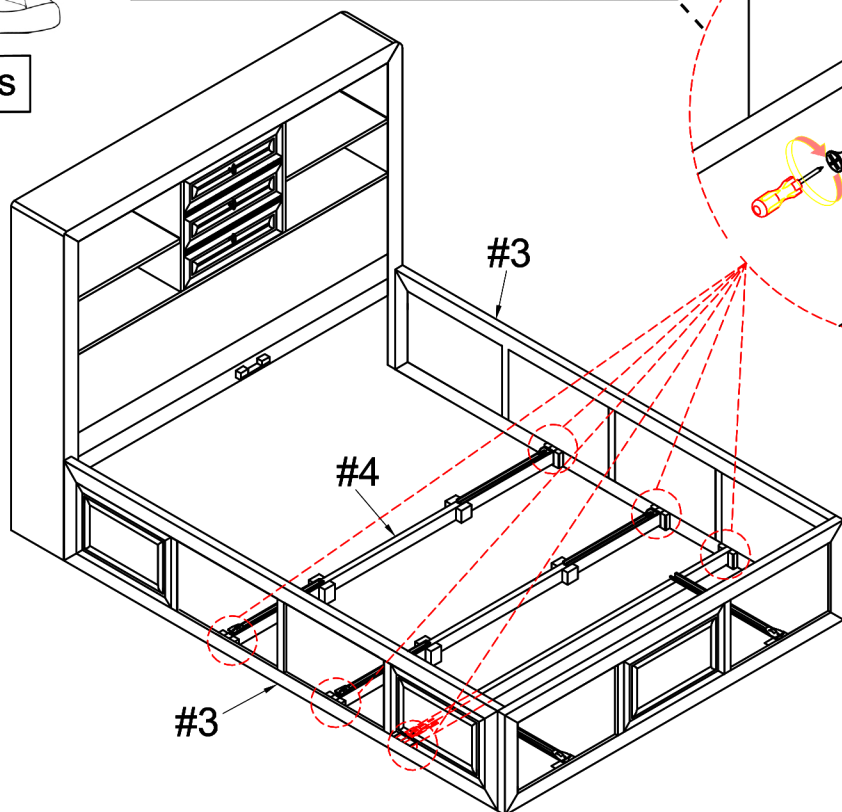




#3

#A x 2pcs
#C x 6pcs
#D x 12pcs

1) Align and straighten support rails (#4).

2) Place U shaped lock (#C) to the back rail, then secure with screws (#D).

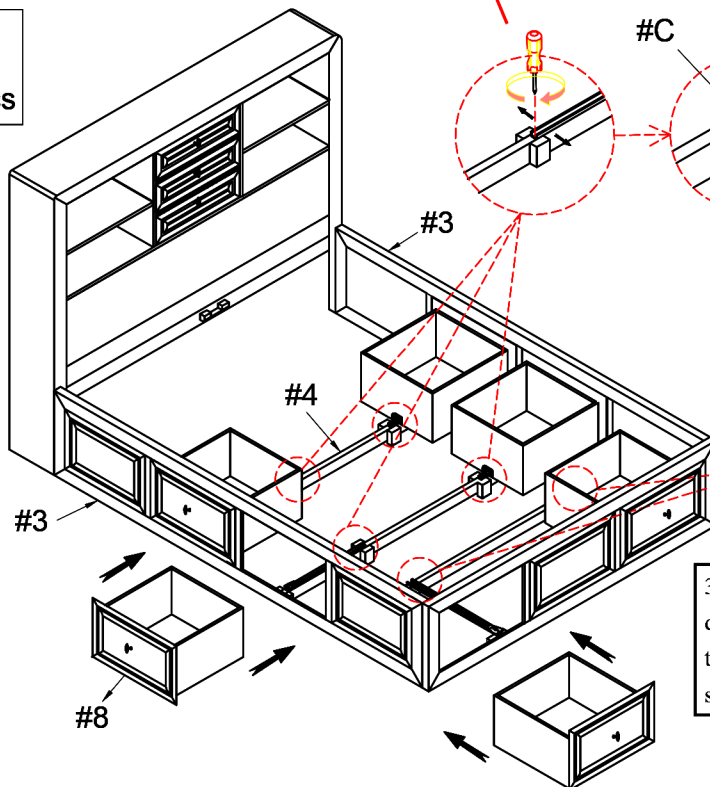

3) Align the footboard drawer rails straight, then secure with screws (#A).

4) Place U shaped lock (#C) to the back of the rail, then secure with screws (#D).



#4


Insert the threaded end of the support legs into the holes along the center rail (#6), then turn right to tighten.

#6


#5

Adjust according to the ground level.

leveler

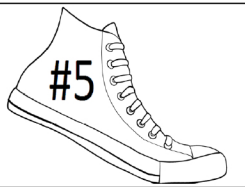


#A x 2 pcs

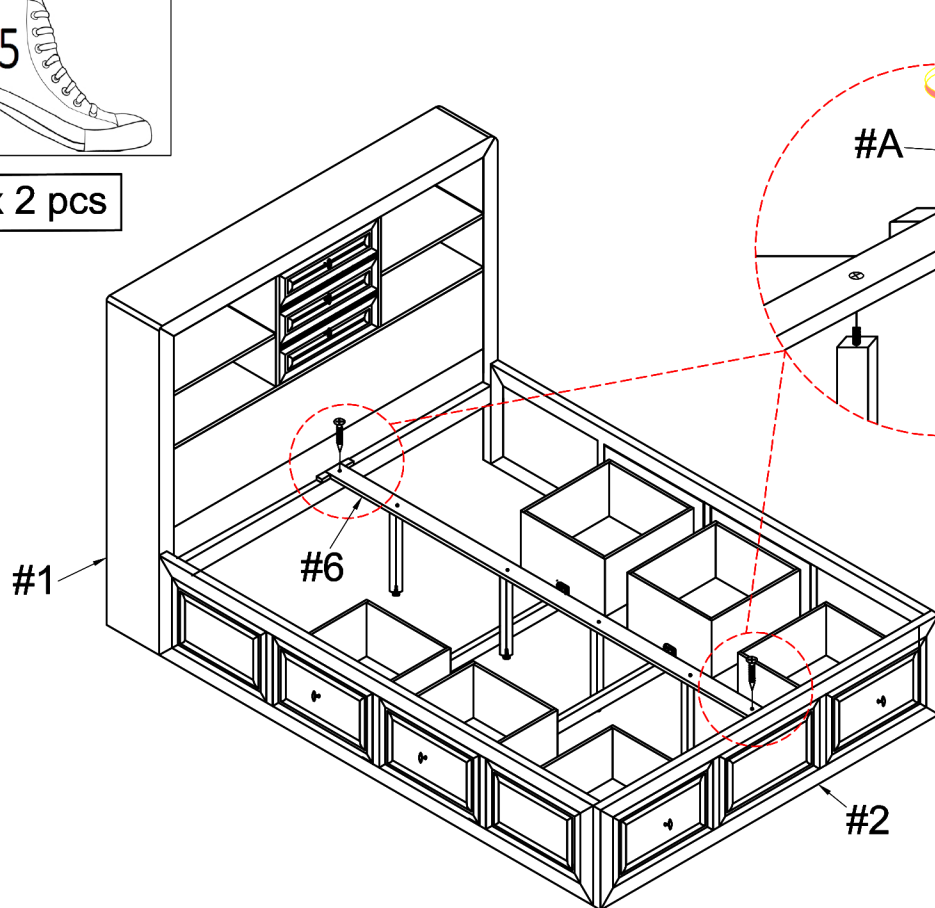

Place the center rail (#6) onto the center slots along the headboard and footboard. Insert a screw (#A) into each end and secure using a screwdriver.





#A x 12 pcs

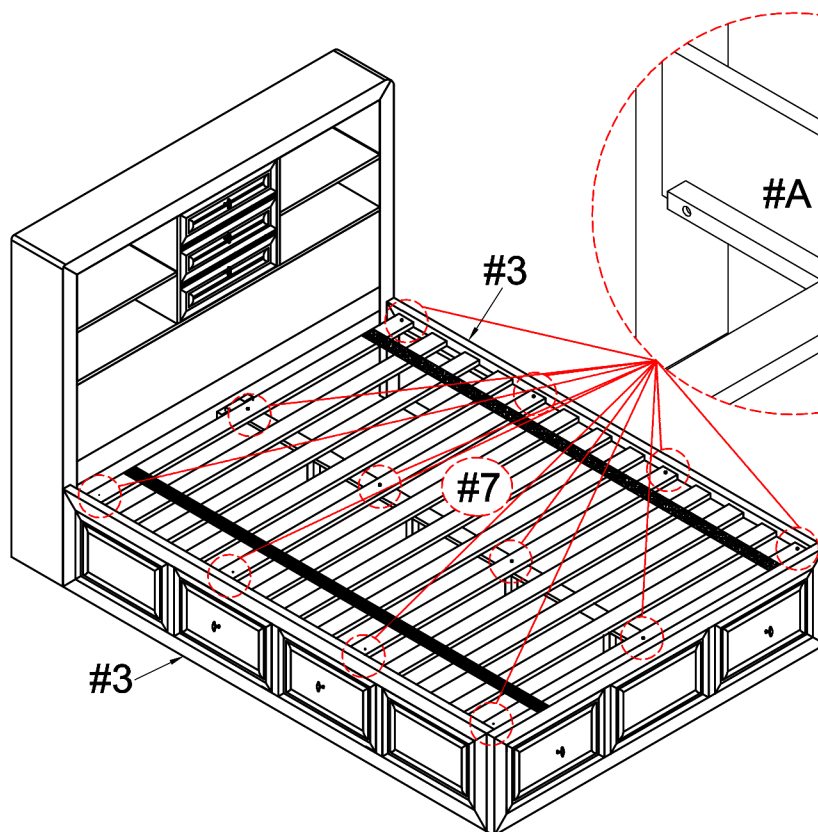


Place the slats (#7) onto the rails, then insert a screw (#A) into each hole. Secure using a screwdriver.



#B x 24 pcs

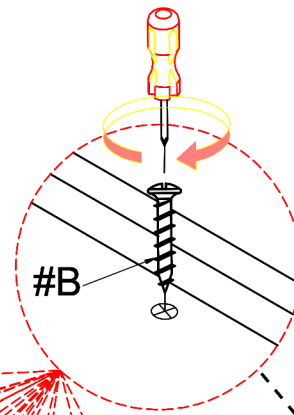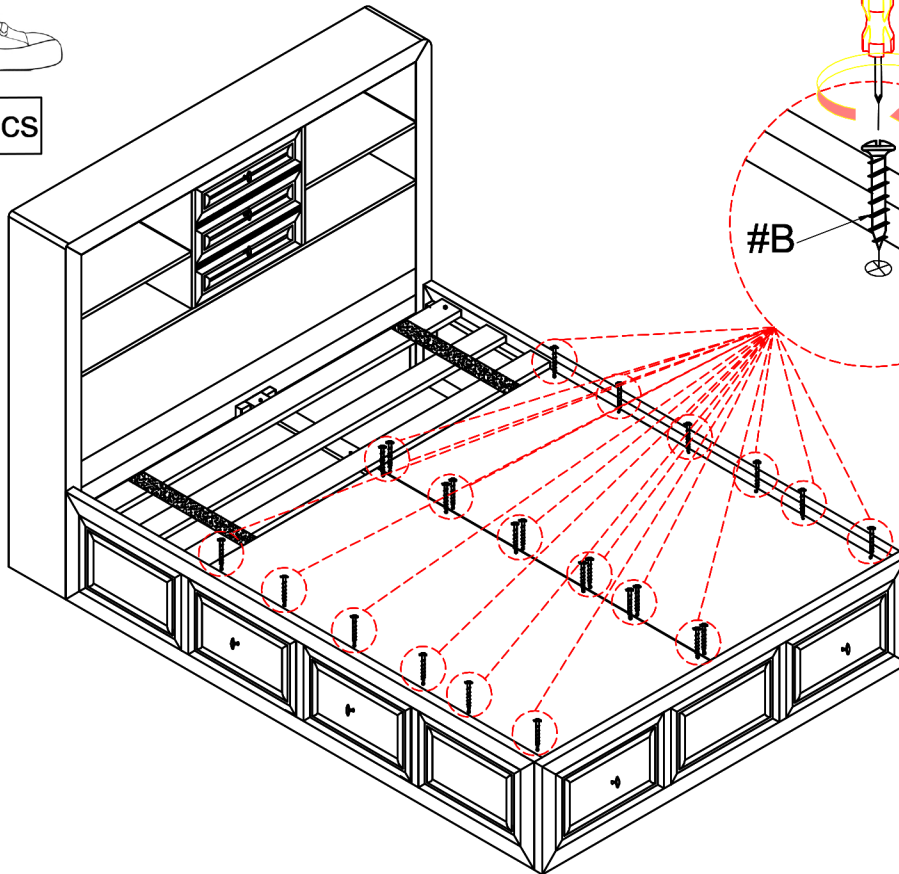


Place the dust boards (#9) onto the bottom end of the slats, then insert a screw (#B) into each hole. Secure using a screwdriver.

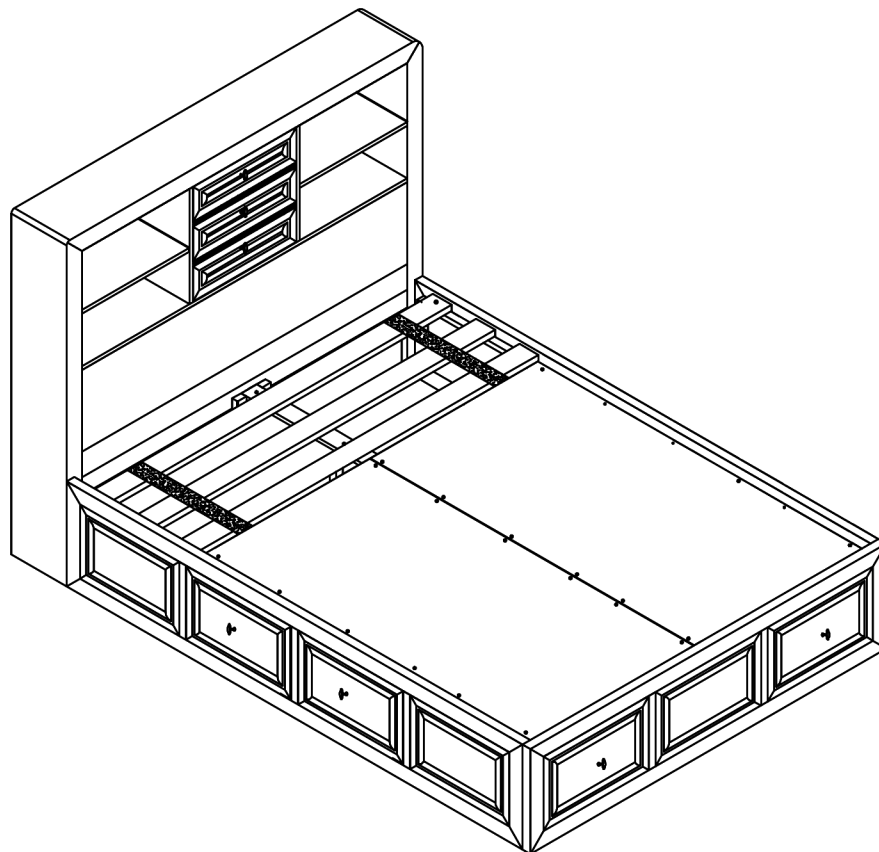

ASSEMBLY IS COMPLETED

Assembly Instructions

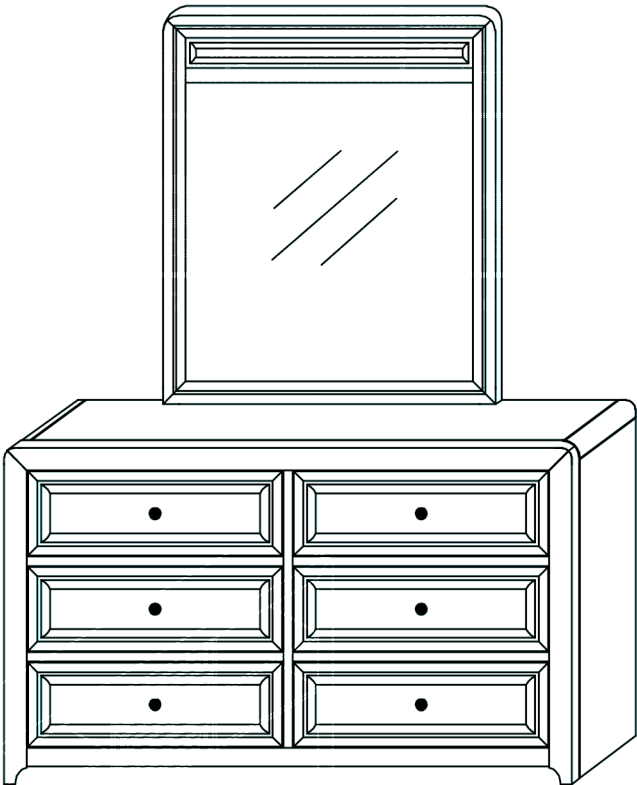

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY

DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

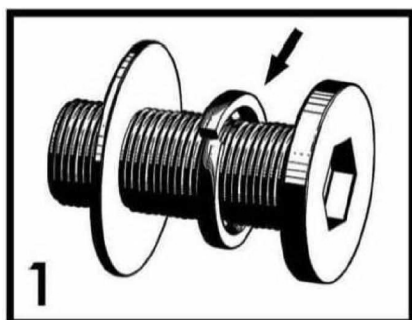

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

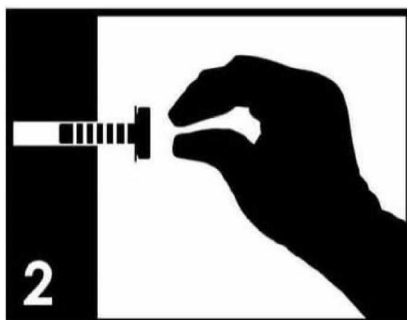

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

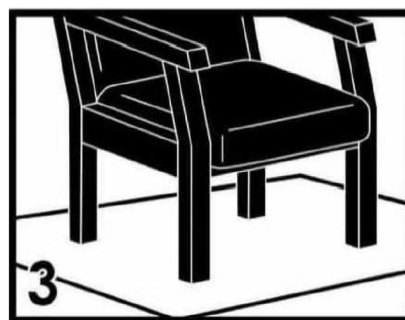

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

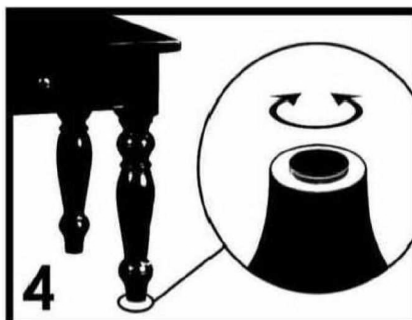

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

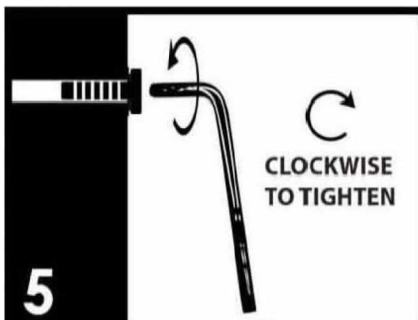

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

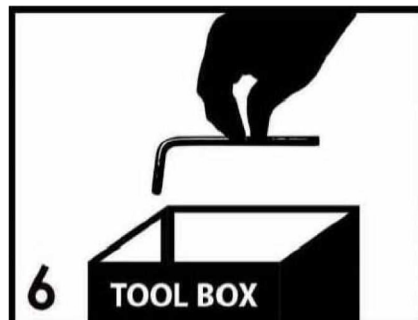


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

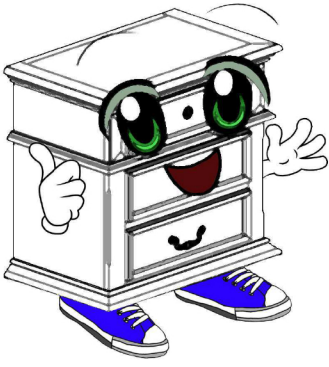

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List



#1 x 1pc
Dresser



#2 x 1pc
Mirror



#3 x 2pcs
Mirror Support

Hardware List



#A x 6pcs
Bolt Ø1/4 x 1-3/8"



#B x 6pcs
Lock Washer



#C x 6pcs
Flat Washer




#D x 1pc
Allen Wrench




1. Prepare 6 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).


#A x 6pcs
#B x 6pcs
#C x 6pcs

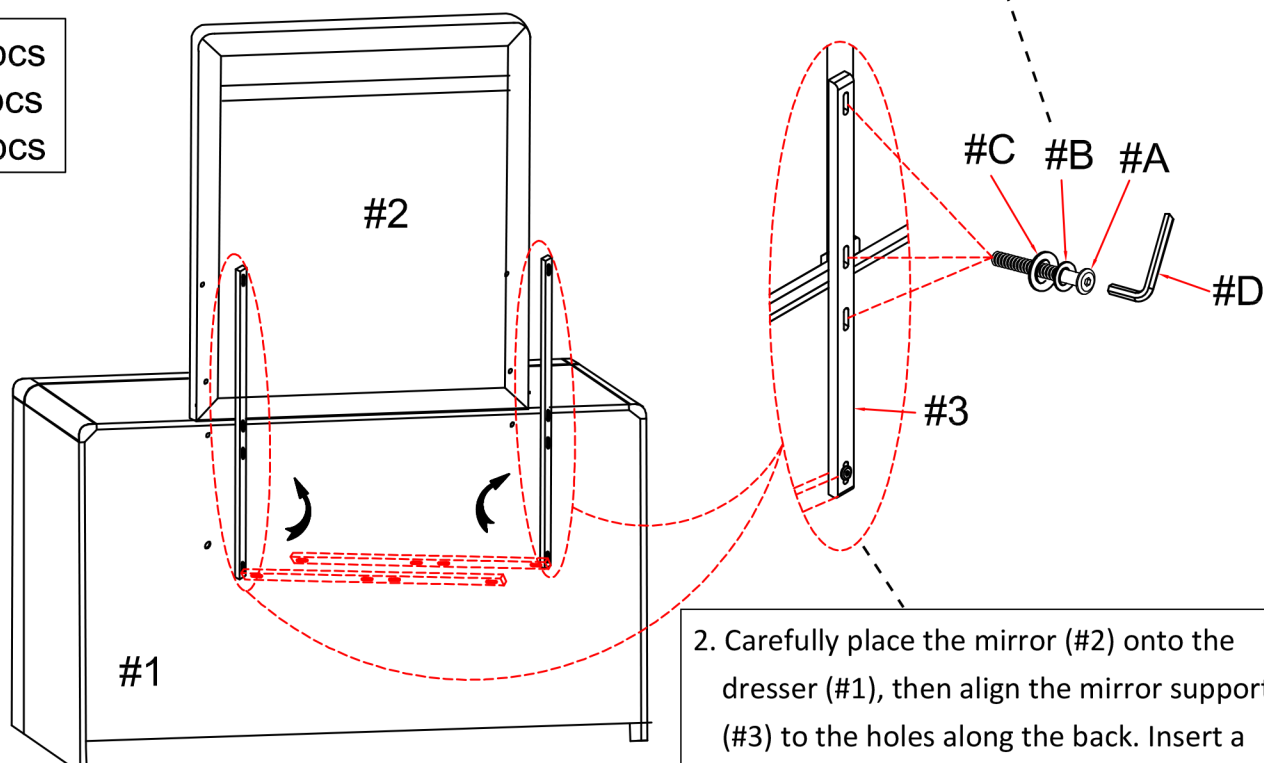

2. Carefully place the mirror (#2) onto the dresser (#1), then align the mirror supports (#3) to the holes along the back. Insert a bolt assembly into each hole and secure.

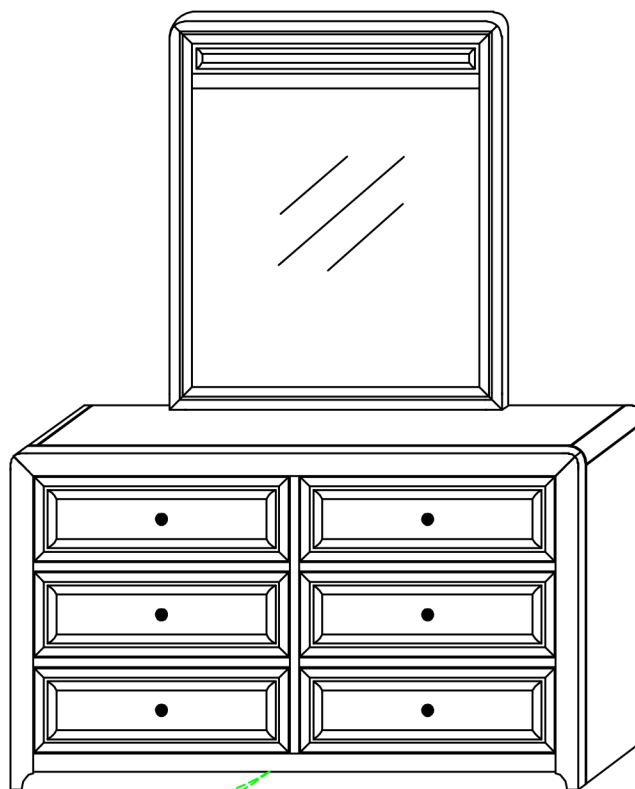

Adjust the leveler according to the ground level.

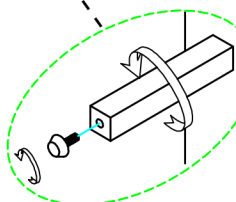

ASSEMBLY IS COMPLETED