## **CARE AND MAINTENANCE**

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.


## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## **Part List and Hardware List**

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	top panel		1X
В	bottom panel		1X
С	back panel		1X
D	left side panel		1X
Е	right side panel		1X
F	standing in the left panel		1X
G	standing in the right panel		1X
Н	standing panel inside		1X
I	door panel-1	$\Box$	1X
J	door panel-2		1X
К	door panel-3		1X
L	door panel-4		1X
М	metal legs	*	2X
N	supporting legs		1X
HW1	connecting lever		30X
HW2	fastening		30X
HW3	cover sticker		30X
HW4	wane 6*30MM		20X
HW5	screw 6*1.2*14MM		8X
HW6	push to open mechanism		4X
HW7	screw 4*1.5*12MM	-ammulj	8X
HW8	hinge	W. B	4X
HW9	hinge	CALES	4X
HW10	screw 4*1.5*14MM	-amma(j)	48X

**DIMENSIONS: 59"L x 15.75"D x 15.75"H** 

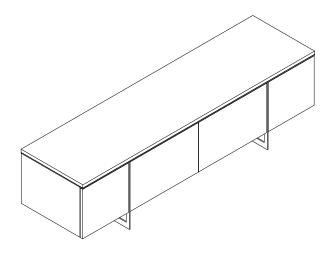


TV STAND TOTAL WEIGHT CAPACITY: 110 LBS


WARNING: DO NOT STAND ON TV STAND WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 40 minutes.


Tools Required for Assembly (included): Allen Key

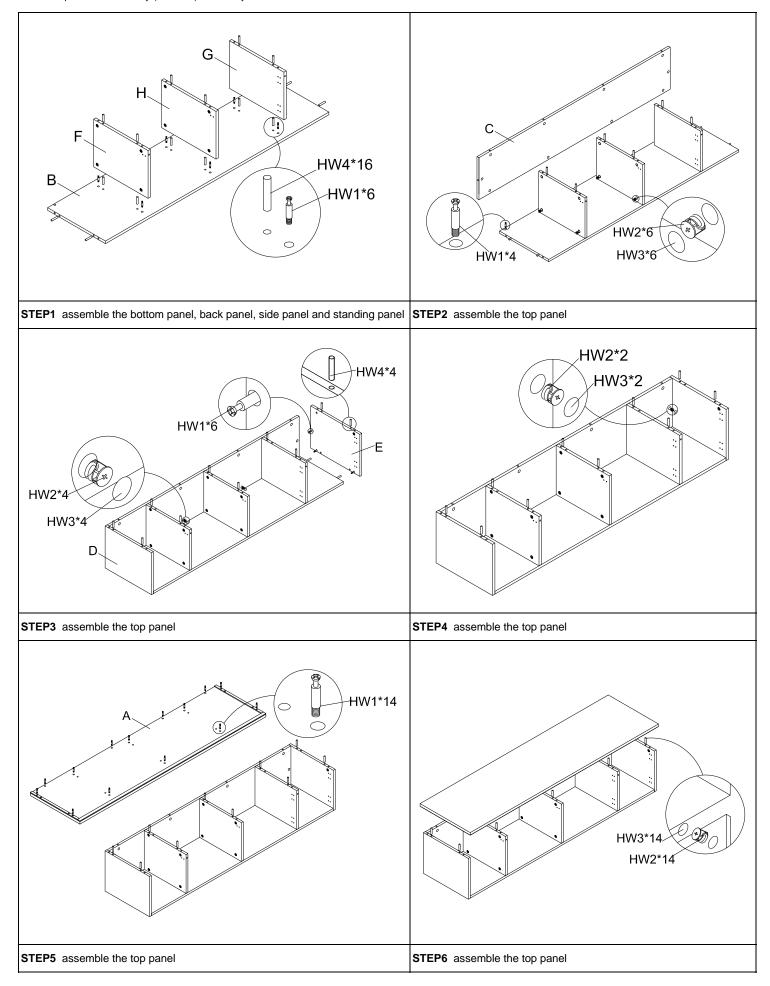


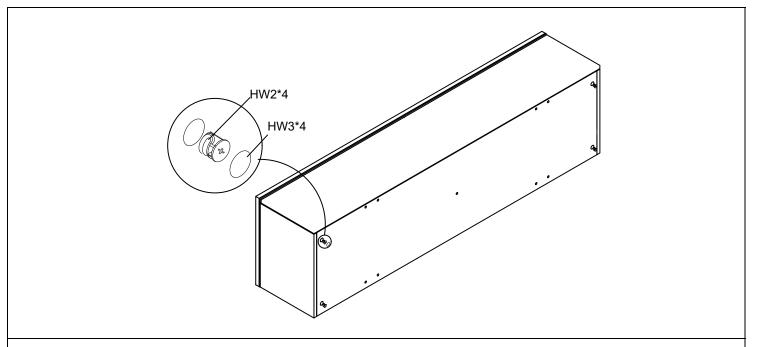


STEP7 assemble the top panel

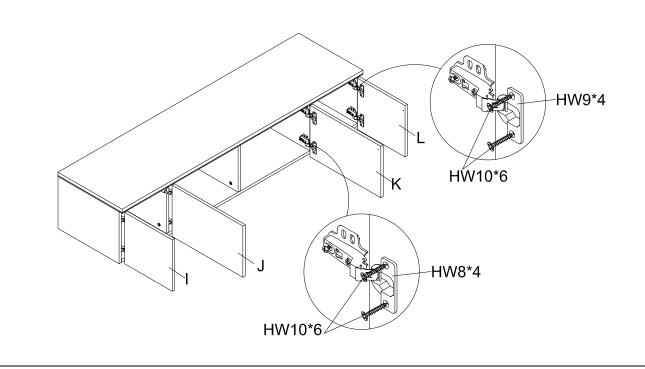

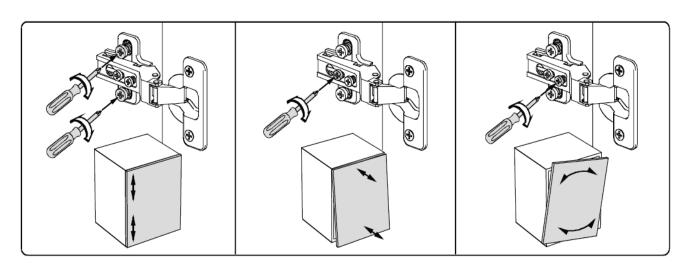

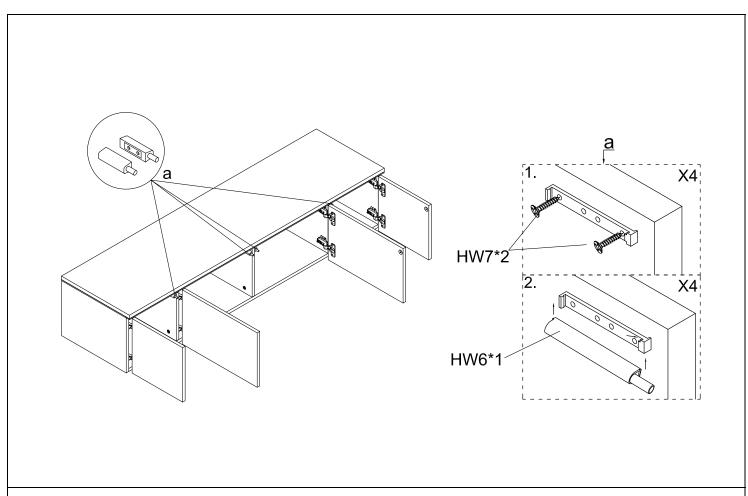

STEP9 assemble the push to open mechanism

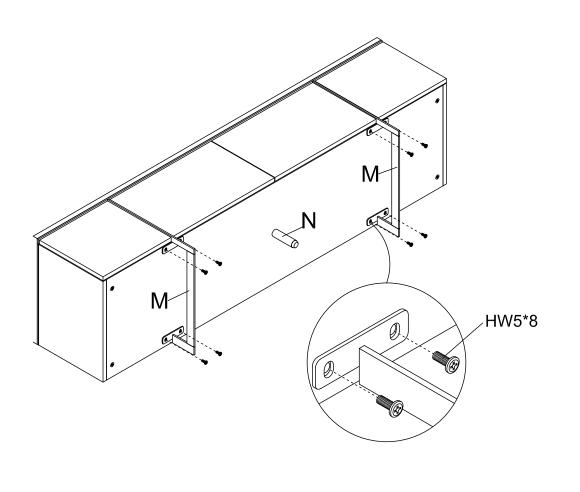

STEP10 assemble the metal legs and supporting legs