 
 
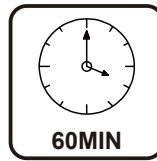 
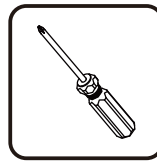 



INSTALLATION & ASSEMBLY

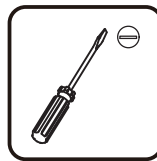


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

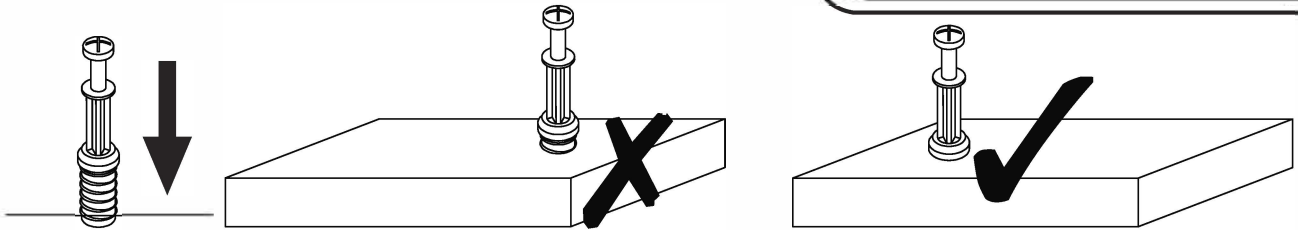

 
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

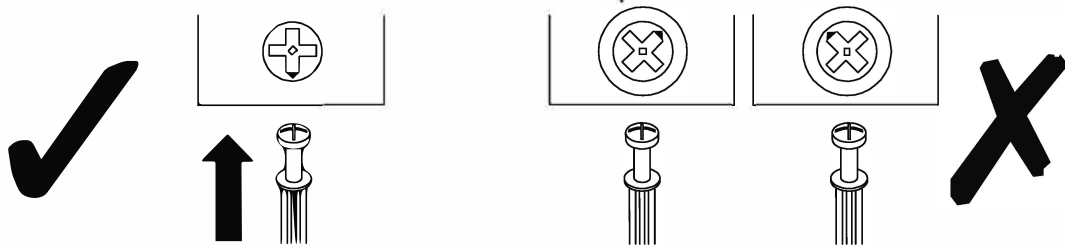








 
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








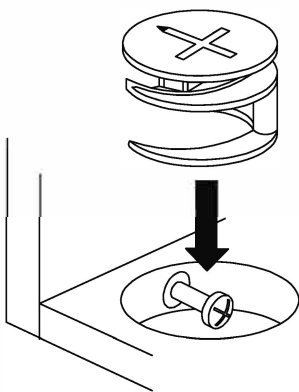




 
EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



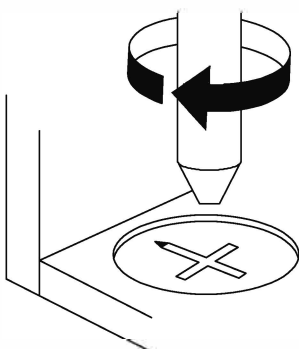


EN_Turn cam lock clockwise to tighten.

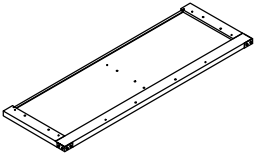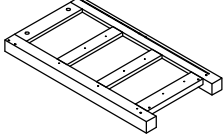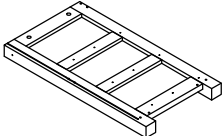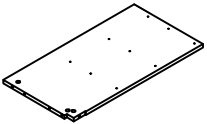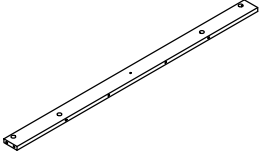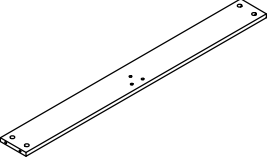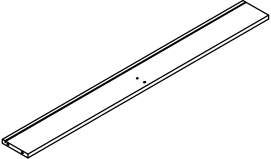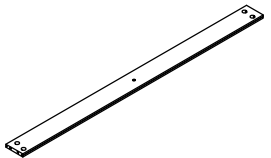        
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	

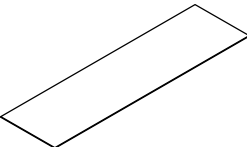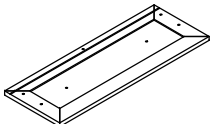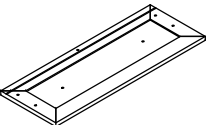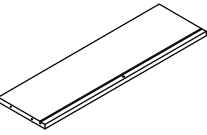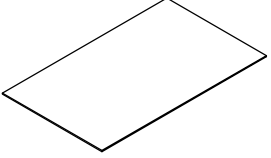        NO.	PARTS	QTY	SPARE
⑩		x2	
⑪		x3	
⑫		x3	
⑬		x6	
⑭		x6	
⑮		x6	
⑯		x6	
⑰		x6	
	 Hardware Kit		

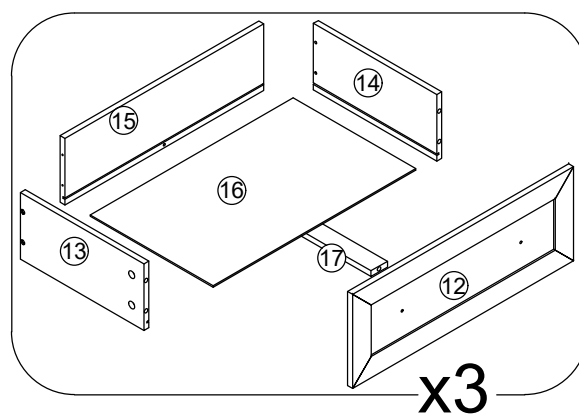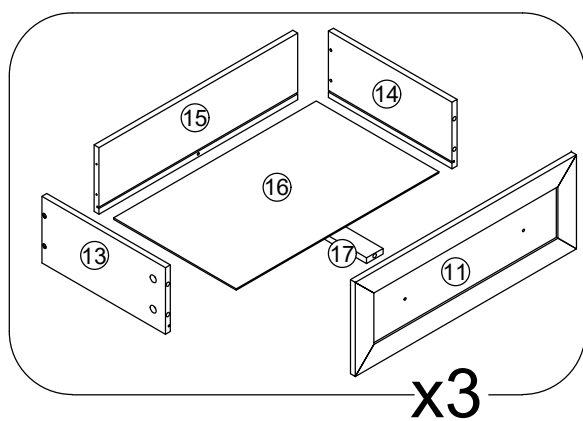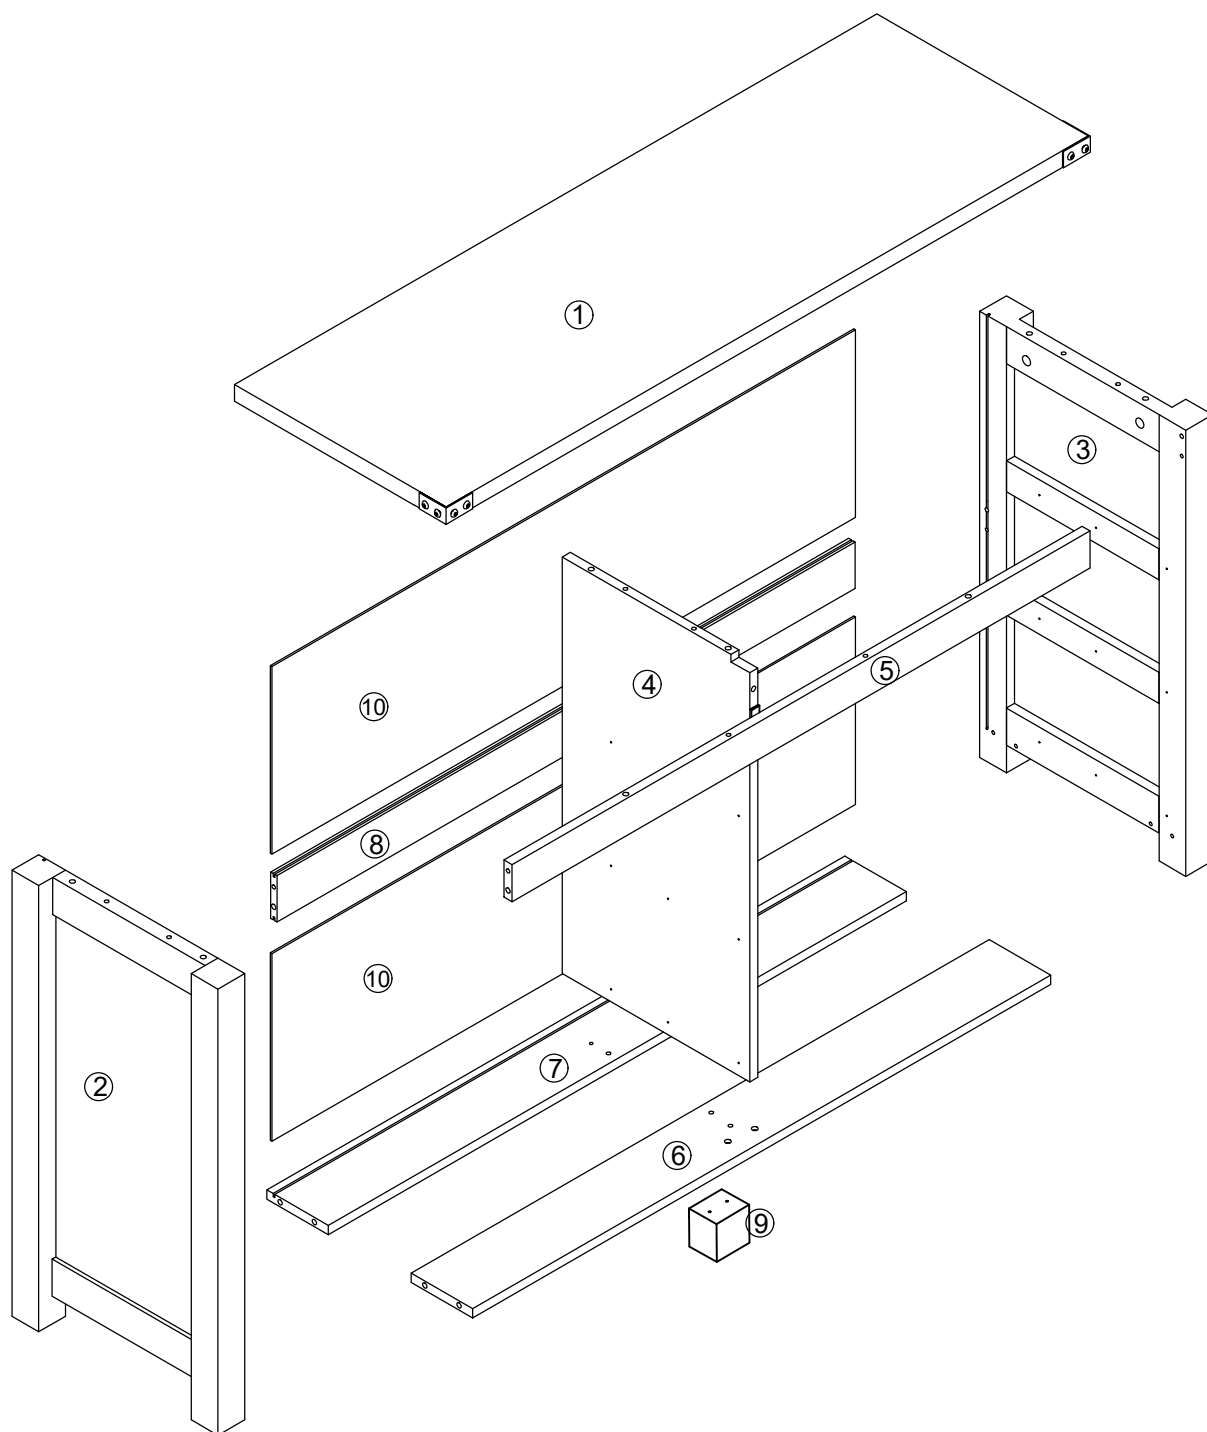   


    A x53 Ø6x35mm +3(spare)	 B x53 Ø15x10mm +3(spare)	 C x12 Ø6x30mm +1(spare)	 D x37 Ø4x35mm +2(spare)	 E x72 +3(spare)	 F x1
 G x4	 H x12 +1(spare)	 I x12	 J x12 +1(spare)	 K x12 Ø3x16mm +1(spare)	 L x2
 M x2 Ø4x14mm	 N x2 Ø6x30mm	 CL x6 L300mm	 CR x6 L300mm	 DL x6 L300mm	 DR x6 L300mm

 
01


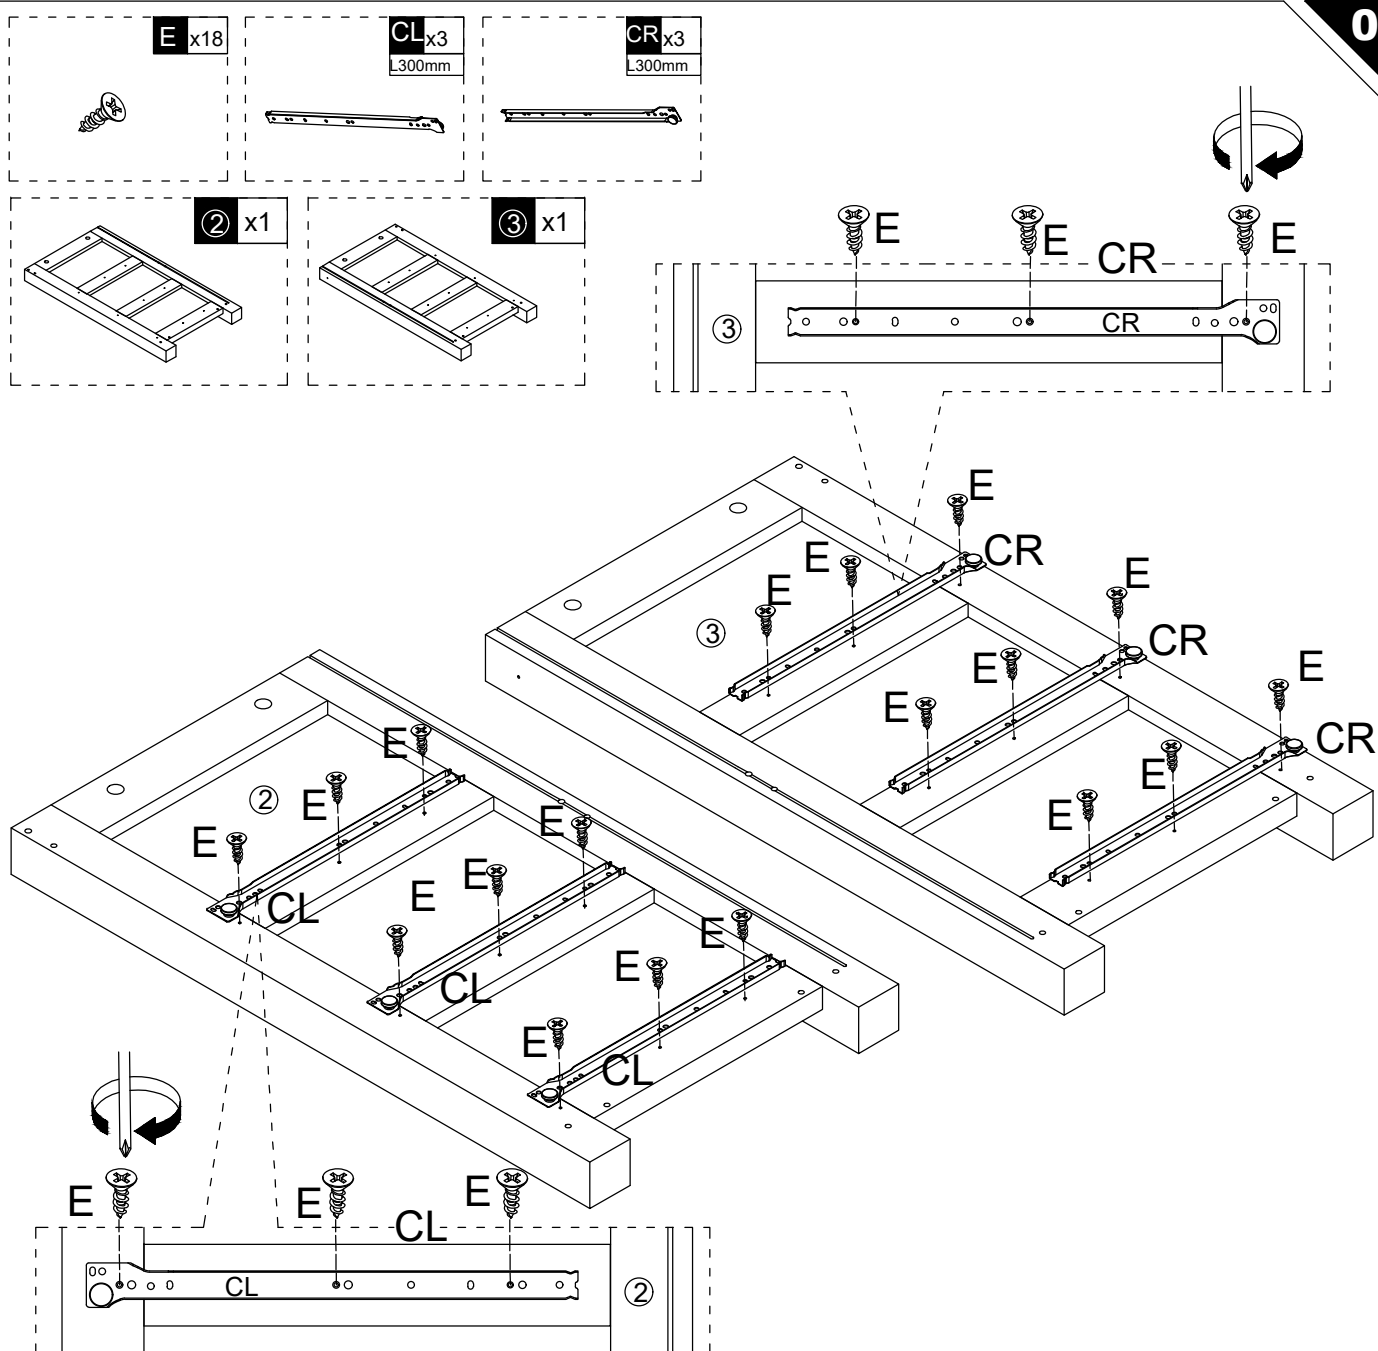



02

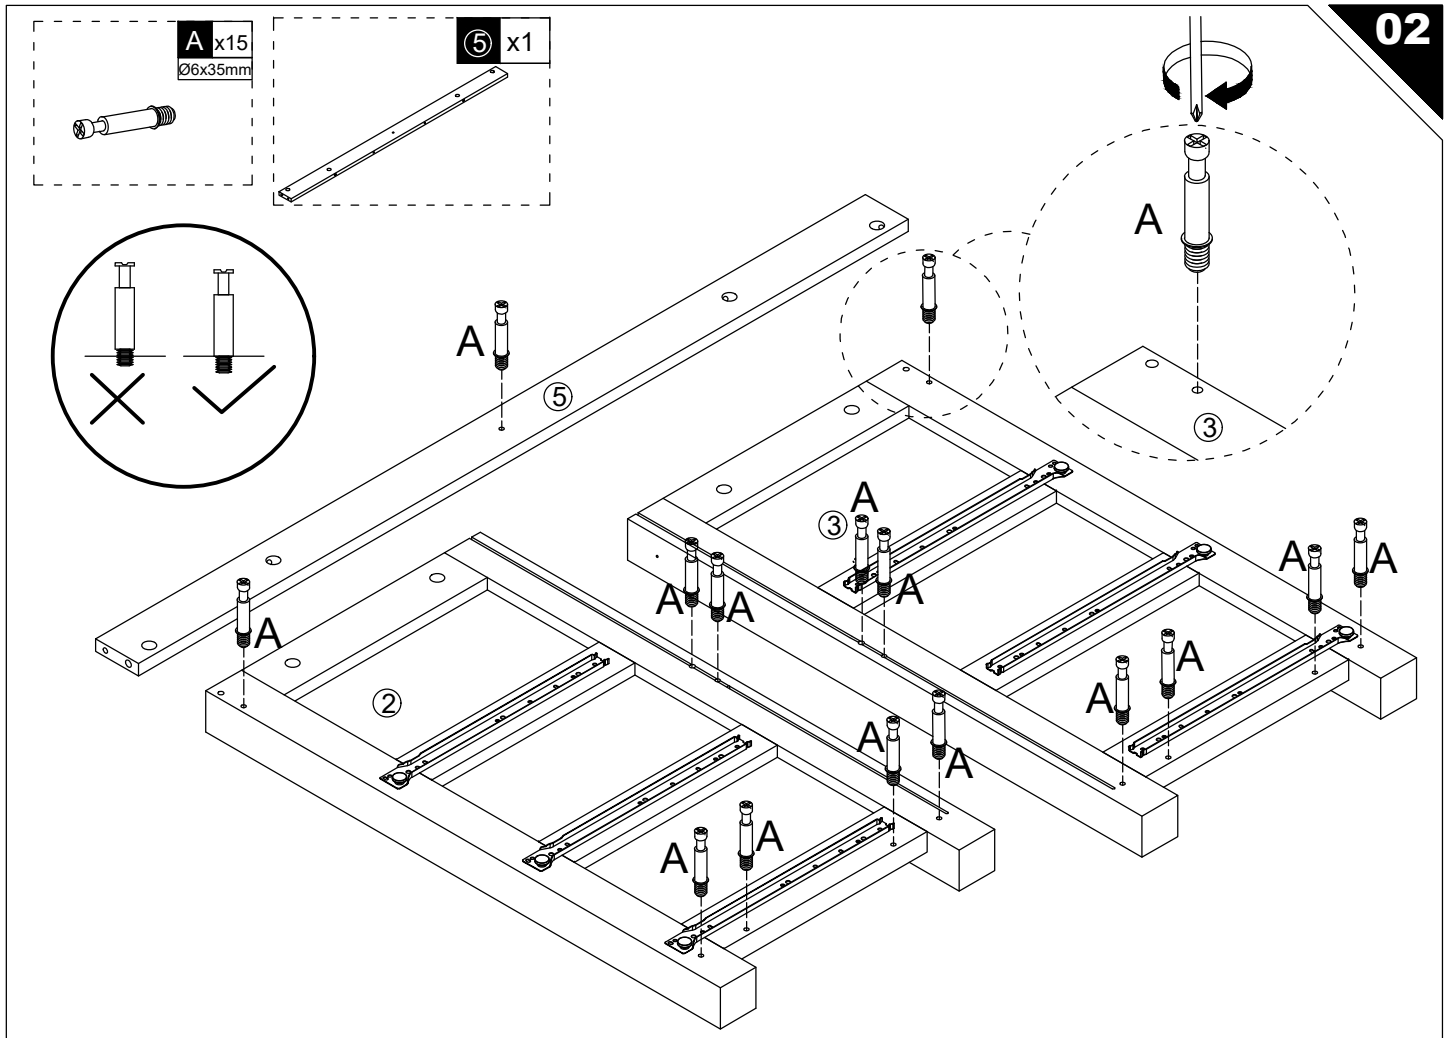 





03



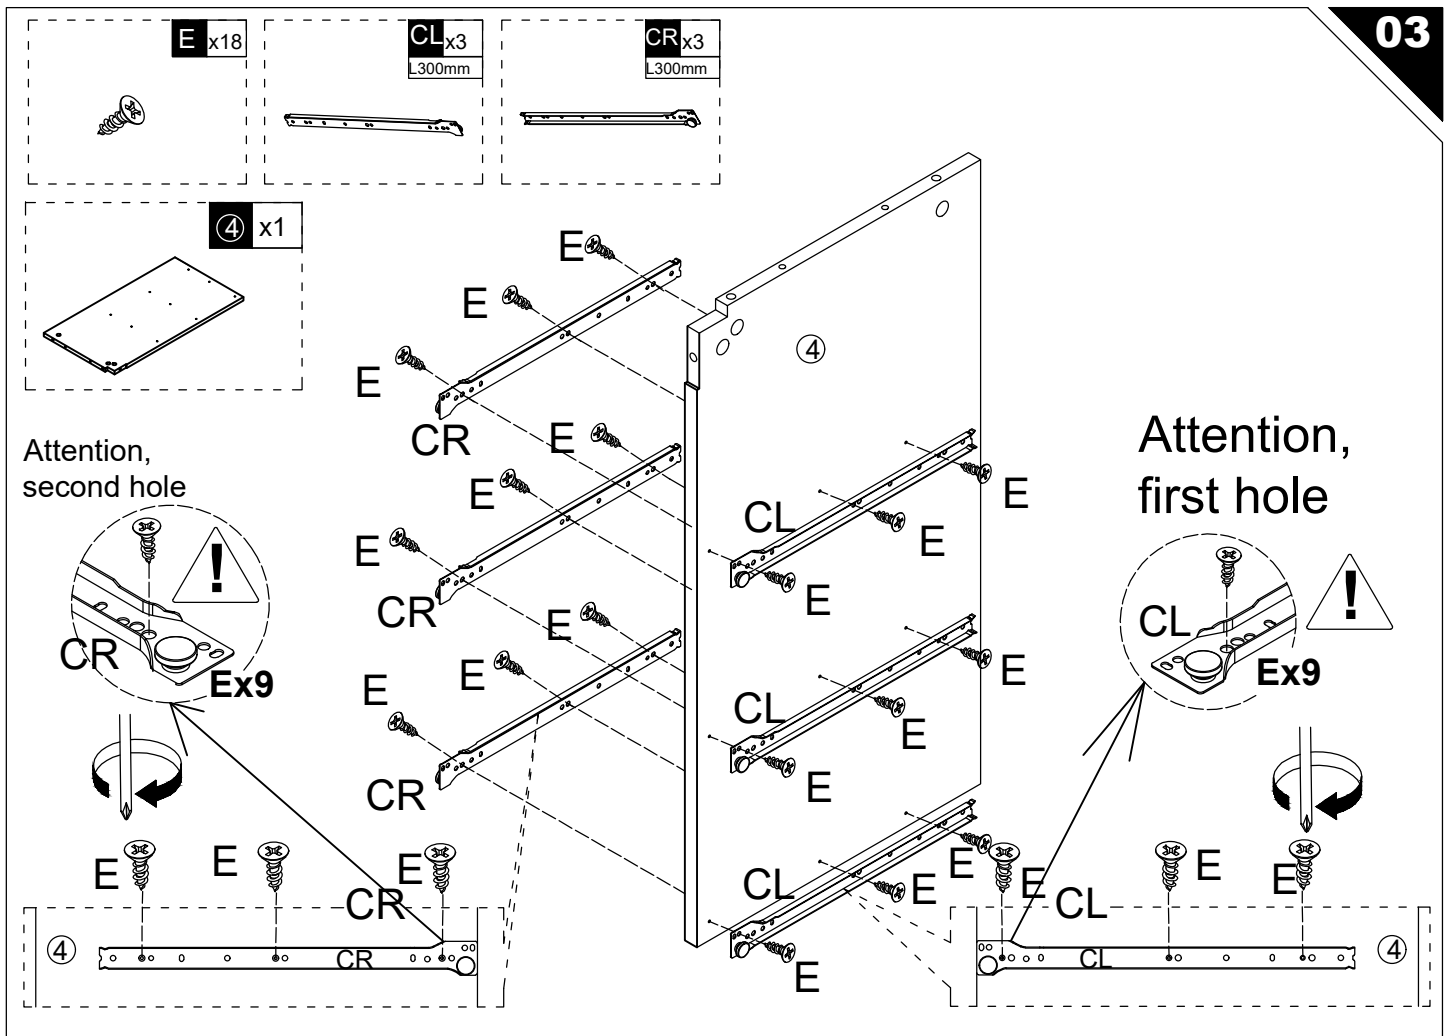 




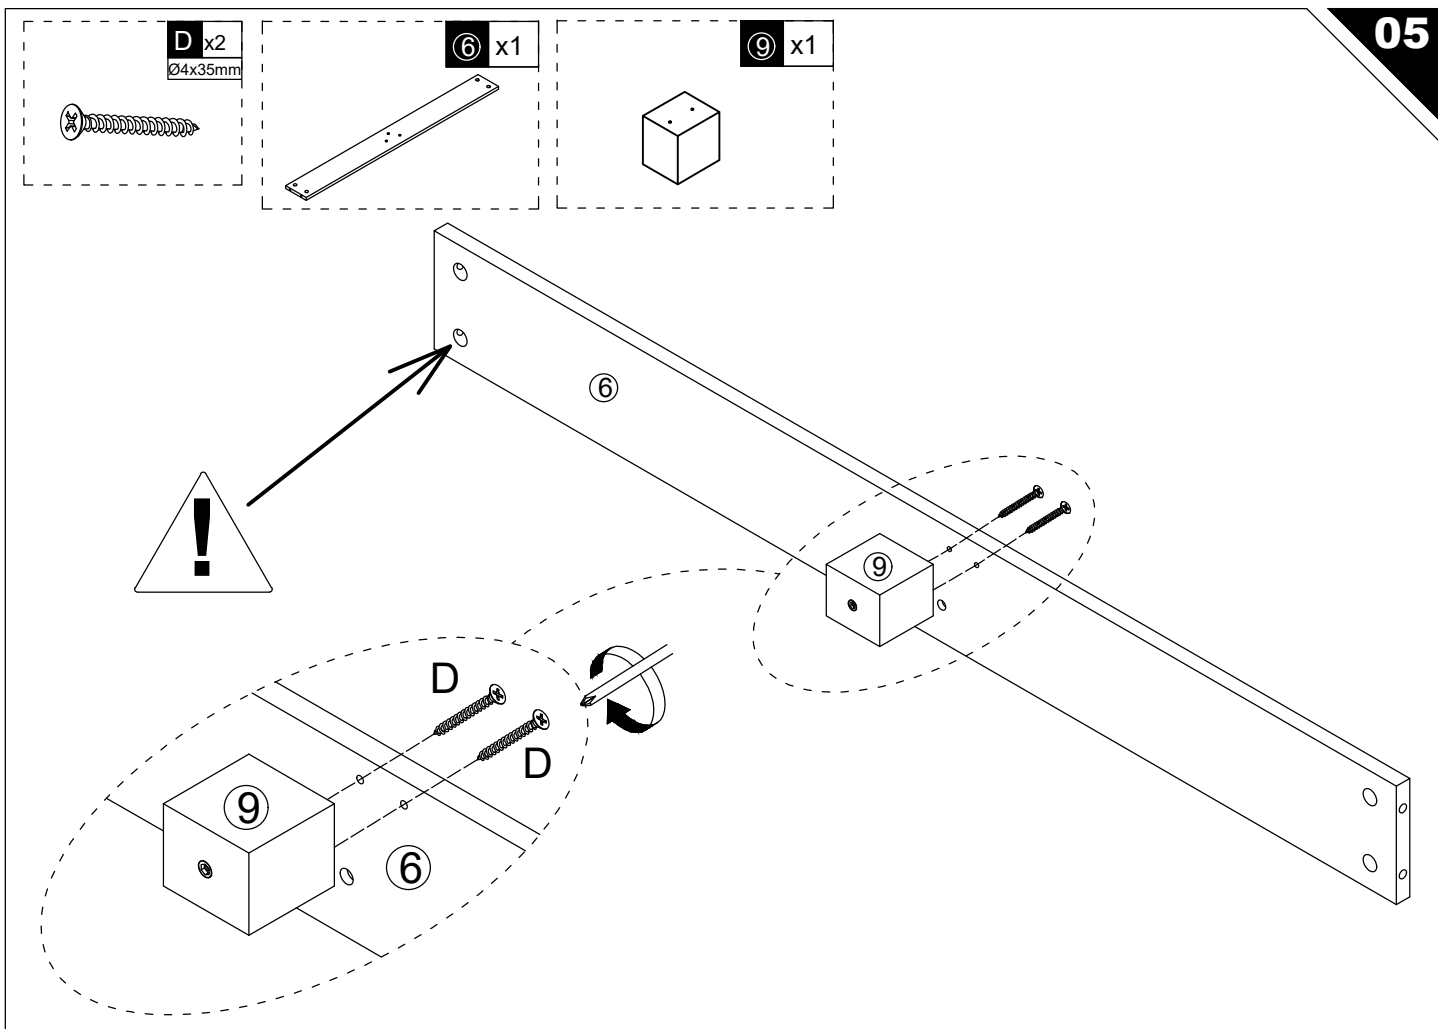 
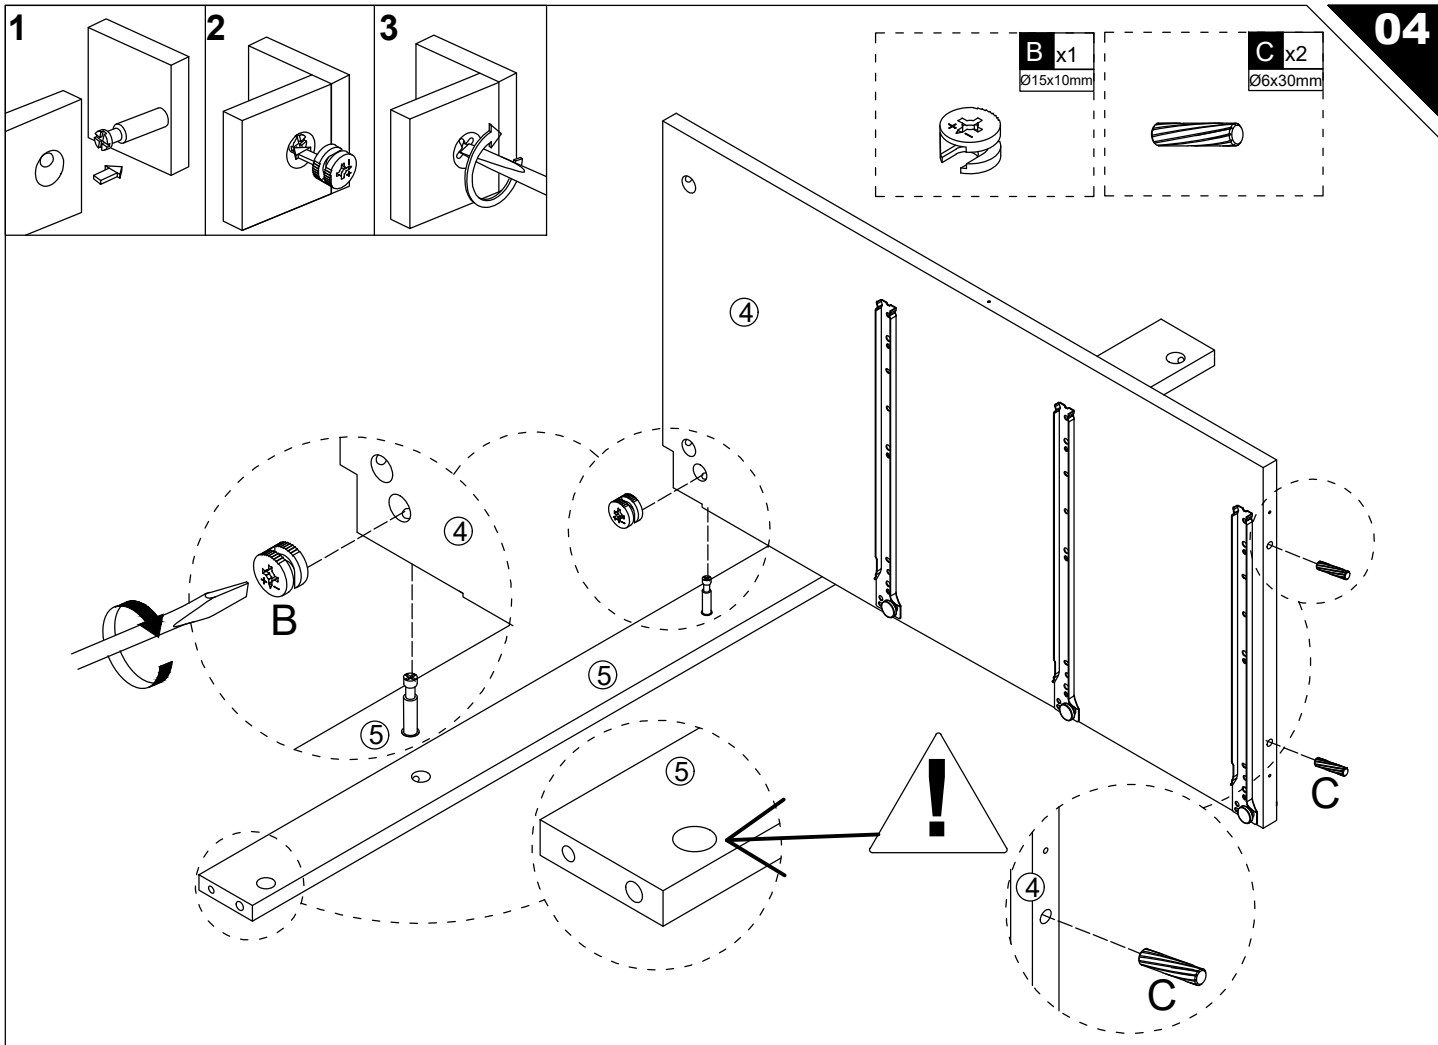 


 C x2
Ø6x30mmD x2
Ø4x35mm

           
7 x1

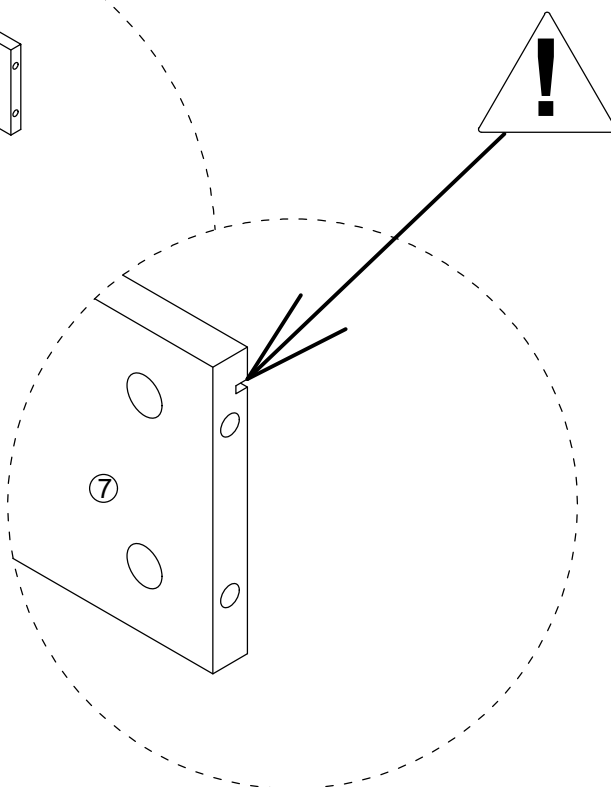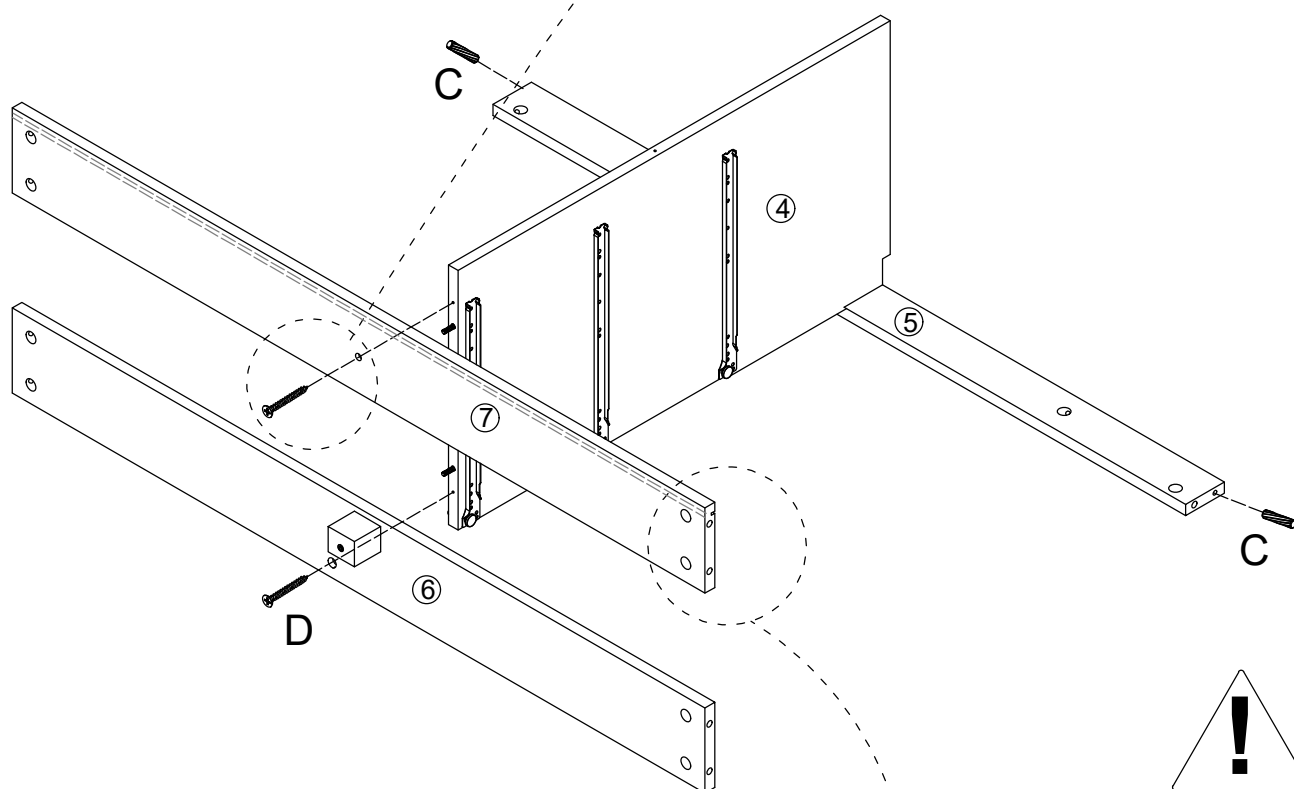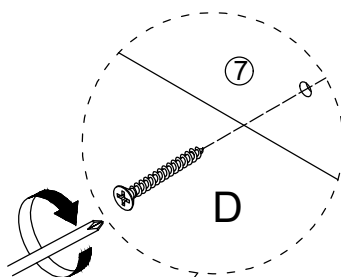
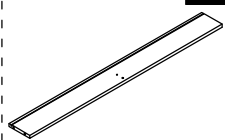


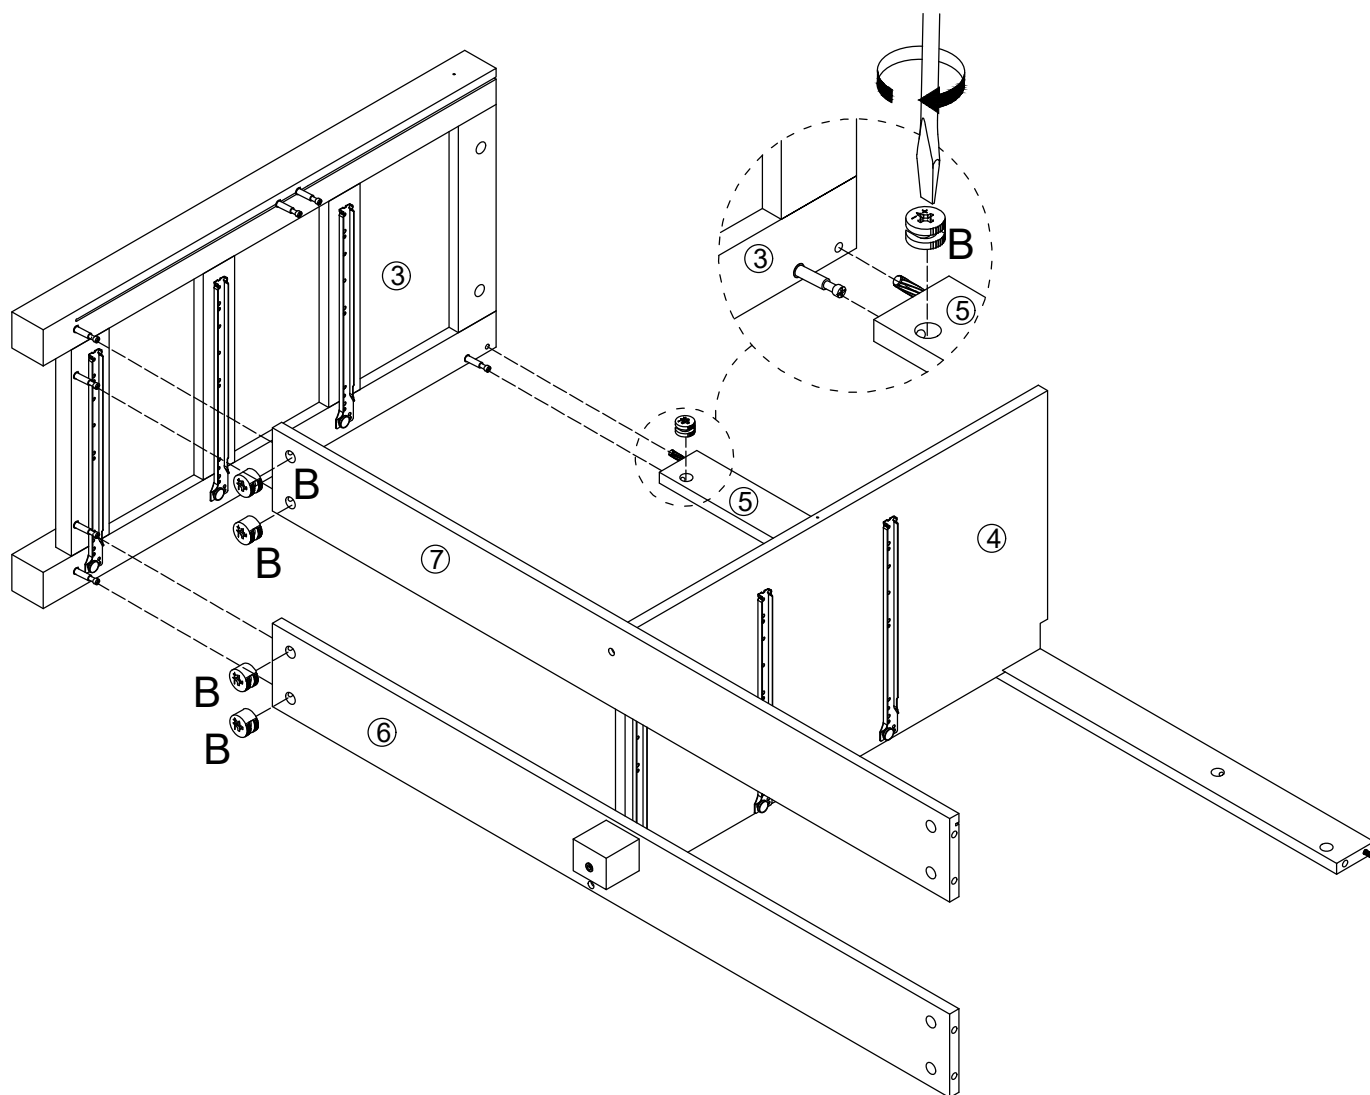
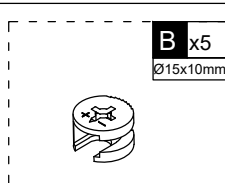
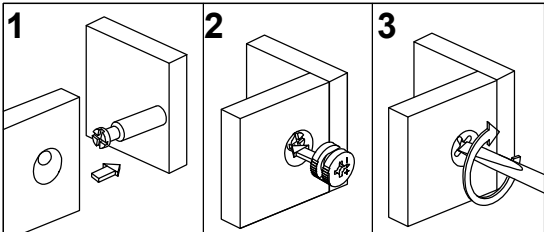


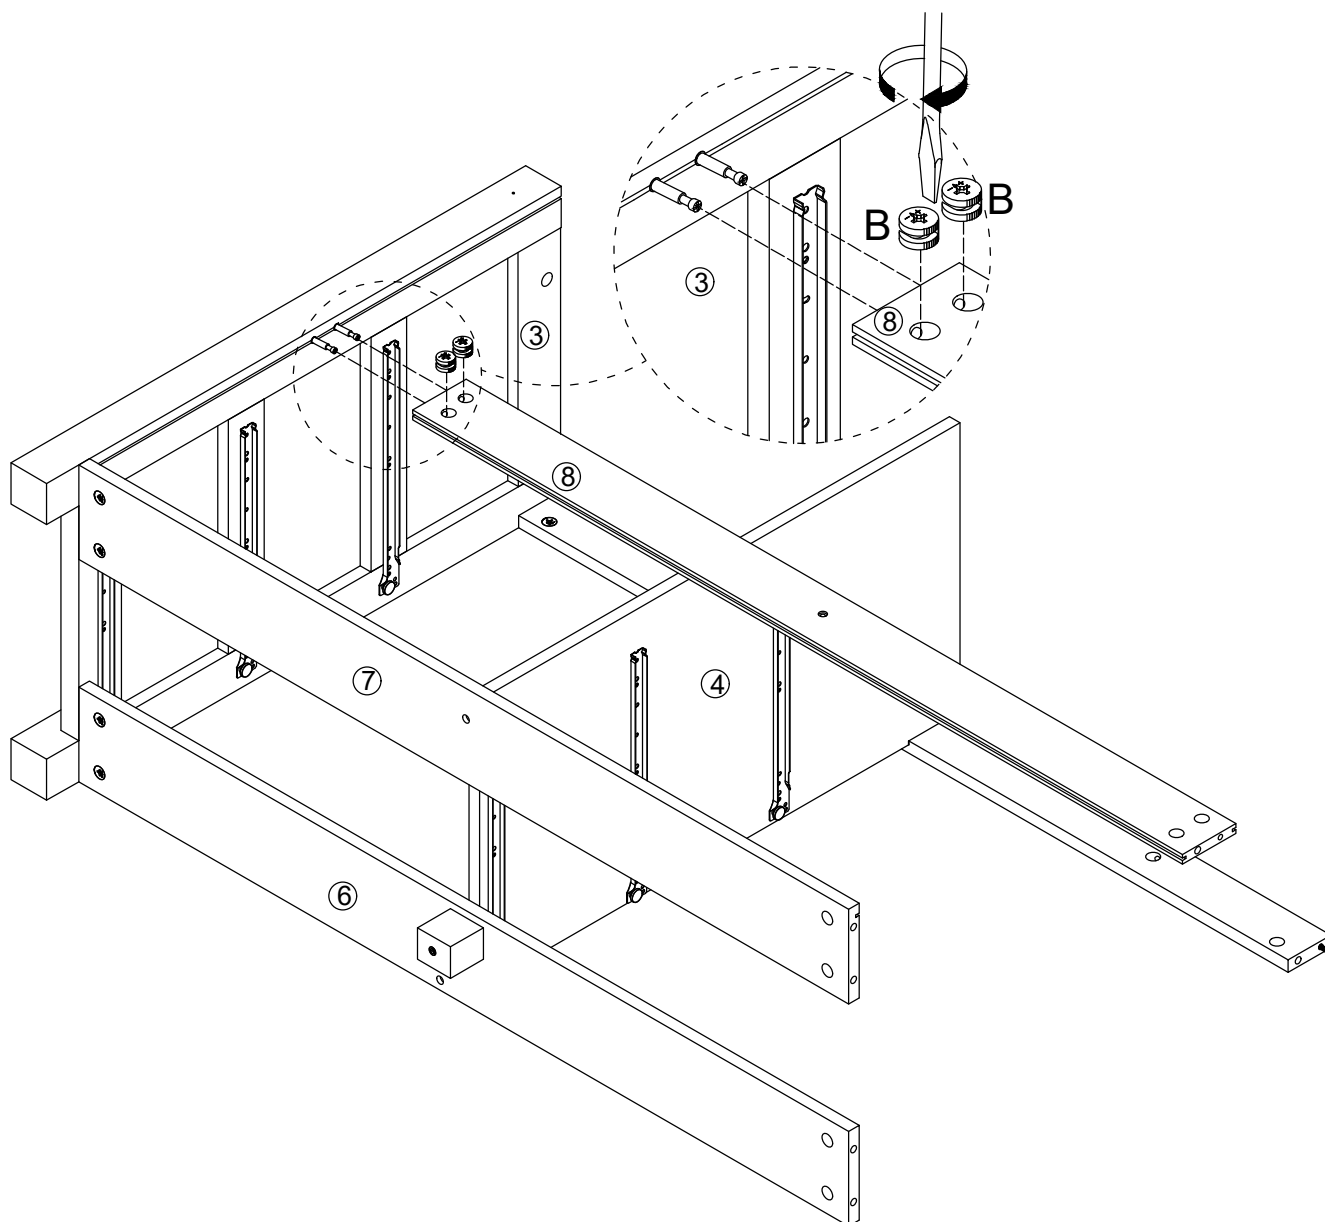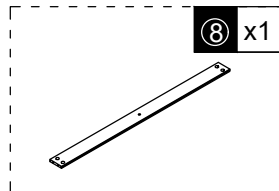
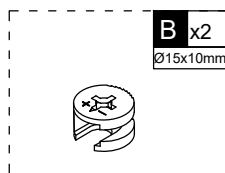
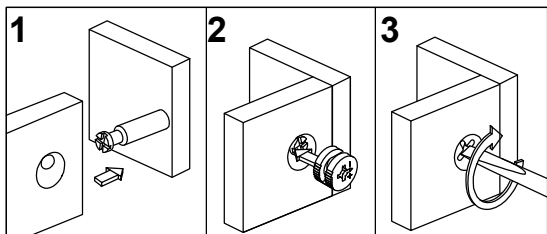




D x1
Ø4x35mm




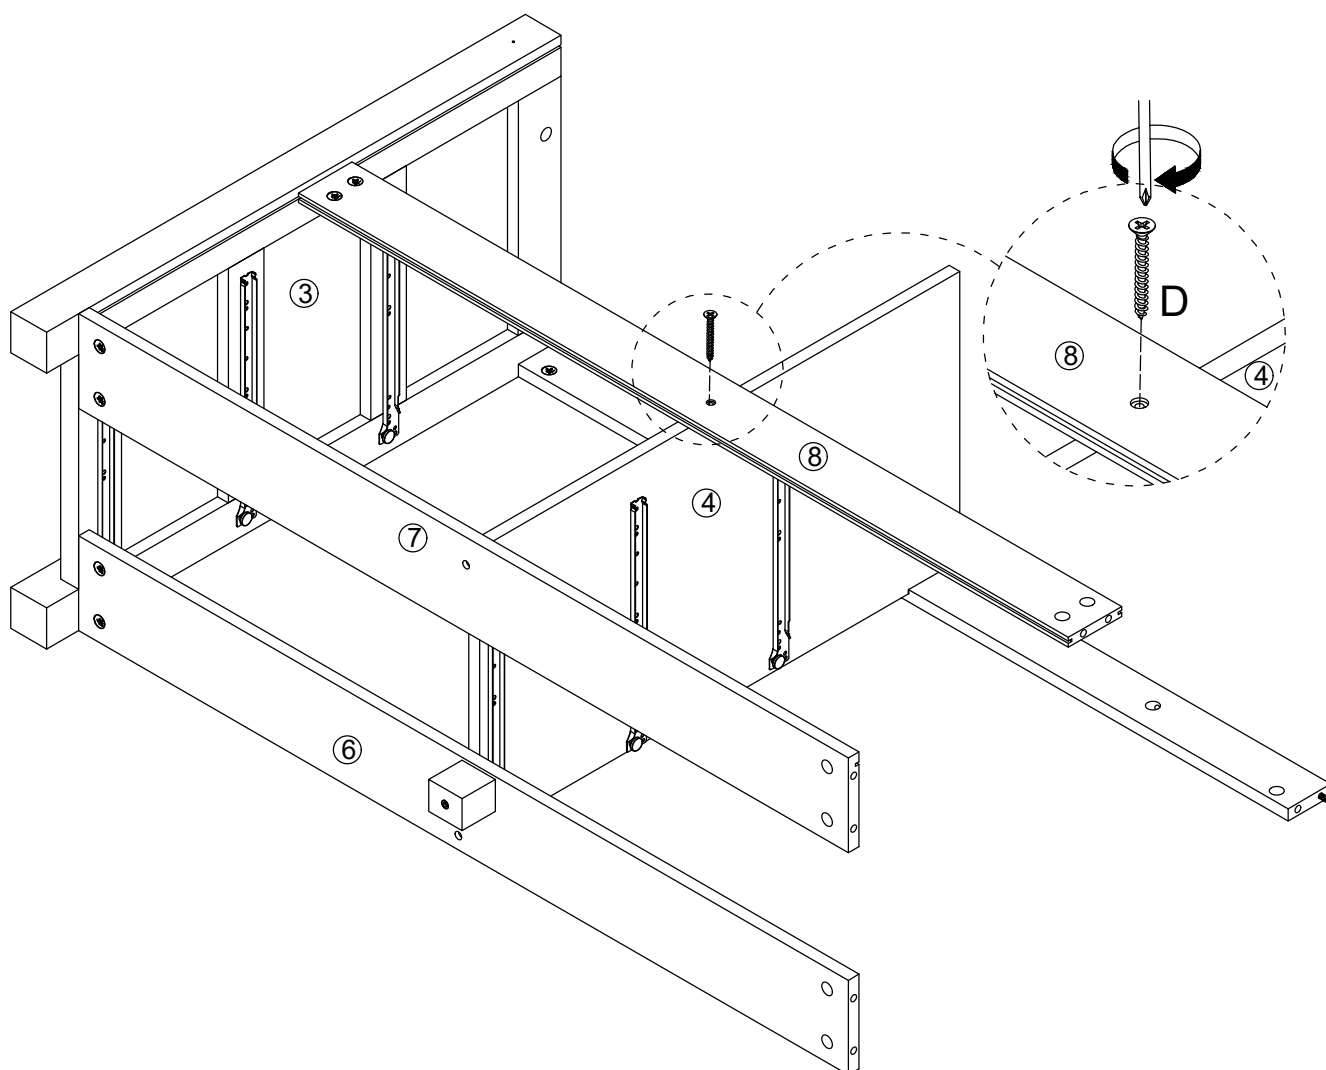 


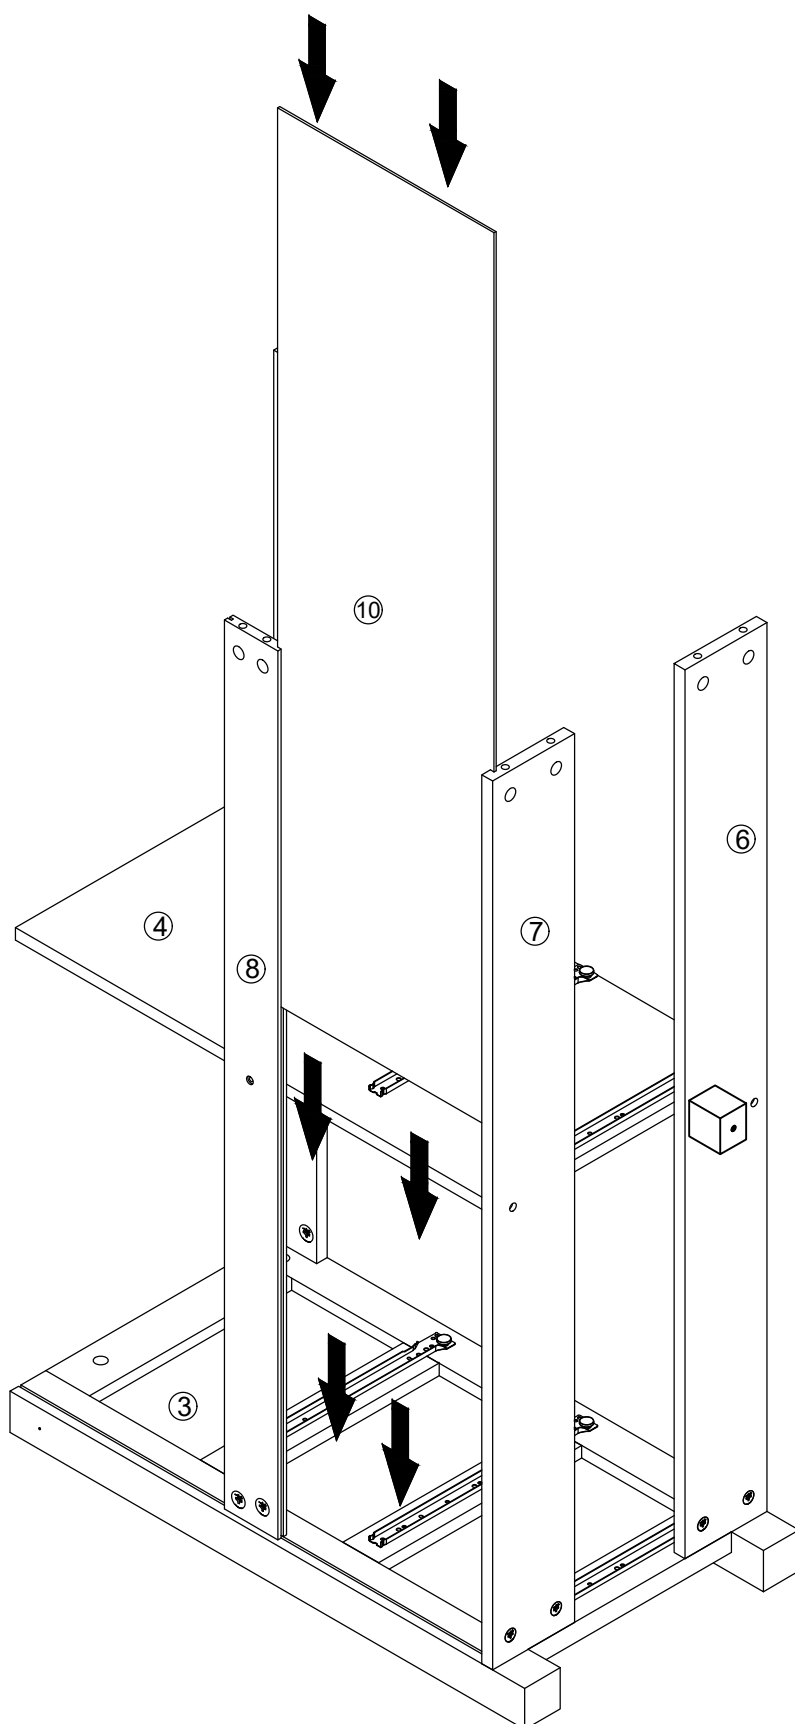 
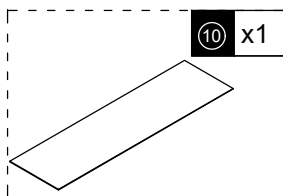 


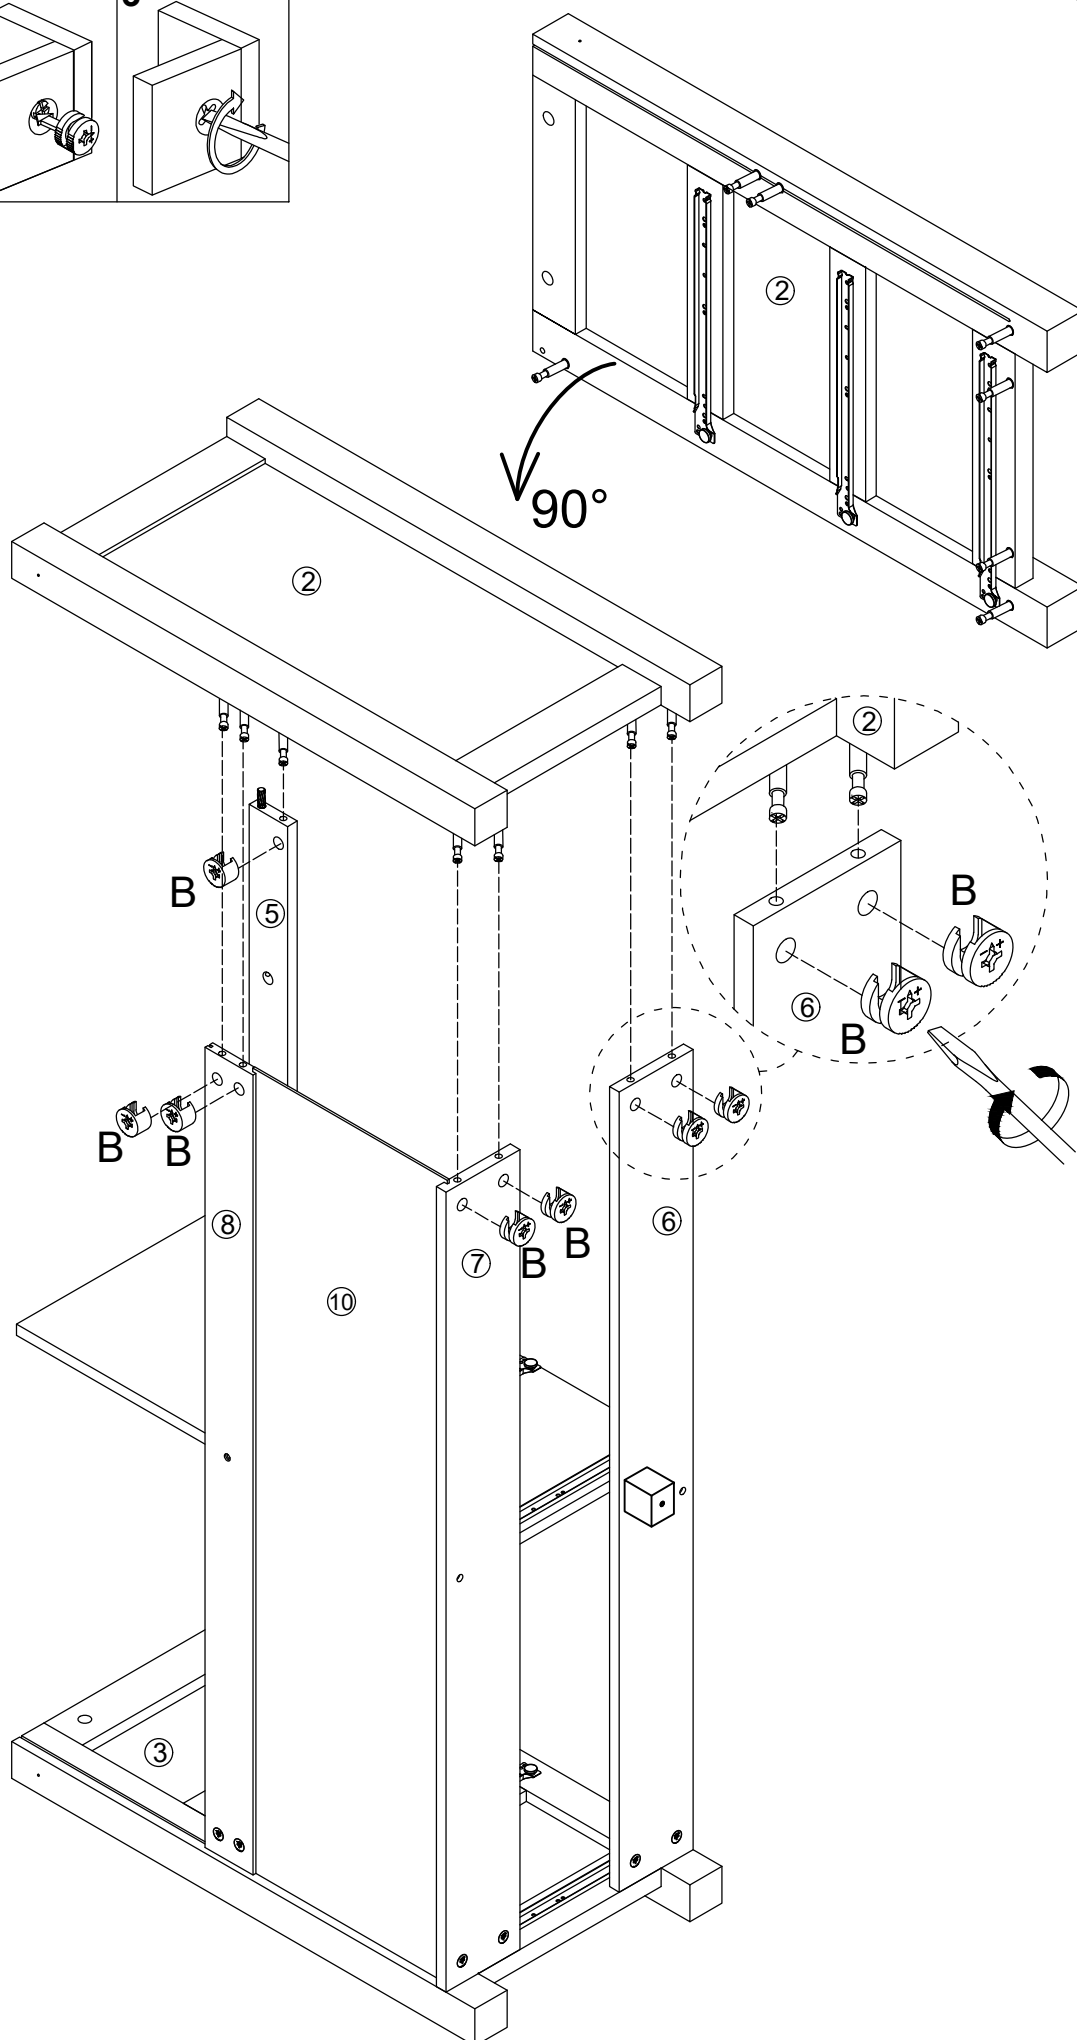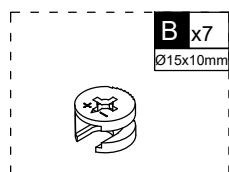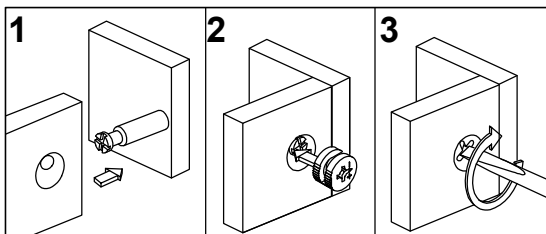   


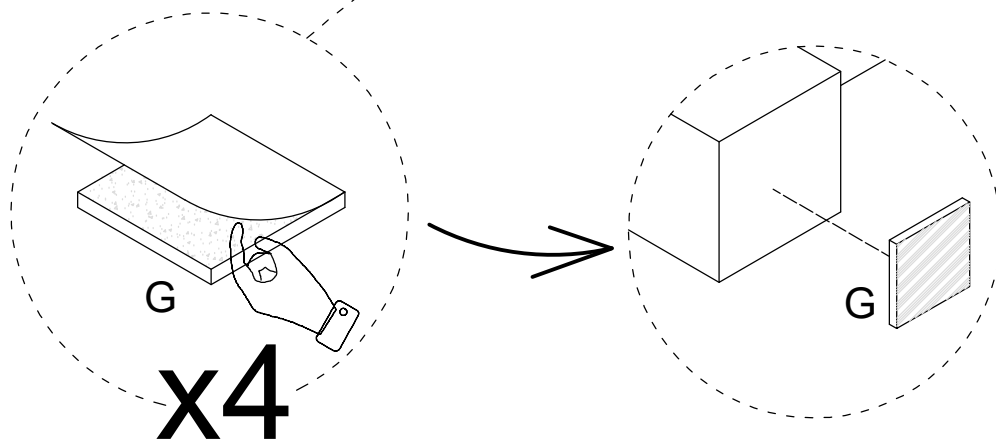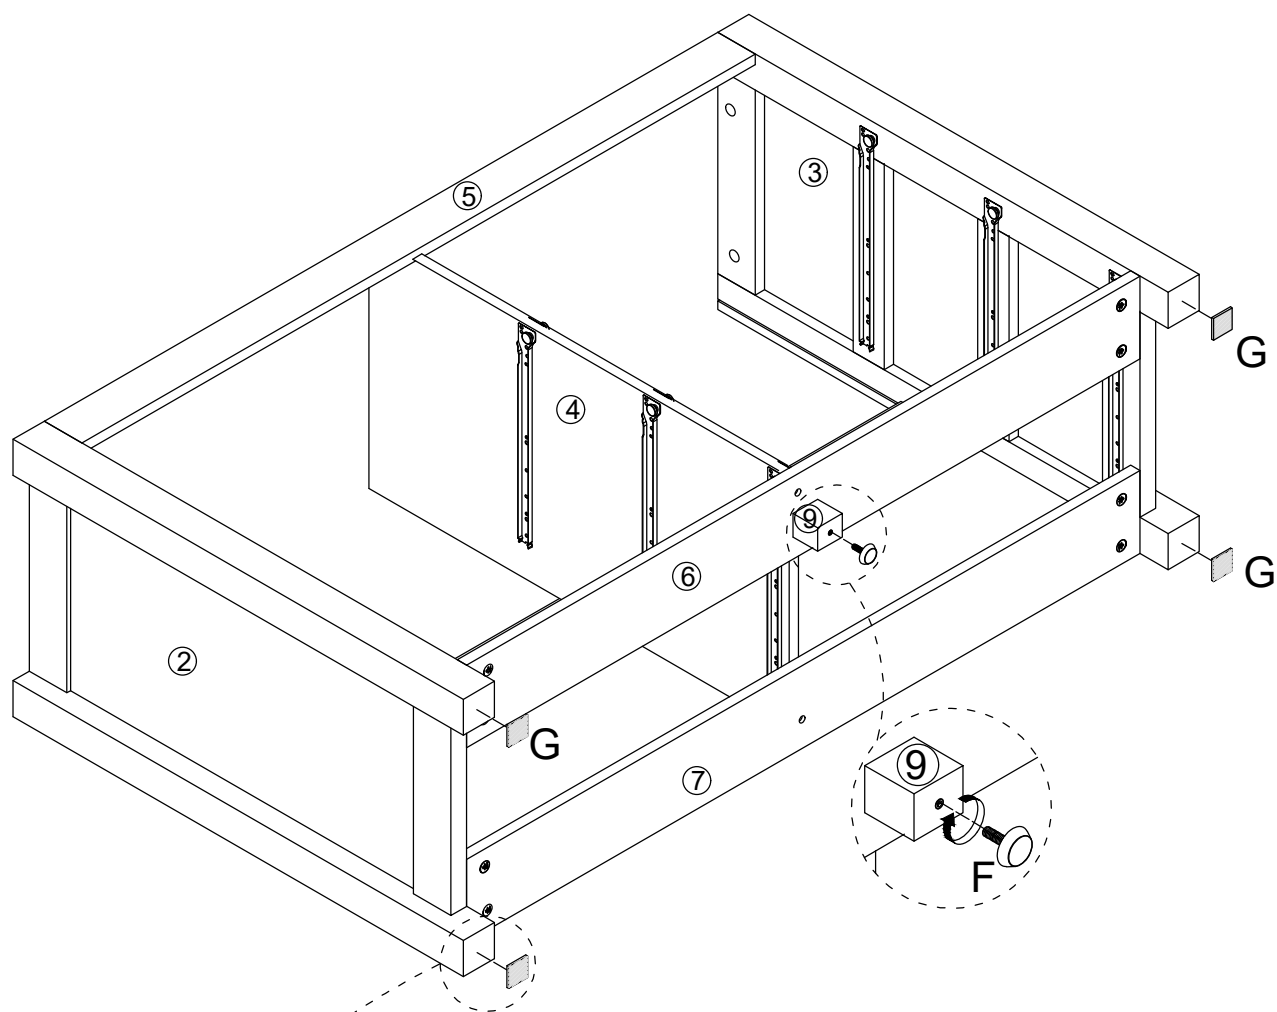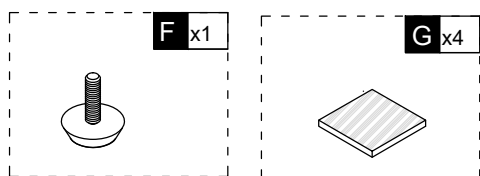   

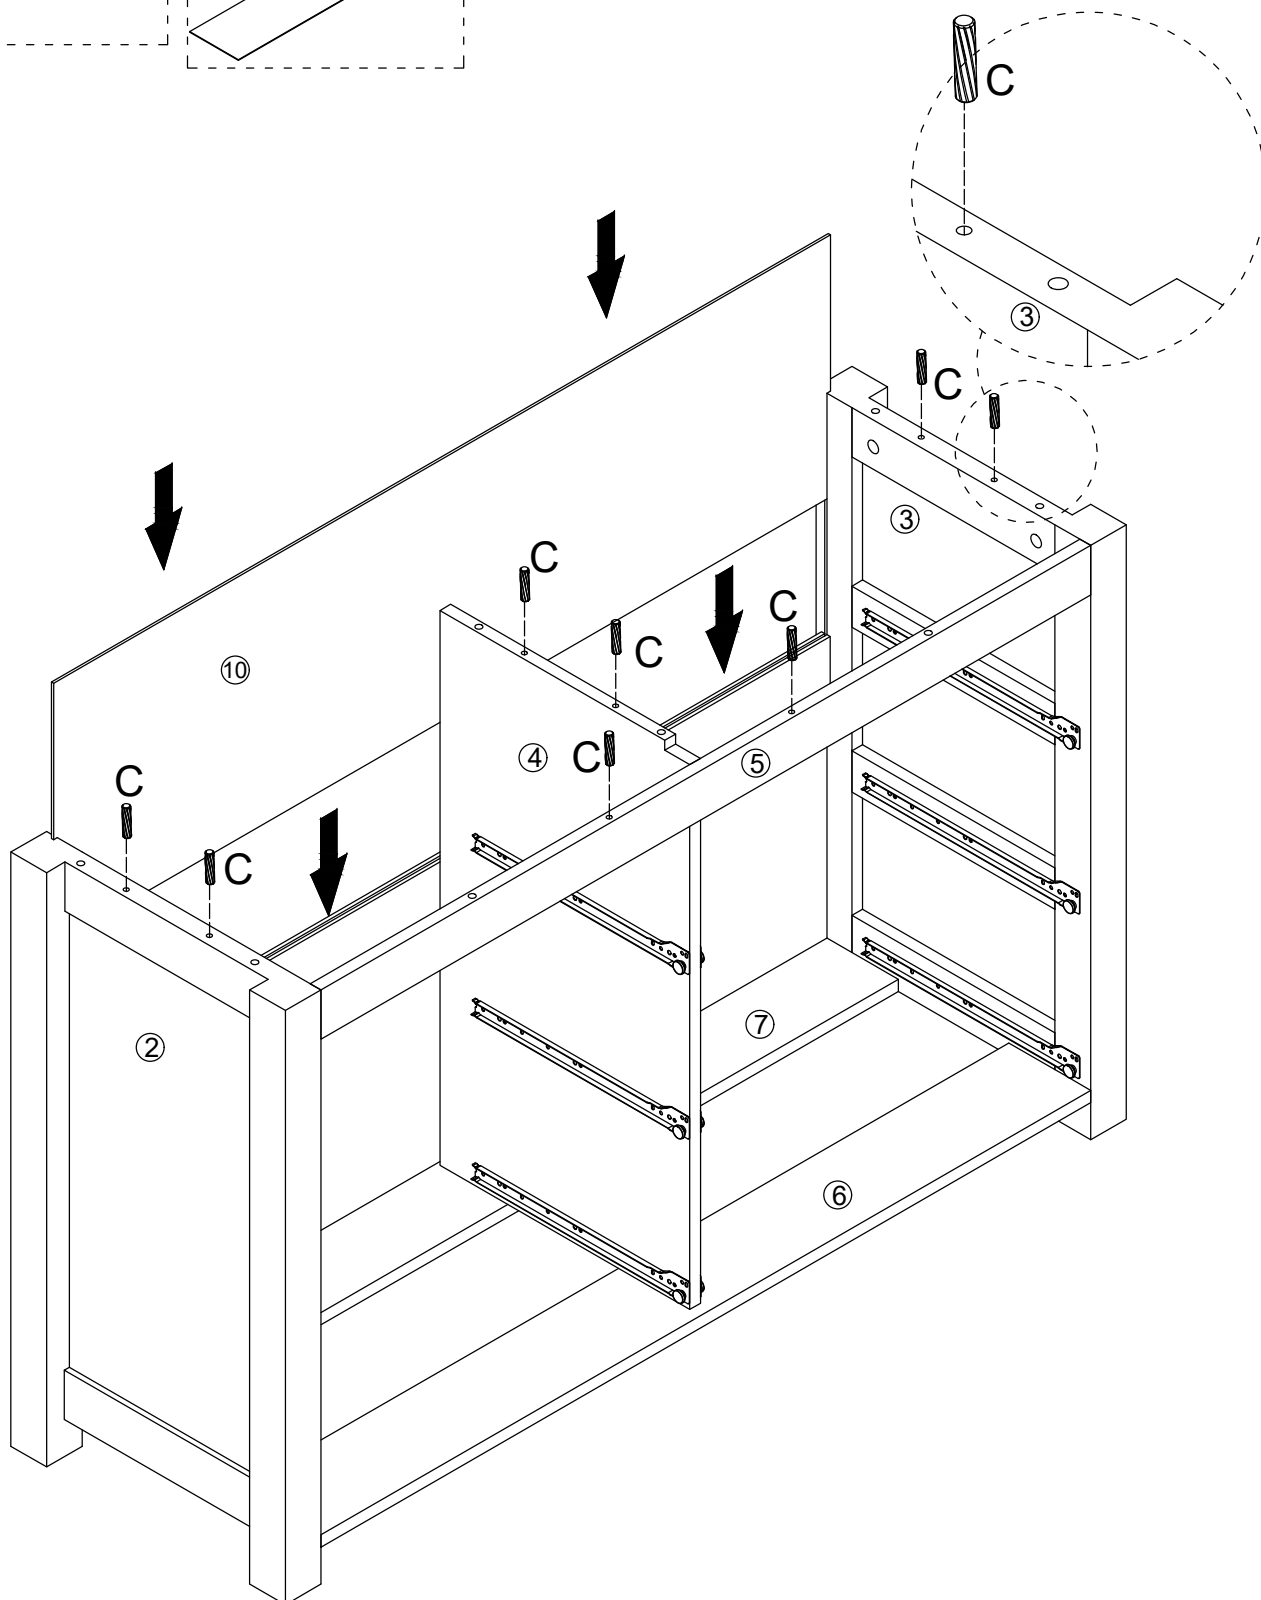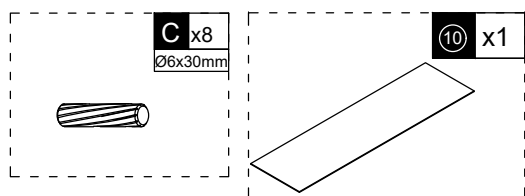         


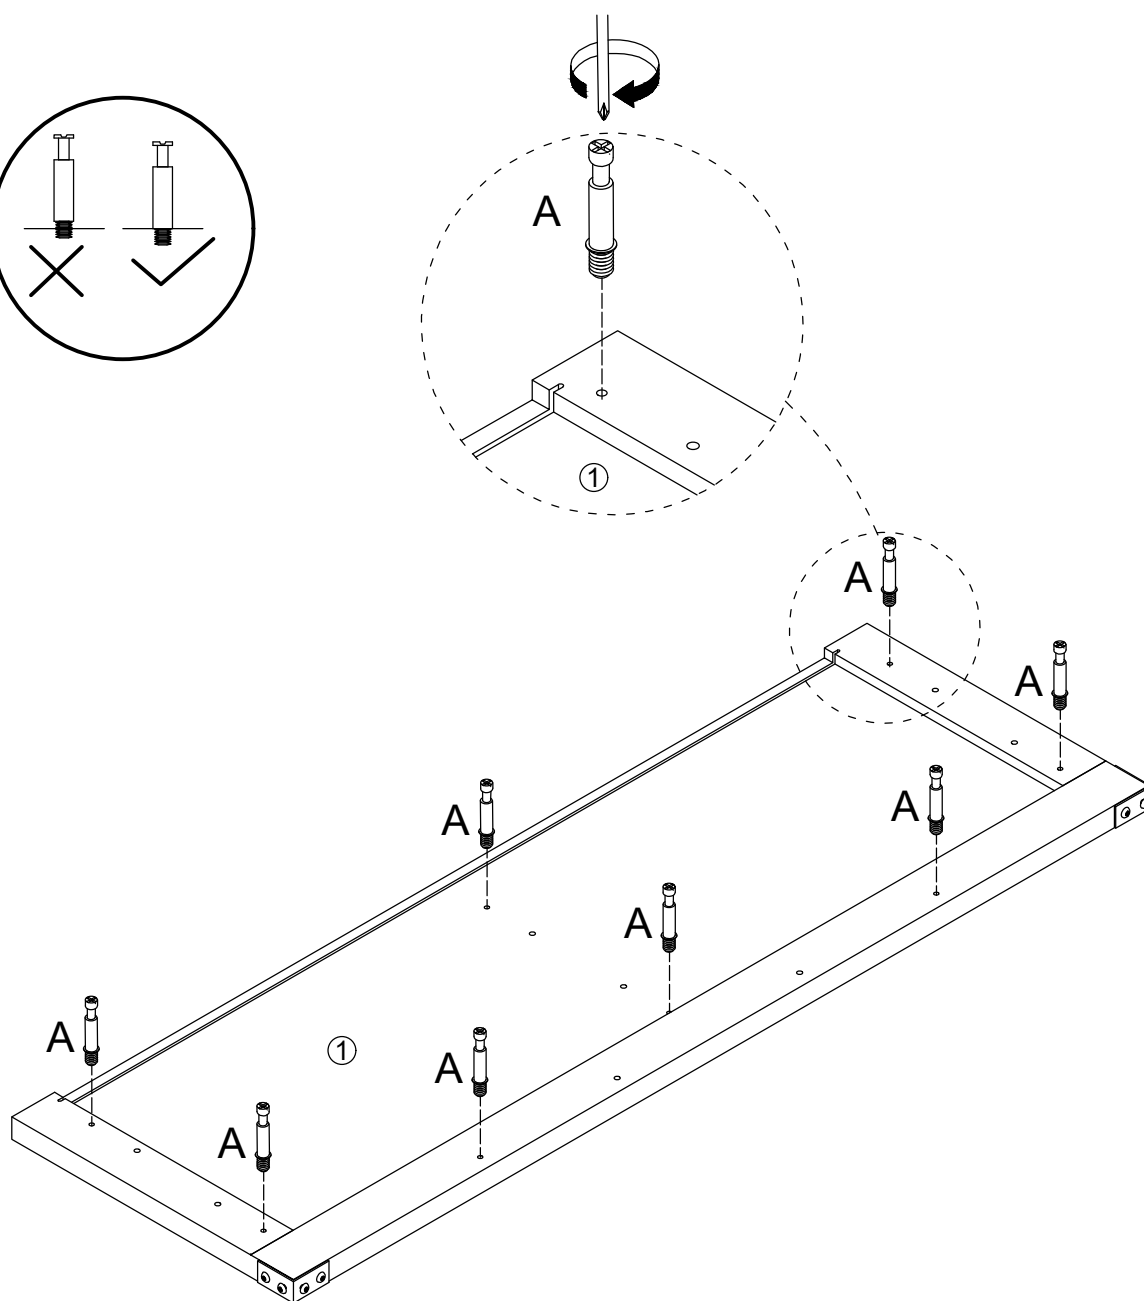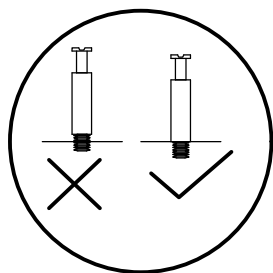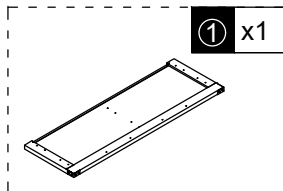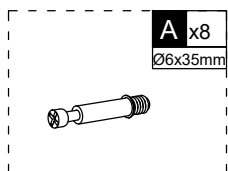

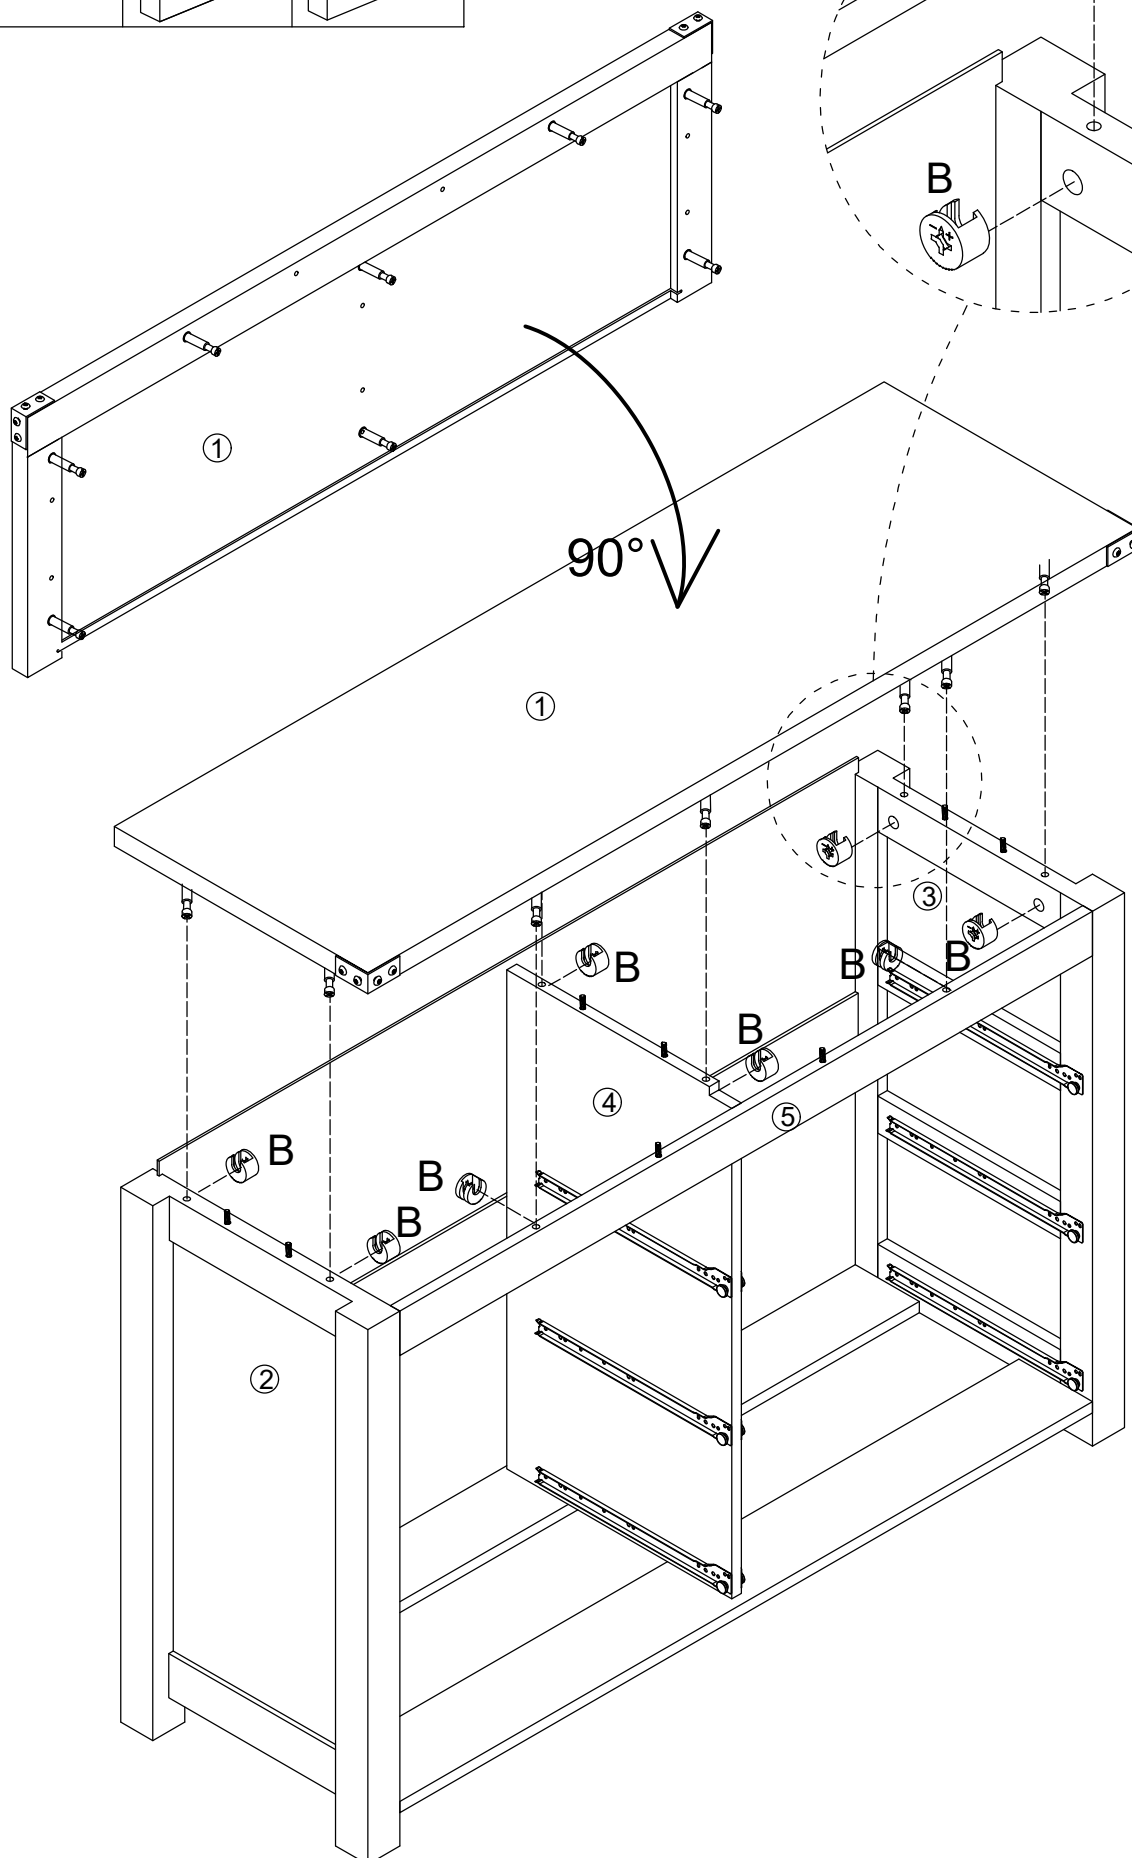
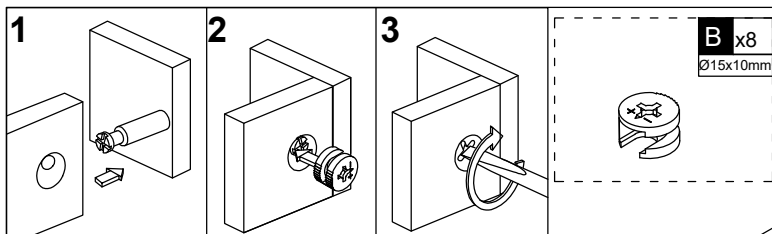


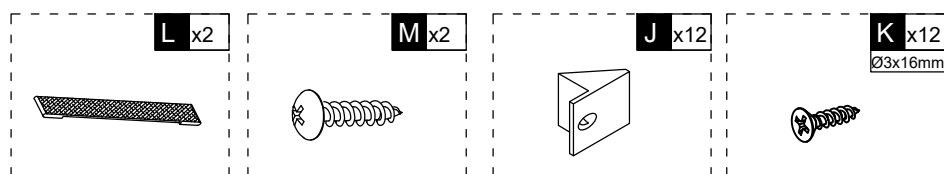


 
Fasten Anti-tip tape L to the back of the cabinet by Screw M to prevent the dresser from tipping over.






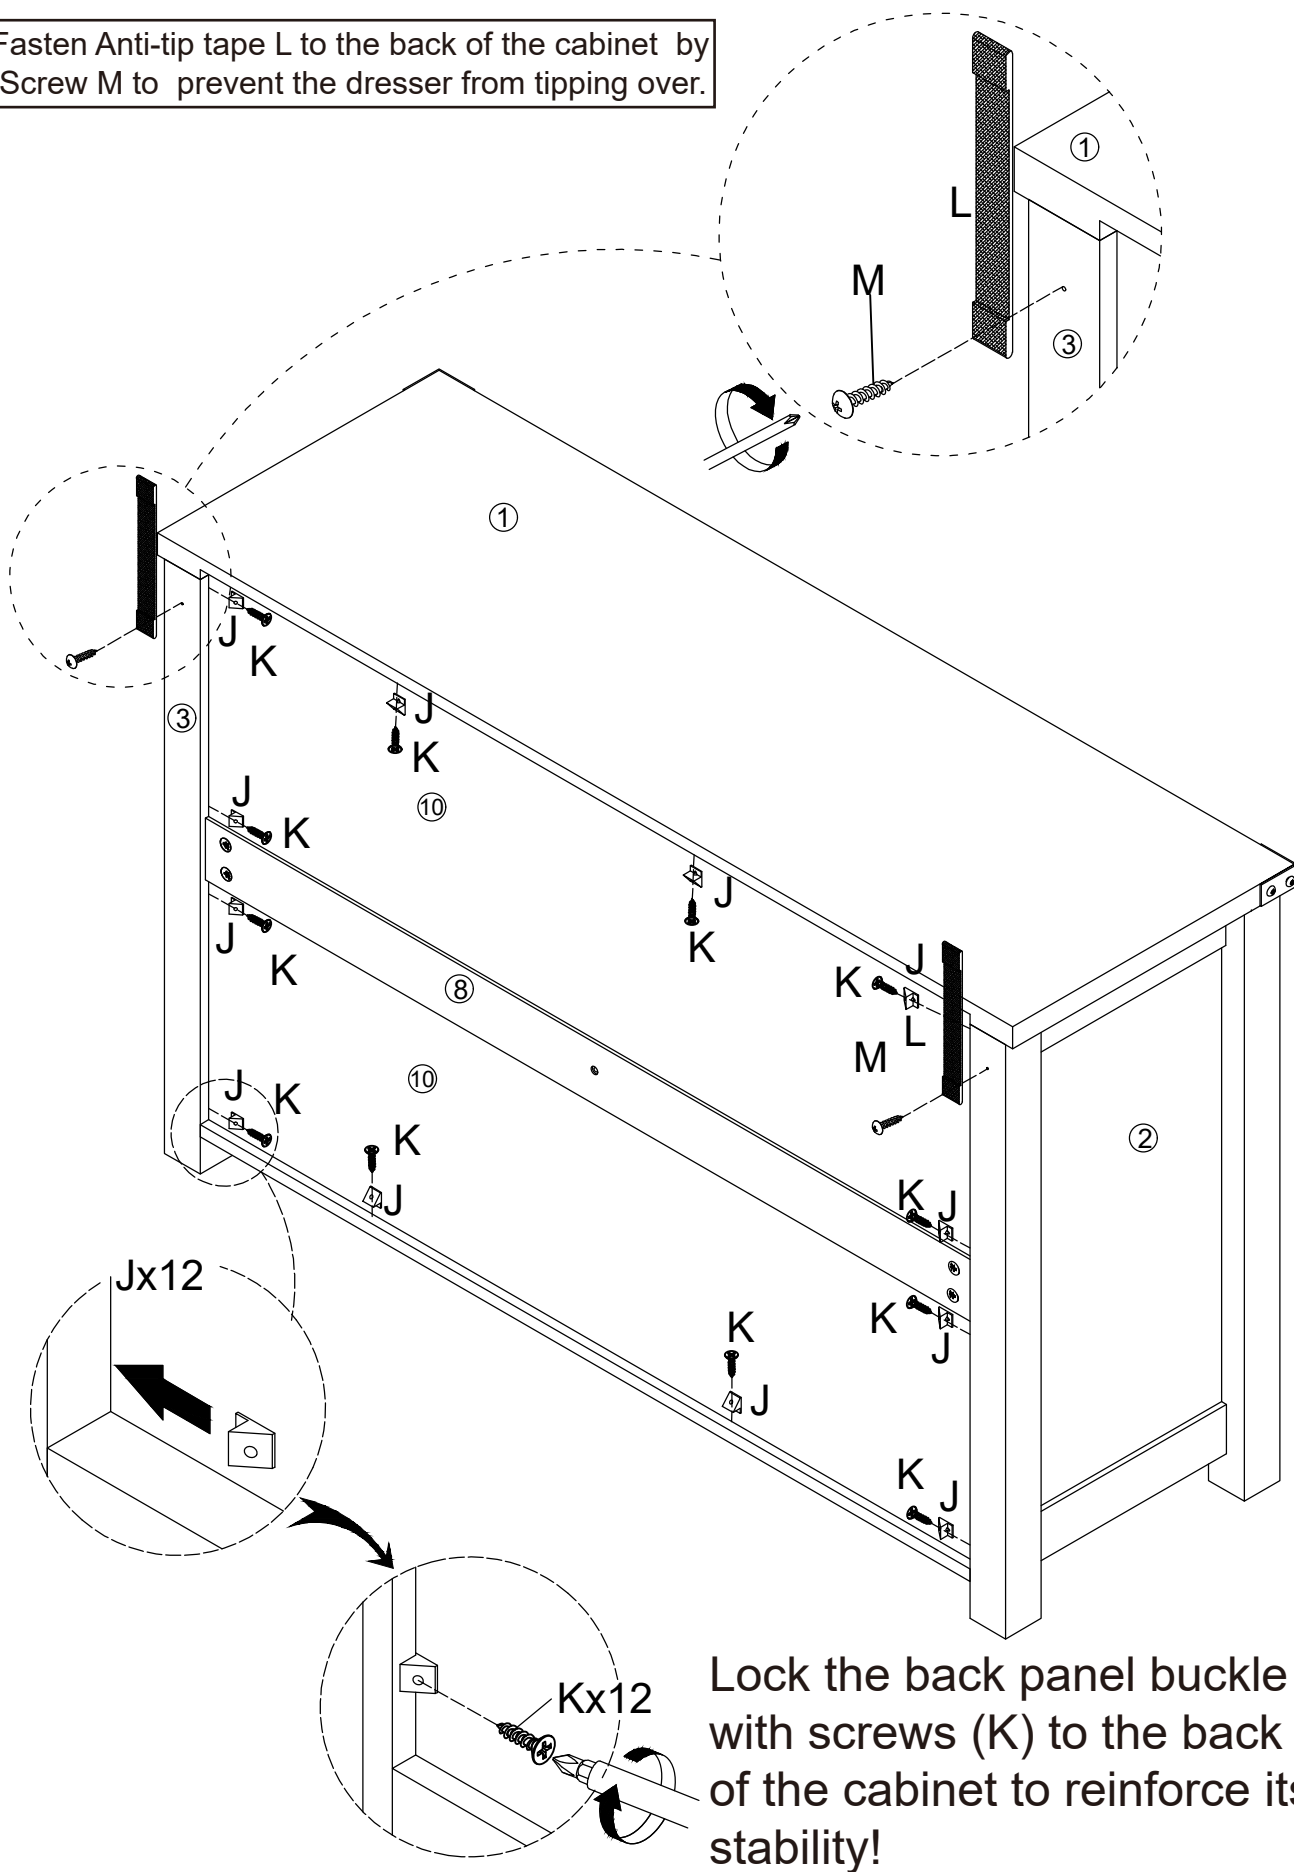


  Lock the back panel buckle (J) with screws (K) to the back of the cabinet to reinforce its stability!

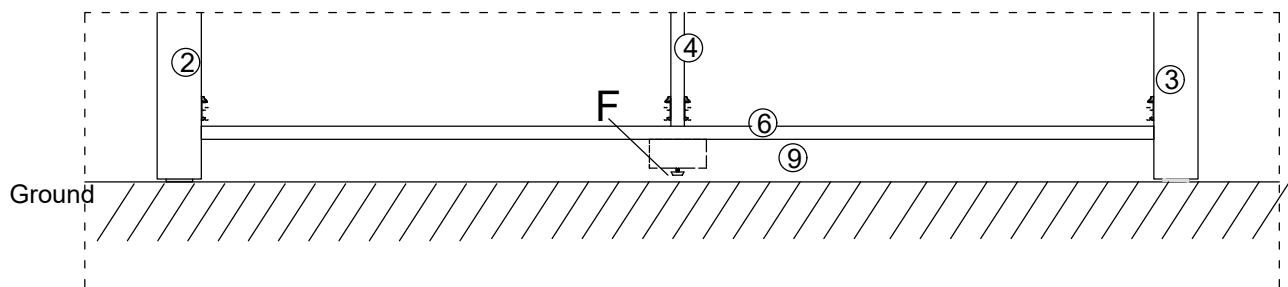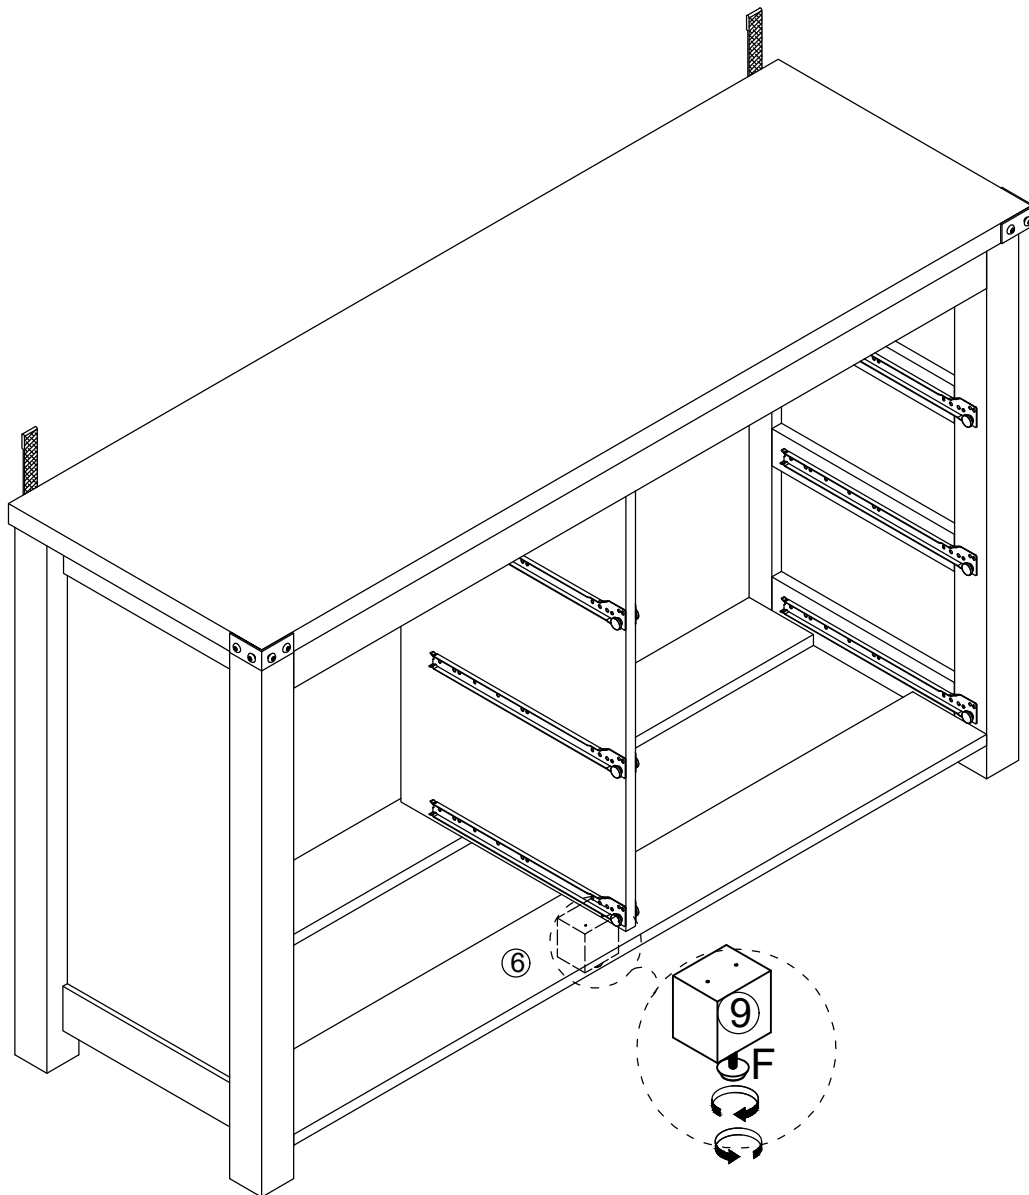


        If the cabinet is unstable with the ground, please rotate the 9 # foot fitting (F)

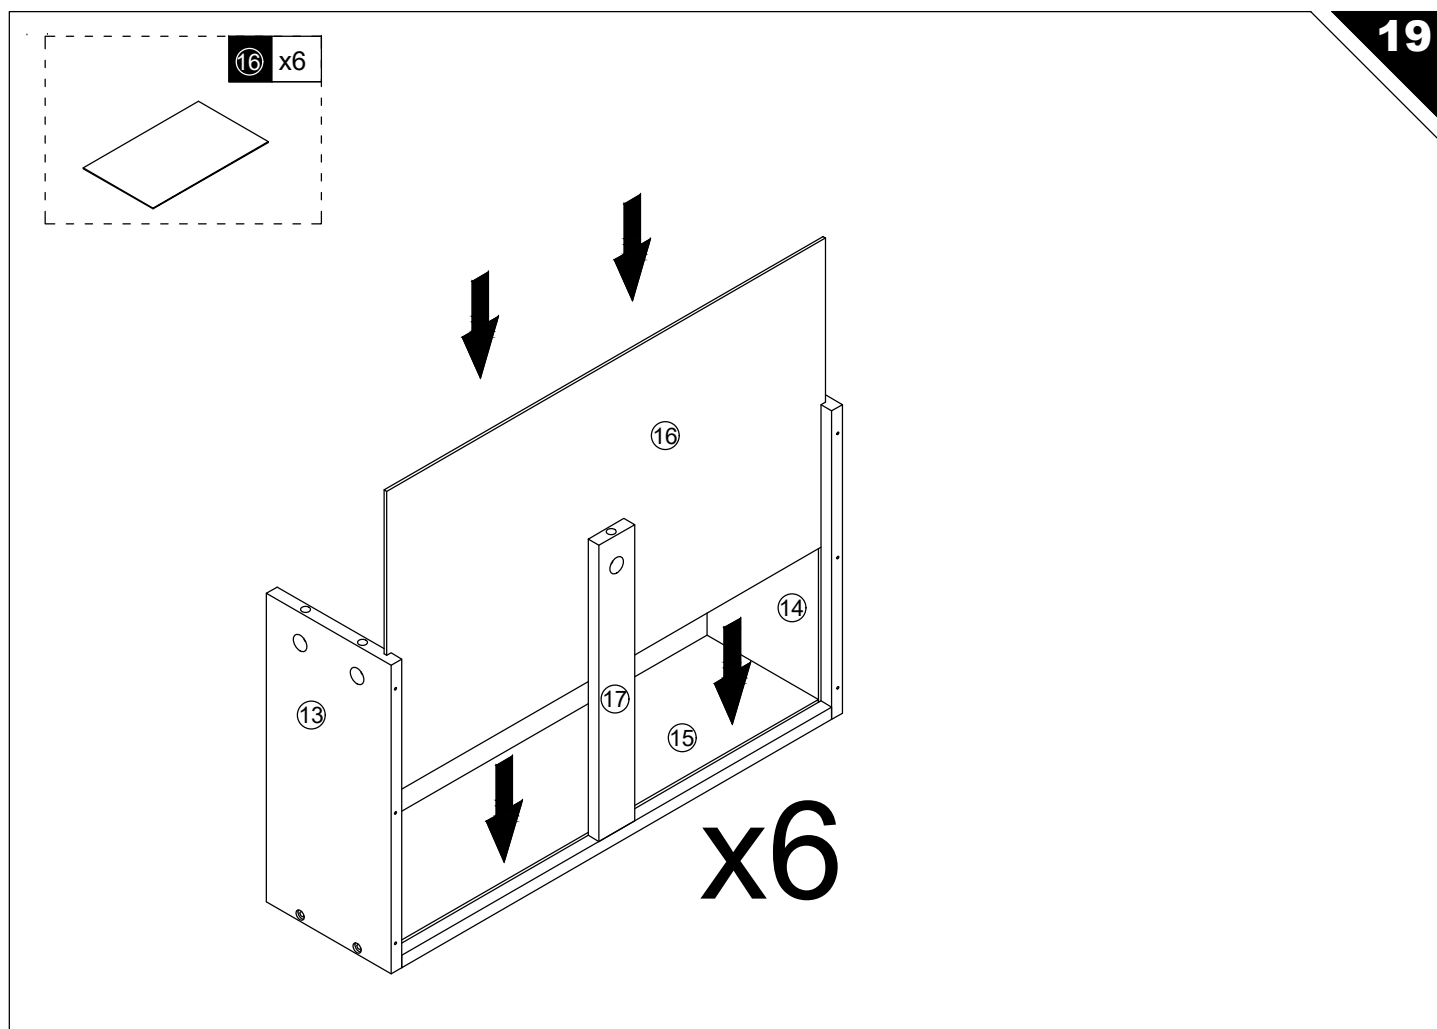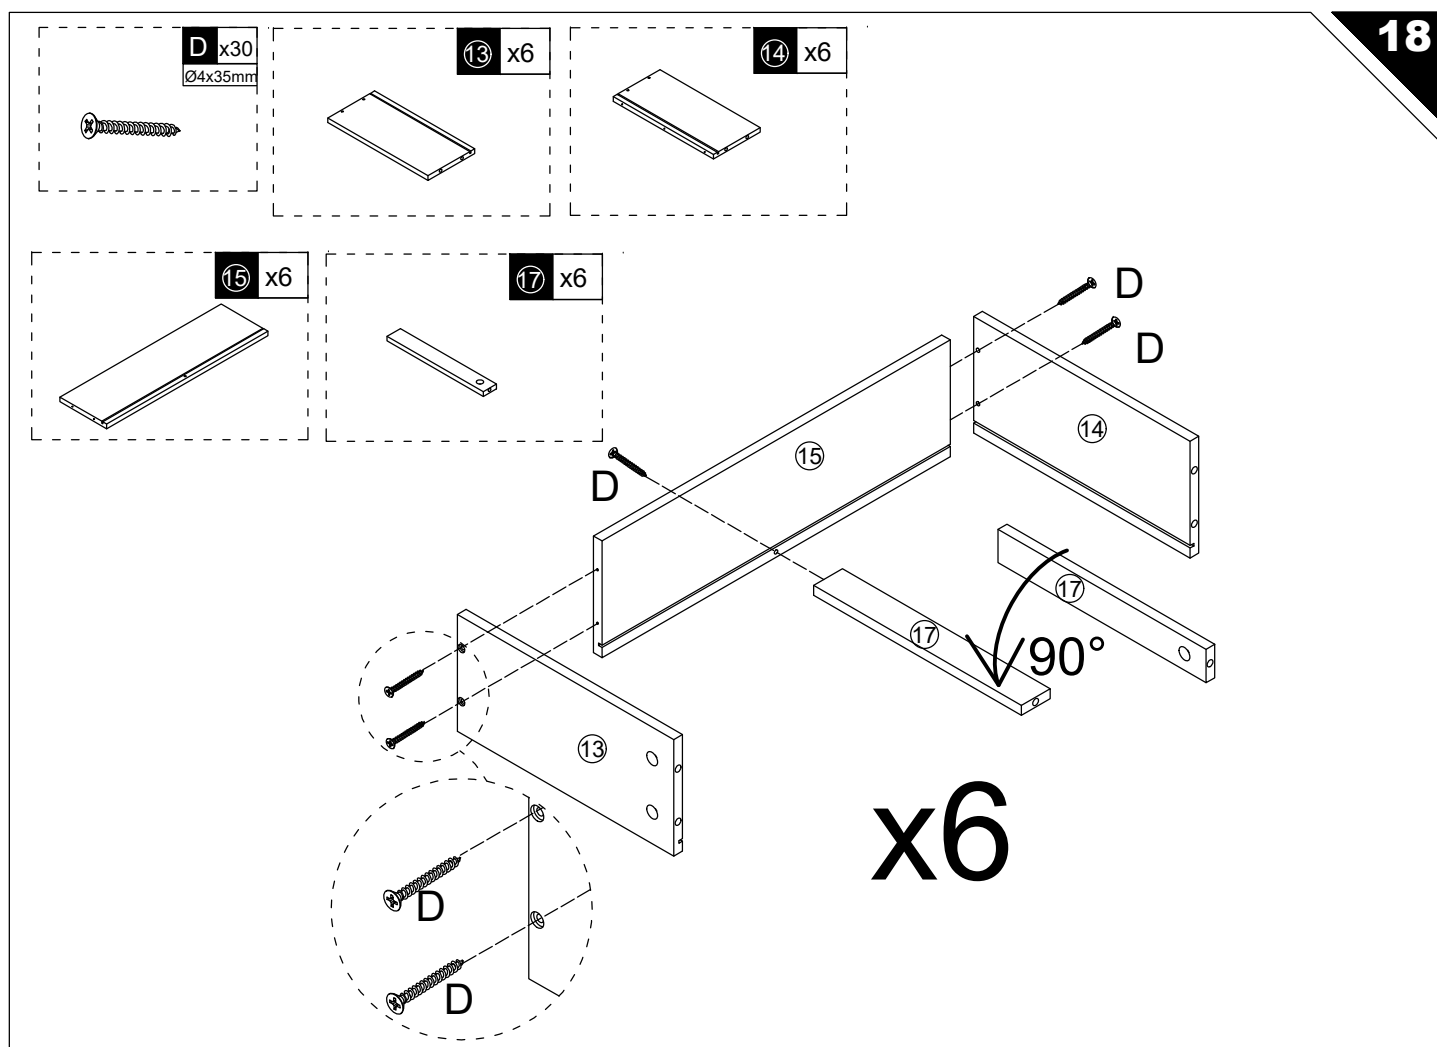


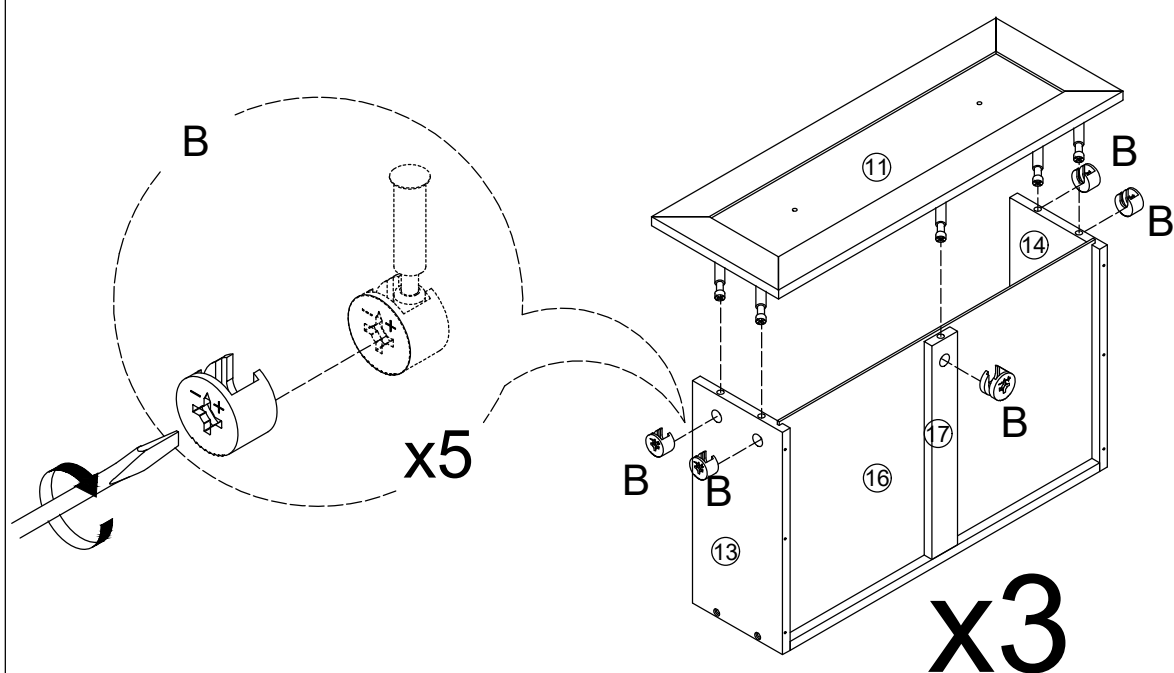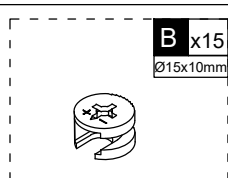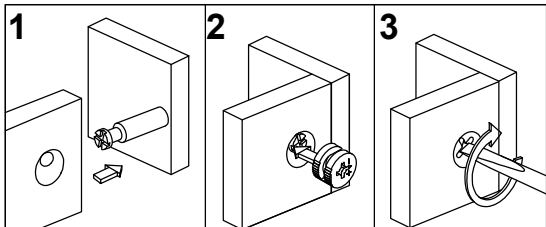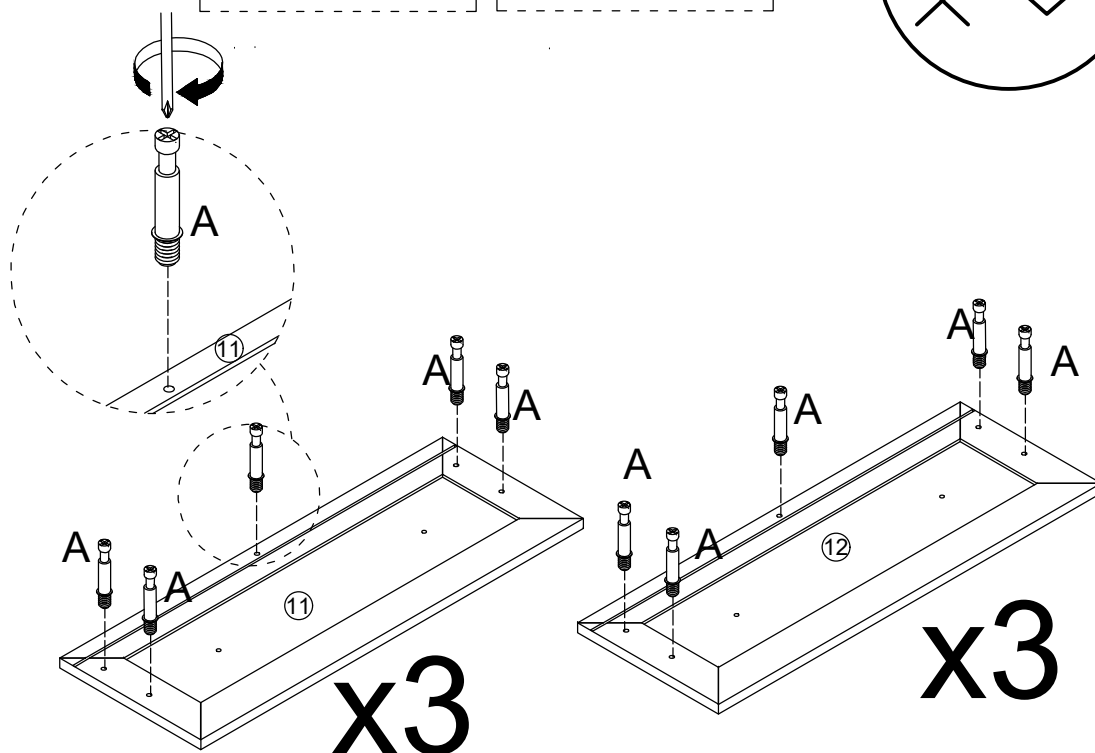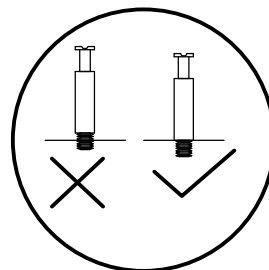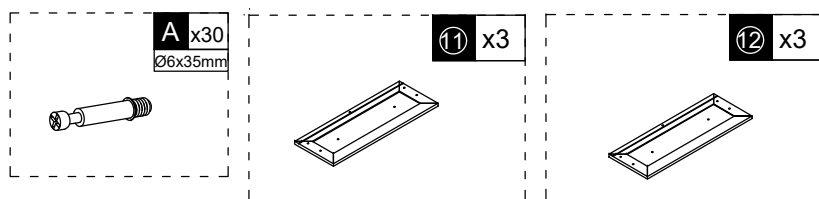

H x6

 

I x6

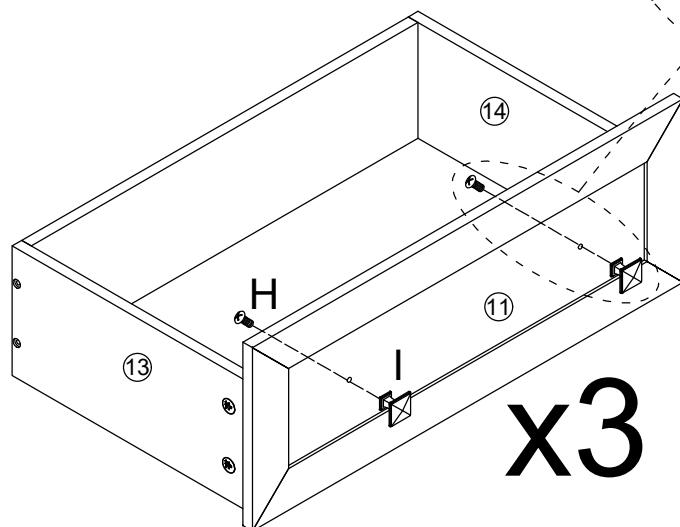 

x3

E x18



 
 
DL x3

L300mm







DR x3

L300mm

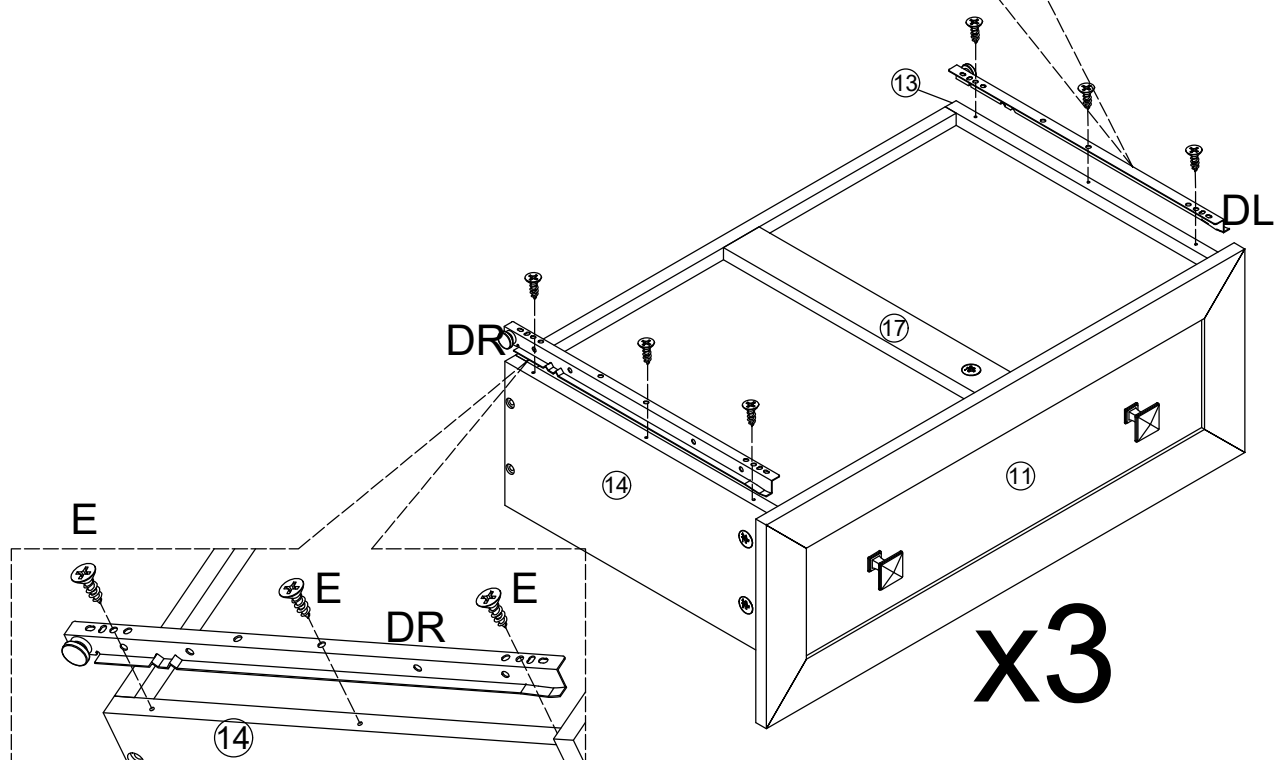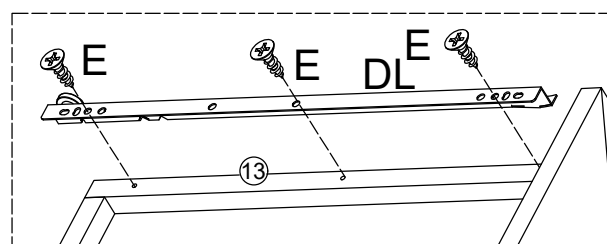


x3


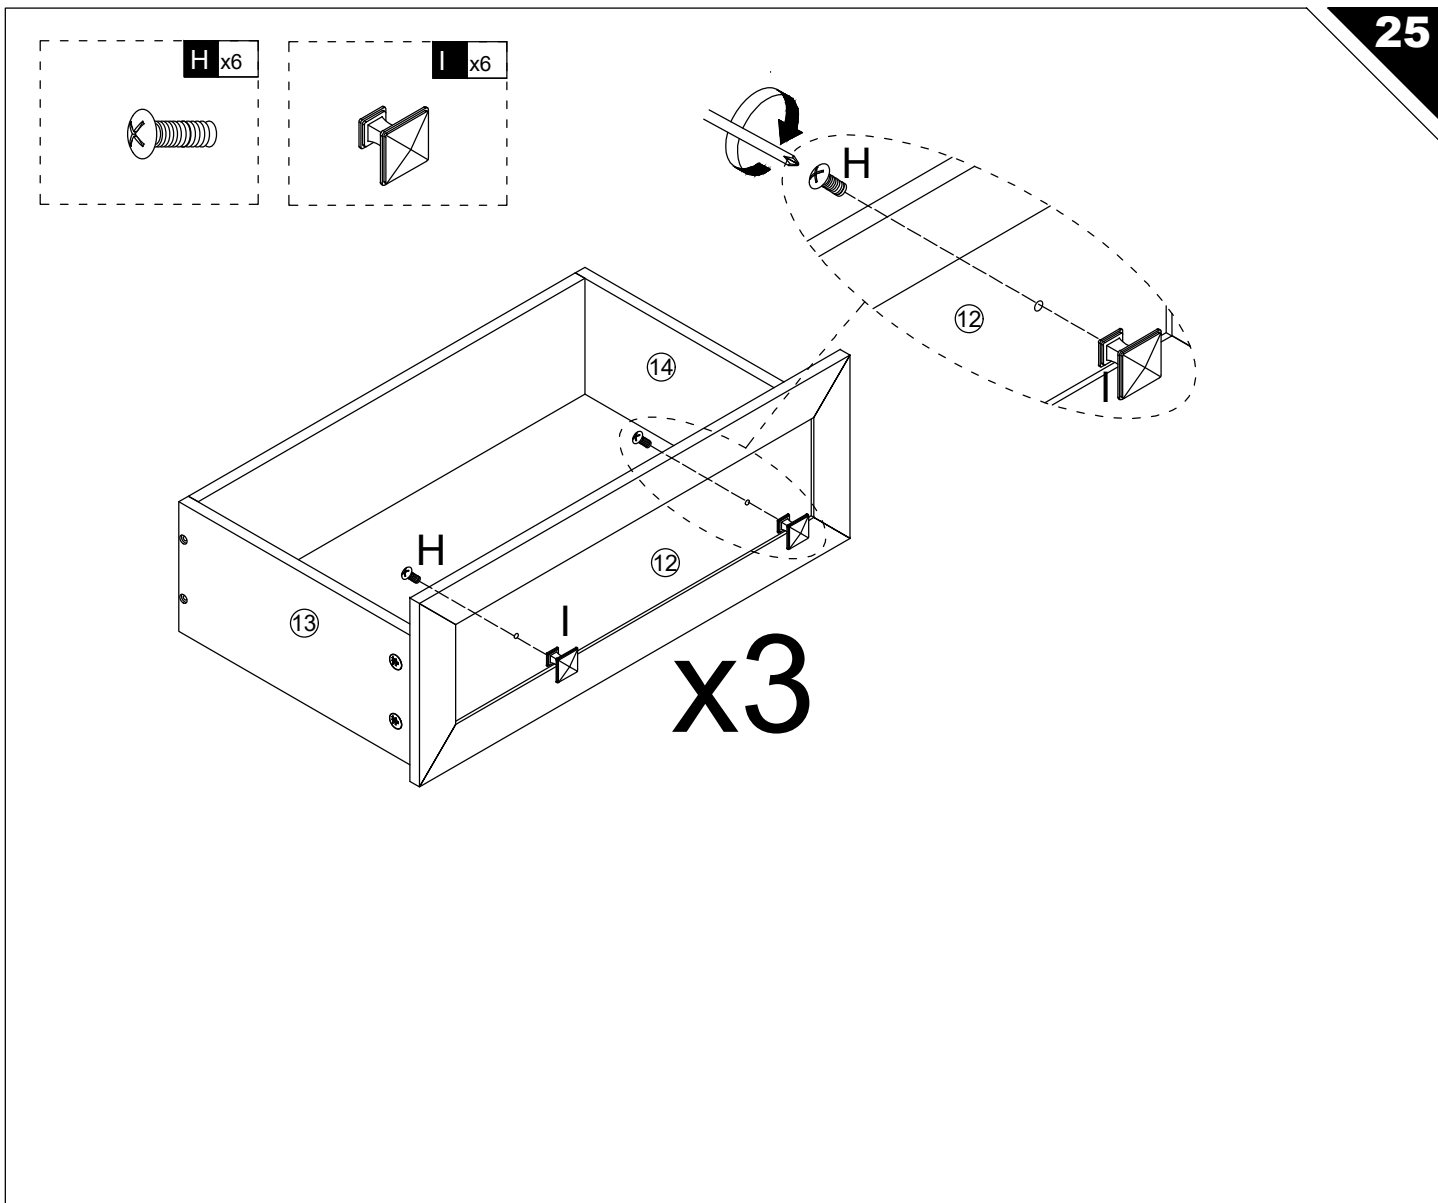 
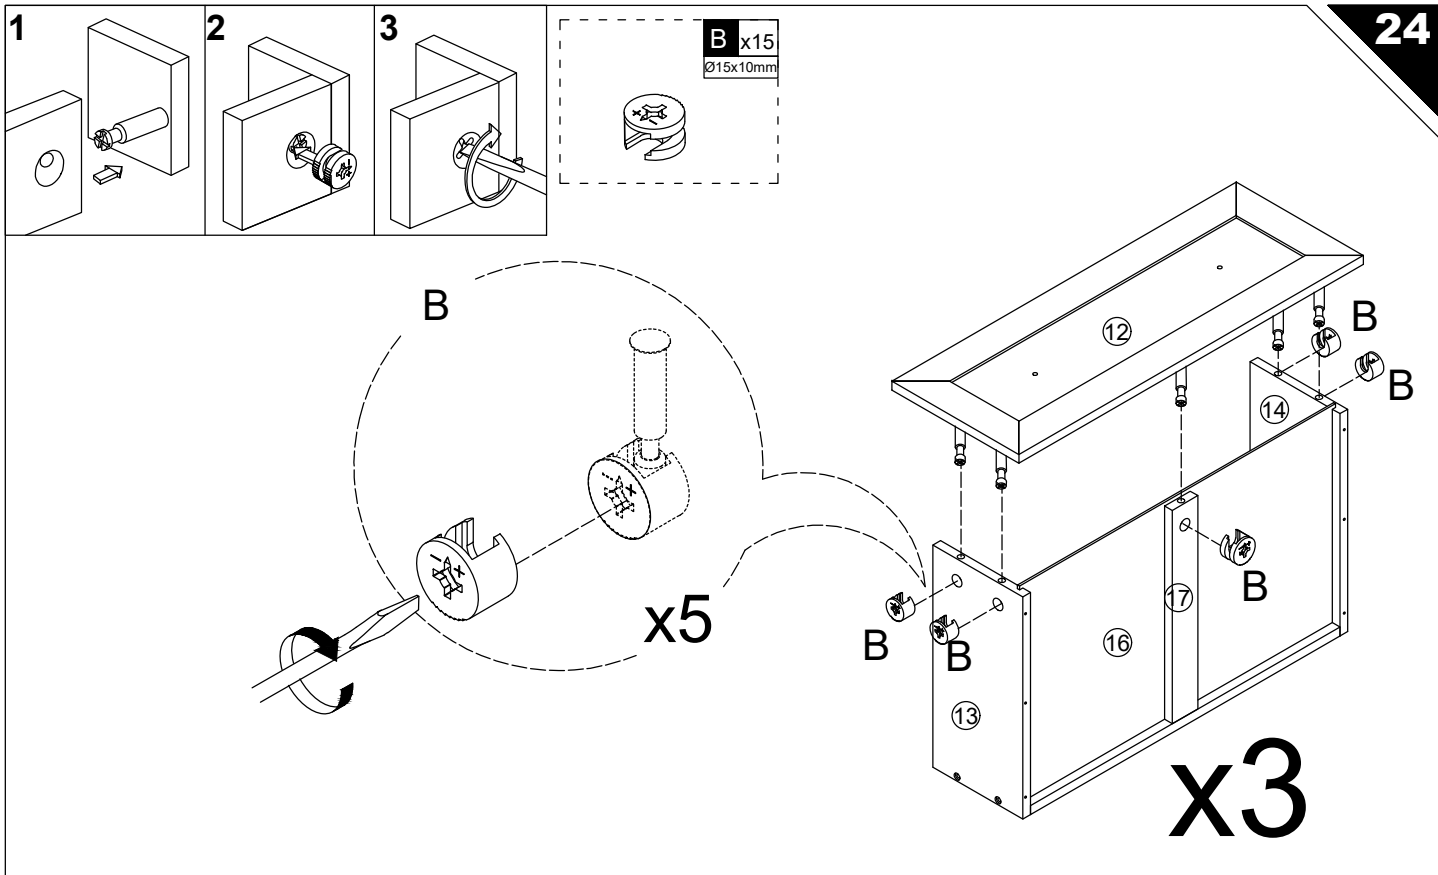 


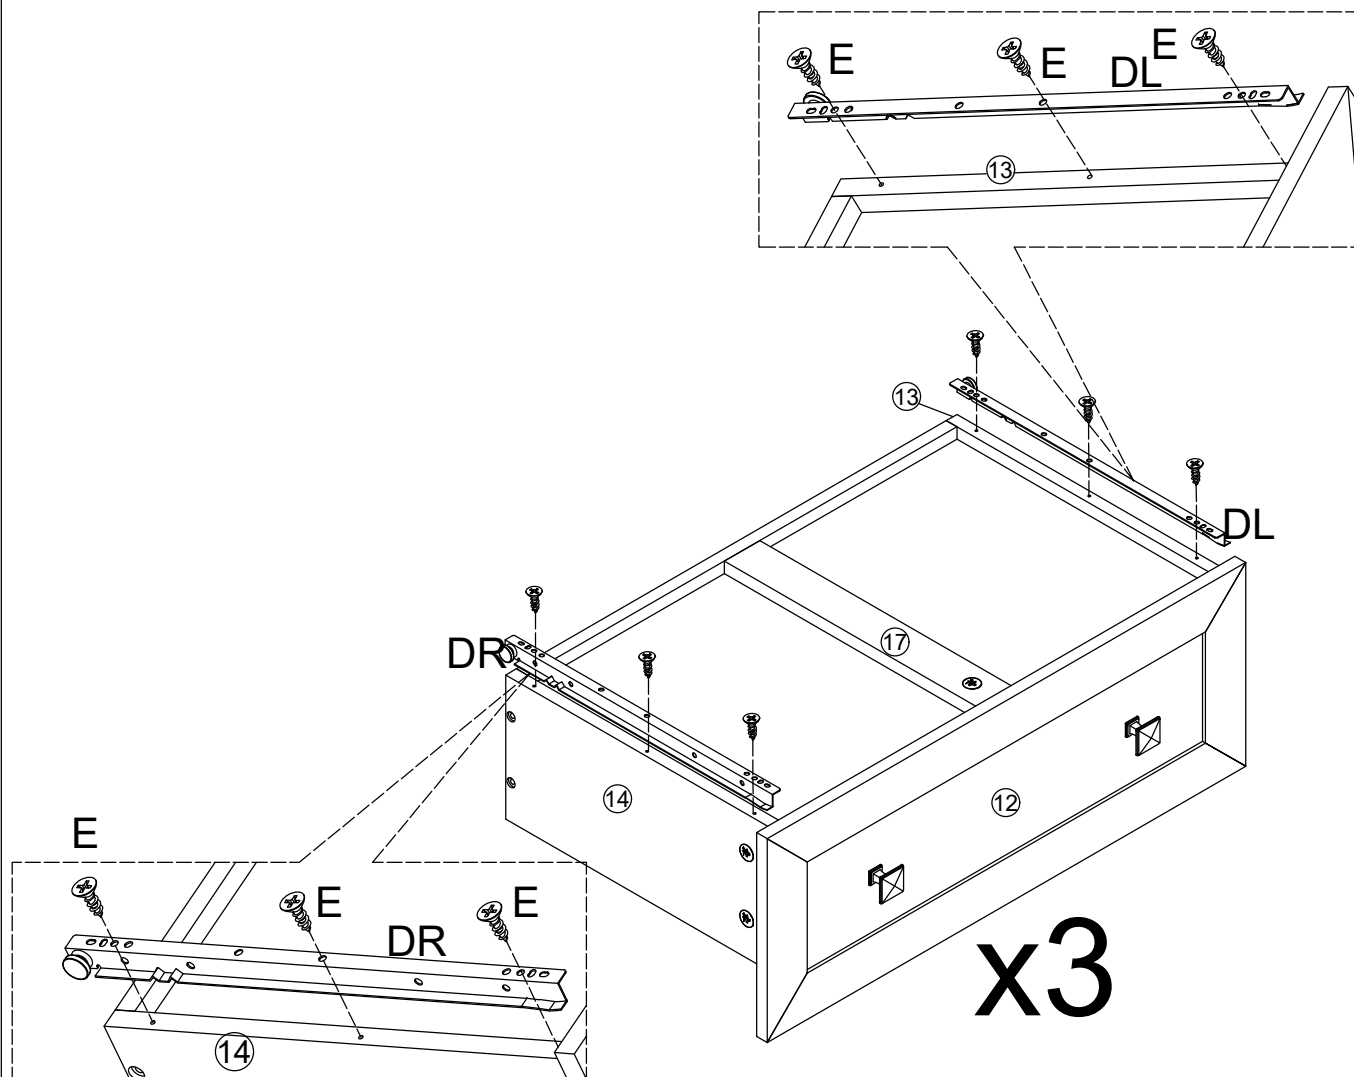 
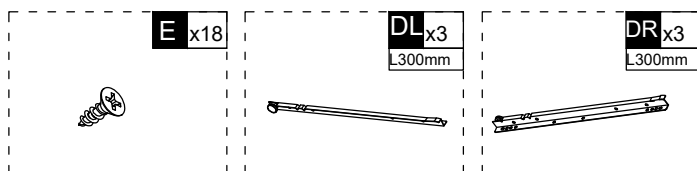 


 (1)

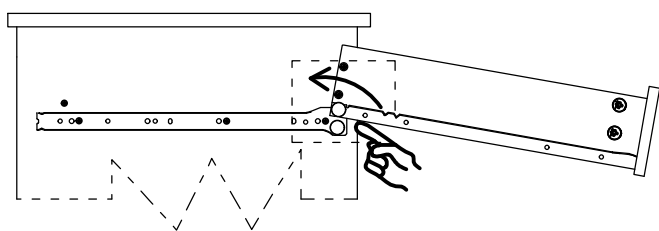

   (2)

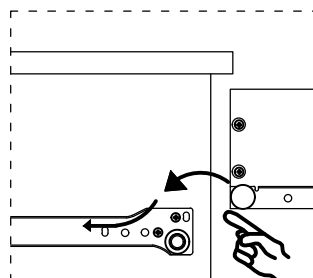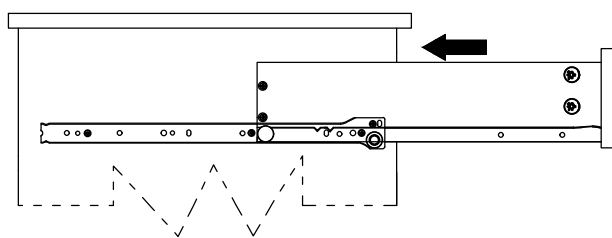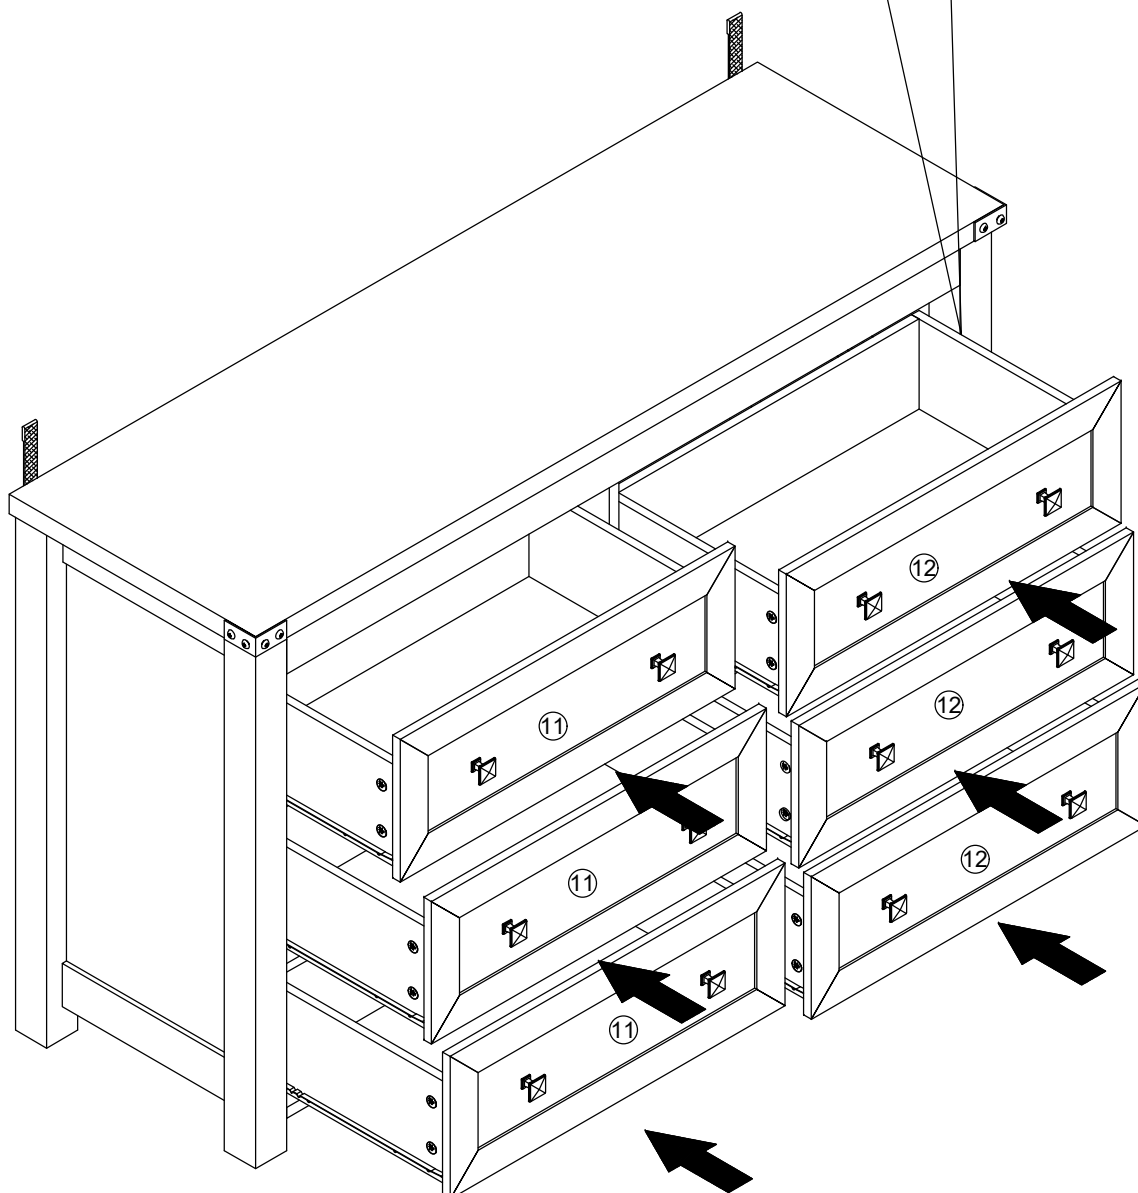**x6**

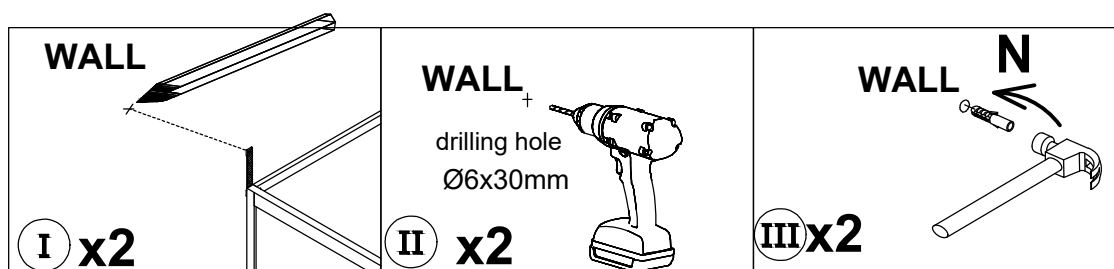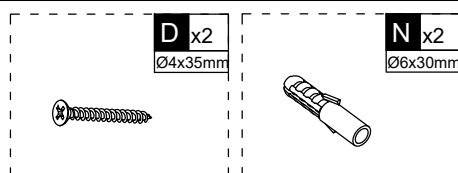  

- (1) Please mark two locations for drilling holes on the wall based on the actual situation of the cabinet and the user.
- (2) Choose the size of the drill bit according to the size of the accessory (N), and use an electric drill to drill the size of the accessory (N) on the wall.
- (3) Use a hammer to hammer the accessory (N) onto the position of the electric drill just now.
- (4) Place the cabinet in the appropriate position and use screws (D) to pass through the anti tipping cloth strip (L) and lock it with the accessory (N) to prevent the cabinet from tipping over!

