

 
Usage method

Step 1: Take out the massage chair

Take the massage chair out of the package and place it on a flat ground.

Step 2: Assemble the calf


As shown in the figure, take out the calf from the plastic bag, hang it on the massage chair, insert the air tube according to the color of the calf air tube, and insert the gear card in the accessories into the calf hanging shaft

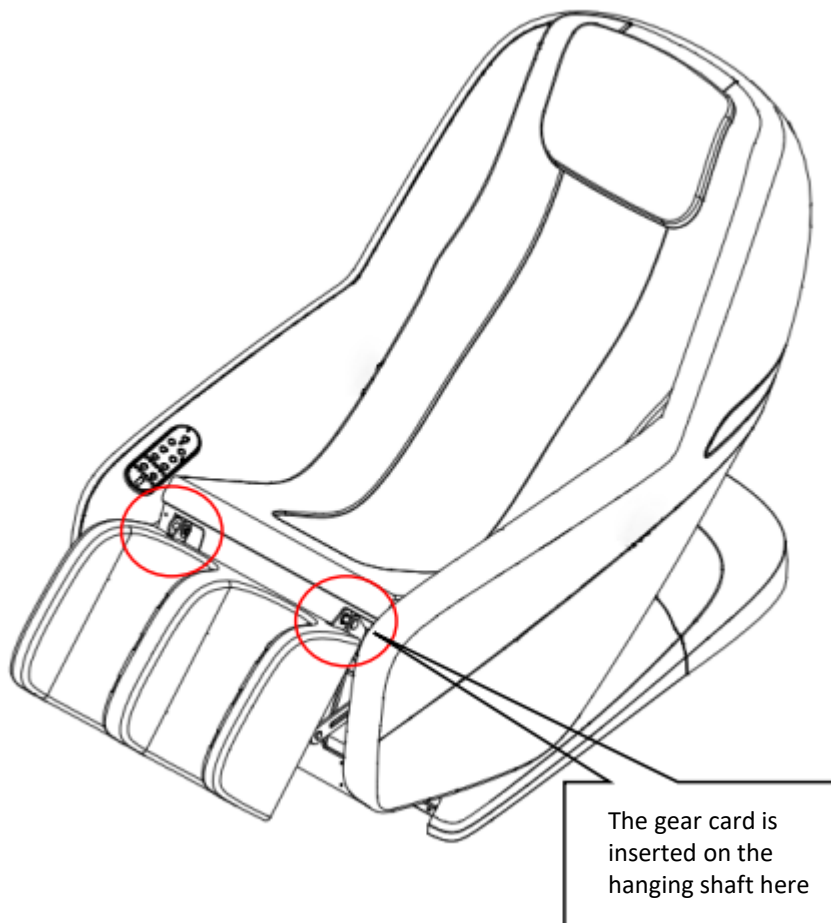

Usage method


Step3 : power cord

First connect one end of the power cord plug with the power jack on the power box of the base; then insert the power cord plug into the 120V socket, turn on the power switch next to the jack, and click the switch on the armrest button.

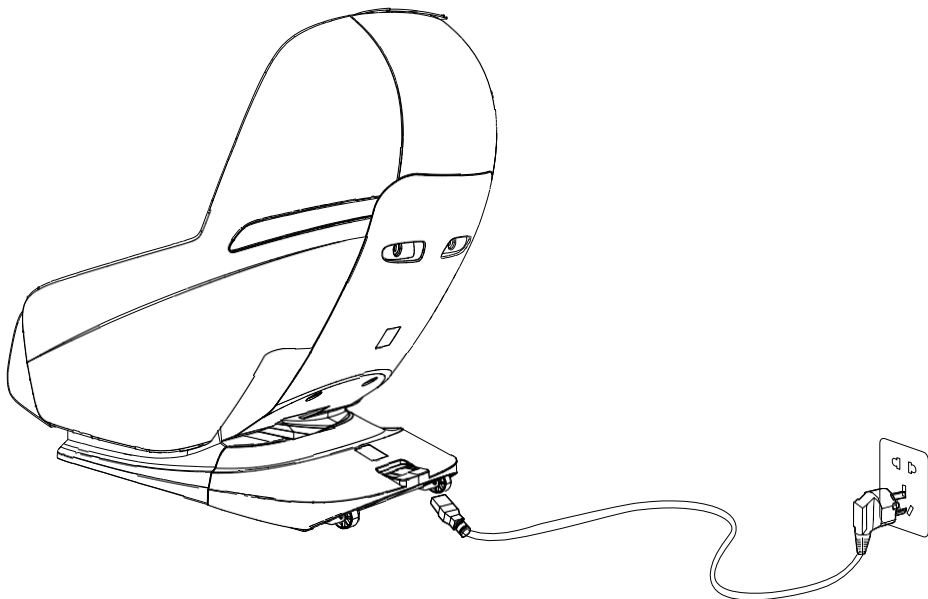

Installation site

- It is recommended to keep the horizontal distance between the back of massage chair and the wall (or other objects) more than 1cm. The horizontal distance between the front end of the lower leg and the wall (or other objects) shall be more than 50cm.
- Do not place the massage chair in a damp place, so as to prevent the machine from moisture leakage.
- Do not place the massage chair near the high temperature source to avoid fire or damage to the leather.
- This massage chair belongs to the category of electrical appliances. It is necessary to use three core power socket. Please make sure that the ground wire on the power socket is well grounded, so as to avoid adverse consequences such as electric shock due to electric leakage during use.

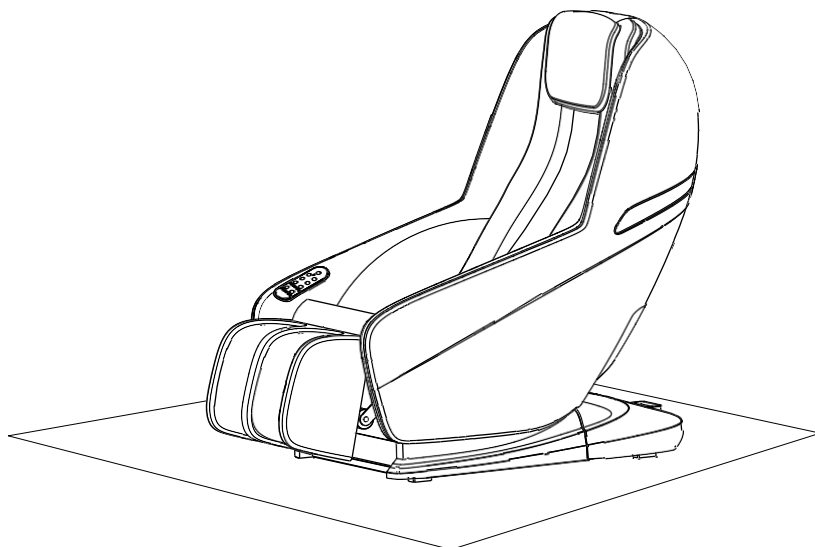


Floor protection

The massage chair may cause damage to the floor if it is pressed for a long time. It is recommended that you pad a carpet or other buffer medium under the massage chair to avoid damage to the floor.

▶ Usage method

Move method

After confirming that all wires are far away from the ground, pull the backrest back to a certain angle (when the center of gravity falls on the pulley), that is, push the massage chair forward and backward with hands, and then gently hold the massage chair back to the normal angle.

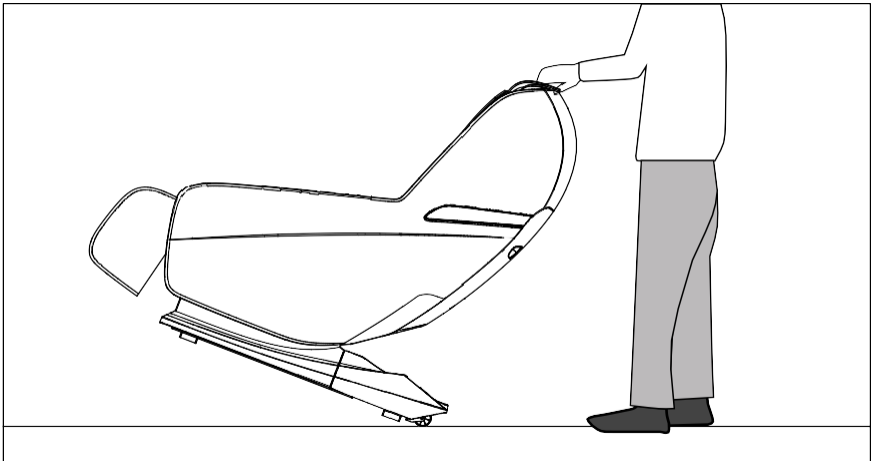

Pay attention : turn off the power switch before unplugging the power cord and the connecting wire of the hand controller.