
# edishinë

# **Outdoor Spotlight**

SKU:HGSL04B [Instruction Manual]

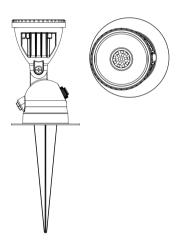


Thank you for your purchase.
Please contact us if you have any questions.
We will get back to you within 24 hours.
Email: support@dewenwils.com
Please attach your Order ID so that
we can serve you better.

### Warning:

Please read the instruction manual carefully before use and strictly observe the safety rules and the caution, attention and warnings listed in the instruction manual to avoid possible electric shock or personal injury. When using electrical products, always follow basic precautions including the following:

- 1. These products may represent a possible shock or fire hazard if improperly installed or attached in any way.
- 2.Products should be installed by a qualified electrician in accordance with these instructions, current local electrical code or the current National Electric Code (NEC).
- 3.Do not secure the wiring of the product with staples or nails, and do not hand on sharp hooks or nails.
- 4.Do not let lamps rest on the supply cord or on any wire.
- 5.Unplug the product when leaving the house, when retiring for the night, or if product will be left unattended.
- 6. This is an electrical product not a toy! To avoid the risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- 7.Do not use this product for other than its intended use.
- 8.Do not hang ornaments or other objects from cord, wire, or light string.
- 9.Do not cover the product with cloth, paper or any material not part of the product when in use.
- 10. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit correctly in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- 11.Read and follow all instructions that are on the product or provided with the product.

# **Operating Instructions**

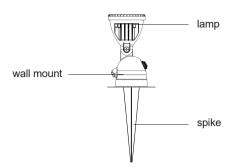

# 1.Wall Mounting

- ·Remove fixture components and parts pack. Check that all parts are included. Turn OFF Power at circuit breaker box, do not rely on wall switch alone to turn off power.
- ·Position fixture in desired area (within 3' of receptacle) and mark location of keyhole slots.
- ·Drill 1/8" diameter pilot holes where previously marked and install 3/4 screws approx. 3/4 of their length.
- ·Mount fixture by aligning keyhole slots in mounting plate with screw heads. Tighten screws to secure. Plug power cord into grounded three-prong receptacle.
- ·Loosen screw adjust fixture to desired position then tighten screw.

# 2.Stake Mounting

- ·Remove fixture components and parts pack. Check that all parts are included. Turn OFF Power at circuit breaker box, do not rely on wall switch alone to turn off power.
- ·Thread stake onto fixture.
- ·Position fixture in desired location and gently push into ground.
- ·Loosen screw adjust fixture to desired position then tighten screw.

Remark:The sensor will turn off light when it detects dawn or any light more than 30 seconds

#### Caution

- 1.When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- 2.If the product is placed on a tree, the tree should be well secured and stable.
  3.Before using or reusing, inspect product carefully. Discard any products that have cut,damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, or exposed copper wire.
- 4. When storing the product, carefully remove the product from herever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- 5.When not in use, store neatly in a cool, dry location protected from sunlight.6.To reduce the risk of fire or electric shock,do not attempt to replace lamps or modify string.
- 7.To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.
- 8.Be sure to aim the light in the desired location before inserting the stake into the ground.

### **Specifications**

Input Voltage: 120Vac, 60HzInput Current Rating: 0.1A

- Power Rating: 12W

### **One Year Limited Warranty**

EDISHINE warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase.

Warranty is void if damage is caused by misuse or improper installation. Email: support@dewenwils.com.

Our dedicated customer service team will get back to you within 24 hours.