


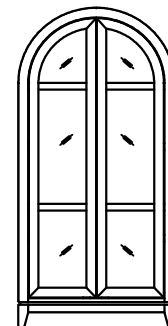

ASSEMBLY INSTRUCTIONS

| |



TOOLS REQUIRED:

Allen Wrench (supplied, part # A)
Phillips Screw Driver (Not Provided)


BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. CAUTION: Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.
5. Assembly of this console may require (2) people.

INSTRUCTIONS:

1. Set the cabinet upside down on a smooth and clean soft surface.
2. Attach all Legs (A,B,C,D) to cabinet using Bolt (B), Lock washer (C), Flat washer (D) and tighten with Wrench(A). As shown in Figure 1.
3. Attach all adhesive bumper pad (E) to glass shelf. As shown in Figure 2.
4. Place the adjustable shelves to the cabinet as shown in Figure 2.
5. To level the cabinet, please adjust the bottom levelers accordingly. As shown in Figure 2.

Figure 1

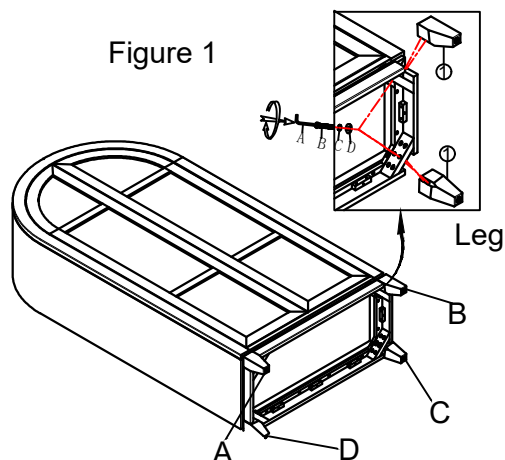

Adjustable shelf

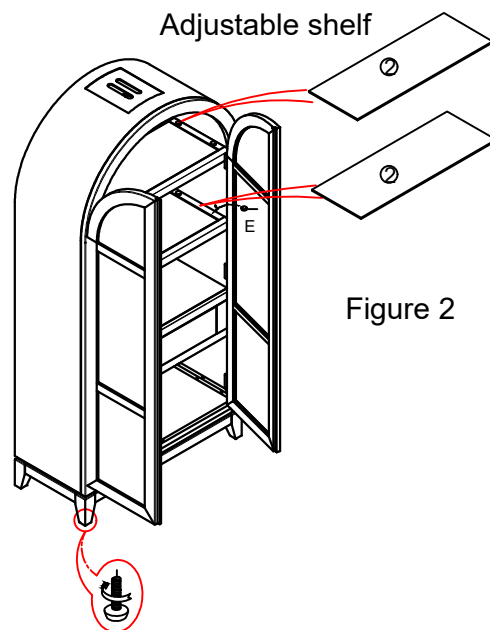


Figure 2

HARDWARE PACK				
NO.	Drawing	Description	Size	Q'ty
A		Allen wrench	100*50*4mm	1 pcs
B		Bolt	5/16*2 1/4mm	8 pcs
C		Lock washer	8*19*2mm	8 pcs
D		Flat washer	5/16*13mm	8 pcs
E		Adhesive bumper pad	Ø 8*1mm	8 pcs

