


Amish Casual Swing Stand

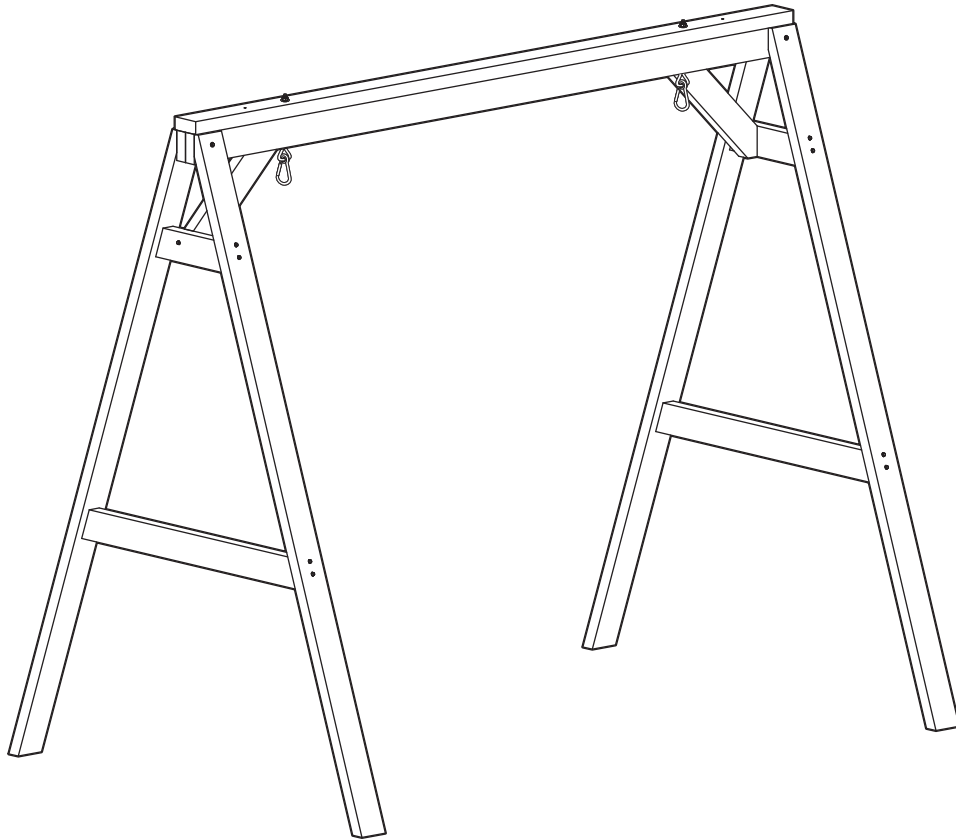

For assistance with assembly, please contact customer service
(510) 983-4310




 
 
PRE-ASSEMBLY PREPARATION:




DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF FINGER ENTRAPMENT

- Please read through these instructions before beginning assembly.
- Two adults are recommended for assembly.
- Clear out an open space for assembly and lay all items on the Parts and Hardware List on a padded surface to protect the finish. Extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children until fully assembled.
- Please check for any loose screws and tighten them before you use.

PARTS LIST:

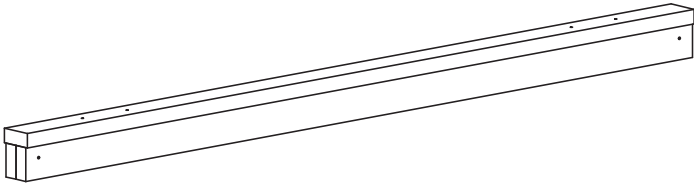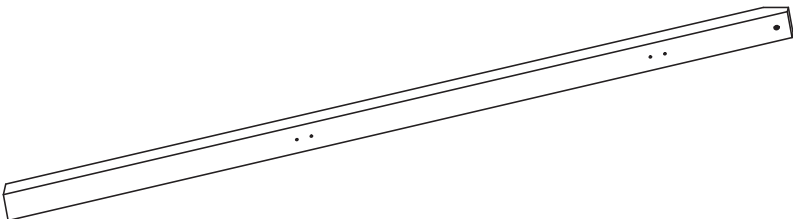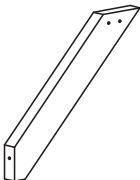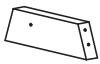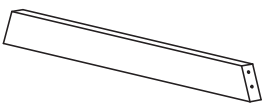ID	PHOTO	DESCRIPTION	QTY
A		Top Beam	1
B		Stand Legs	4
C		Beam Braces	2
D		Top Cross Members	2
E		Lower Cross Members	2

 
HARDWARE LIST:

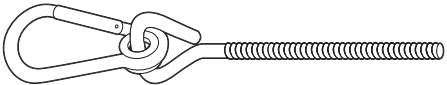ID	PHOTO	DESCRIPTION	QTY
1		1/4" x 3" Lag Screws	26
2		3/8" Locknuts	2
3		3/8" Flat Washers	2
4		3/8" x 5" Hanging Hooks	2


TOOLS LIST:



 Drill




7/16" Socket or Wrench

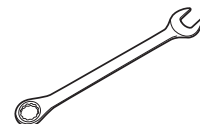


9/16" Socket or Wrench

STEP-BY-STEP ASSEMBLY:

- 1** Attach the Top Cross Member (D) & Lower Cross Member (E) between two Stand Legs (B) with 1/4" x 3" Lag Screws (1). Repeat for the other side.

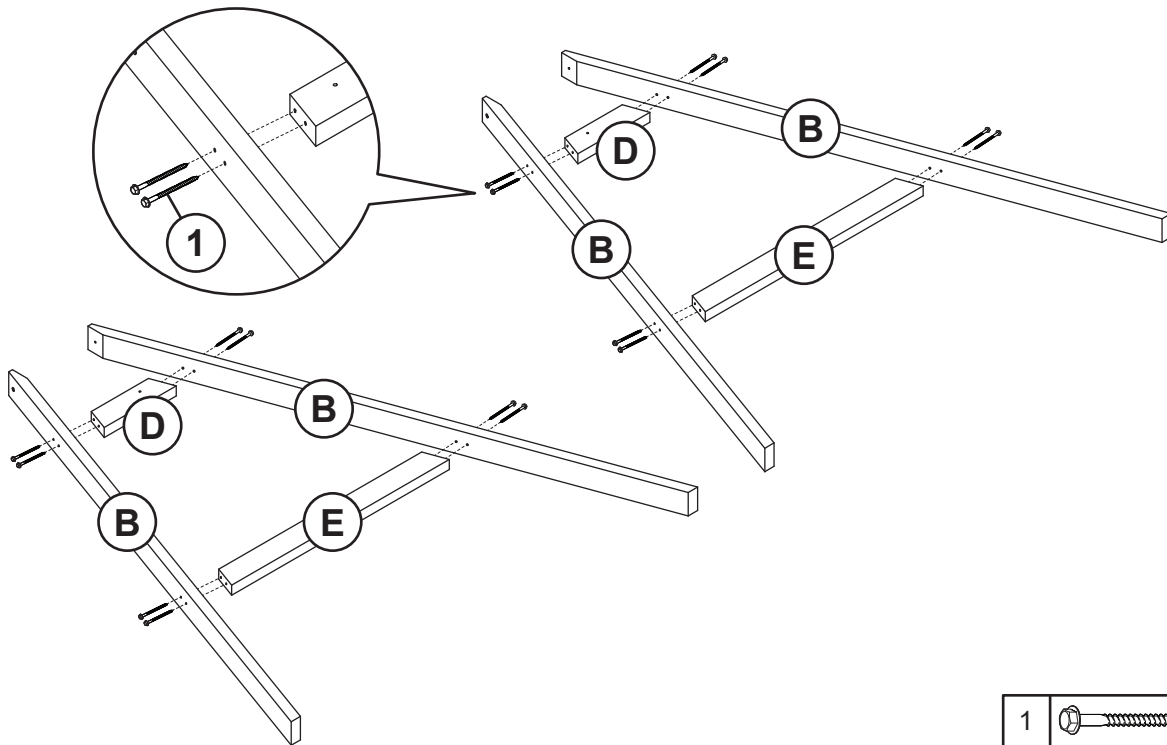


- 2** Attach the Beam Brace (A) at the top of the Stand Legs with 1/4" x 3" Lag Screws (1).

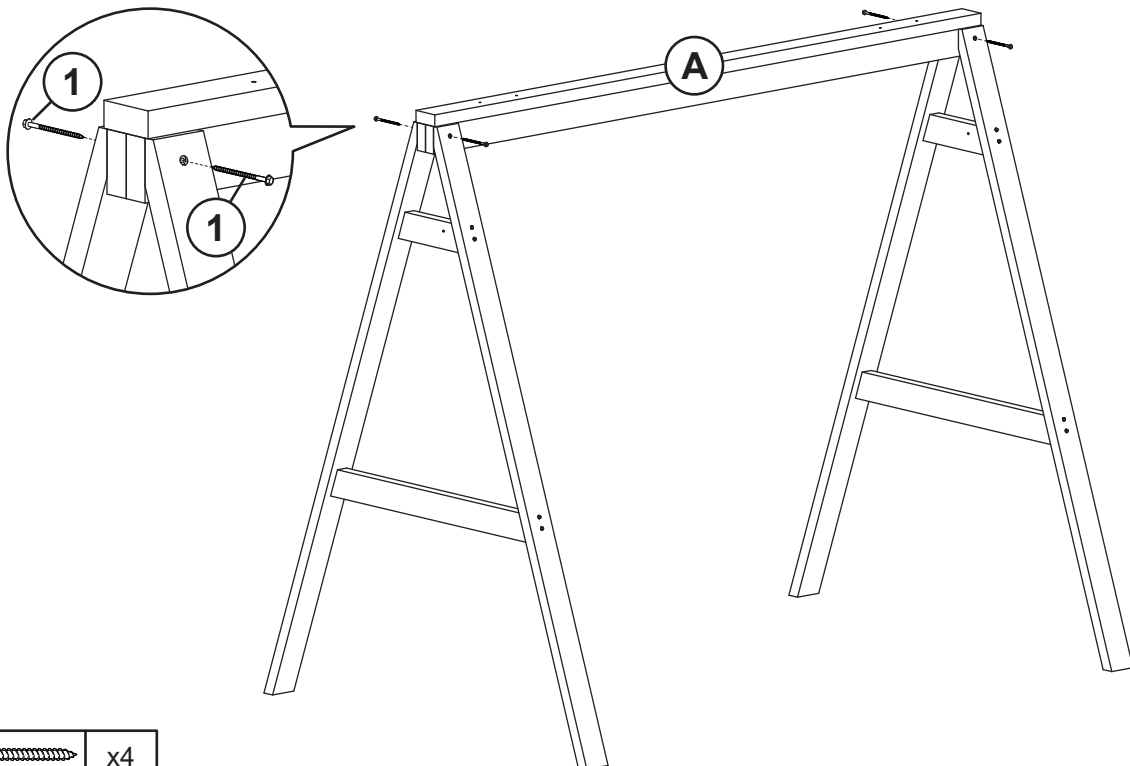

STEP-BY-STEP ASSEMBLY:


3

Attach one end of the Beam Brace (C) to the Top Cross Member (the trimmed end) with 1/4" x 3" Lag Screws (1) and attach the other end to the Top Beam on one side with 1/4" x 3" Lag Screws (1). Repeat for the other side.

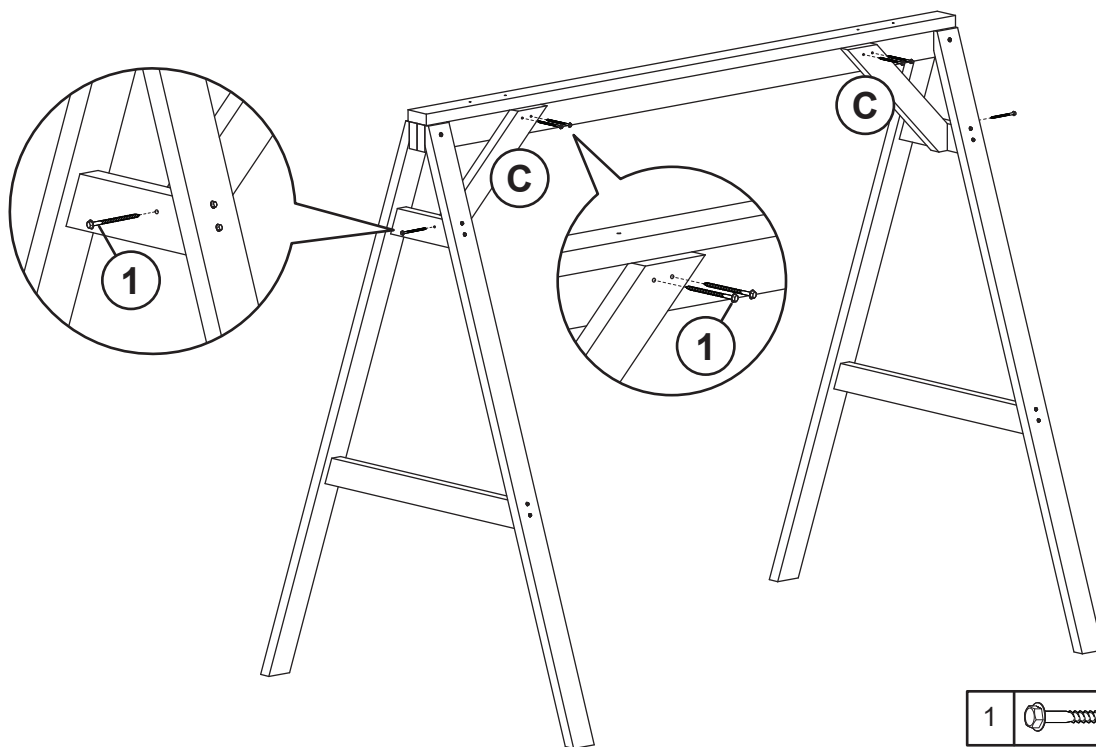

4

Insert Hanging Hooks (4) at desired distance using pre-drilled holes on the top beam. Tighten Locknuts (2) and Flat Washers (3) all the way down.

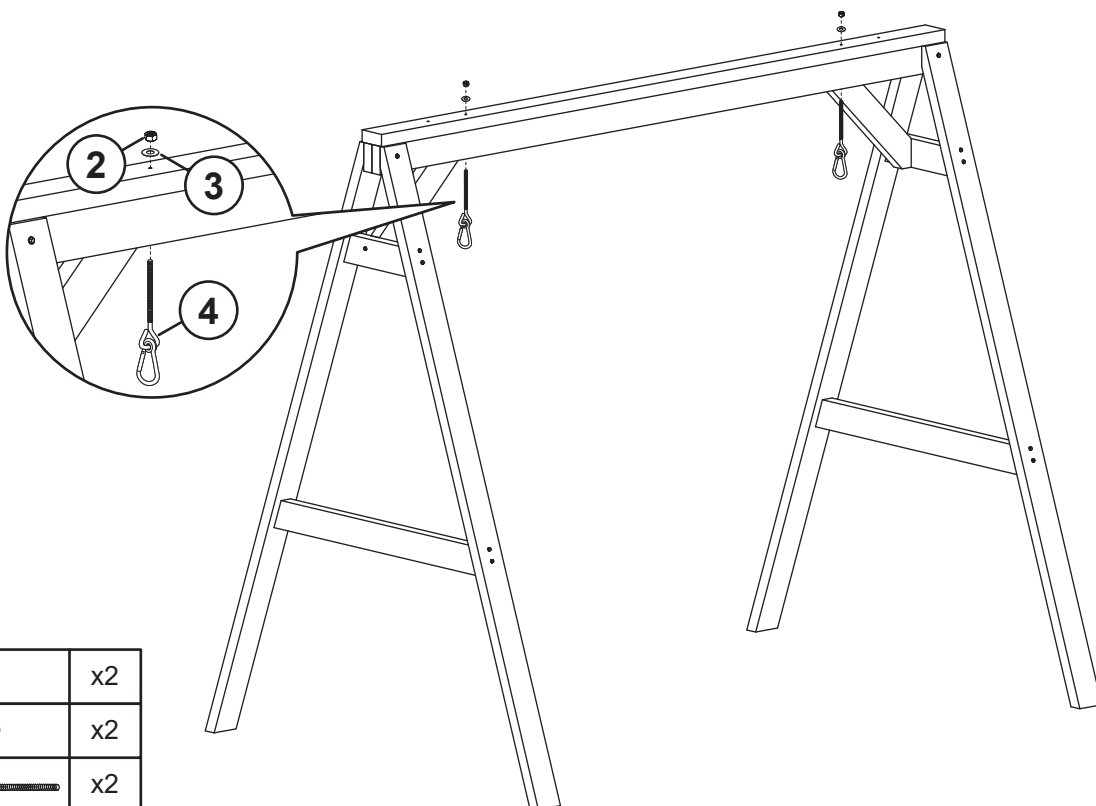



Easy Covers

Protect your new Centerville Amish with our line of custom fit outdoor furniture covers by EasyCovers. Available on Amazon.com and ThePorchSwingCompany.com.



Limited Manufacturer Warranty

Centerville Amish warrants all pressure treated wood products for a period of 90 days from date of purchase against structural failure, woodrot and insect infestation.

The original consumer is entitled to receive new wood replacement parts within the warranty period.

View our complete warranty details at:
<https://www.centervilleamish.com/warranty>

View our complete recommendations to care for your outdoor furniture as well as details about our Maintenance Kits by scanning the QR code below:



Use & Care

The entire Centerville Amish line is constructed of kiln-dried pressure-treated pine and is designed for outdoor use. Our Amish craftsmen work with commercial-grade exterior finishes by Sherwin Williams for optimum outdoor durability. These water-based finishes provide adequate protection for covered porches that get occasional weather exposure (rain, etc...). The less exposure your wood furniture has to direct sun, wind, rain, and snow, the longer it will last. If you plan to use your furniture outdoors in full weather exposure, we recommend adding a polyurethane, varnish, or lacquer coating. We recommend contacting your local paint shop for their specific recommendation. Their insight will be best-suited for your local climate and weather conditions.

Care & Cleaning

Dirt build-up leads to deterioration, so keeping your outdoor wood furniture clean will give it a longer life. Clean it well two or three times per year with water, mild soap, and a soft cloth. (This is also the perfect time for a periodic hardware check.) Hose it down before you start to remove cobwebs and caked-on dirt. Do not use abrasive cleaners, bleach, or scouring products that will affect the finish. Dry the furniture thoroughly when done.

Consider one of our Maintenance Kits to help keep your product looking fresh! Includes 1 quart of water-based semi-transparent or semi-solid wood stain, sponge sander, dust cloth, and a foam brush.

WARNING: California's Proposition 65

This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65WARNINGS.ca.gov/furniture