 


3010

# AIR COOLER

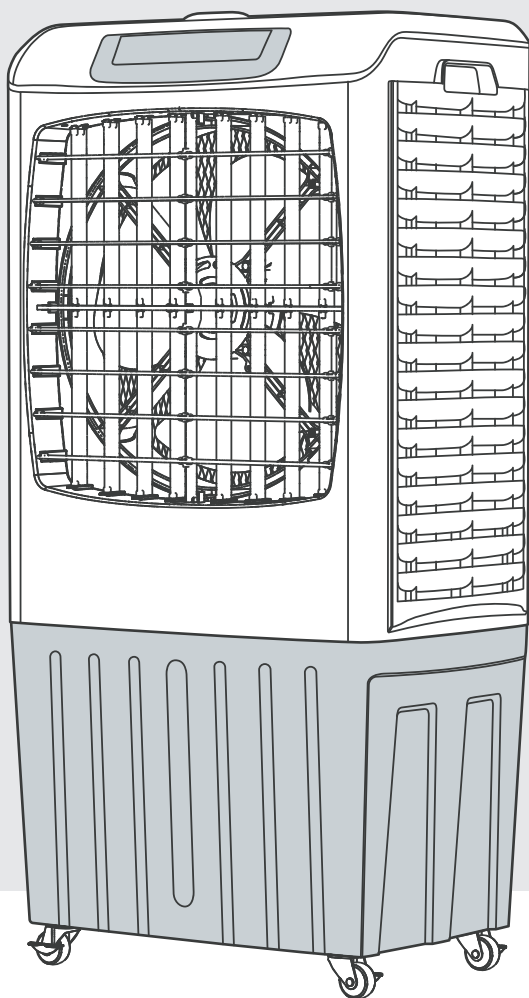

WH-HLB-17DN

## User Manual

Please read the manual carefully before use

# CONTENTS

General Safety Precautions .....	1-2
Features .....	3
Specifications .....	3
Parts Identification .....	4
Accessories List .....	4
How to Use Your Appliances .....	5-8
Usage of Air Cooler: .....	5
Control Panel: .....	7
Usage of Remote Control .....	7
Battery Installation: .....	8
Usage of the Ice Box: .....	8
Care and Cleaning .....	9
Troubleshooting .....	10
Warranty Card .....	11

# General Safety Precautions

Please read and save these instructions carefully before use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**WARNING:** Please do not use where children can touch the unit, nor let children use the unit by themselves.

## Warning

- Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
- Never immerse the appliance in water or other liquids to avoid damage and other hazards.
- Never leave the appliance unattended while it is connected to the mains.
- Ensure the electrical cord does not hang over the work surface.
- Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
- Do not put the unit under wall socket.
- Keep cord away from sharp or hot objects.
- Do not clean with metal scouring pads. It may scratch the surface or cause electrical shock.
- Avoid sharing a power outlet with any other appliances.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect turn any control to OFF, then remove plug from wall outlet.
- Do not use new and old batteries at the same time in remote controller.
- Take off batteries from remote controller when not in use.

## Safety Instruction








- Close adult supervision is necessary when operating appliance, especially where children are present.
- Never turn the unit on its sides.

- Do not place the appliance on or near a hot gas or electric burner, or near easily flammable materials.
- Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces. Extreme caution must be used when moving an appliance containing hot liquids.
- Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
- Do not insert foreign objects into the grid of air vent (intake or outlet) during operation.
- Do not cover the appliance with paper, cardboard, plastic, metal foil, or any other flammable material. Otherwise, a fire may occur. Keep the appliance away from any hot sources.
- Do not use outdoors.
- Water level must be between the MIN and MAX line.
- After filling with water, do not tilt the unit and avoid moving it, which may cause water to overflow the sides of the tank and leak. If the unit needs to be moved a little, push on the side gently.
- Do not place any objects on the top of the unit. The air vent must not be obstructed during operation.

## Maintaining

- Never use any chemical or abrasive solution to clean the unit body. For slight dirt on the body, wipe it off with a soft damp cloth. For greasy dirt, squeeze a little toothpaste or mild detergent on a soft damp cloth, and then wipe the dirt off.
- Keep the air vent (intake or outlet) away from obstacles.
- Do not strike or shake the unit body during operation, otherwise, it will stop working automatically. In this case, restart the unit.
- Thoroughly clean the unit before first time use.
- After some time, operation, dust and dirt may occur in water tank. It is recommended to change water and clean water tank frequently.
- Empty water tank to avoid odor occur when not in use.
- Do not use the unit for other than its intended use.
- Do not clean the unit with flammable liquid.

## Features

 
-  Cool. It cycles the water to blow cool air. It can lower the surrounding temperature and provide you a comfortable environment in hot summer.
-  Energy saving, high-efficiency, friendly environment.
-  Wide range of air output, 100° angle wide range of air output. The outlet will close when the power supply is off. 3 fan speeds: HIGH-MID-LOW.
-  Remote Control.  
6 meters remote control, 120° angle wide range receiver
-  Beep sound reminder.  
It has beep sound reminder function, convenient to use.
-  High grade computer control system.
-  1 to 24 hours timer setting.

## Specifications

Model	WH-HLB-17DN
Rated Voltage	120V
Rated Wattage	145W
Water Tank Capacity	40L
Frequency	60Hz
Max Airflow	3500cfm

## Parts Identification

### CONSTRUCTION DRAWING

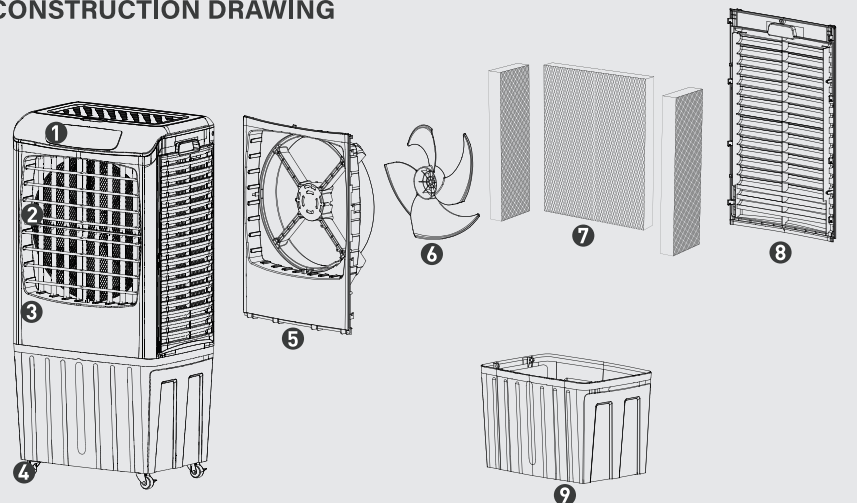

- ❶ Control Panel
- ❷ Outlet Of Air Flow
- ❸ Front Cabinet
- ❹ Caster
- ❺ Air Outlet
- ❻ Blade
- ❼ Honey Comb
- ❽ Back Cabinet
- ❾ Water Tank

## Accessories List

No	Designation	Quantity (pcs)
1	User Manual	1
2	Remote Control	1
3	Ice Box	2



# How to Use Your Appliances

## Usage of Air Cooler:

- Take the device out of the packaging and place it on a stable, horizontal surface.
- Check the list of accessories to ensure that the accessories are complete.
- Take out the casters and caster wrench to assemble. (as shown in fig.1)
- Open the top cover and add water from the water inlet. (as shown in fig.2)

### Note:

 
1. Water level must be between the MIN and MAX lines.
2. After some time of operation, dust and dirt may occur in the water tank. It is recommended to change the water and clean water tank frequently.
3. The wastewater in the water tank can be discharged from the water outlet on the back cabinet. (as shown in fig.3)
4. To prevent the circulating water from spurting out, please do not remove this cover. (as shown in fig.4)

- Only use the unit with the correct AC outlet.

- Insert the plug into a power outlet and turn on the power switch on the side of the unit. A beep sounds and the power indicator light up.

### Note:

1. To protect against electric shock, do not pull the plug out of the socket with wet hands.
2. Disconnect the plug from the socket when moving the unit.
3. Insert the plug into the outlet and make sure it is securely connected.

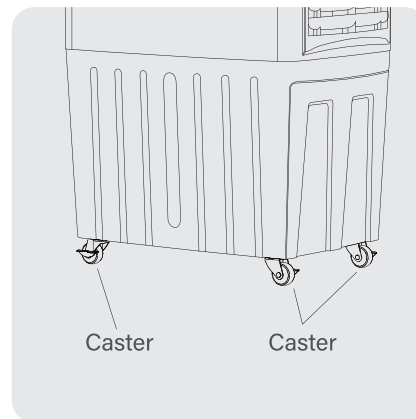


( fig.1 )



 ( fig.2 )






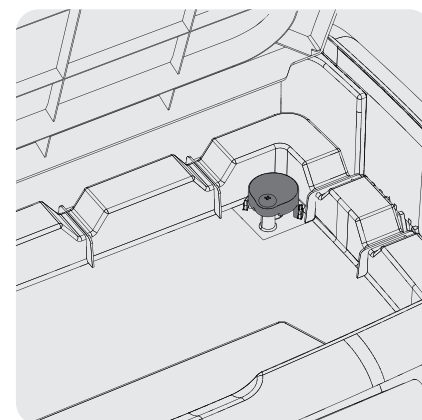


( fig.3 )

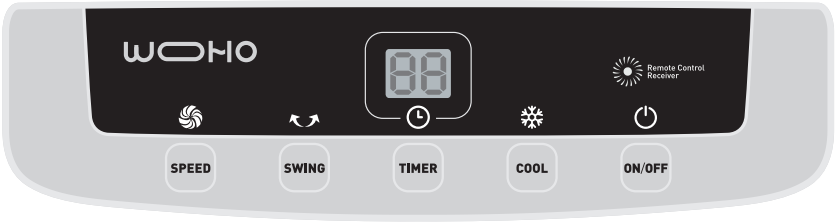 

( fig.4 )


Control Panel:



	<b>SPEED</b>	Press to cycle through fan speeds: LOW -> MID -> HIGH -> LOW. The digital display will indicate the current speed (1 for LOW, 2 for MID, 3 for HIGH).
	<b>SWING</b>	Press to activate horizontal swing of vertical louvers. The SWING indicator will be displayed. Press again to fix the air direction. For vertical airflow, adjust the horizontal louvers manually.
	<b>TIMER</b>	Set the timer between 1 to 24 hours, in 1-hour interval.
	<b>COOL</b>	During operation, press to start the evaporative cooling function; the water pump starts working. Press again to turn off the water pump. If there's a water shortage, both the water pump and cooling function will stop.
	<b>ON/OFF</b>	Press once to turn the unit on. It will start at MID speed, then revert to the previously memorized status. For first-time use, it starts at MID and then works at LOW. Press again to turn the unit off.

Usage of Remote Control:

 Remote controller control panel with the same function as the unit.

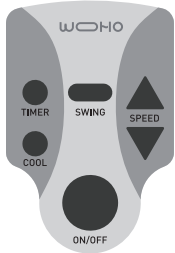

Battery Installation:

Begin by opening the battery cover of the remote control. Insert 2 pieces of 1.5V AAA batteries into the compartment, ensuring the correct orientation according to the polarity markings inside.

Aiming at the Receiver:

 
Always aim the remote control directly at the receiver on the unit when using it. This ensures proper communication between the remote and the unit.

Battery Replacement:

If the batteries in the remote control run out of charge, follow these steps: pull out the battery cover following the marked direction to access the battery compartment. Remove the old batteries, paying attention to the positive (+) and negative (-) poles. Insert new batteries, ensuring they are correctly oriented. Put the battery cover back on, ensuring it is securely closed.

Usage of the Ice Box:

1. Place the ice box into a refrigerator and allow it to freeze completely.
2. Once the ice box freezes, insert it into the water tank through the water filling at the top (as shown in fig.5). Ensure it is securely placed, then push the water tank back into its original position. After about 10 minutes, the temperature inside the water tank will decrease, providing cooler air output.
3. The machine comes equipped with two ice packs, allowing for continuous usage. Once one ice pack has melted, the other can be used in its place.
4. **Safety Precautions:** Do not open the ice pack or attempt to swallow its contents.

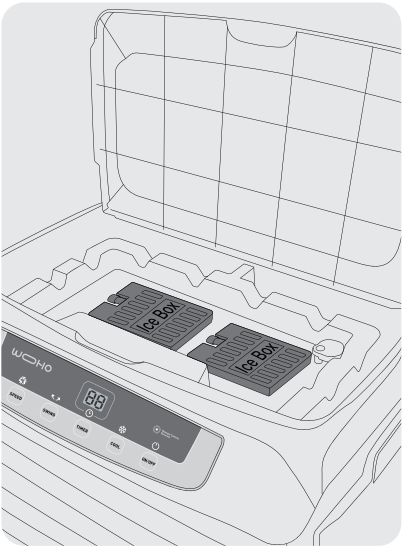

( fig.5 )

Following these instructions will enhance the cooling efficiency of the unit and ensure safe usage of the ice pack.

## Care and Cleaning

1. Before cleaning, ensure that the mains power is off and the unit is unplugged from the socket. Allow the appliance to cool down completely.
2. Use a damp cloth or sponge to clean both the interior and exterior surfaces of the appliance. Avoid washing it under running water, as this could cause serious damage.
3. Do not use gasoline, cleaning naphtha, corrosive cleaning agents, or solvents to clean the appliance.
4. Open the water tank cover and pour water into the tank for cleaning. Afterward, unscrew the drainage stopper located at the bottom of the unit to drain off any waste water.
5. To prevent odors when the appliance is not in use, empty the water tank regularly.
6. If the appliance won't be used for an extended period, remove the water tank, drain any remaining water, and properly install the unit for storage.
7. Following these cleaning instructions will help maintain the performance and longevity of the appliance.

## Troubleshooting

If there is an issue during operation, it may not necessarily be a problem with the unit itself. Before considering sending the unit for repair, please check the following list for potential solutions:

Problems	Possible reasons	Solutions
Not working	<ol style="list-style-type: none"> <li>1. The plug is not securely inserted into the socket or not connected well.</li> <li>2. The "ON/OFF" button is not pressed.</li> </ol>	<ol style="list-style-type: none"> <li>1. Insert the plug pin into the wall socket and make sure it is connected well.</li> <li>2. Press "ON/OFF" button after plugged.</li> </ol>
Humidify cool effect not good	<ol style="list-style-type: none"> <li>1. Water tank not enough water.</li> <li>2. Water pump is obstructed.</li> </ol>	<ol style="list-style-type: none"> <li>1. Add water to ensure there is enough water for pumping.</li> <li>2. Clean water tank discharge impurities.</li> </ol>

### Note:

1. If the problem cannot be found in the list or it persists, please contact our service center or a qualified technician for further inspection.
2. Do NOT open and repair the unit by yourself.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Warranty Card

It is intended to help you operate and maintain your new air cooler properly. Keep it handy to answer your questions.

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct by yourself.

Purchase Date : \_\_\_\_\_

Model Number : \_\_\_\_\_

Serial Number : \_\_\_\_\_

## Contact Us

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are some steps to follow for further assistance. First, contact the people who serviced your air cooler. Explain why you are not pleased. In most cases, this will solve the problem.

Please feel free contact us by after-service email address  
**(service@woohoo.com)**

Next, if you are still not pleased, fill in all the detailed information, including your telephone number and send it to us :

Address : \_\_\_\_\_

Phone : \_\_\_\_\_

Fax : \_\_\_\_\_

Email : \_\_\_\_\_

Online : \_\_\_\_\_

WOHO

New Air, New Life