


ASSEMBLY INSTRUCTIONS


DINING CHAIR

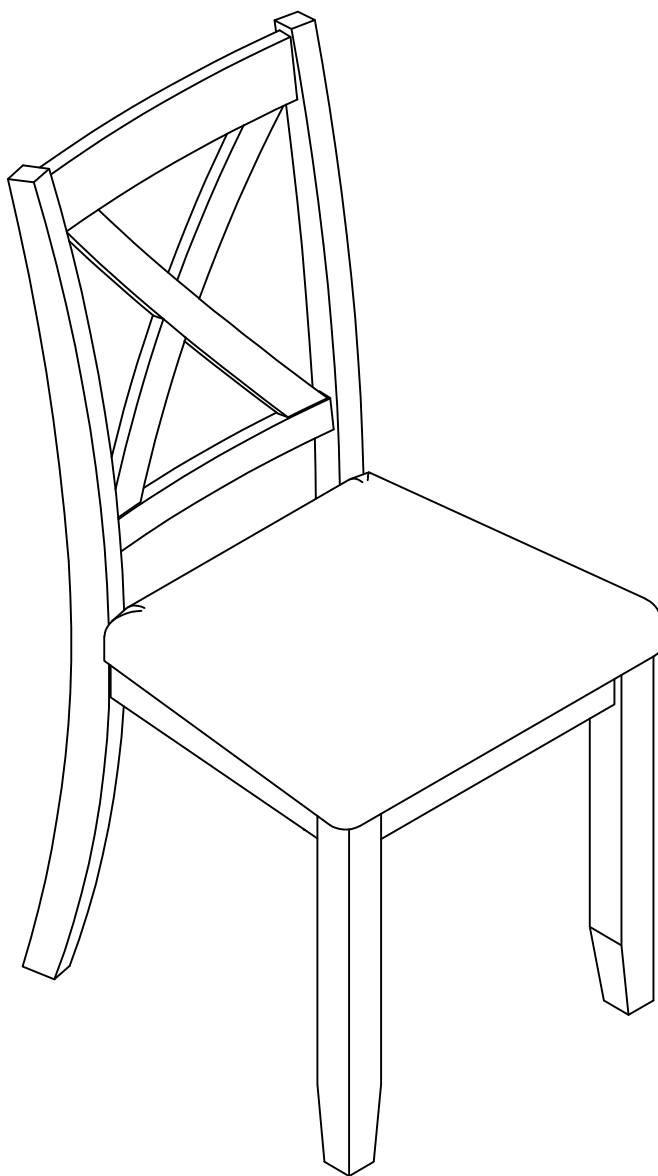

N715P383051


IMPORTANT NOTE :

- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**
- 2 BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**
- 3 DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP**

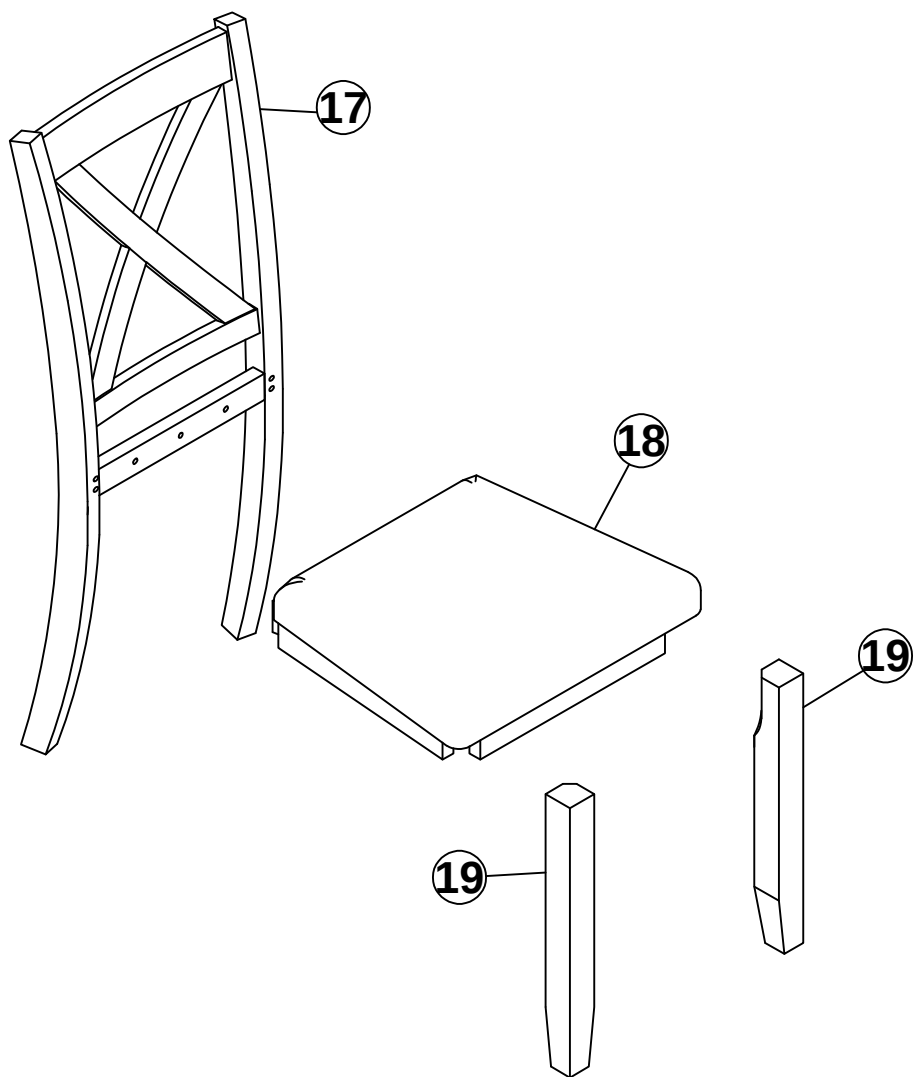


Part List For One Chair

17

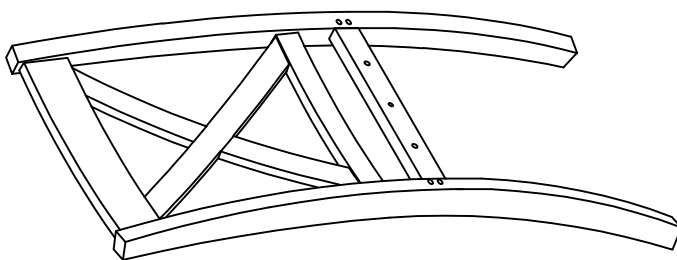


BACK FRAME (1pc)

18

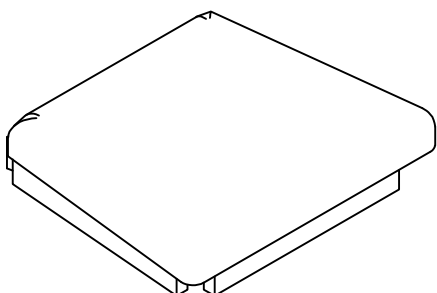


SEAT FRAME (1pc)

 19




LEGS CHAIR (2pcs)

Hardware List For One Chair

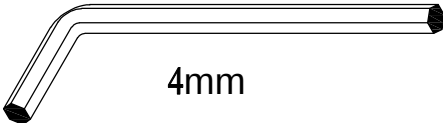
K  Ø10 x 30mm	P  Ø1/4" x 13mm
WOODEN PEGS (1pc)	SPRING WASHER (10pcs)
L  Ø1/4" x 75mm	Q  Ø1/4" x 19mm
BOLT (4pcs)	FLAT WASHER (10pcs)
M  Ø1/4" x 55mm	J  4mm
BOLT (4pcs)	
N  Ø1/4" x 35mm	
BOLT (2pcs)	ALLENKEY (1pc)

Step 1

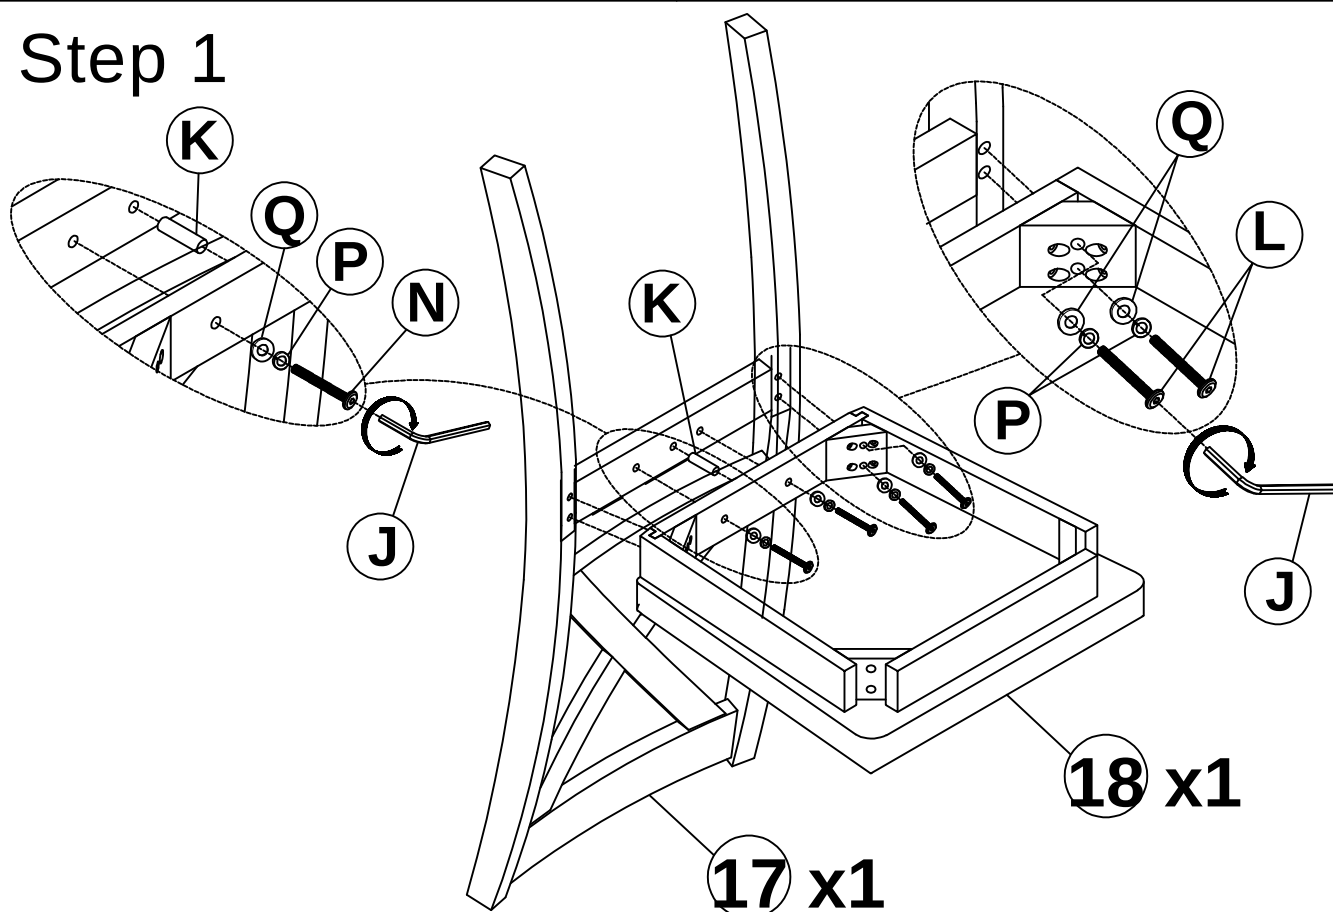

K	Ø10x30		1PC	P	Ø1/4"x13		6PCS
L	Ø1/4"x75		4PCS	Q	Ø1/4"x19		6PCS
N	Ø1/4"x35		2PCS	J	4x58		1PC

Step 2

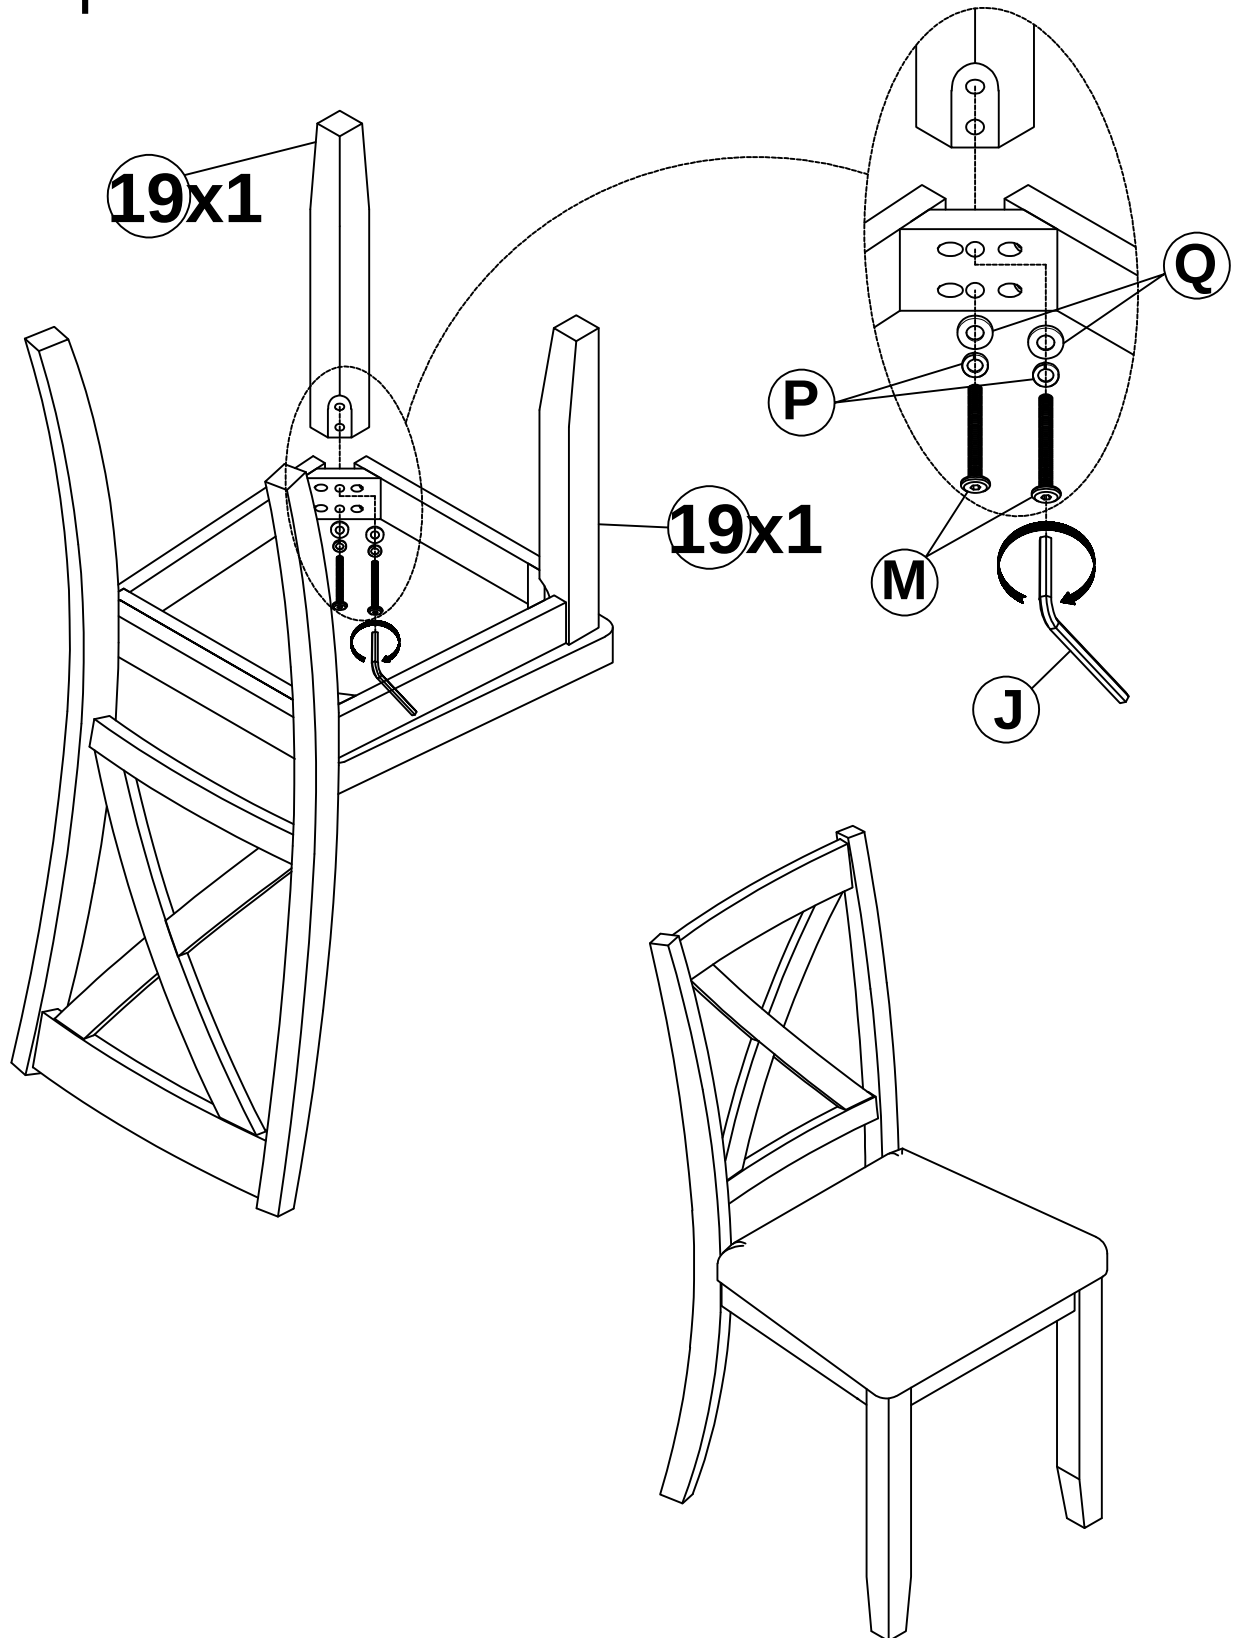

M	Ø1/4"x55		4PCS	Q	Ø1/4"x19		4PCS
P	Ø1/4"x13		4PCS	J	4x58		1PC