


Assembly Instructions

Caution : You must read this before you proceed

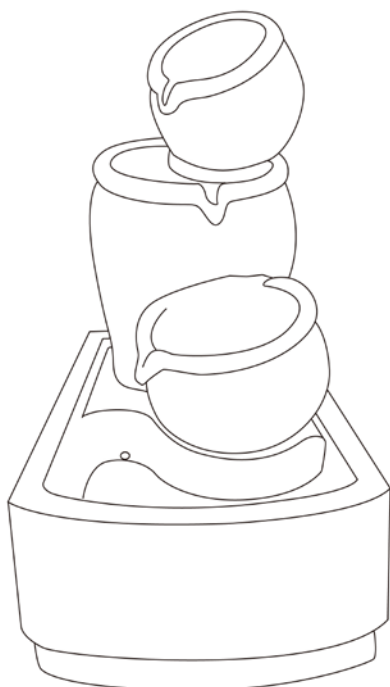

WARNING

Choose an appropriate location for the fountain.







Excessive weight or pressure on any of the fountain sections may cause it to fail. Keep pets, children, or anyone from sitting, leaning, or climbing on any of the fountain components.

While fountain is designed to operate as splash free as possible, some water splashing out of the fountain is inevitable. Place the fountain in a location where any splashing will not cause damage. Keep this manual for future reference.

Take out all the package parts from the carton, follow assembly the fountain as below steps.

Parts List

Label	Picture	Description	QTY
-------	---------	-------------	-----

A		Fountain Body	1
B		Fountain Base	1
C		Pump	1
D		4 LED Lights	1
E		Transformer	1
F		Splitter	1

Assembly Preparation

Before
Beginning
Assembly:



x1



x1



x1



x1



x1



x1



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps


This Fountain has multiple parts and may require up to some minutes to assemble. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

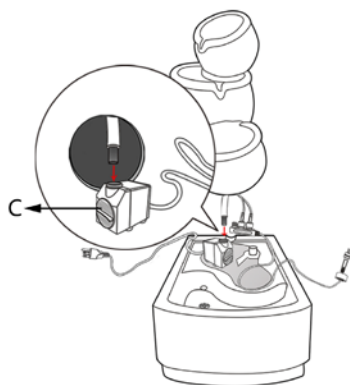


Place Fountain Base(B) on a level surface. Connect the Pump(C) to the water pipe of Fountain Body(A), showed as above.

Step 2

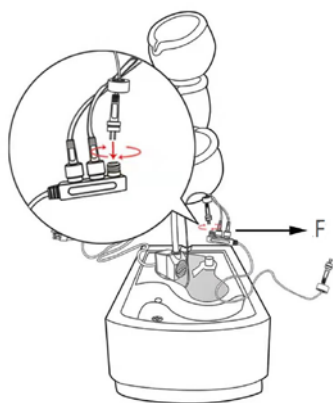

Connect and insert 4 LED Lights(D) into Splitter(F).

Step 3

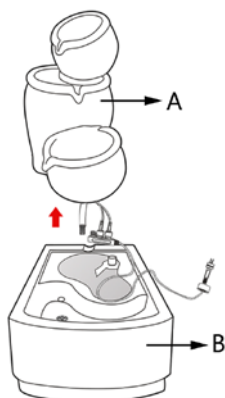

Place the Fountain Body(A) onto Fountain Base(B).

Step 4




Connect the Splitter(F) to Transformer(E), showed as above.

Step 5



Fill the Fountain with clean water carefully, showed as above.

Step 6

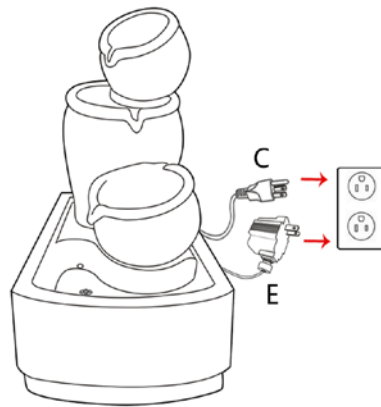

Plug the Pump(C) and Transformer(E) to the socket, showed as above. The water will start to flow in minutes.

Attention: Always make sure the water can submerge the Pump(C) completely to work properly and prevent the Pump(C) damage.

















Troubleshooting:



Turn off the power before you check following!

If Pump(C) does not run, or lights not on:

- (1) Check the circuit breaker, try another outlet.
- (2) Check the water level in the fountain. Running the Pump(C) without sufficient water can damage the Pump(C).
- (3) Check the setting of the flow control on the Pump(C) and adjust the flow.
- (4) Check the Pump(C) discharge and intake for dirt and debris.
- (5) The Pump(C) might be "air locked". Plug and unplug the Pump(C).
- (6) Check and reconnect all the cords and try again.

Care & Maintenance

-   ● Do not put hot items directly on furniture surface
-   ● Do not clean furniture with harsh cleansers or polish.
-   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
-   ● Children should not climb or jump on the furniture.
-   ● Do not write on furniture without a padded barrier to protect the surface.
-   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
-   ● Not for commercial use. For residential use only .
-   ● Stains may be removed with mild soap solution and damp cloth.

-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .