 



# **INSTALLATION**

## *Product Manual*

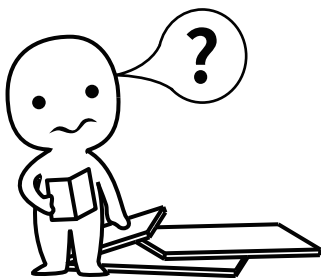

### **IMPORTANT INFORMATION!**

 please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

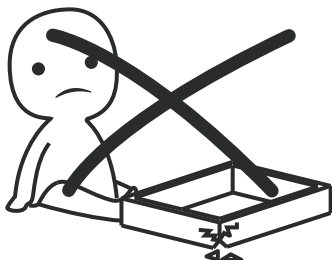



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

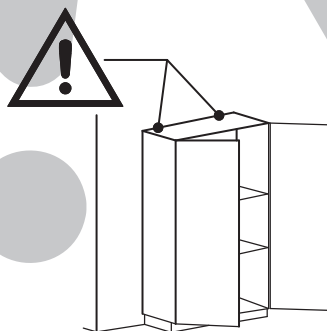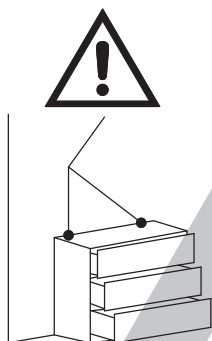

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

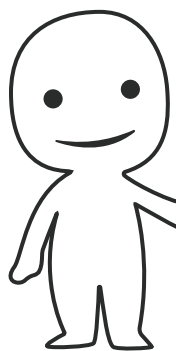


Please prepare the following tools

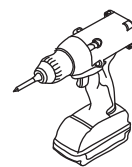    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

|                                  |                                 |                                |                                |                                    |
|----------------------------------|---------------------------------|--------------------------------|--------------------------------|------------------------------------|
| <p>A x 156</p> <p>Ø6 x 40 mm</p> | <p>B x 14</p> <p>Ø8 x 40 mm</p> | <p>C x 2</p> <p>Ø8 x 20 mm</p> | <p>D x 4</p>                   | <p>E x 100</p> <p>Ø3.5 x 30 mm</p> |
| <p>F x 84</p>                    | <p>G x 6</p>                    | <p>H x 8</p> <p>Ø7 x 50 mm</p> | <p>I x 4</p> <p>Ø4 x 25 mm</p> | <p>J x 224</p> <p>Ø3.5 x 12 mm</p> |
| <p>L x 4</p>                     | <p>M x 21</p>                   | <p>N x 21</p>                  | <p>O x 25</p> <p>Ø4 x 8 mm</p> | <p>P x 2</p> <p>Ø4 x 18 mm</p>     |
| <p>Q x 156</p> <p>Ø15 x 9 mm</p> | <p>R x 2</p>                    | <p>S x 25</p>                  | <p>T x 28</p>                  |                                    |

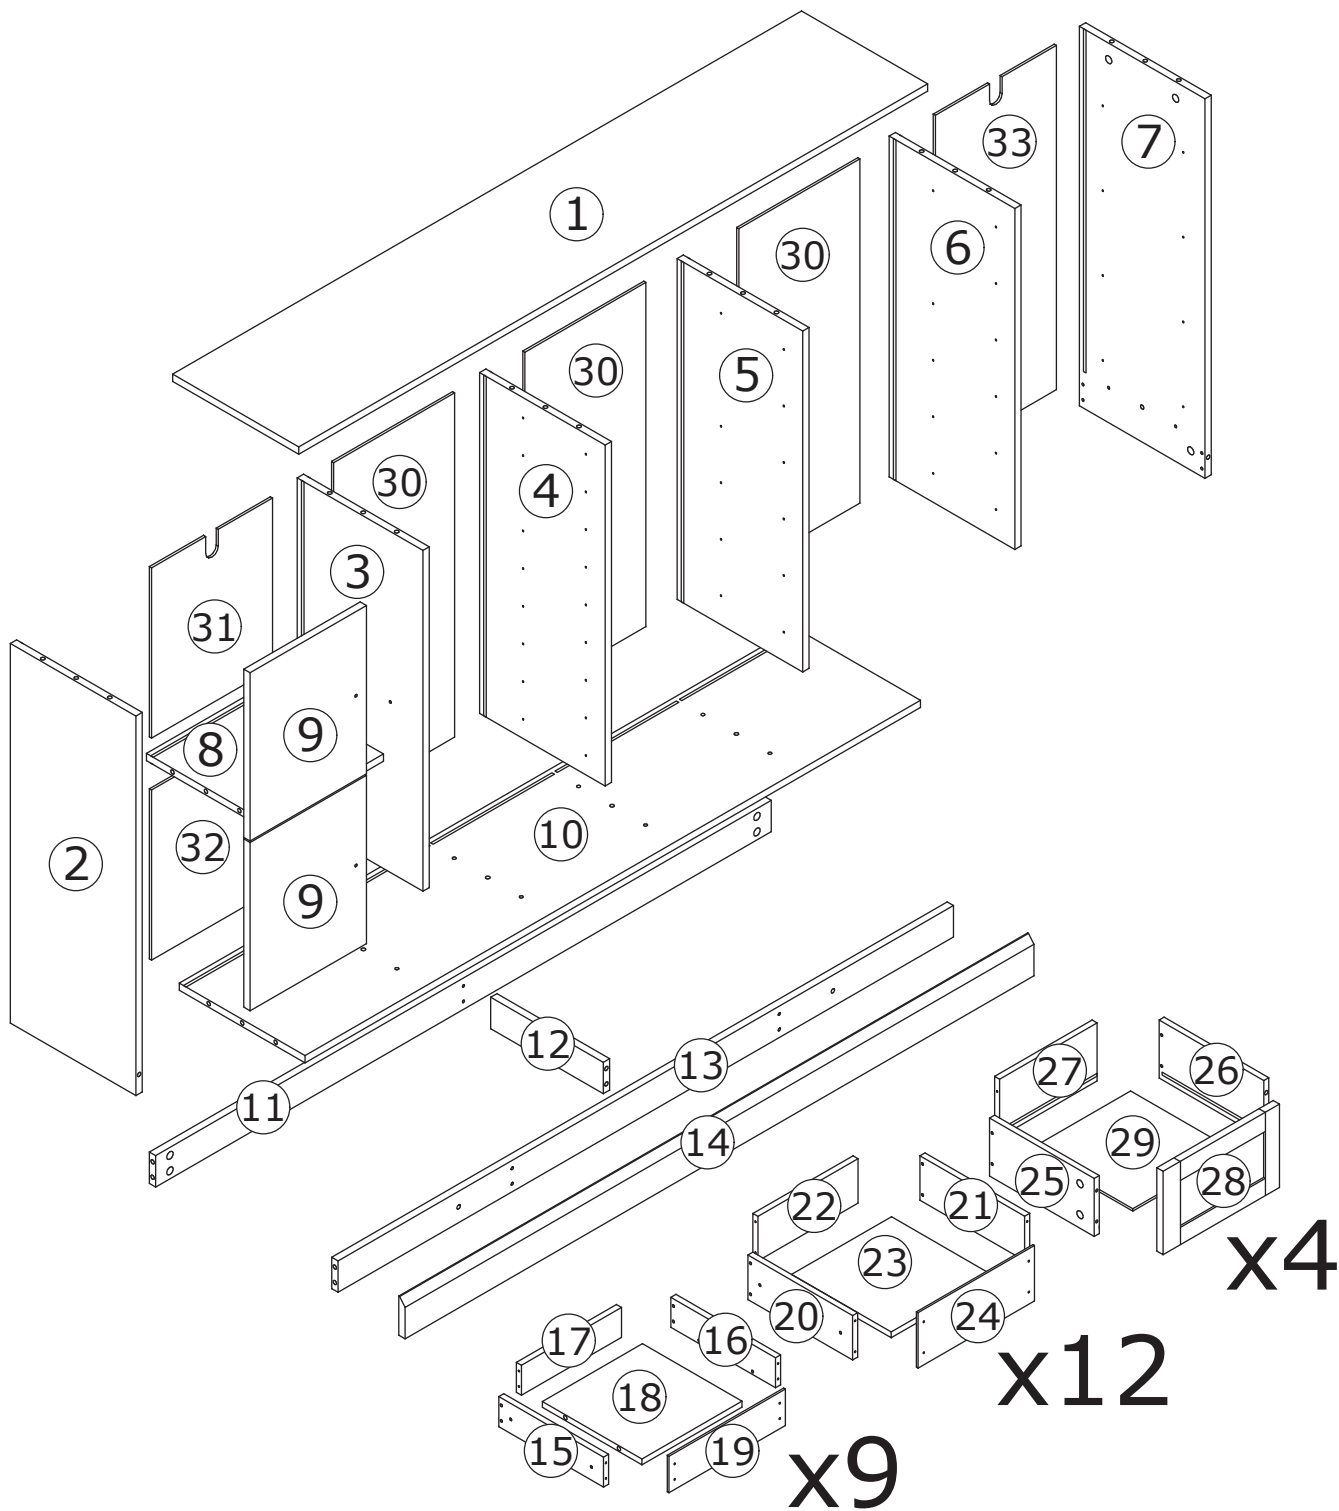 


## ⚠ WARNING




**Children have died from furniture tipover. To reduce the risk of furniture tipover:**


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

  
*This is a permanent label.  
Do not remove!*

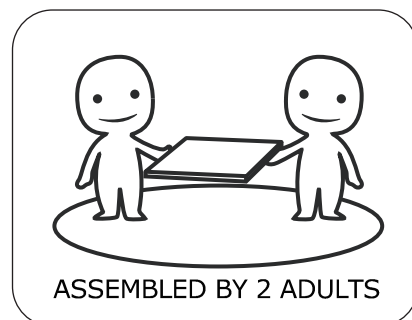



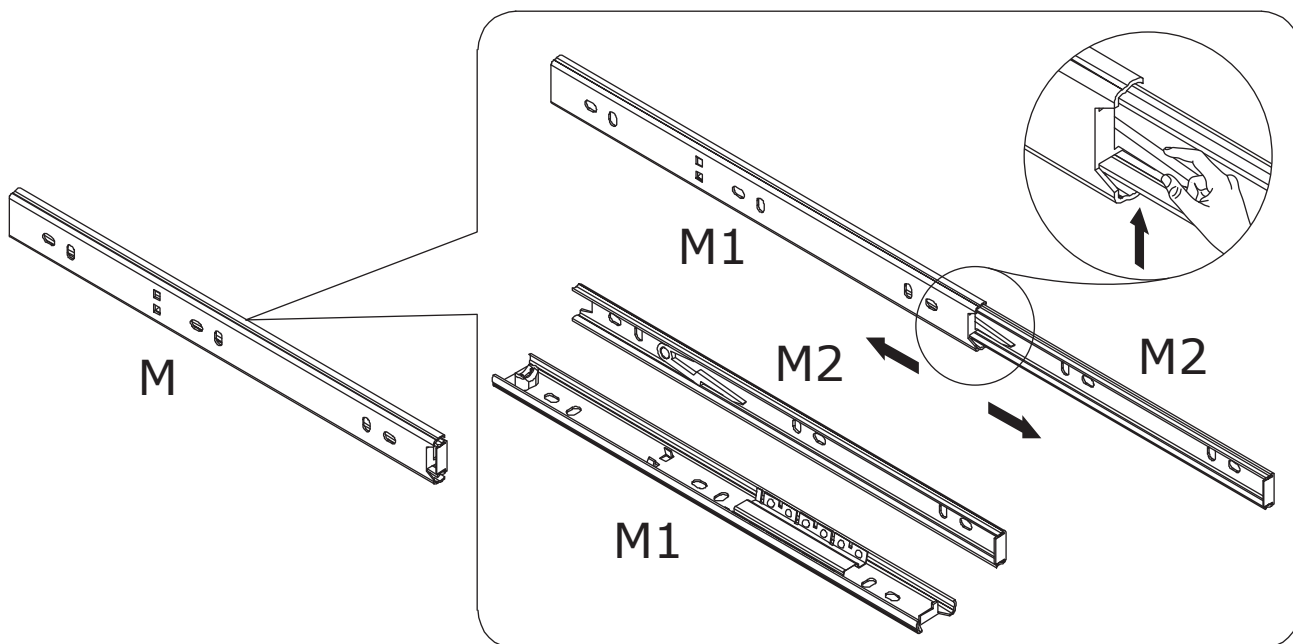


1

 A x 2  
  
 Ø6 x 35 mm

 

   
Install screw rod A  
 onto wooden board 3.

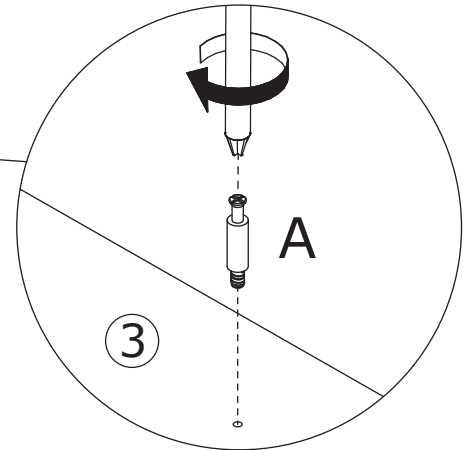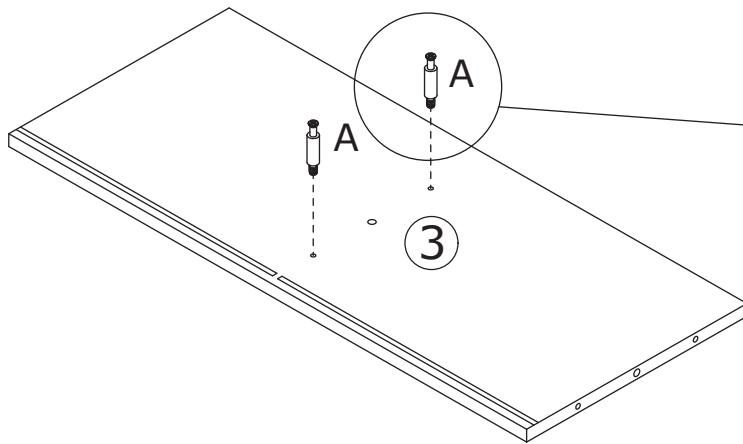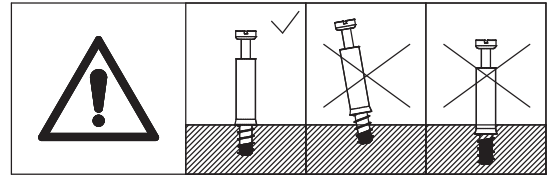





2

B x 1  
  
 Ø8 x 40 mm




 
Q x 2  
  
 Ø15 x 9 mm



    
Connect wooden board 3 and  
 wooden board 8 using dowel B,  
 then insert and tighten the  
 eccentric cam Q.

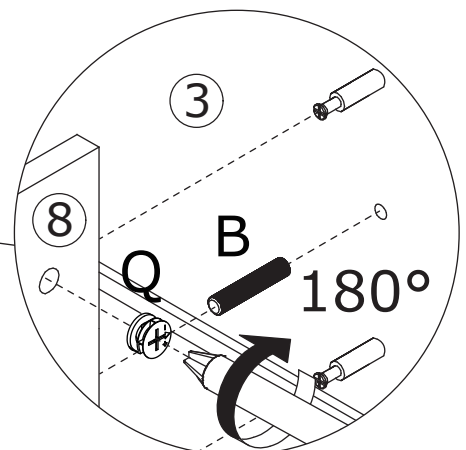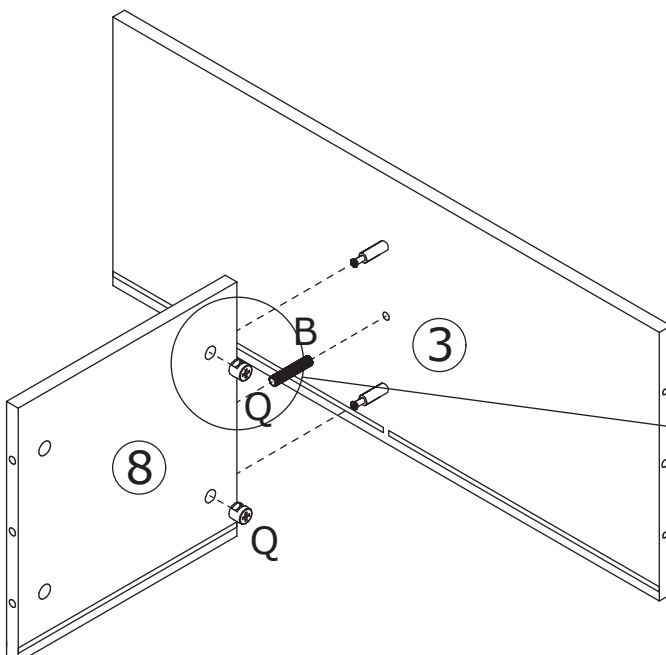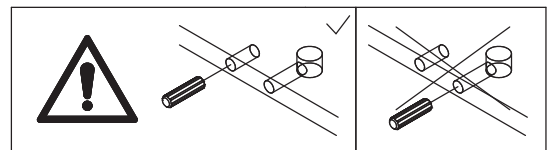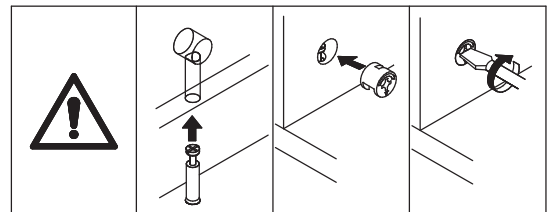

3

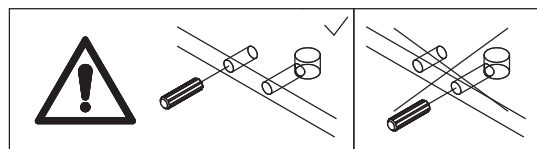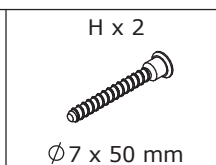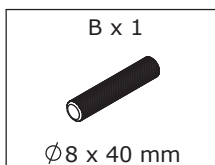    


 Connect wooden board 3 and wooden board 10 using dowel B, then secure them with screw H.

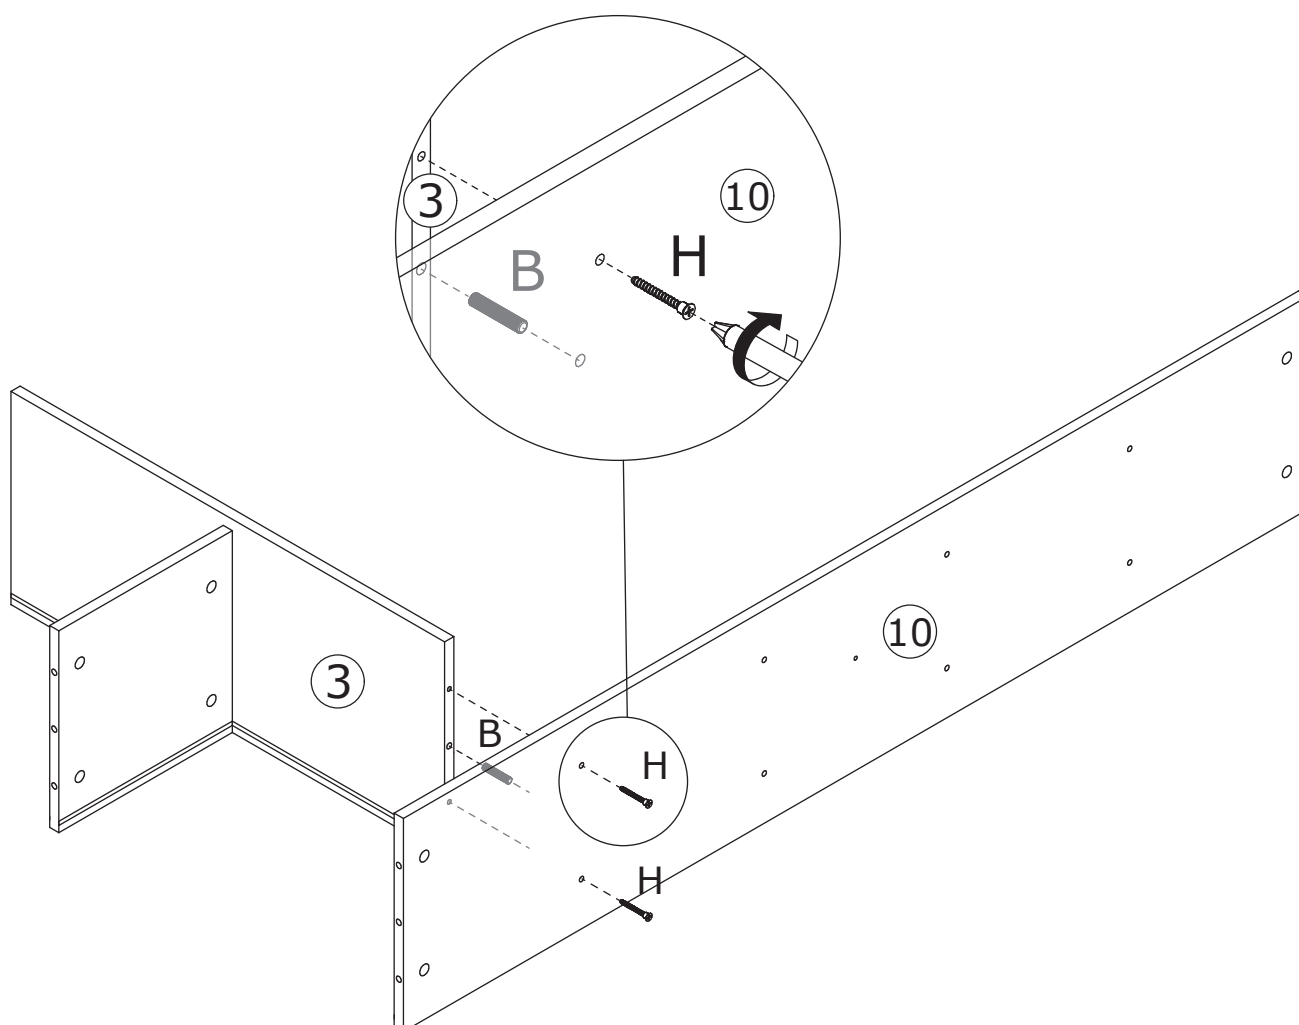


4

 
Insert wooden board 32 into the  
slots of wooden boards 3, 8, and 10.

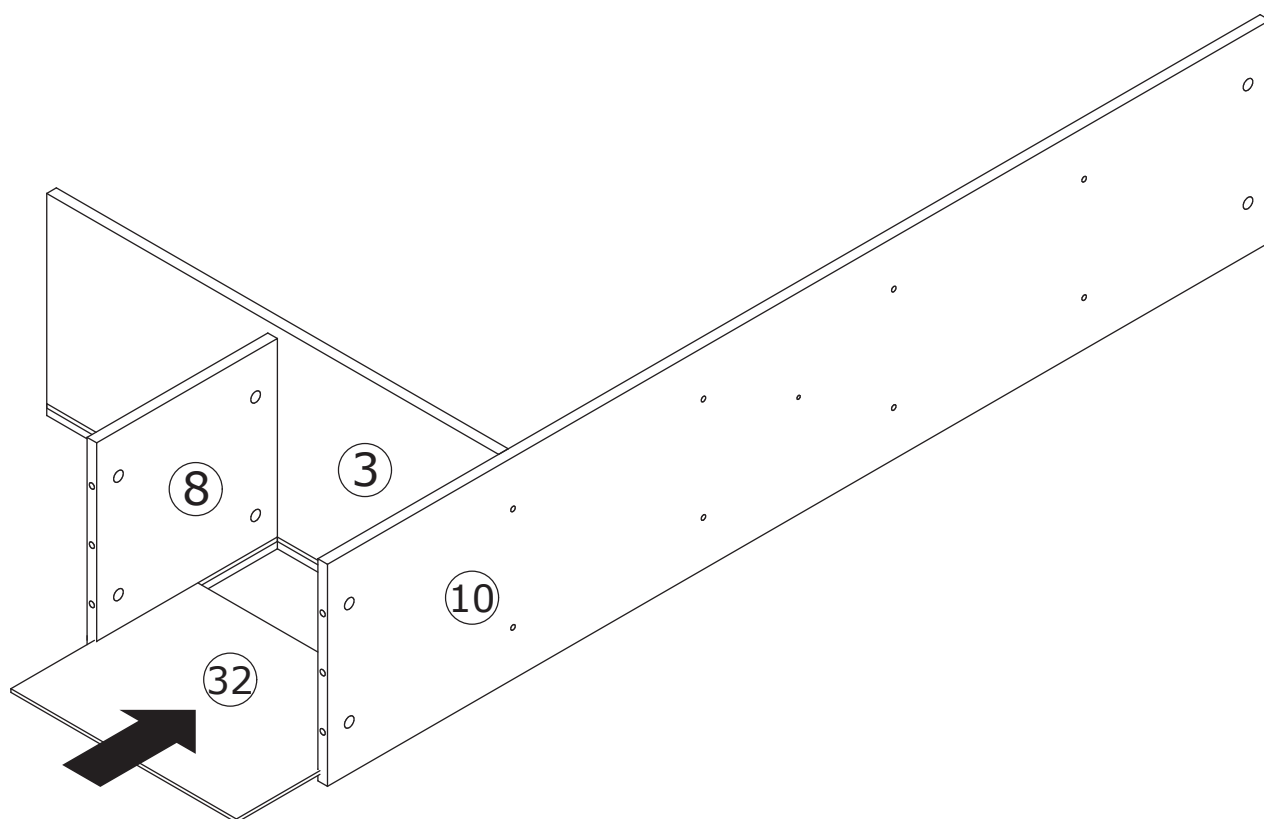




5

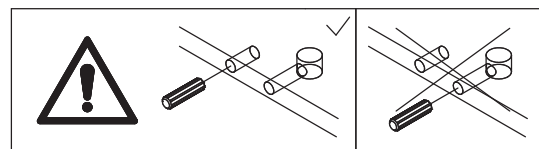 

 
Connect wooden boards 4, 5, and 6 to wooden board 10 using dowel B, then secure with screw H.

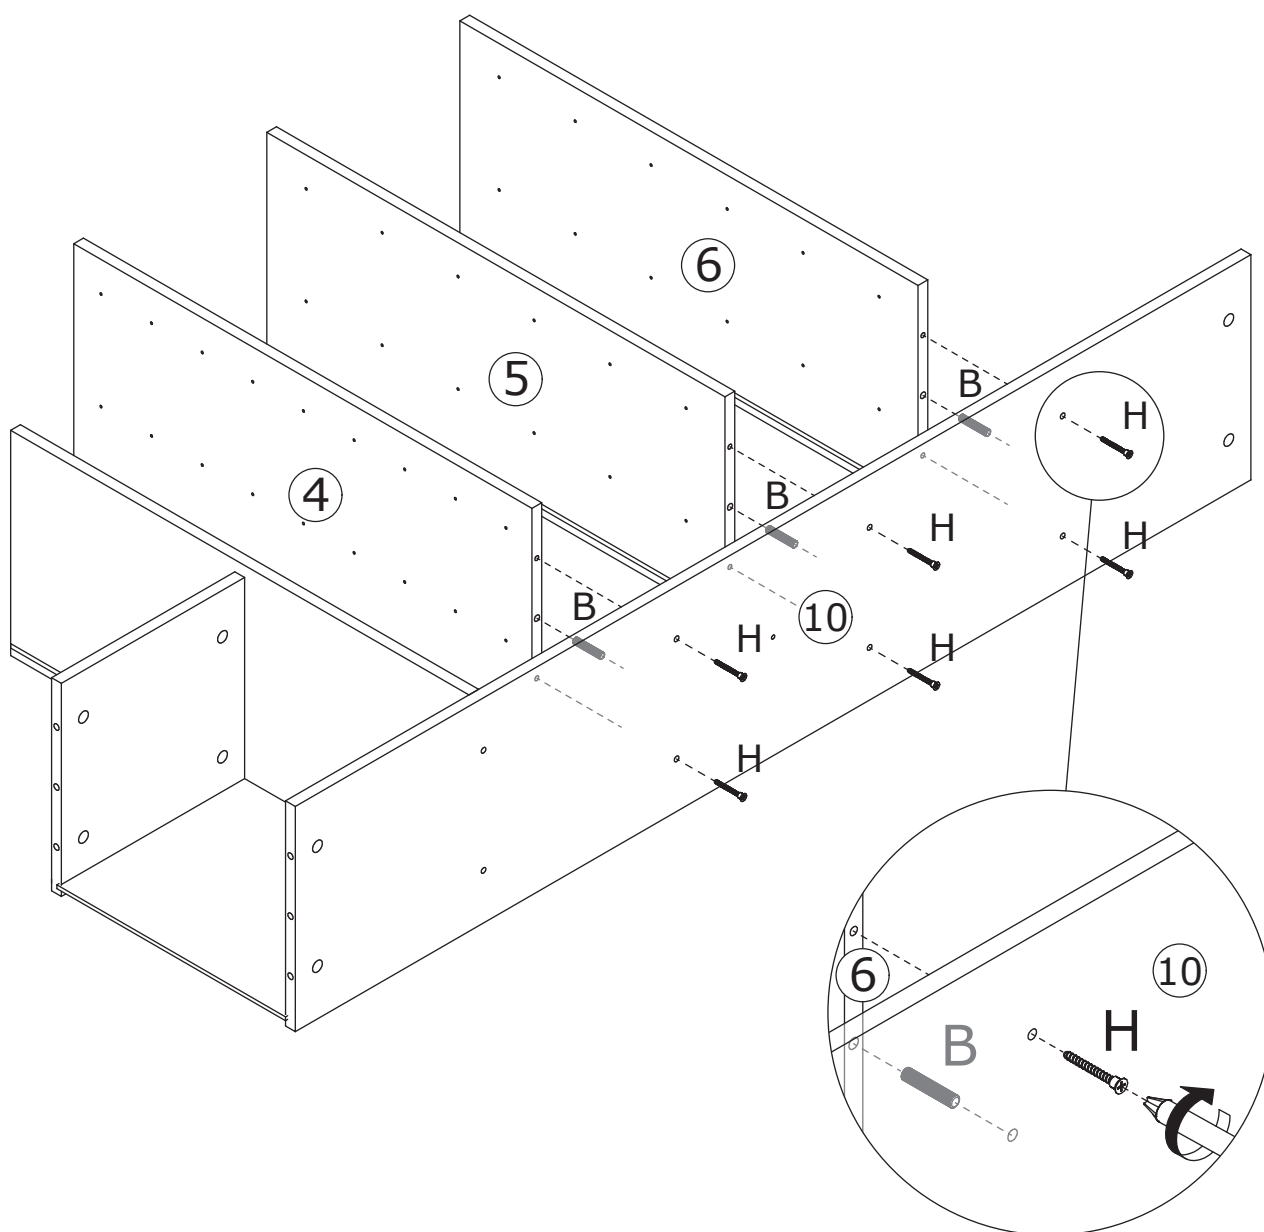

6

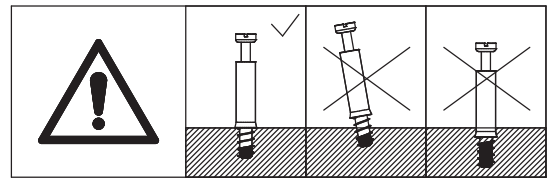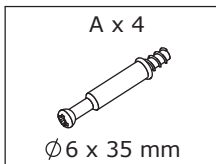   

 Install screw rod A onto  
wooden boards 11 and 13.




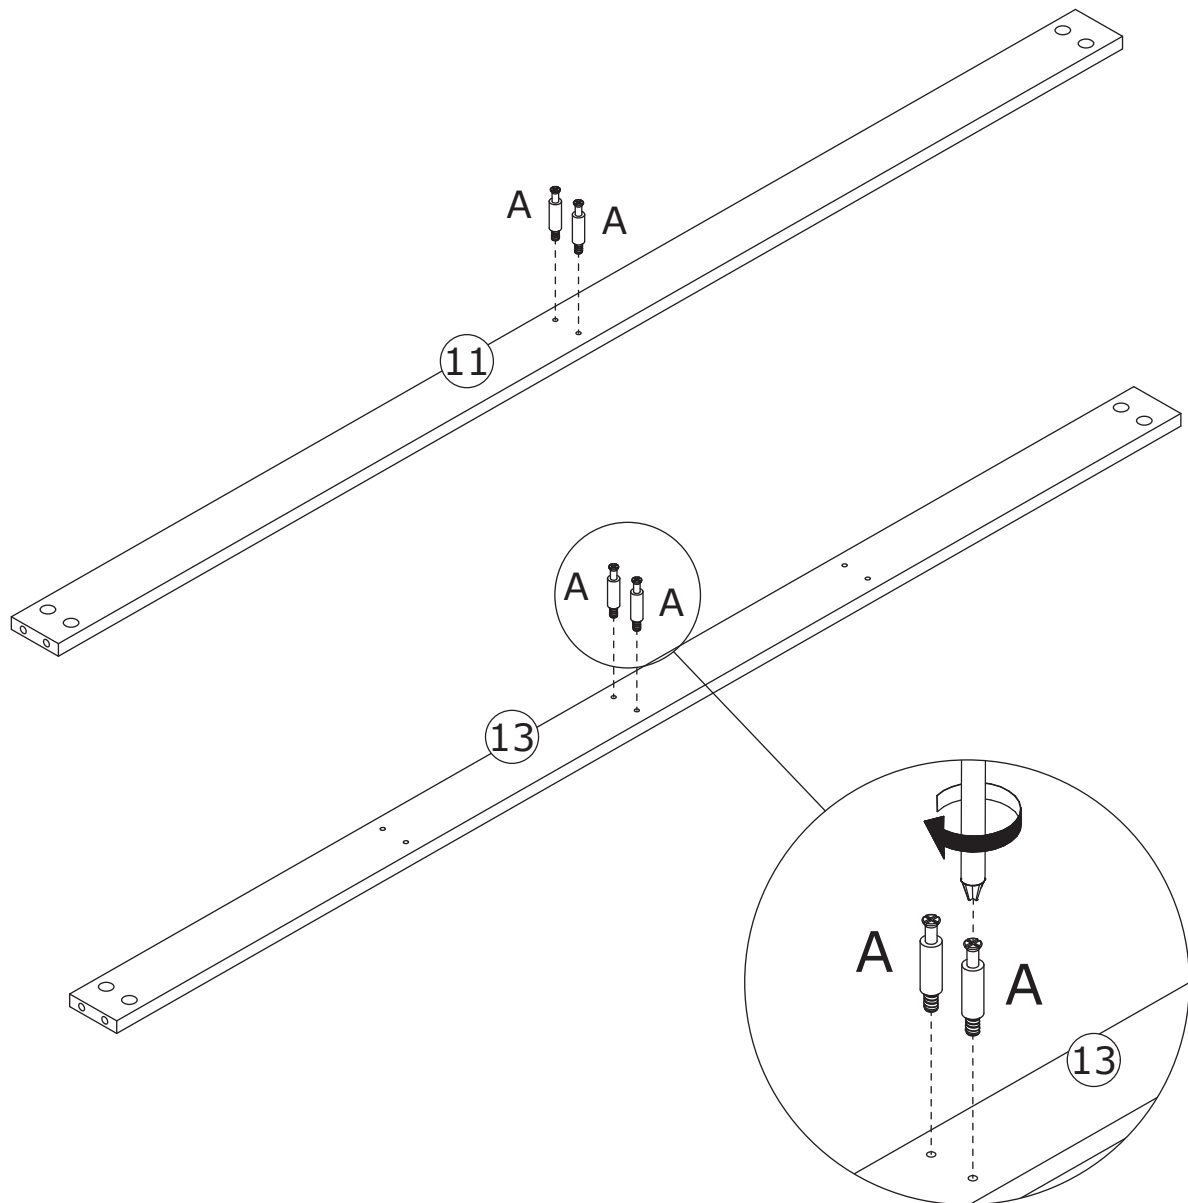


7


Q x 4



  
 
 
Ø 15 x 9 mm

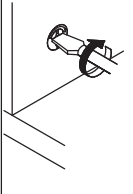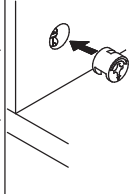

 
Connect wooden boards 11, 12, and 13,  
insert and tighten the eccentric cam Q.

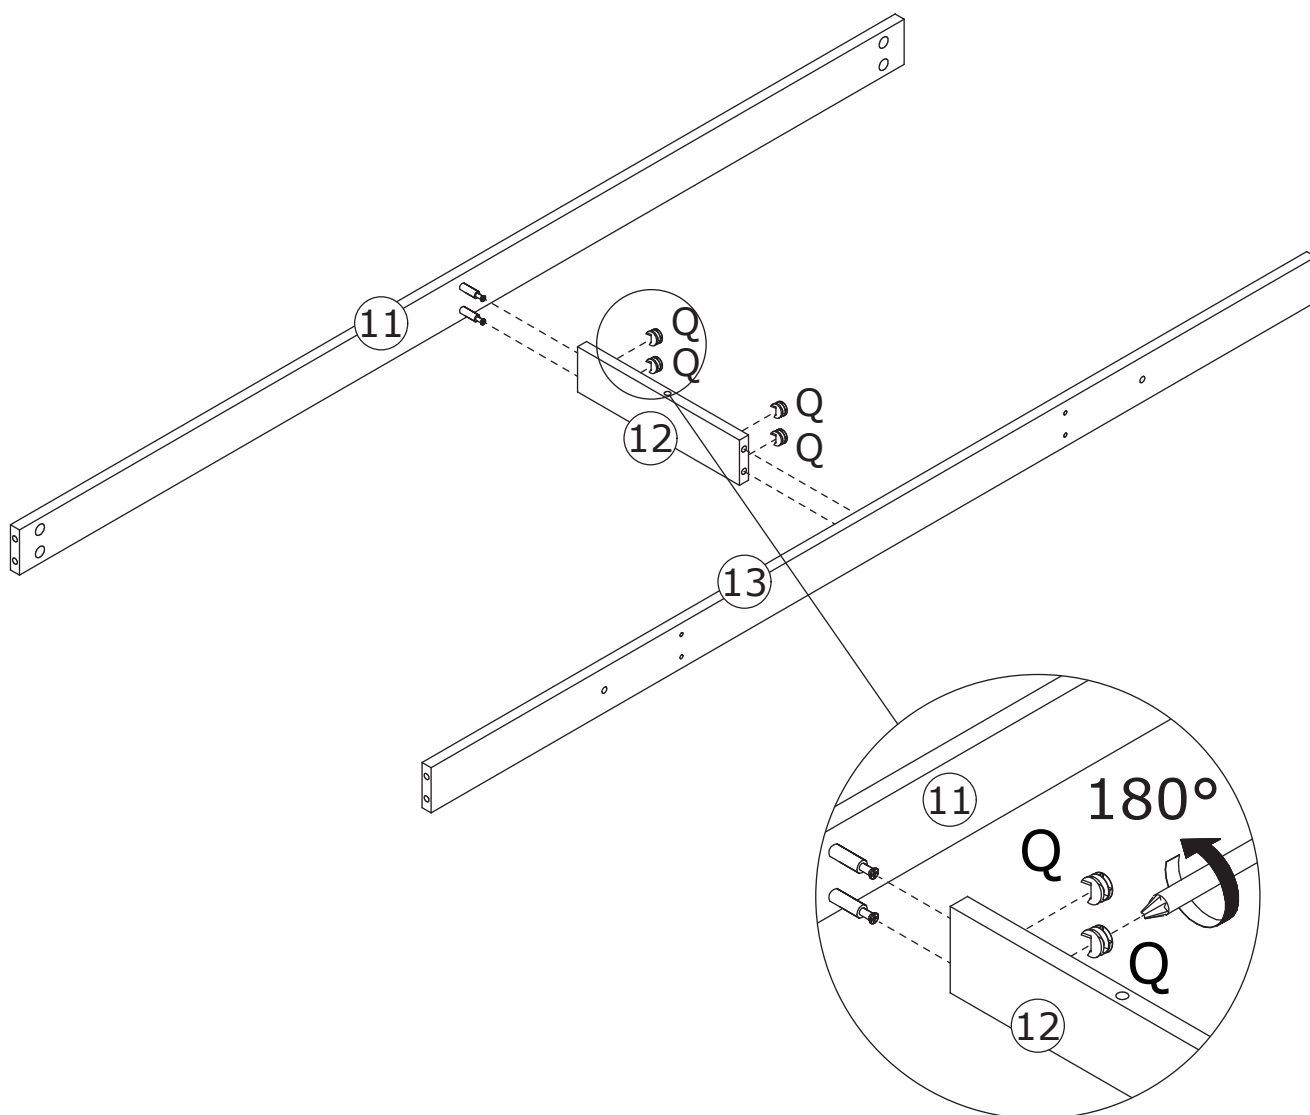

8

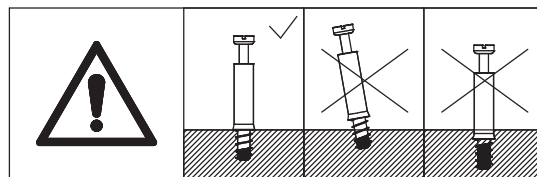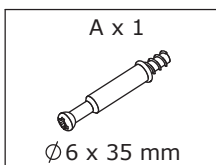   

 Install screw rod A onto wooden board 10.


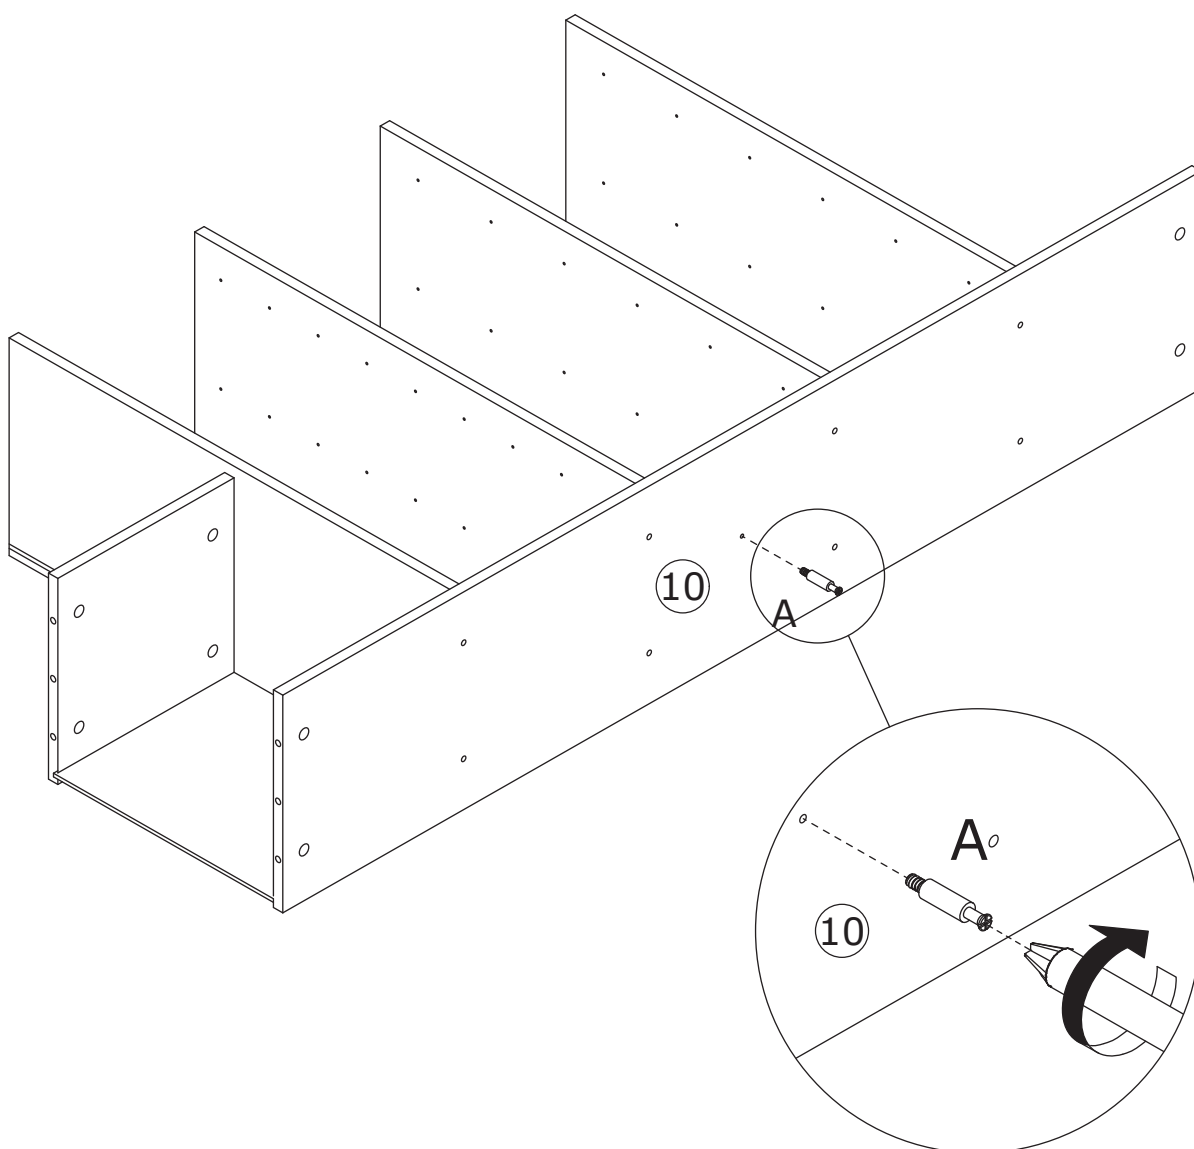


9


Q x 1




 
 
Ø 15 x 9 mm

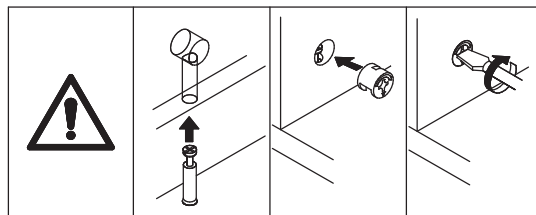

 
Connect wooden boards 10 and 12,  
insert and tighten the eccentric cam Q.

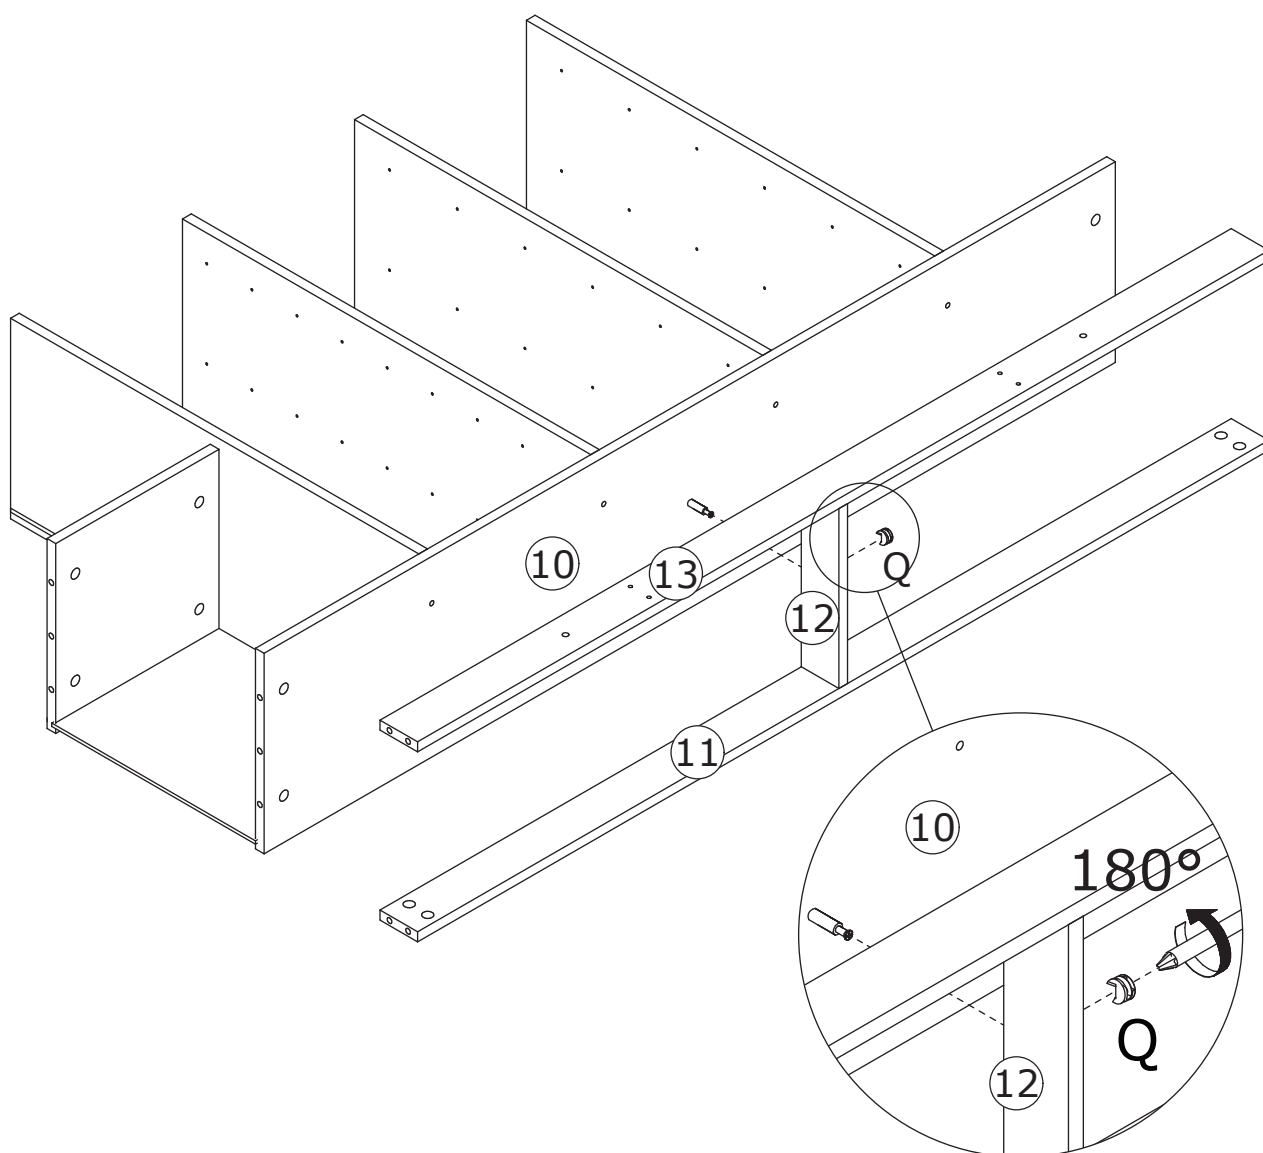


10

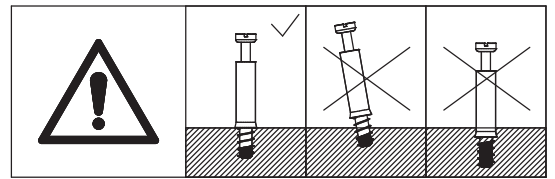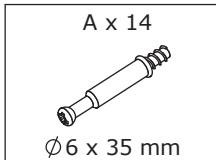   

 
Install screw rod A onto  
 wooden board 2 and 7.

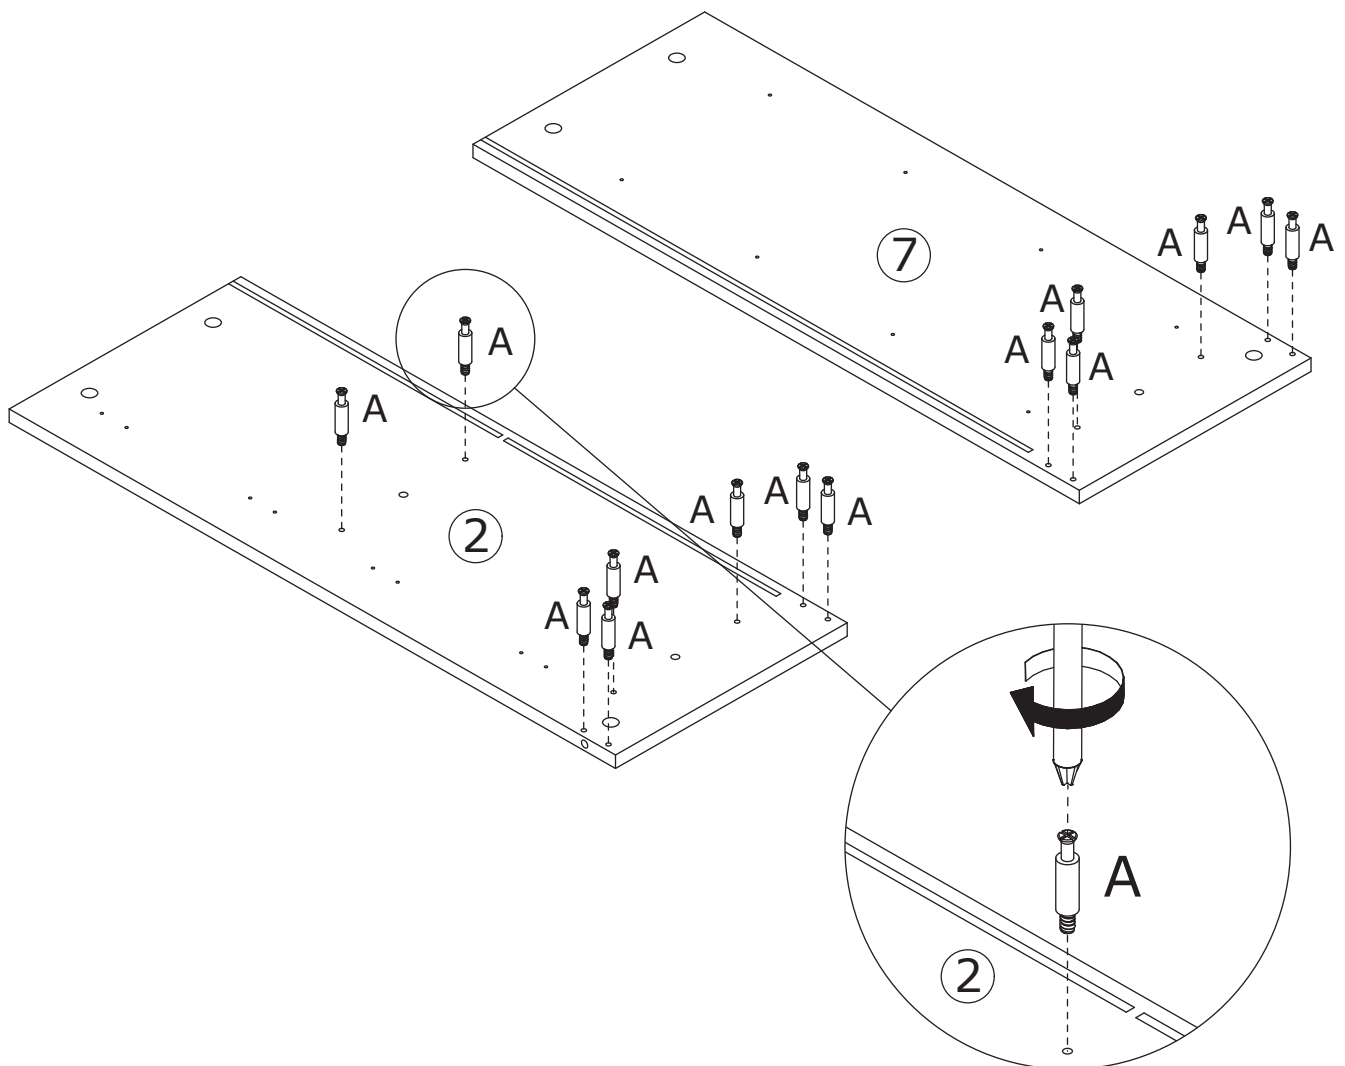


# 11

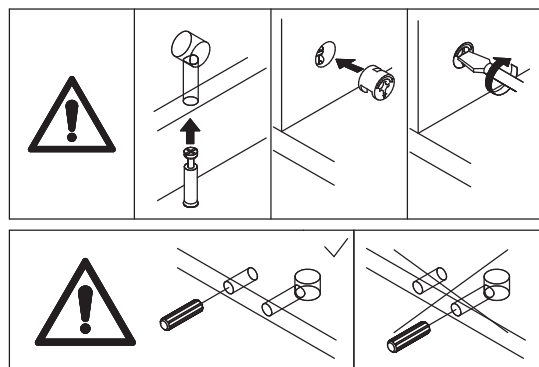 

 
Connect wooden board 2 to wooden boards 8, 10, 11, and 13 using dowel B, insert and tighten the eccentric cam Q.

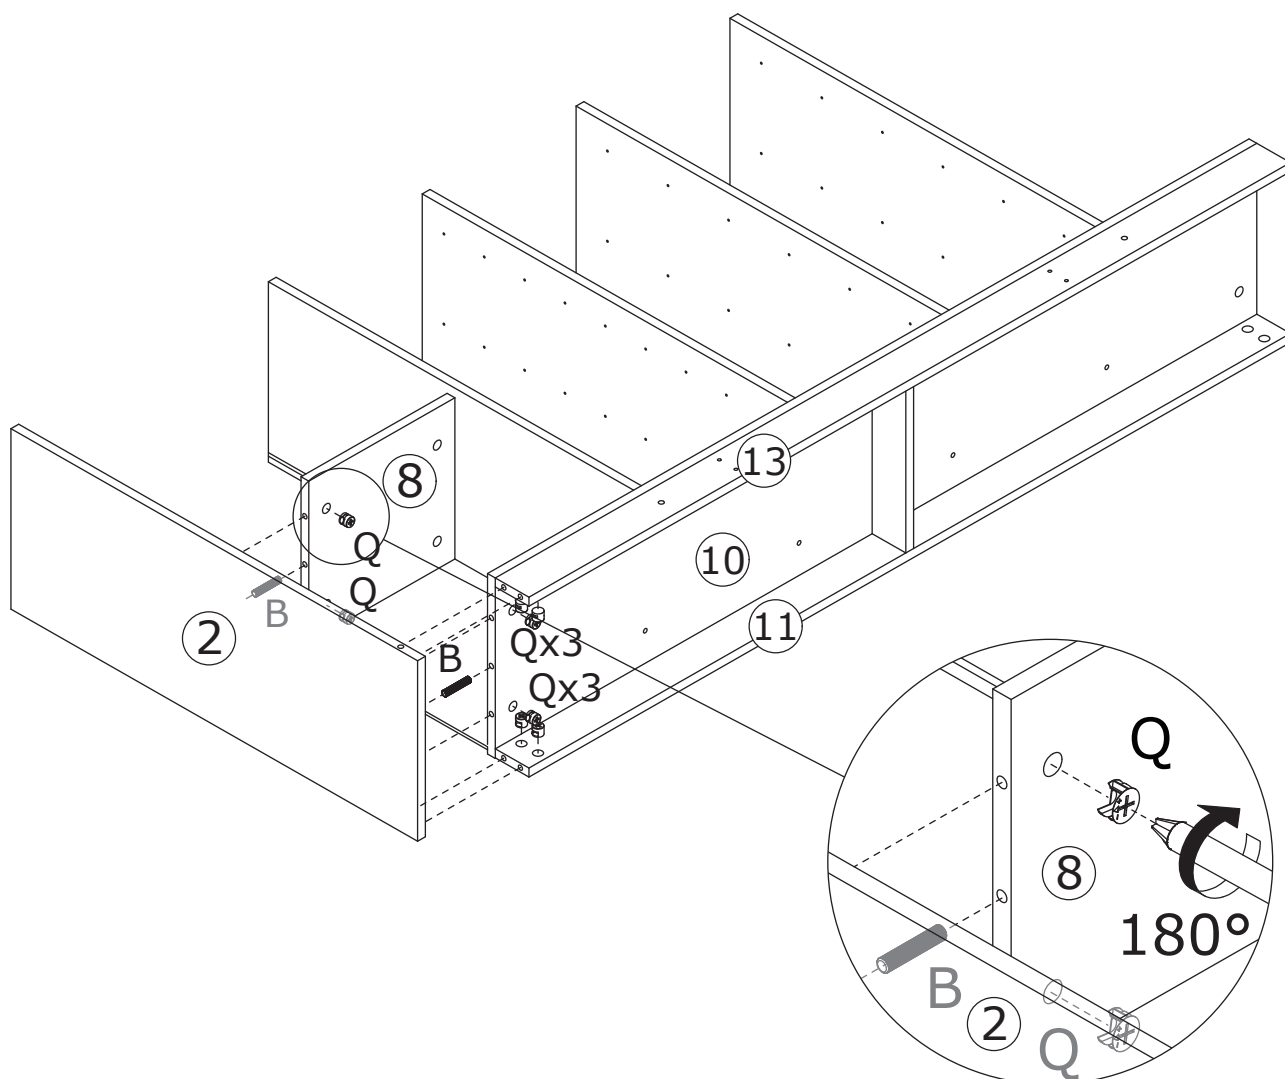




# 12

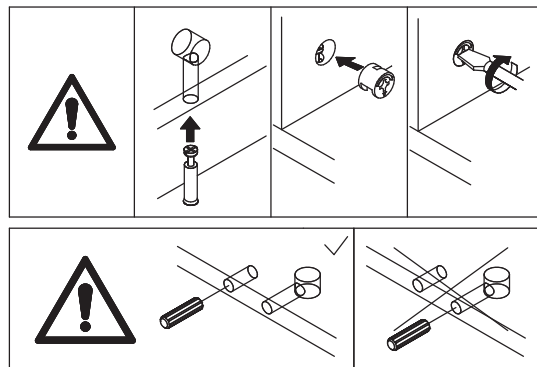 

 
Connect wooden board 7 to wooden boards 10, 11, and 13 using dowel B, insert and tighten the eccentric cam Q.

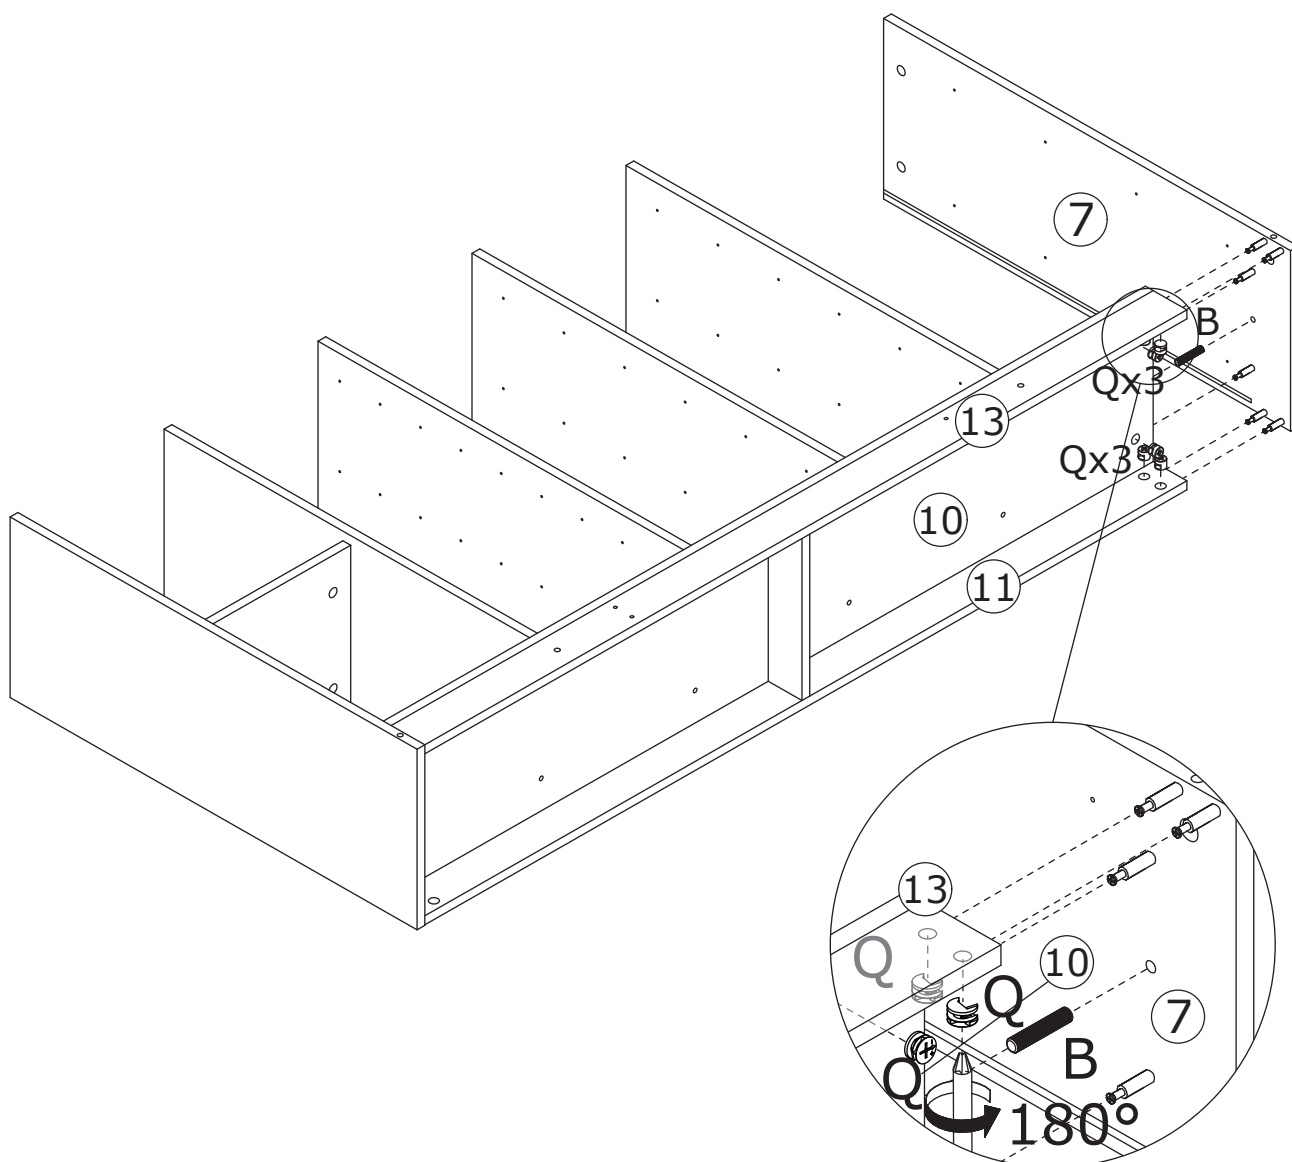

13

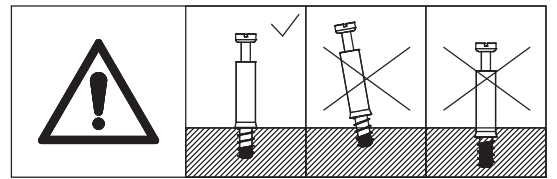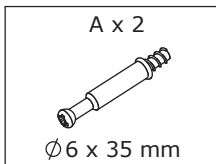   

 Install screw rod A onto wooden boards 14.

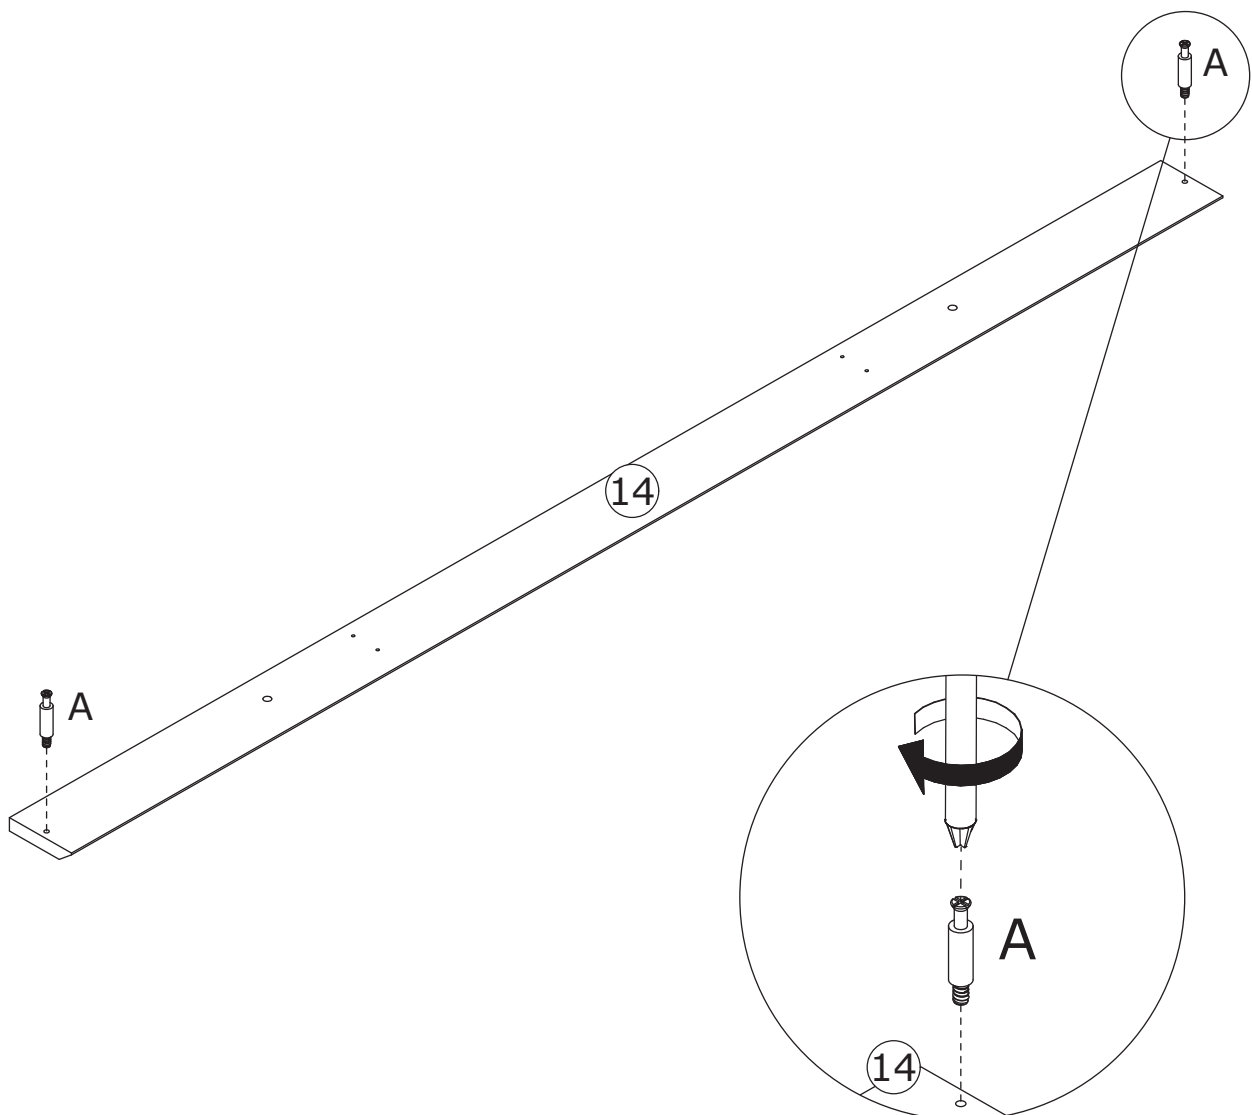

# 14

C x 2



Ø8 x 20 mm

I x 4

 


Ø4 x 25 mm







Q x 2




Ø15 x 9 mm



      connect wooden board 14 to wooden boards 2, 7, and 13 using dowel C, insert and tighten the eccentric cam Q. Finally, secure wooden boards 13 and 14 with screw I.

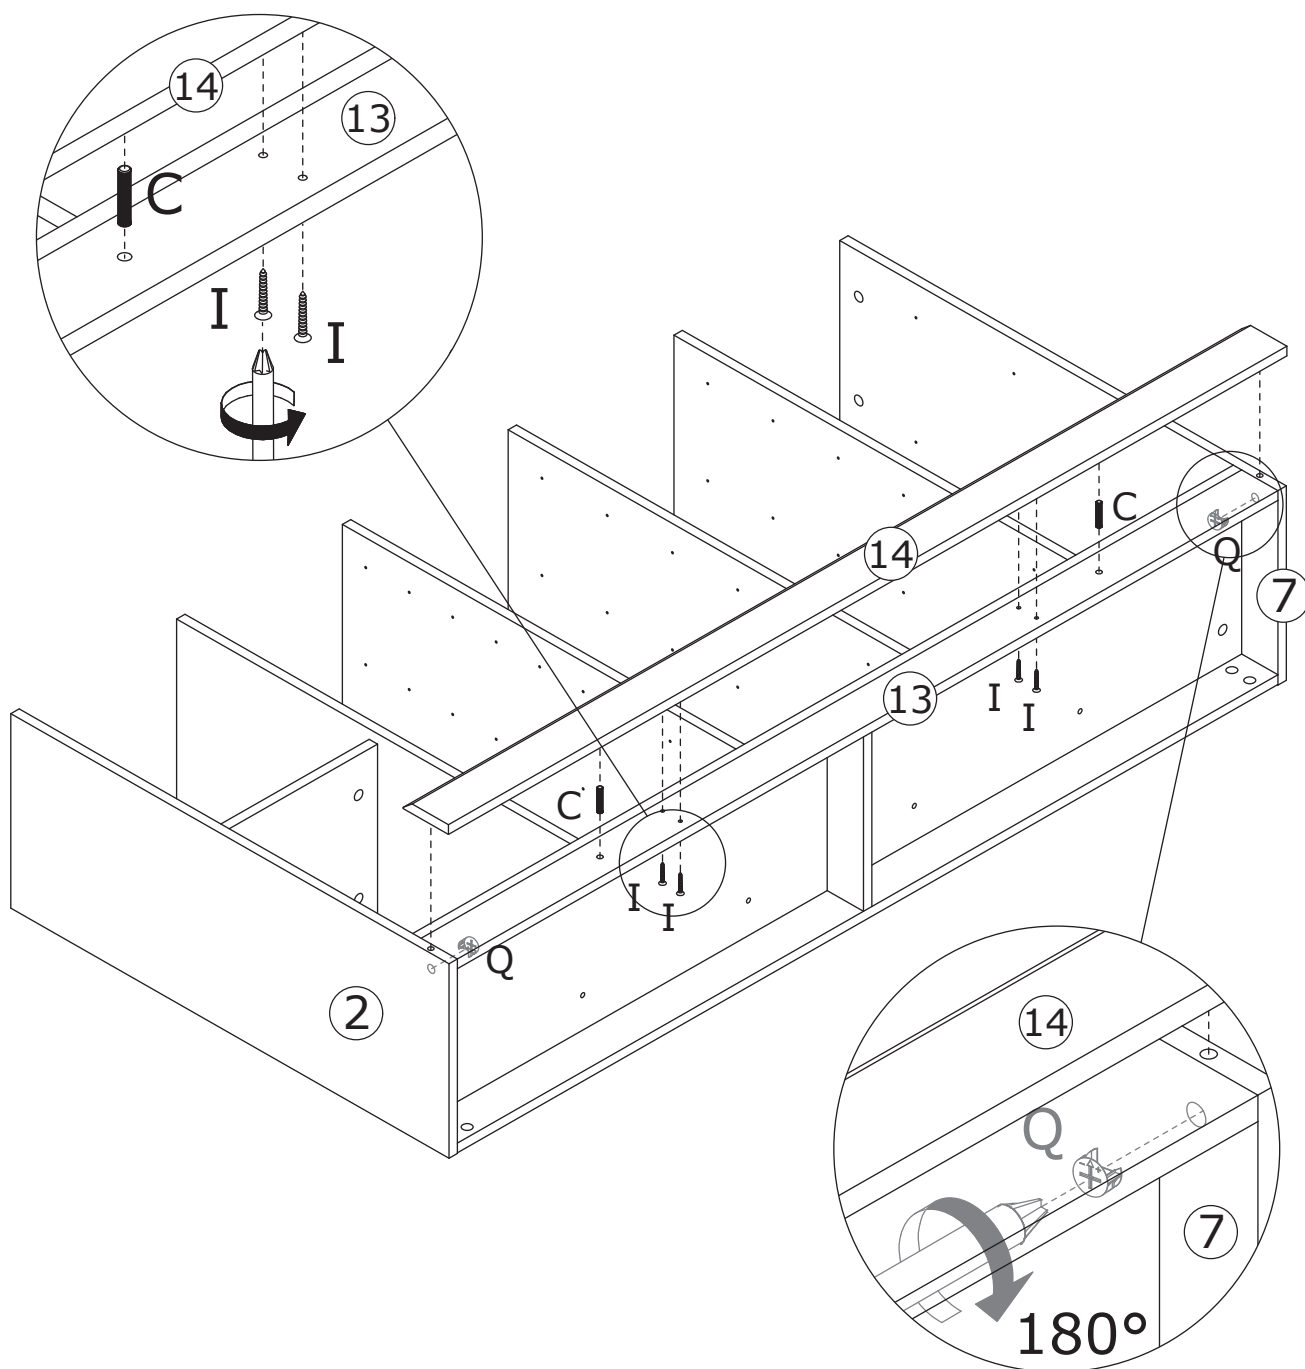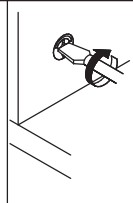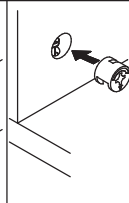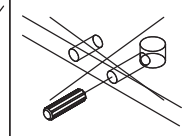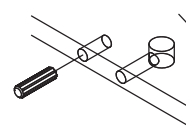

 Insert wooden boards 30, 31, and 33 into the slots of wooden boards 2, 3, 4, 5, 6, 7, and 8.


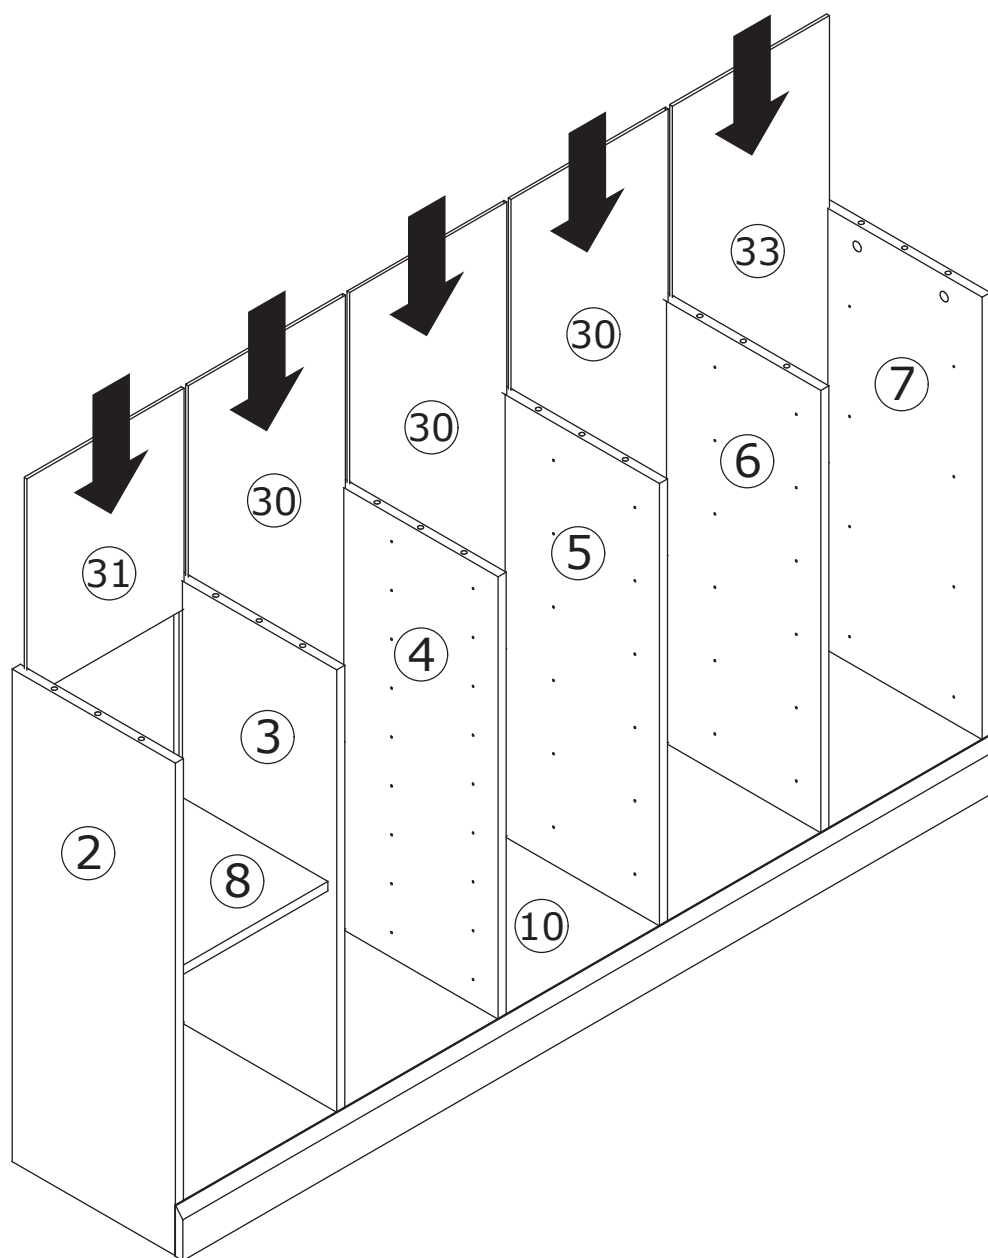


# 16


A x 12



  R x 2

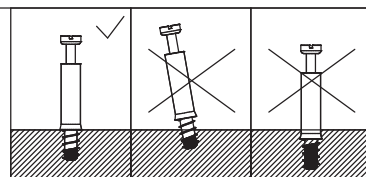

 Install screw rod A onto wooden board 1, attach the L-shaped iron plate to wooden board 1 using the short screws from anti-tipping component R.

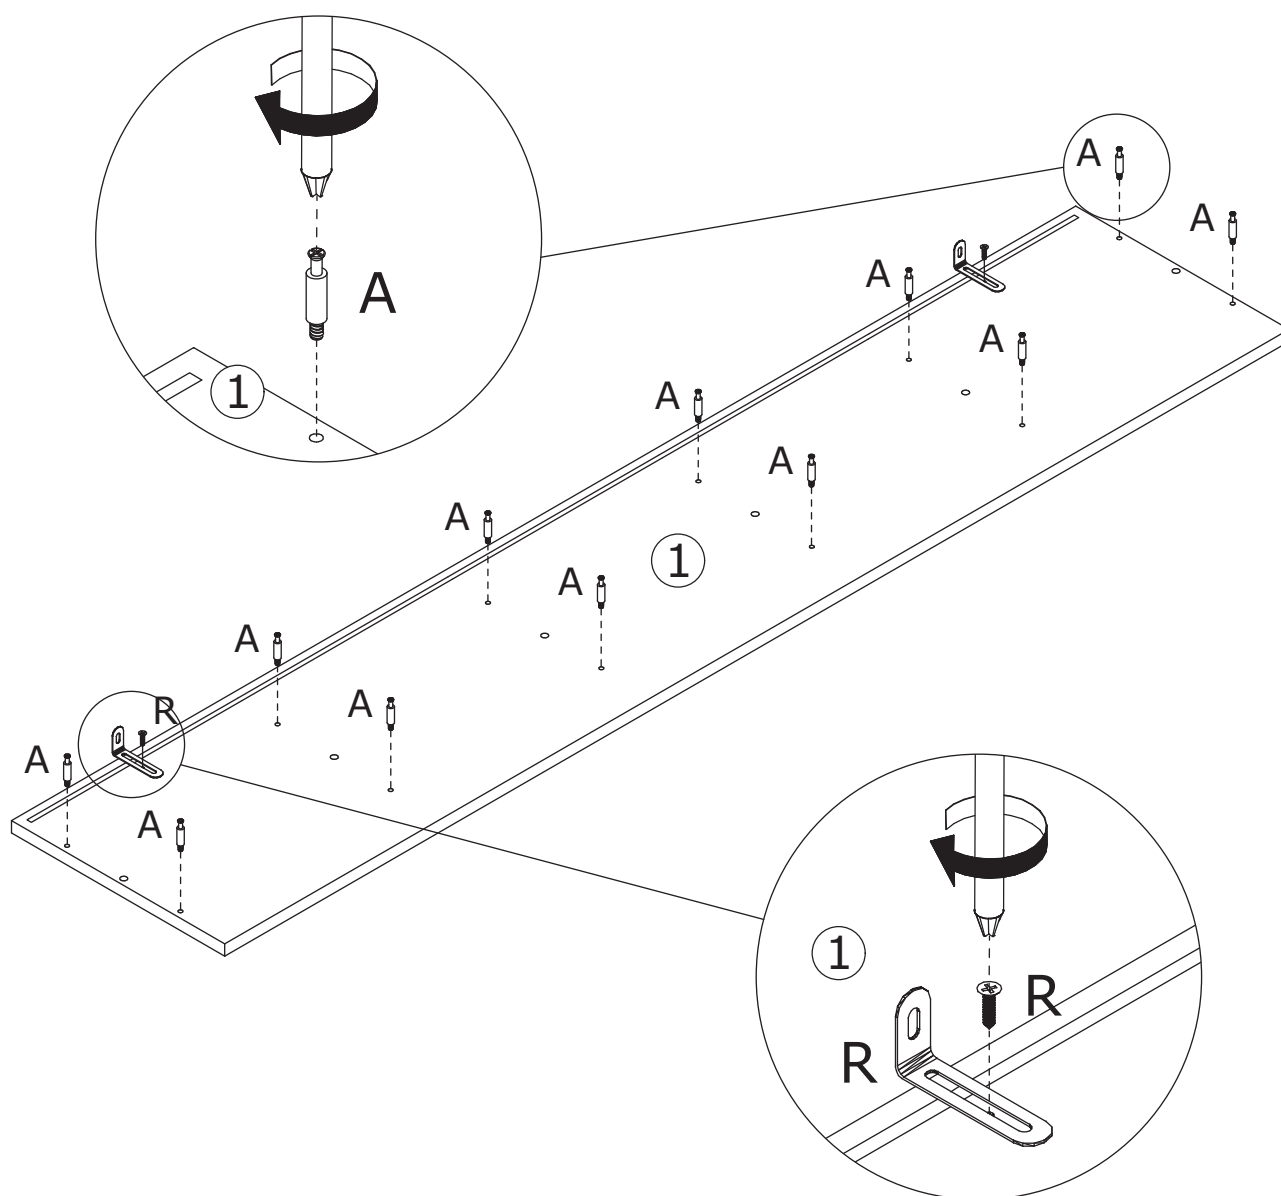

# 17

B x 6

 
 
 
 
 
 


Ø8 x 40 mm



Q x 12



Ø15 x 9 mm

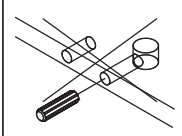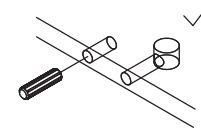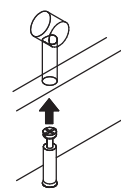


  Connect wooden board 1 to wooden boards 2, 3, 4, 5, 6, and 7 using dowel B, insert and tighten the eccentric cam Q.

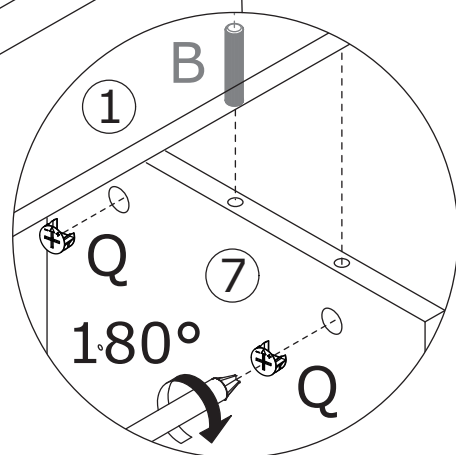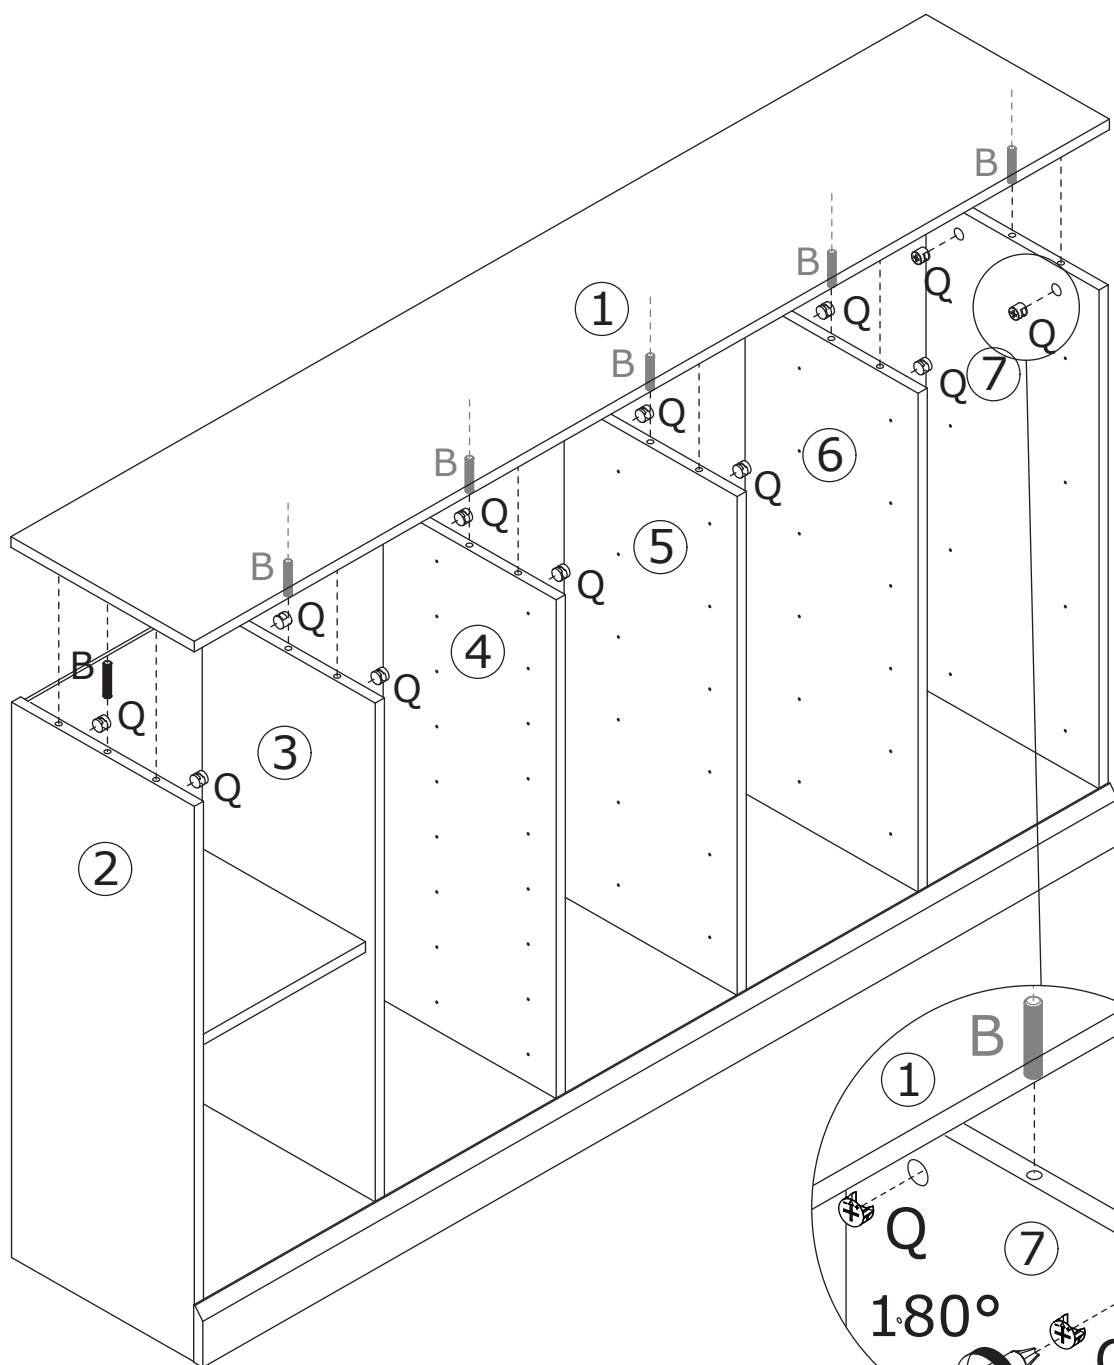


18

 T x 28



 Install back panel clips T on all four sides of wooden boards 30, 31, 32, and 33 as shown.

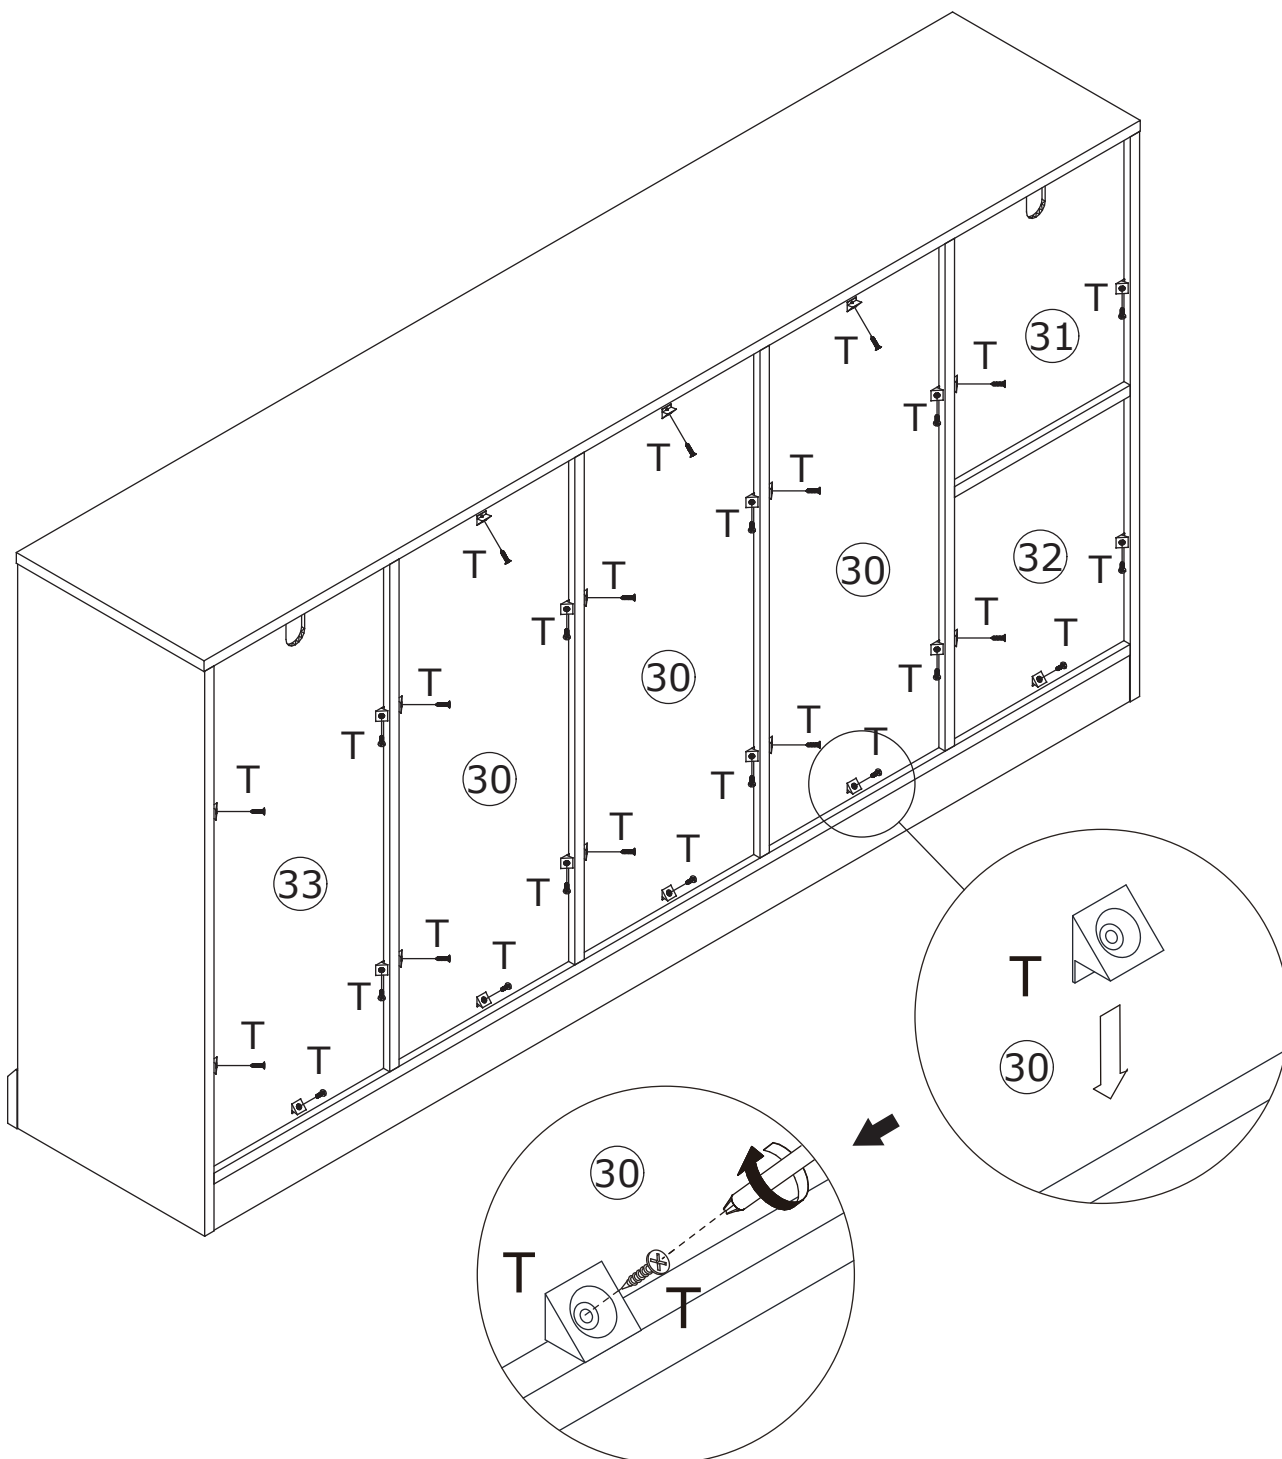


# 19

J x 50




Ø3.5 x 12 mm

 L x 4




CR

 
M x 21



M1

 

 Fix slide rail M1 to wooden boards 4, 5, and 6 using screw J, and fix slide rail L (CR section) to wooden board 7 using screw J.

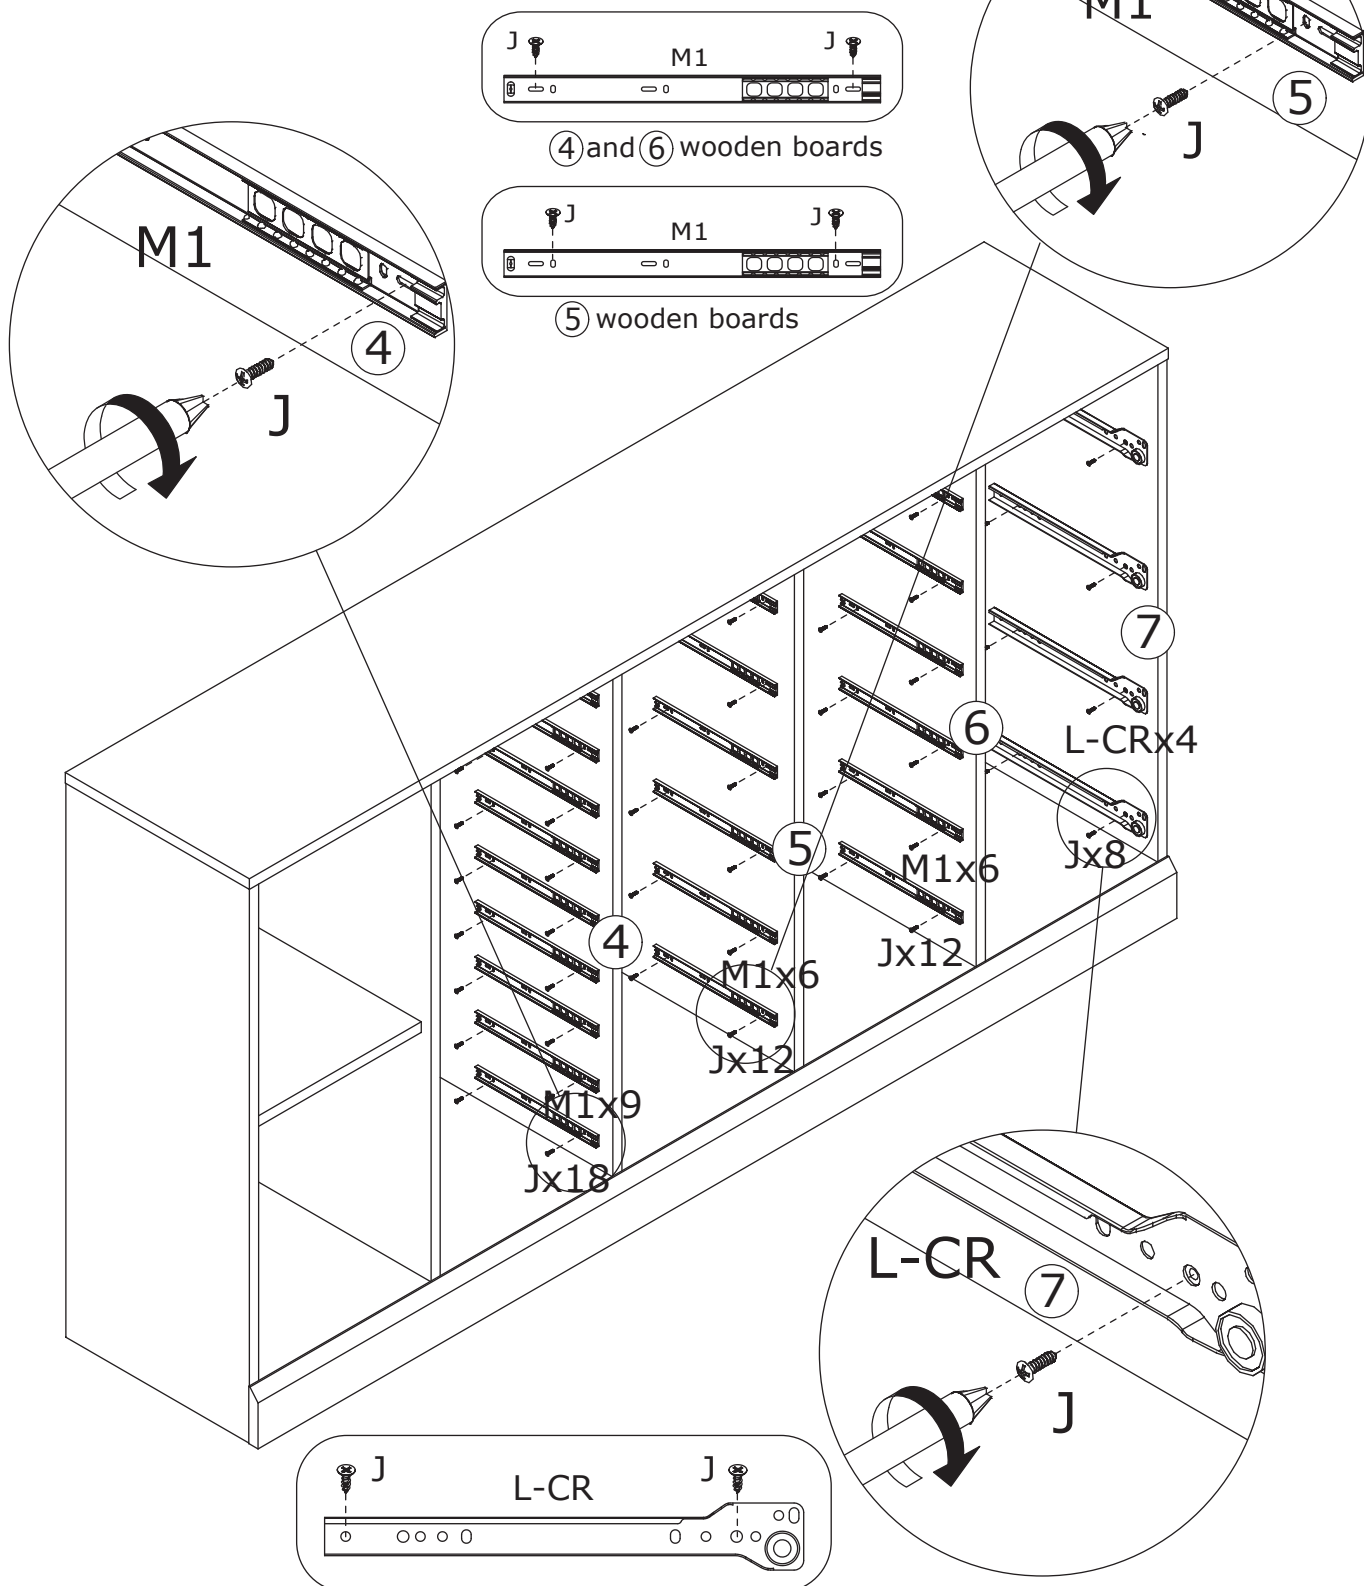

# 20

J x 50



 
Ø 3.5 x 12 mm

L x 4




CL


M x 21



M1


 


 Fix slide rail M1 to wooden boards 3, 4, and 5 using screw J, and fix slide rail L (CL section) to wooden board 6 using screw J.

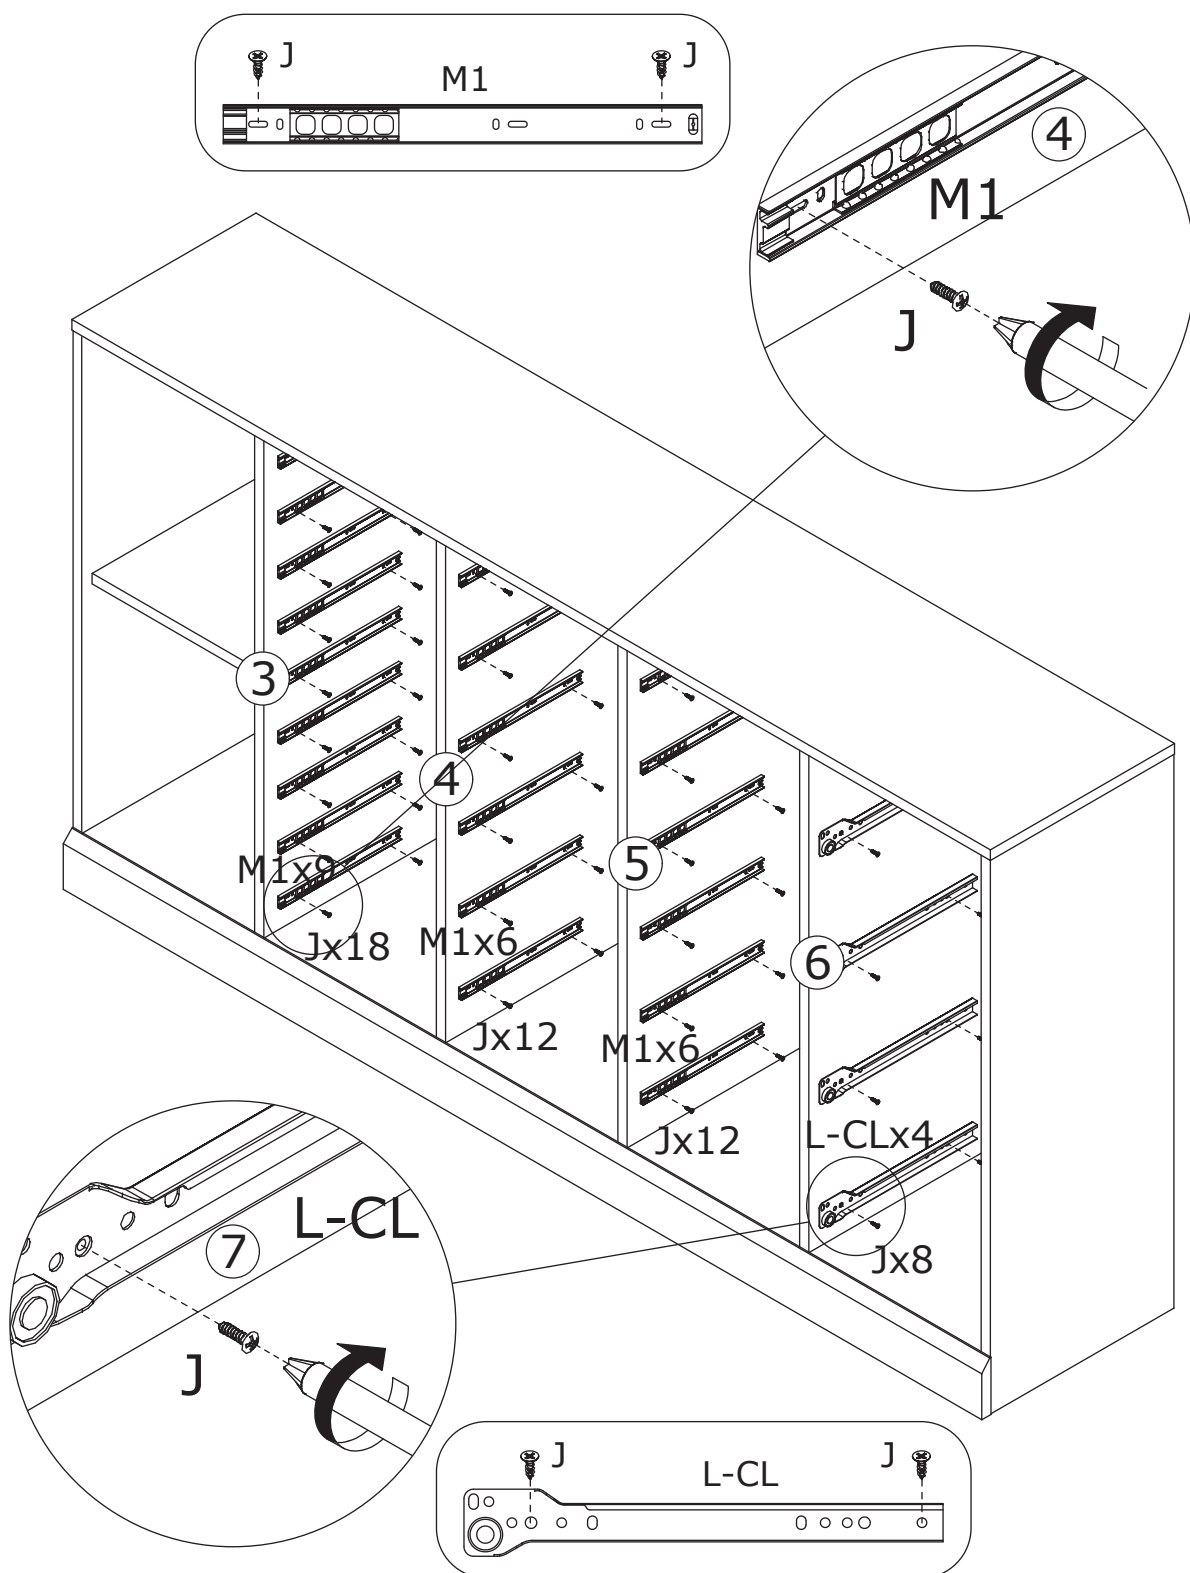


21

  
R x 2



 
If required, install the anti-tipping component R as shown.

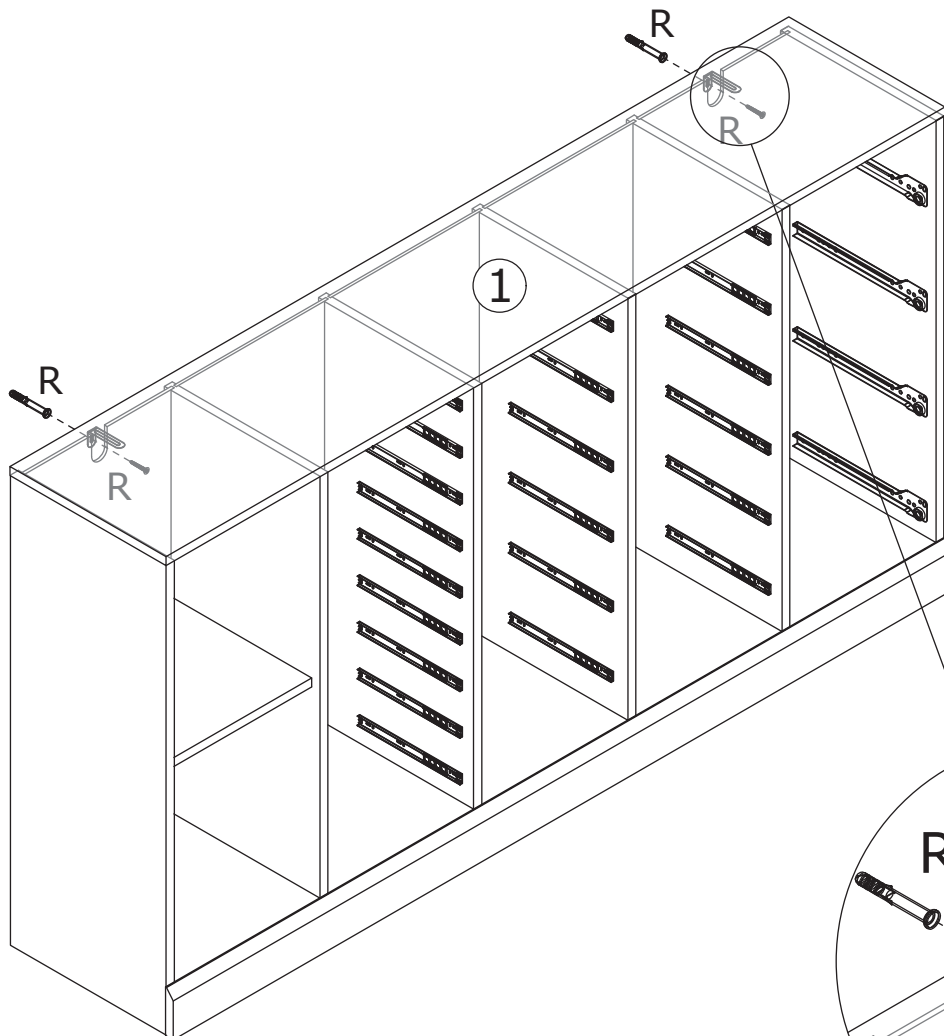

 
1.

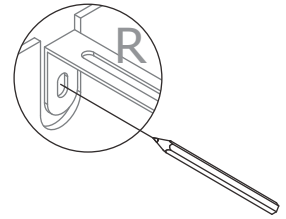


 
2.

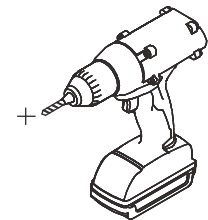


 
3.

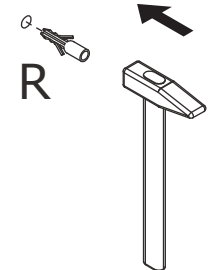

  
4.

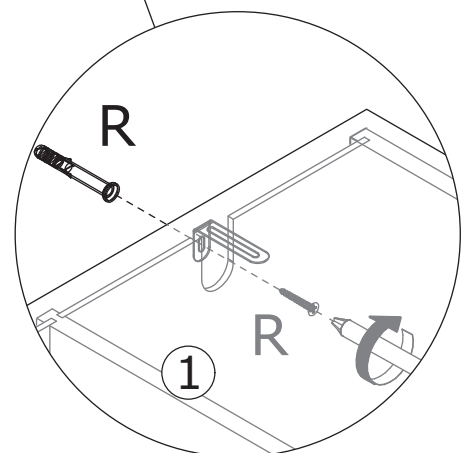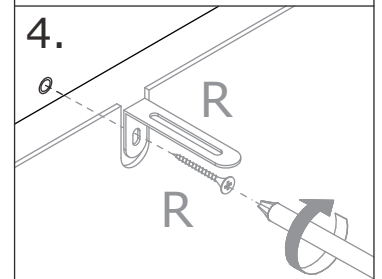

# 22
  
|                                                                                                |                                                                                                |                                                                                                                     |                                                                                                                    |                                                                                     |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>D x 4</p>  | <p>G x 2</p>  | <p>J x 8</p>  <p>Ø 3.5 x 12 mm</p> | <p>P x 2</p>  <p>Ø 4 x 18 mm</p> |  |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

 Secure hinge D to wooden board 9 using screw J,  
then fix handle G to wooden board 9 using screw P.

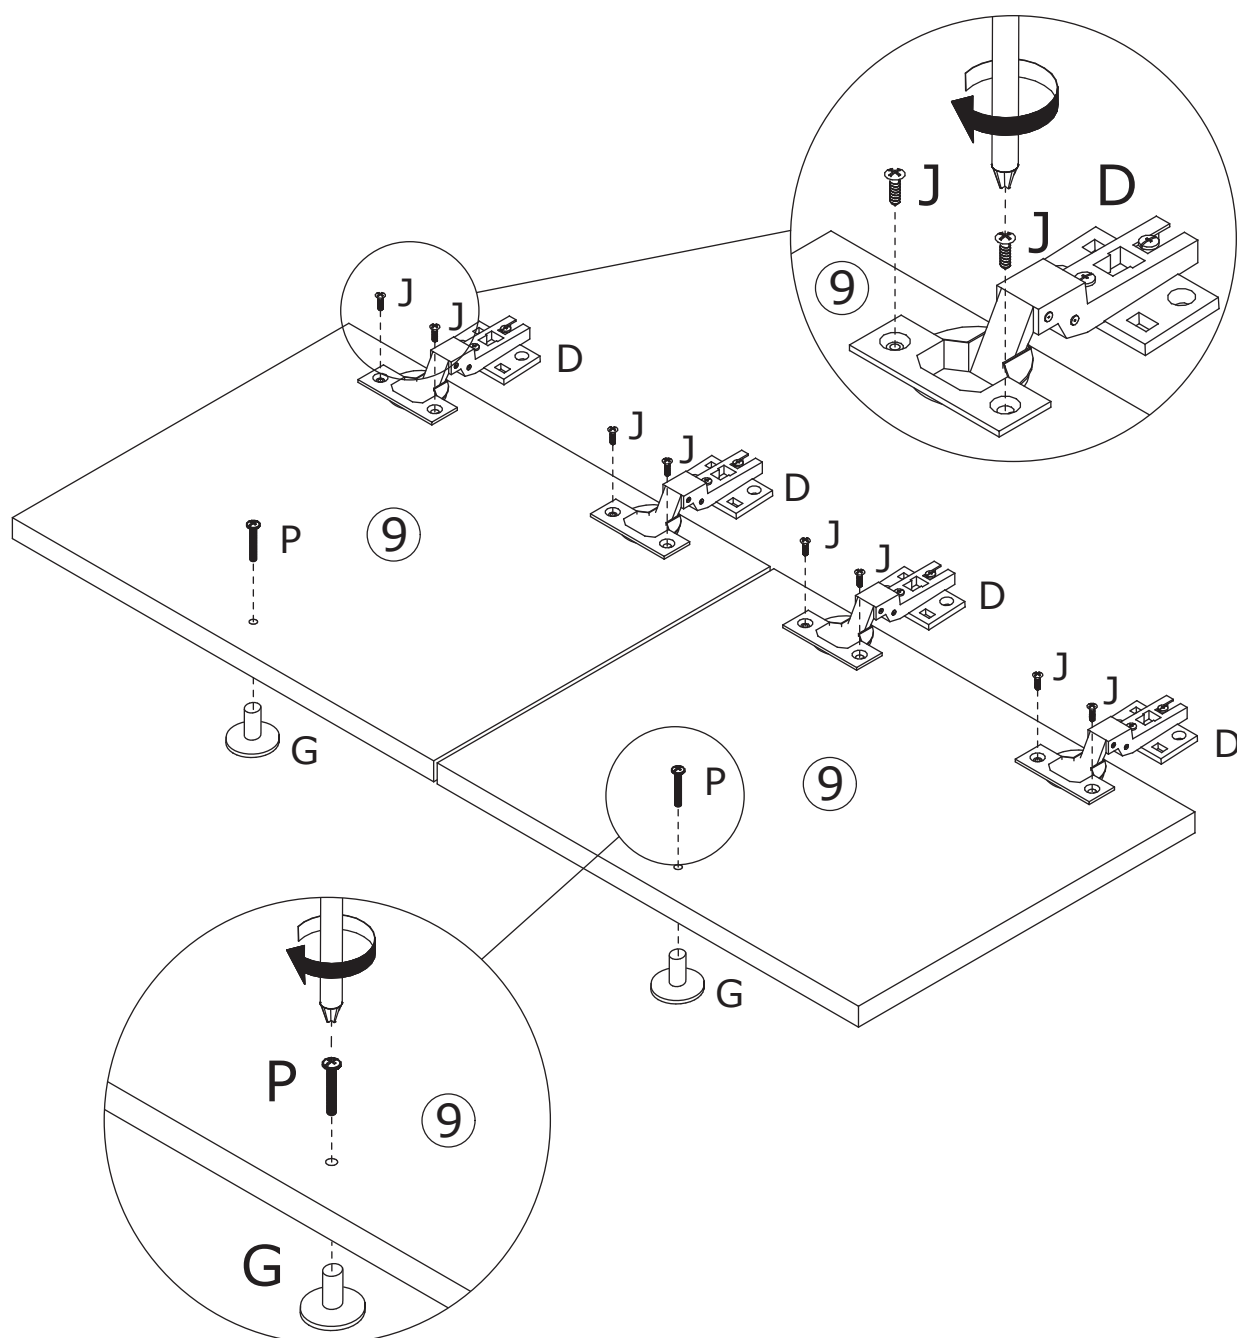


23


J x 16





 
Ø 3.5 x 12 mm



 
Secure hinge D to wooden board 2 using screw J.

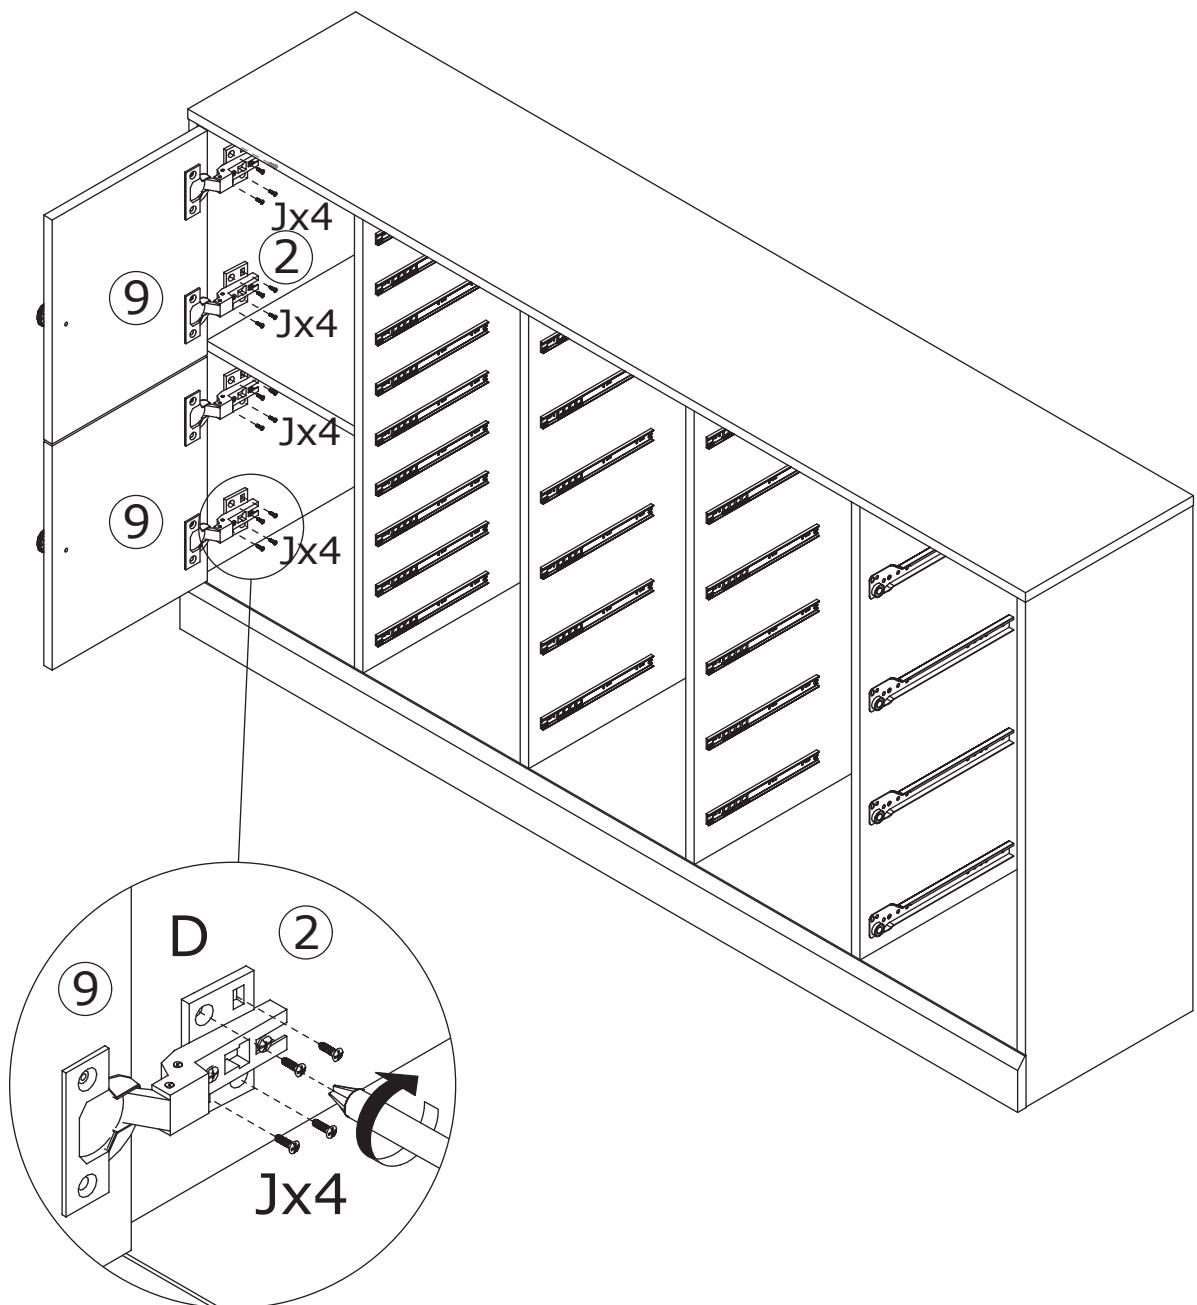

24

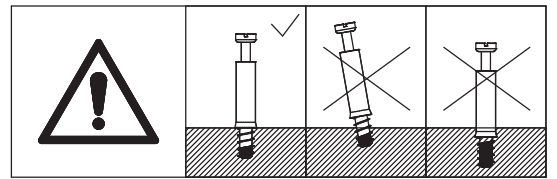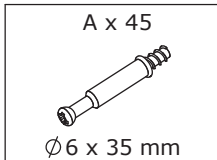   

 Install screw rod A onto  
 wooden boards 15, 16, and 17.


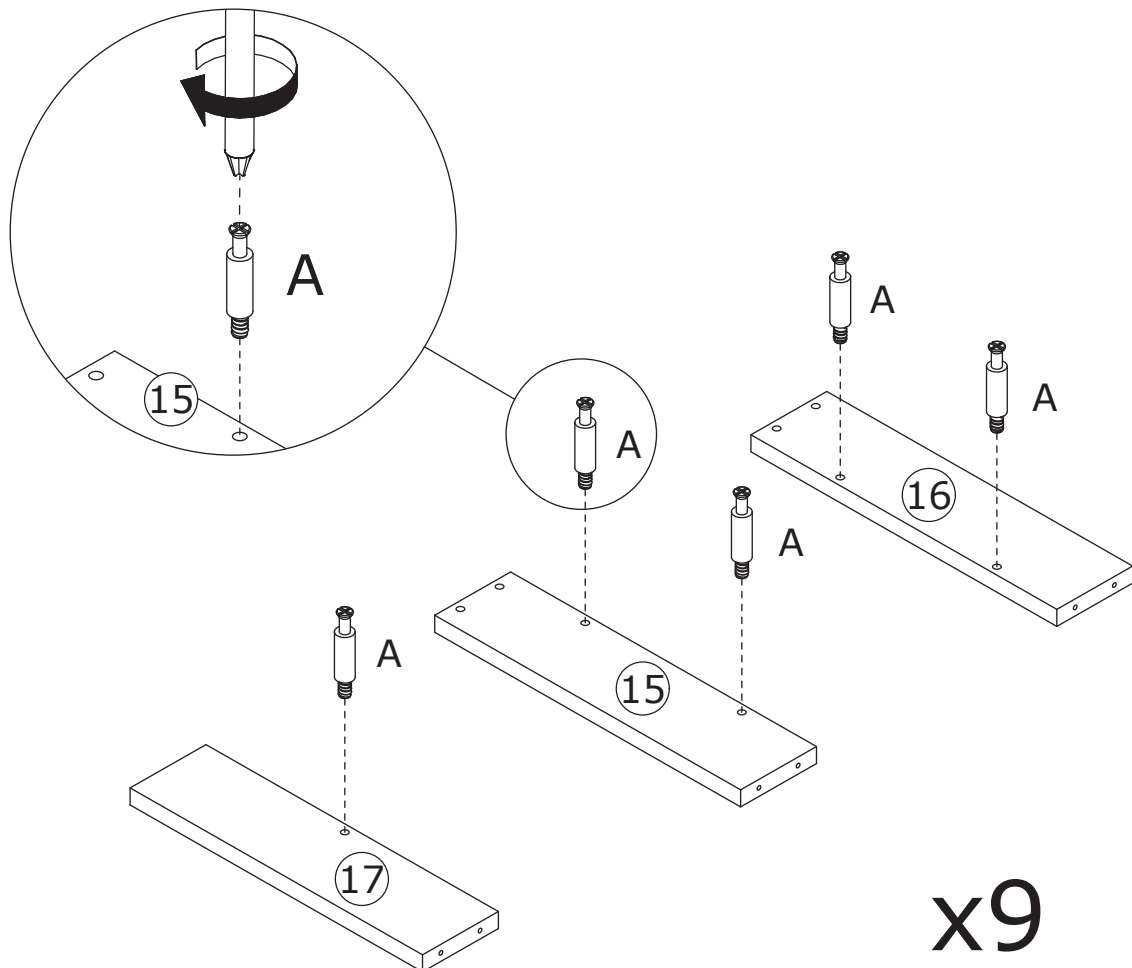


25


Q x 45



  Ø 15 x 9 mm

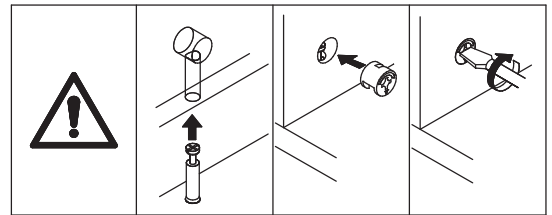

 Connect wooden boards 15, 16, 17, and 18,  
then insert and tighten the eccentric cam Q.

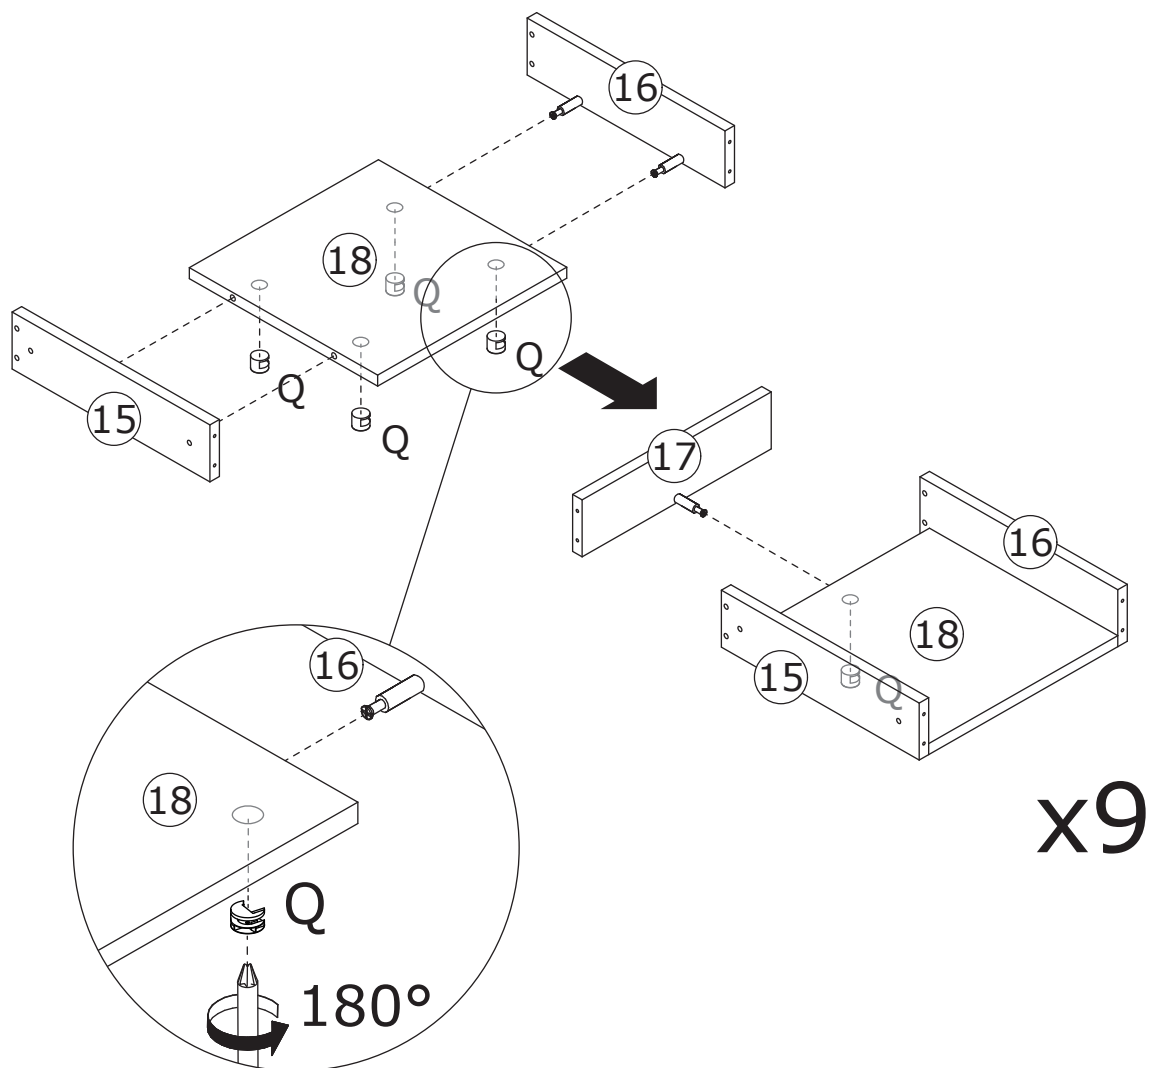



# 26

E x 36




Ø 3.5 x 30 mm

  
F x 36




 
Secure wooden boards 15, 16, and 17 with screw E, remove the protective film from acrylic panel 19. Then, using the screws from accessory F, fasten acrylic panel 19 to wooden boards 15 and 16 through washers. Finally, attach the screw caps from accessory F.

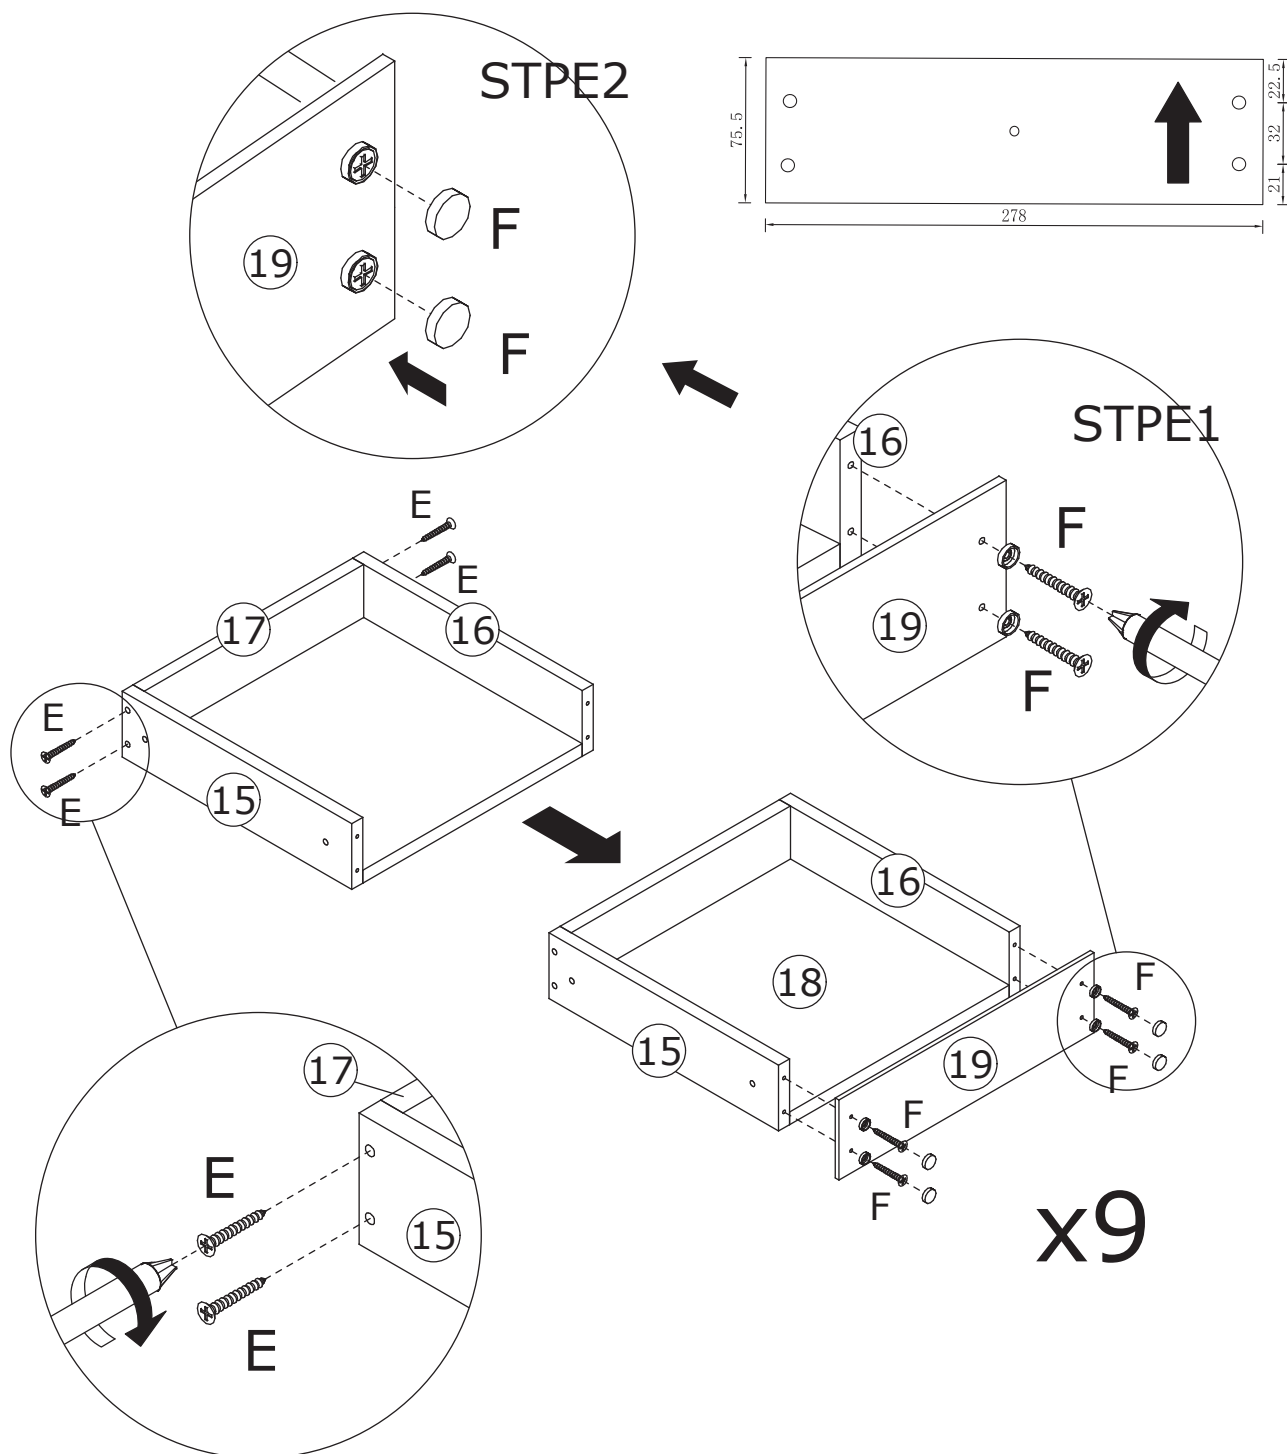




# 27
 
|                                                                                                                     |                                                                                                           |                                                                                                |                                                                                     |
|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>J x 36</p>  <p>Ø3.5 x 12 mm</p> | <p>M x 18</p>  <p>M2</p> | <p>N x 9</p>  |  |
| <p>O x 9</p>  <p>Ø4 x 8 mm</p>     | <p>S x 9</p>             |                                                                                                |                                                                                     |

  
Fix slide rail M2 to wooden boards 15 and 16 using screw J.  
Then, attach handle N to acrylic panel 19 using screw O through washers S.

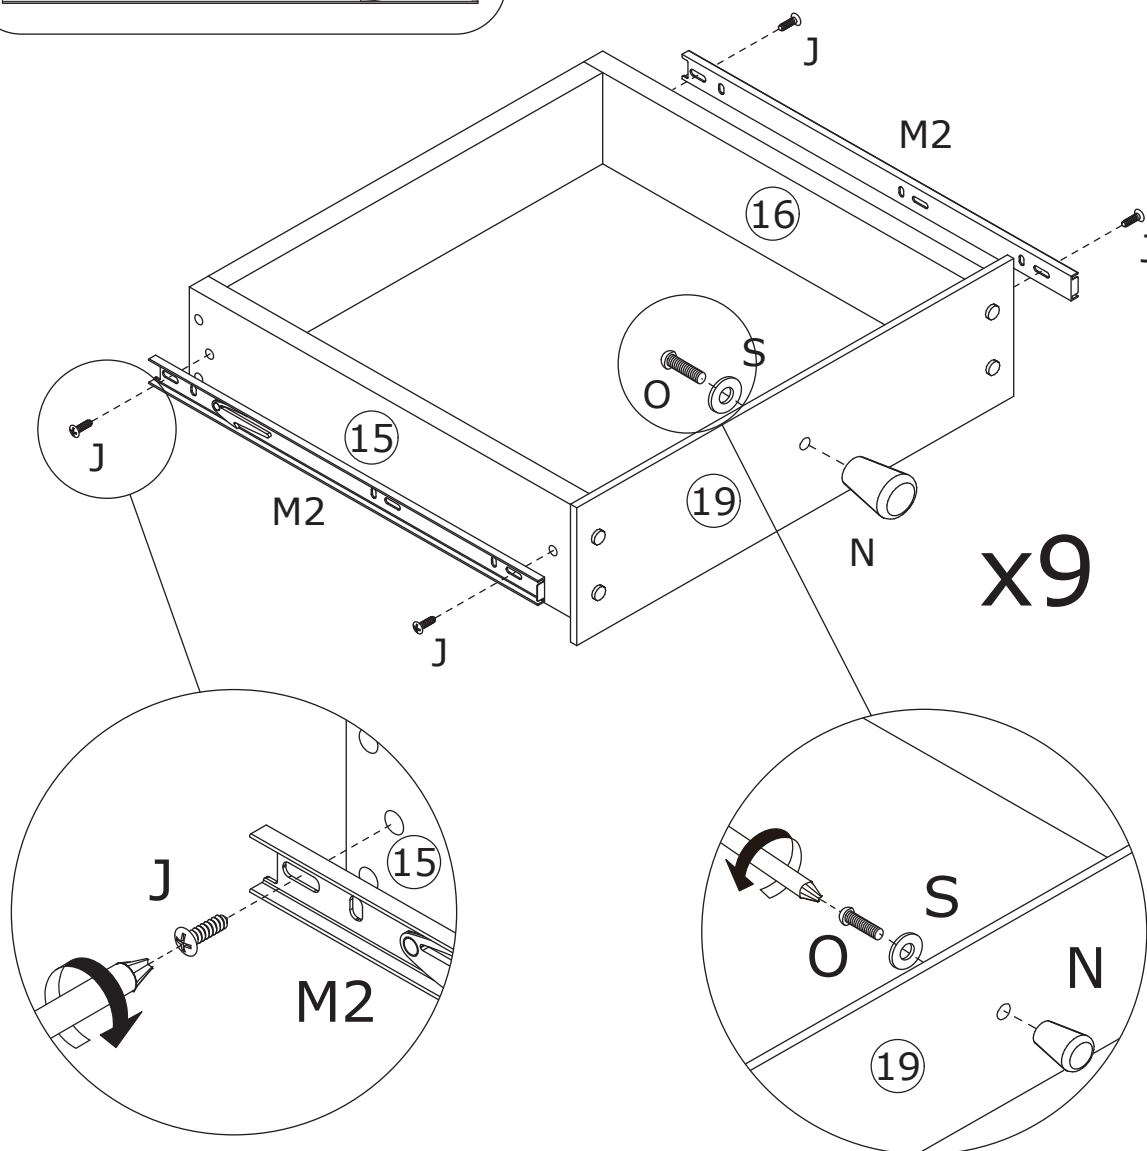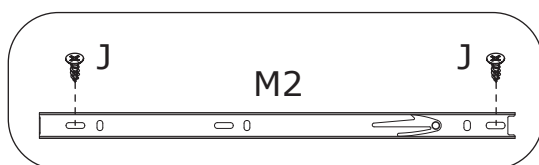

28

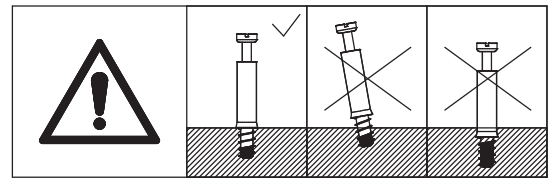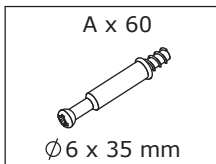   

 Install screw rod A onto  
wooden boards 20, 21, and 22.


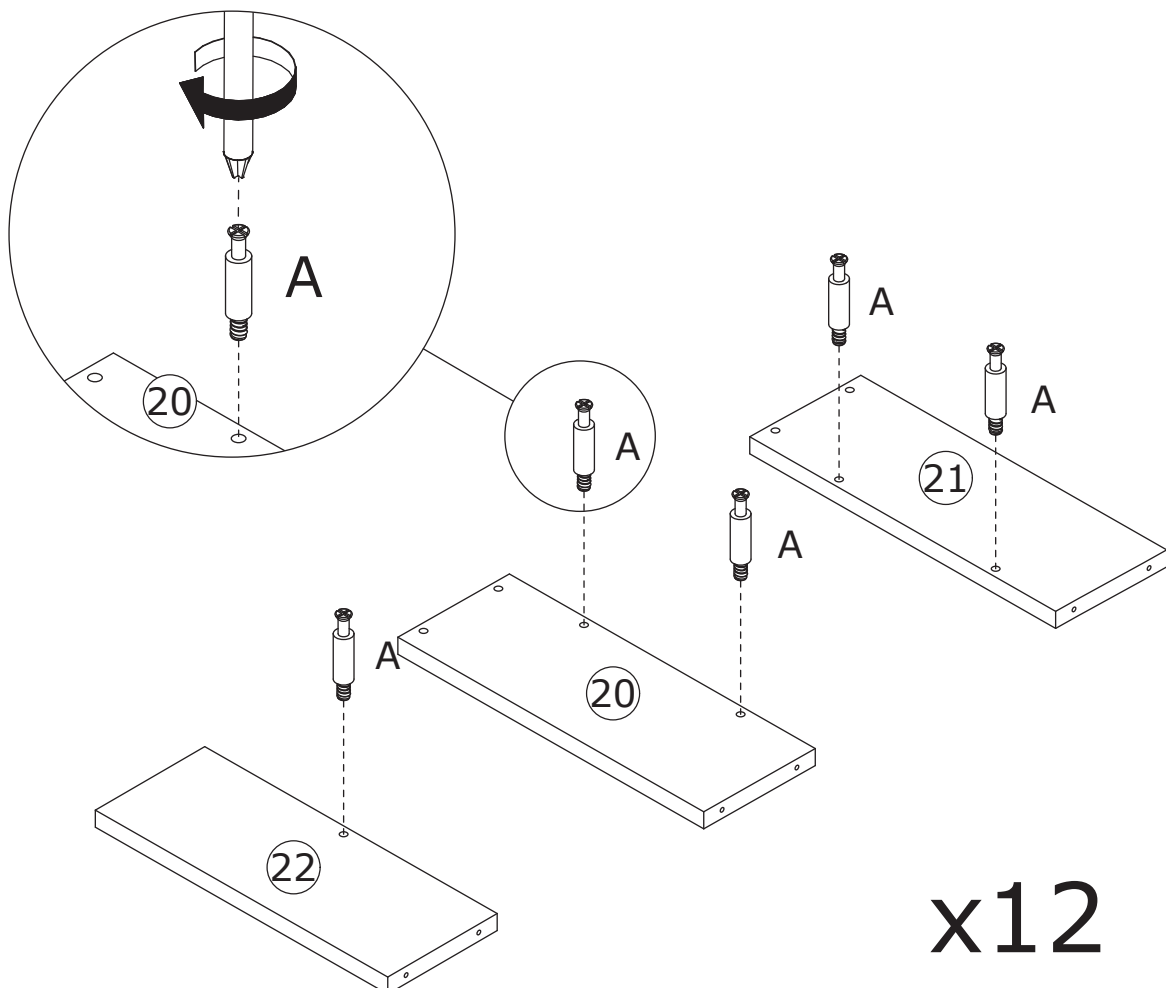


29


Q x 60



  Ø 15 x 9 mm

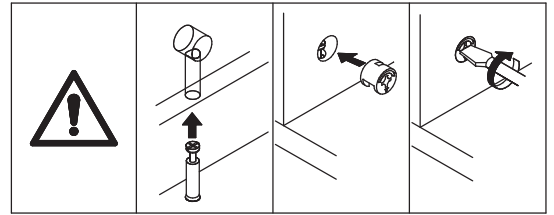

 Connect wooden boards 20, 21, 22, and 23,  
then insert and tighten the eccentric cam Q.

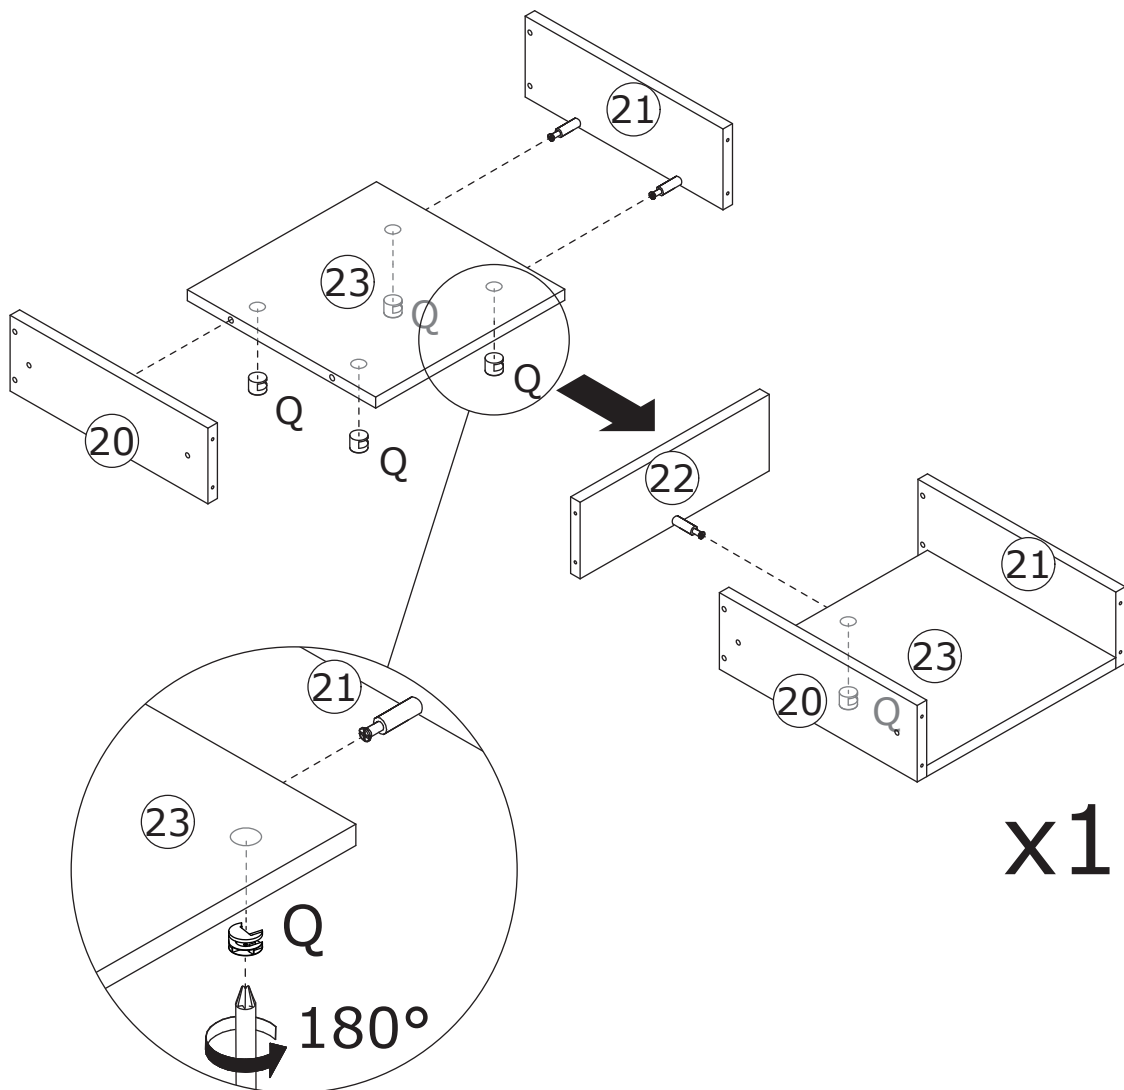

x12



# 30

  E x 48




Ø 3.5 x 30 mm


F x 48




 
Secure wooden boards 20, 21, and 22 with screw E, remove the protective film from acrylic panel 24. Then, using the screws from accessory F, fasten acrylic panel 24 to wooden boards 20 and 21 through washers. Finally, attach the screw caps from accessory F.

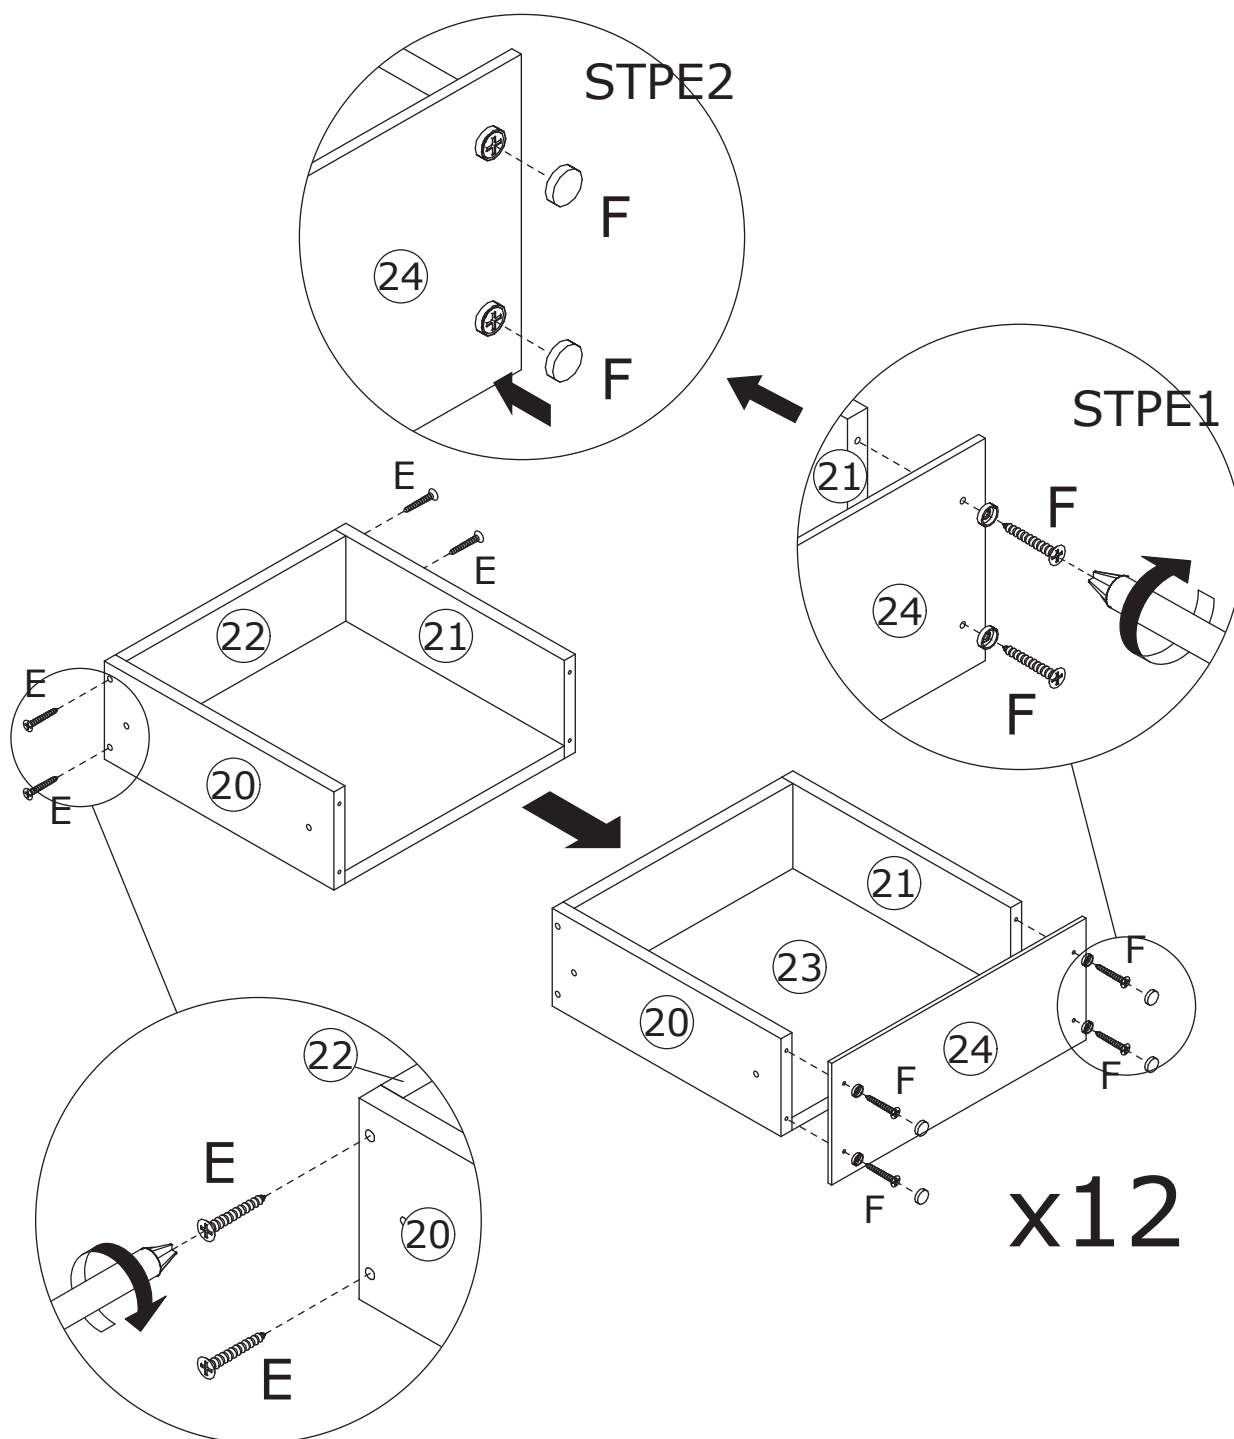




# 31
 
|                                                                                                                      |                                                                                                           |                                                                                                 |                                                                                     |
|----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>J x 48</p>  <p>Ø 3.5 x 12 mm</p> | <p>M x 24</p>  <p>M2</p> | <p>N x 12</p>  |  |
| <p>O x 12</p>  <p>Ø 4 x 8 mm</p>    | <p>S x 12</p>            |                                                                                                 |                                                                                     |

  
Fix slide rail M2 to wooden boards 20 and 21 using screw J.  
Then, attach handle N to acrylic panel 19 using screw O through washers S.

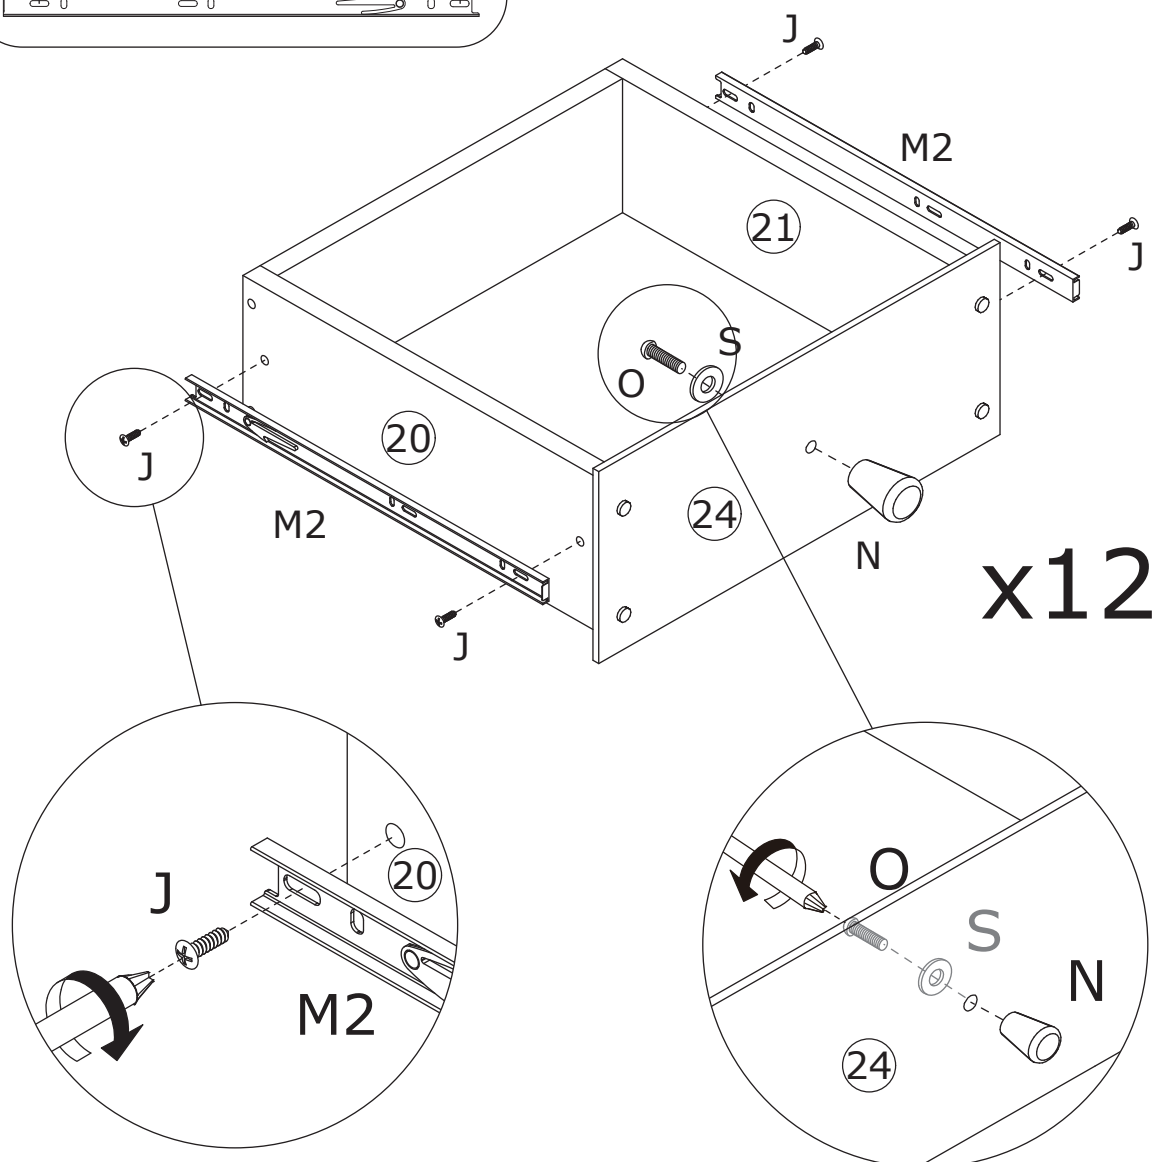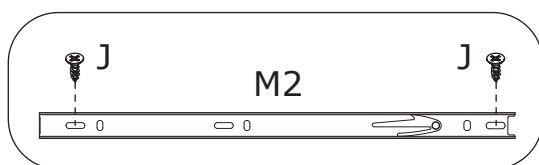

32

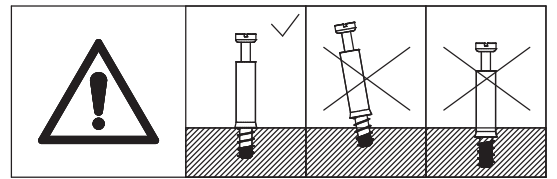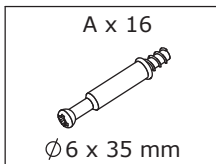   

 Install screw rod A onto wooden board 28.

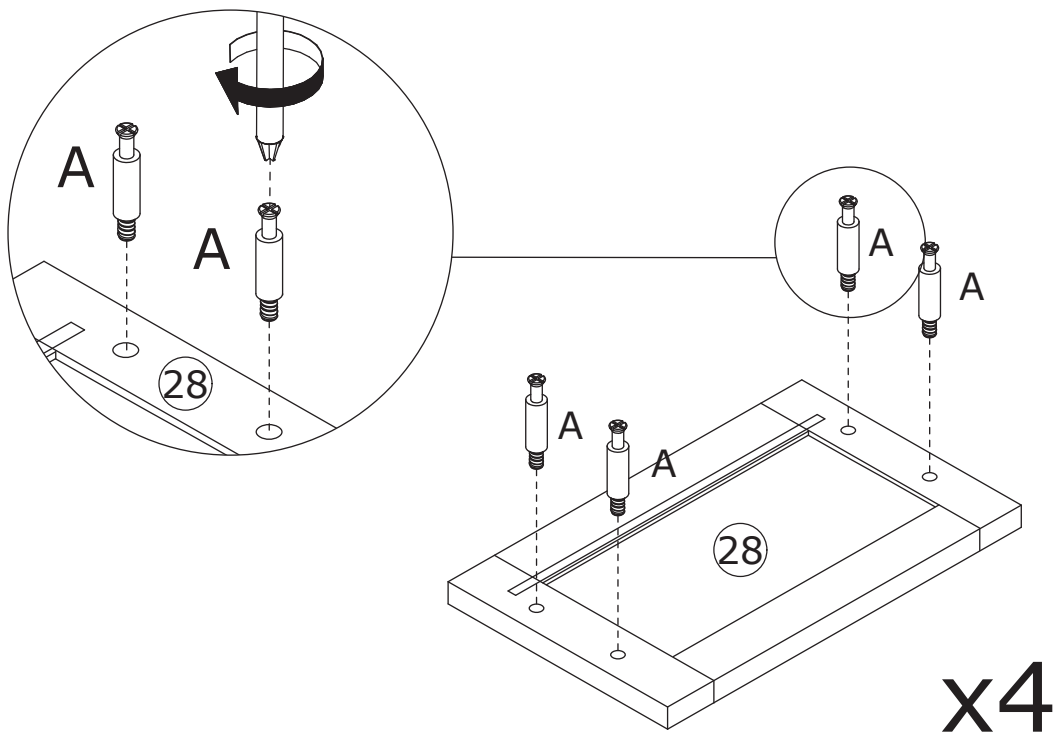


# 33


E x 16



 Ø 3.5 x 30 mm




 Secure wooden boards 25 and 26 to wooden board 27 using screw E.

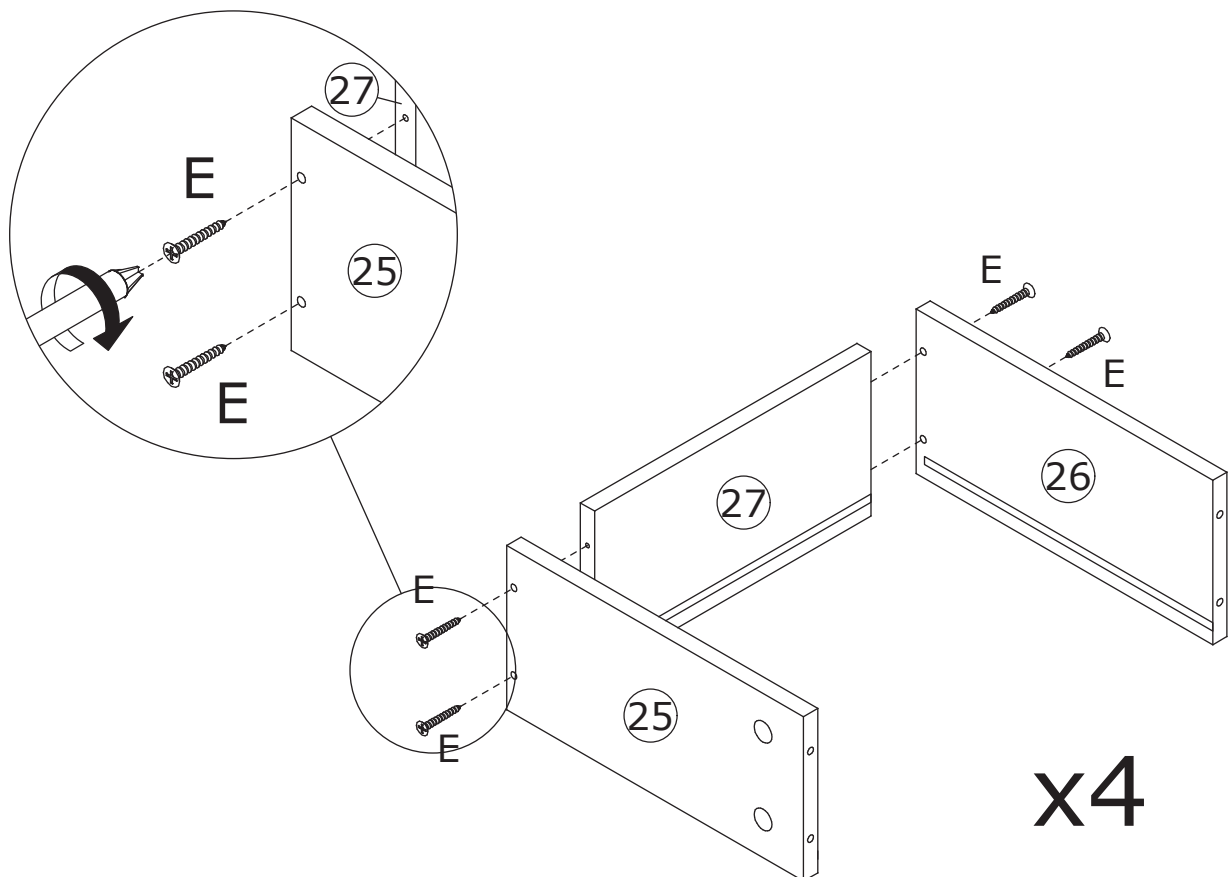



34

 Insert wooden board 29 into the slots  
of wooden boards 25, 26, and 27.

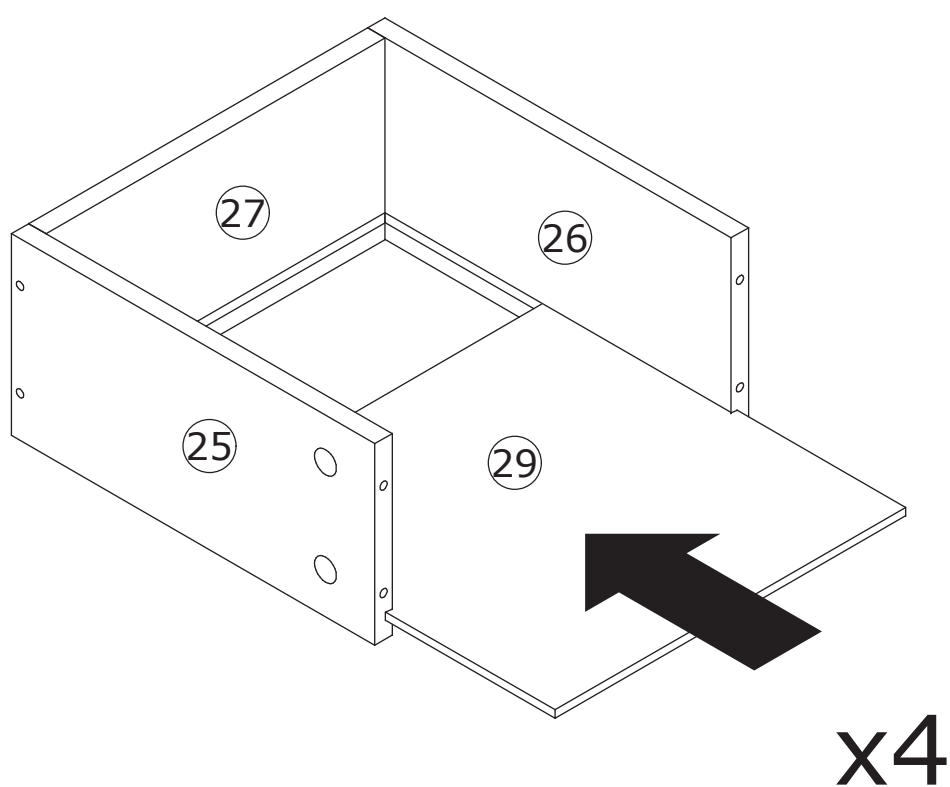


# 35



 
|                                                                                            |                                                                                                         |                                                                                                           |                                                                                             |                                                                                     |
|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| G x 4<br> | O x 4<br><br>Ø4 x 8 mm | Q x 16<br><br>Ø15 x 9 mm | S x 4<br> |  |
|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

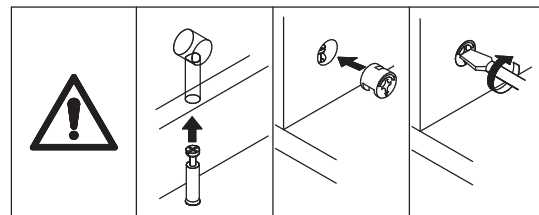 



 
Connect wooden boards 25, 26, and 28, insert and tighten the eccentric cam Q. Attach handle G to the acrylic panel on wooden board 18 using screw O through washers S.

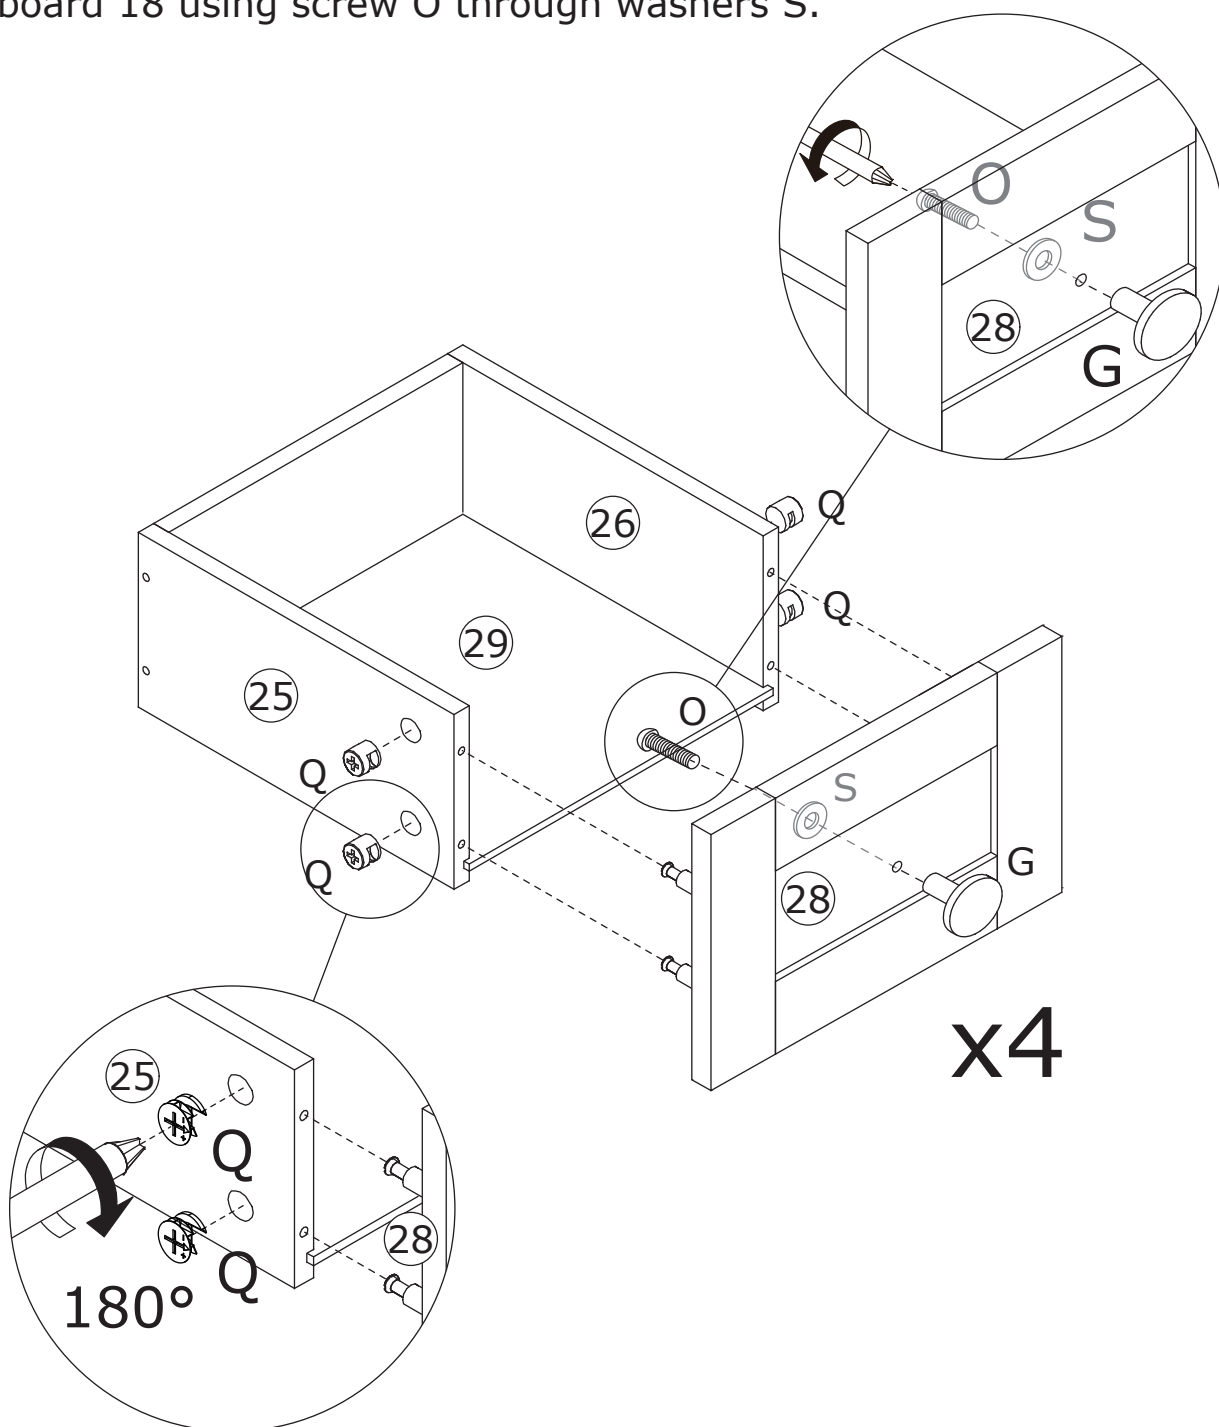

# 36

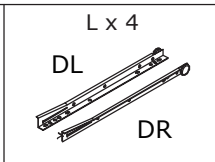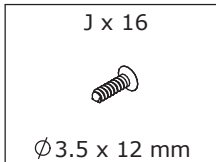   


   Fix slide rail L (DL and DR section) to wooden boards 25 and 26 using screw J.

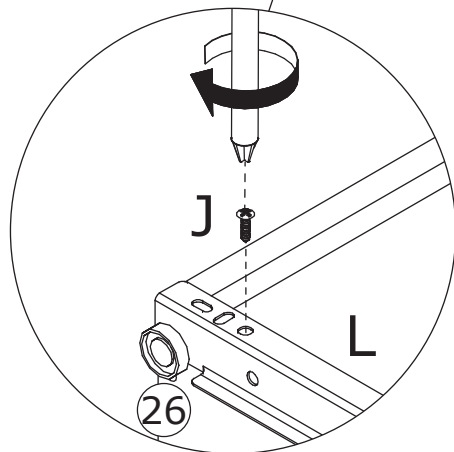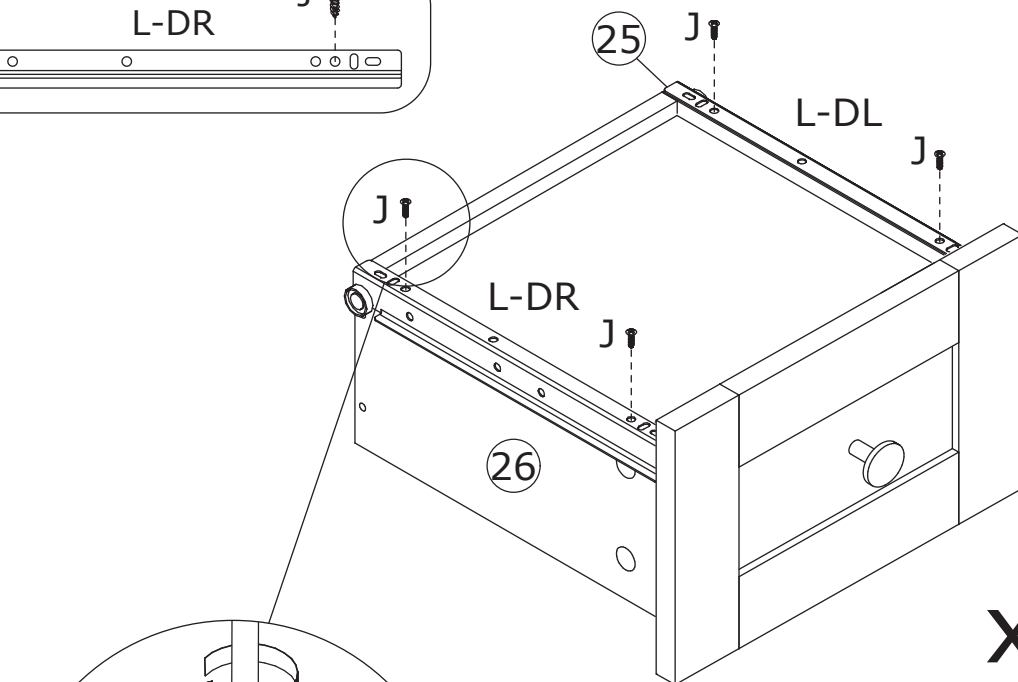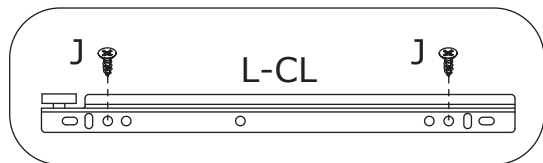

# 37

 Slide the assembled drawer into the assembled cabinet body via the slide rails.

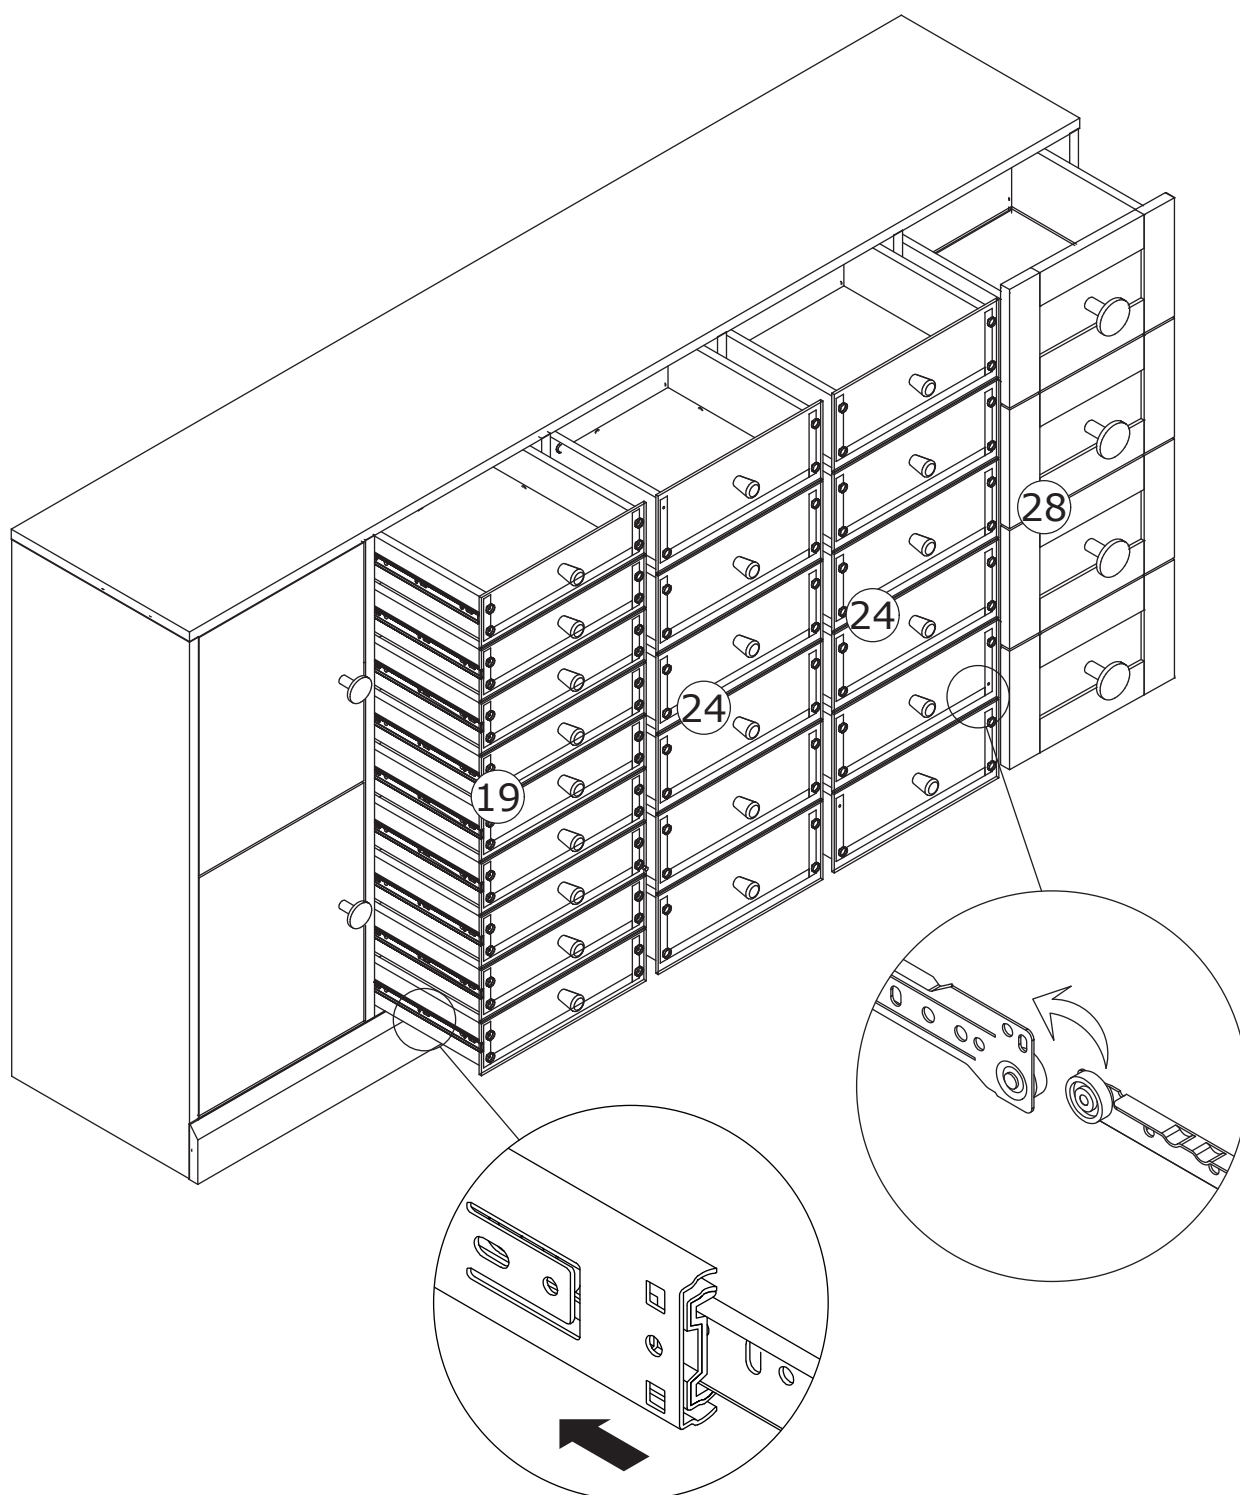

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## **CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?**

### **PLEASE FOLLOW THE BELOW INSTRUCTIONS:**

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### **DEFECTIVE ITEMS**

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### **DAMAGED ITEMS**

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.