 


370 US GALLON / 307 IMPERIAL GALLON

DECK BOX

HORIZON / URBAN / WOODS

INSTRUCTION MANUAL

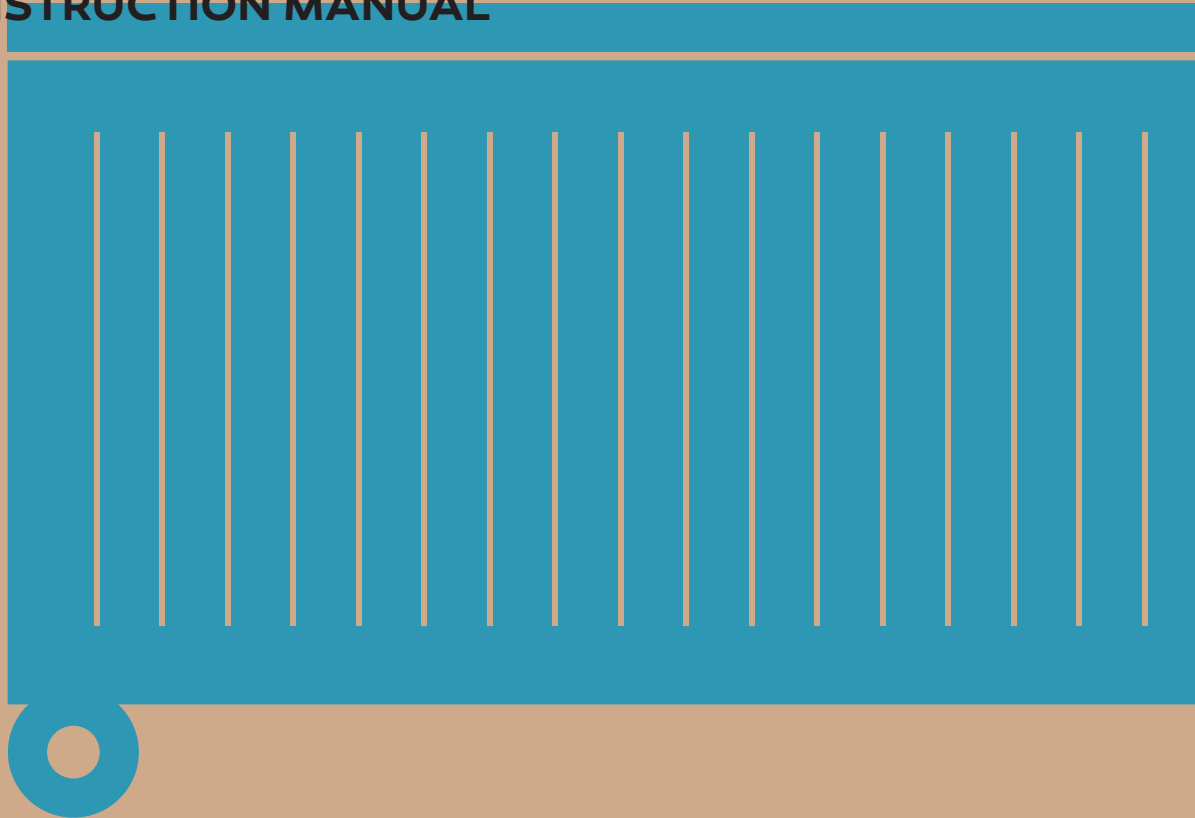

THANK YOU FOR PURCHASING THE MIRADOR DECK BOX!



This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your deck box to ensure it brings you many years of use and enjoyment.

IMPORTANT

Please read the entire manual carefully before assembling and using your deck box, and please ensure the manual is kept in a safe place for future reference.

Any use or modification to the deck box not included in this manual shall be considered as improper use, which may cause considerable danger to users and property and will void the product warranty.

Please only use this product for its intended purpose within a residential environment. Failure to do so will void your warranty.

We reserve the right to make changes for product improvements.

For parts and customer service, please call +1 (877)-506-4777 in the U.S. and Canada (English and Spanish) Monday - Friday: 6:30 am - 4:30 pm, Saturday – Sunday: 8:30 am – 4:30 pm, Pacific Time. For other regions, email support@miradoroutdoor.com

Digital instruction manual is also available on our official website www.miradoroutdoor.com for your reference.

TABLE OF CONTENTS

- Before Assembling Your Deck Box	3
- Important Safety Advice	4
- List of Parts	6
- Assembly	20
- Care & Maintenance	46
- Warranty & Complaints Procedure	47

BEFORE ASSEMBLING YOUR DECK BOX

WARNING: Important safety instructions. Follow all instructions, since incorrect assembly can lead to severe injury.

Make sure you have all the tools required for assembling your deck box:

In order to assemble your deck box safely and correctly, please ensure you have access to the following tools and accessories, all of which are not provided.



2 Goggles



2 Protective Gloves



Scissors



Cordless
Screwdriver



Rubber Mallet



2 People Required

Notice: Adjust the torque range of the cordless screwdriver according to the bit used: T25: 5.4~7.2N.M.

Check to ensure there are no missing parts:

Before you begin assembly, please check that you have all the parts required to assemble your deck box. Please also carefully check that the quantity of parts matches with that of the model you have purchased. If any parts are missing, please refer to the **Warranty & Complaints Procedure** to contact customer service before beginning the assembly.

Prepare the parts you will need for each step:

In the **Assembly** section of the manual, each step indicates the necessary parts and quantities required to complete the step. We recommend that you prepare the parts you will need for each assembly step. Doing this will save you time and effort during assembly. If possible, place the parts on cardboard or other soft surface to protect from scratching the painted surfaces.

Select a suitable location:

The ground should be solid and flat	The ground should be level




IMPORTANT SAFETY ADVICE

For the safety of all persons assembling and using the deck box, it is important to follow the safety guidelines below.

Preparation

Prepare, assemble, and use only on a flat, level surface.	Wear work shoes, gloves, and eye protection where appropriate.	Do not attempt to assemble the product in windy or wet conditions.	Recycle packaging and dispose of plastic bags safely, out of children's reach.	Keep children and pets away from the work area - small parts, tools, and packaging can pose choking or injury risks.
				

During Usage

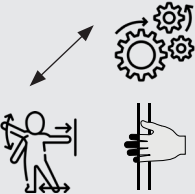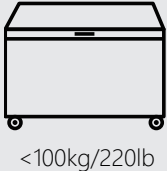Keep fingers and clothing away while closing the deck box.	Be cautious when moving a fully loaded product. It's intended for stationary storage and should not carry more than 100 kg / 220 lb.	Do not store flammable or corrosive chemicals in the product.
		


Keep children from playing inside the box to prevent suffocation. This product is not for use by children.



Do not place the deck box in extremely low (<math>< -22^{\circ}\text{F}</math> / -30°C) or high (>math>176^{\circ}\text{F}</math> / 80°C) temperatures, or near items like grills and fire pits.



Do not stand on, place items on, or hit the deck box, as impacts can cause permanent damage, component failure, and injury.

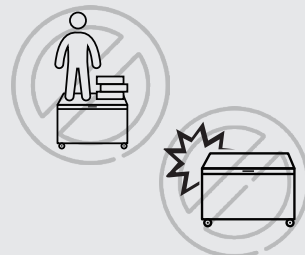

LIST OF PARTS

All parts numbered with lowercase letters and marked in black (eg : **a**) are protective components in the packaging and will not be used in the final product assembly.
Parts (marked with blue blocks, eg : **A**) are essential for assembling the product.

a



x4

b



 
x8

c




x4

d



x4

 


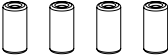



e

 


 
x4

 
 
 
 
 
 
 
 


 
Unboxing and Assembly

 
 
 
-  **a**x4 
- b**x4 
- c**x4 
- b**x4 
- d**x4 
- e**x4 

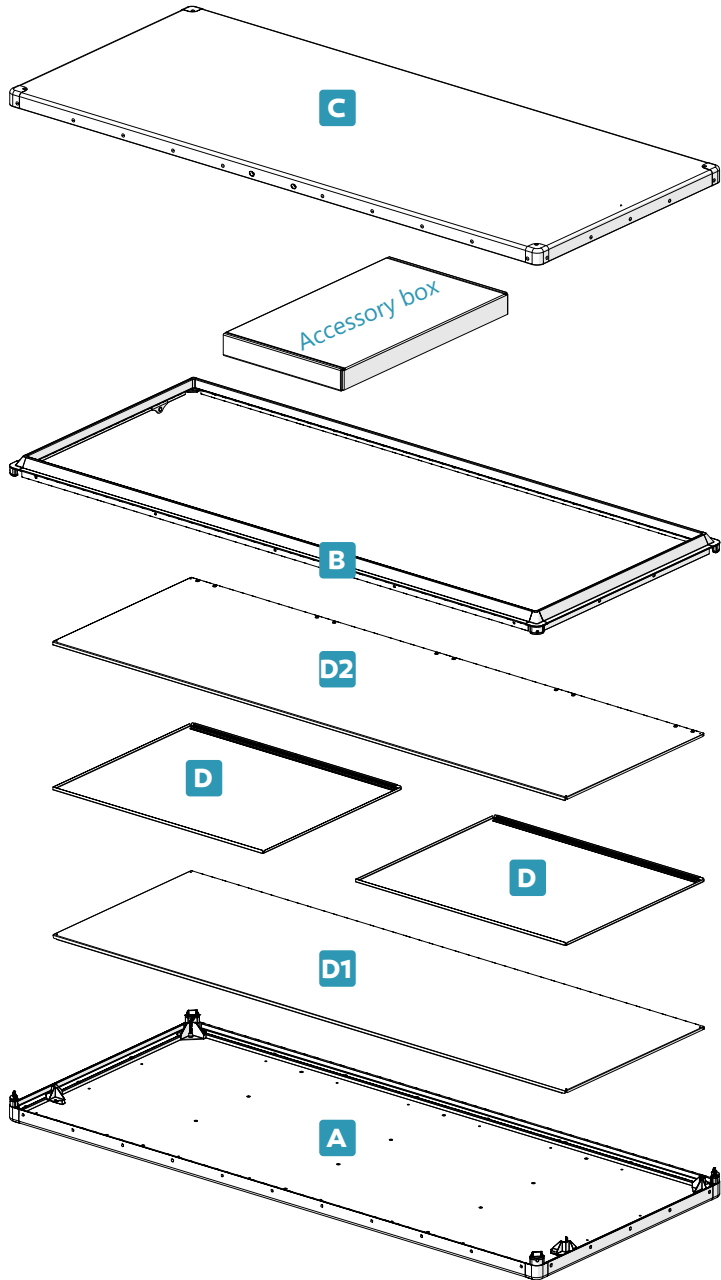 


 
 
 
 
 
 
 
 
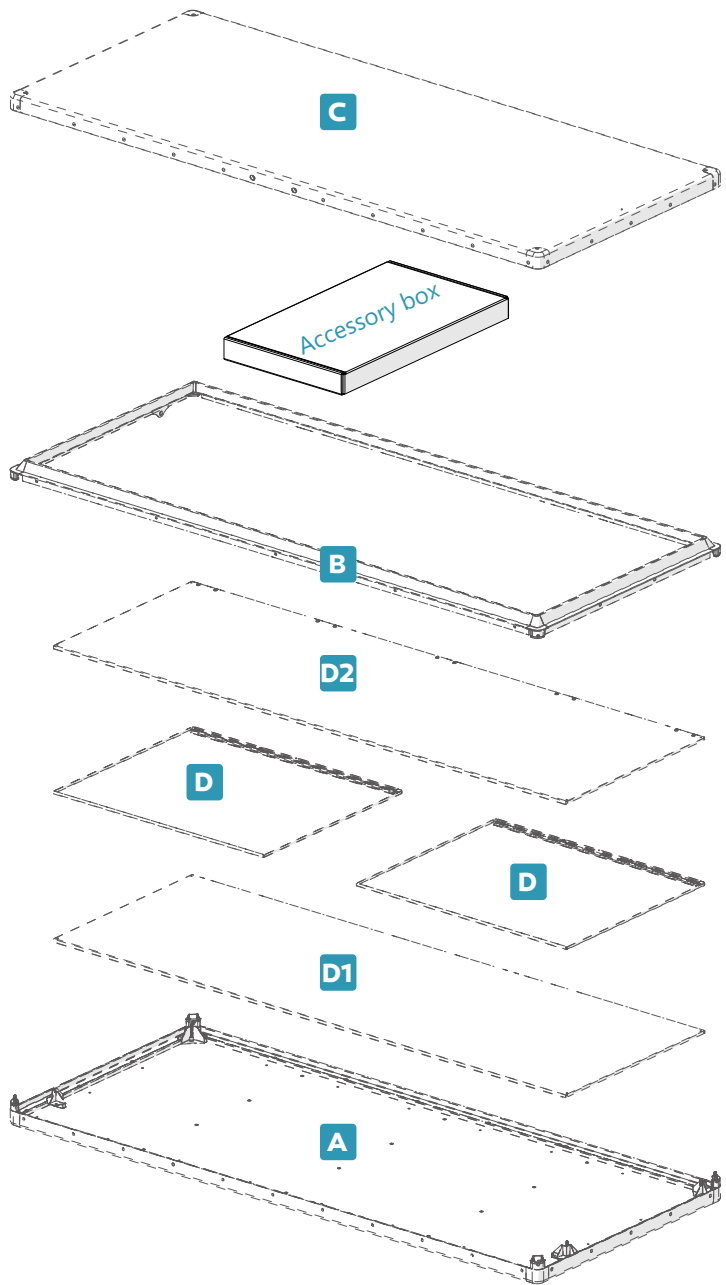 


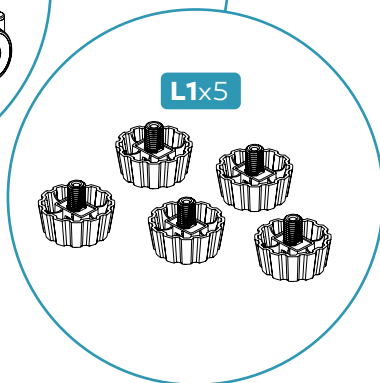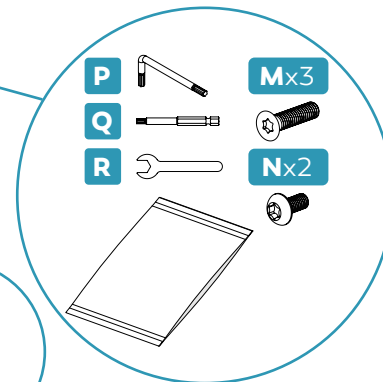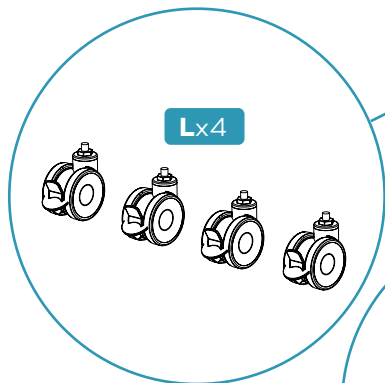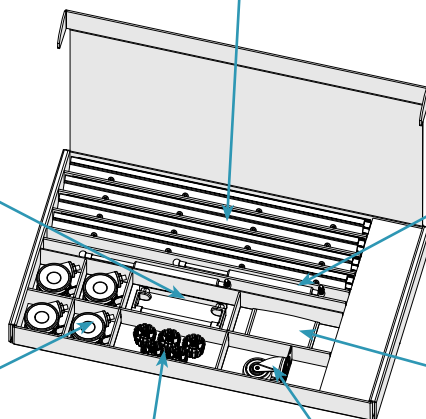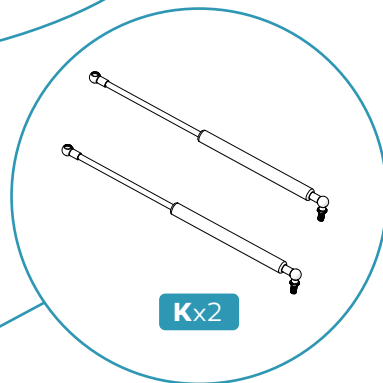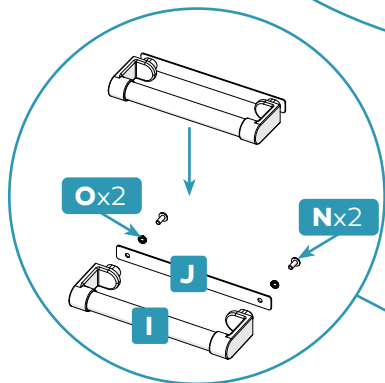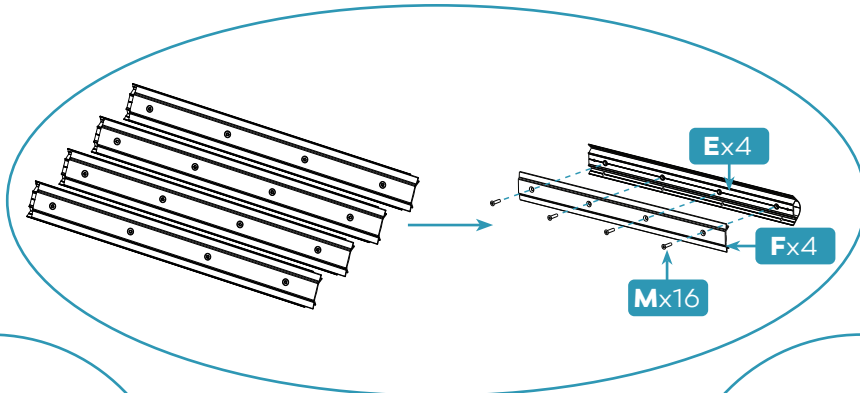 


 
 
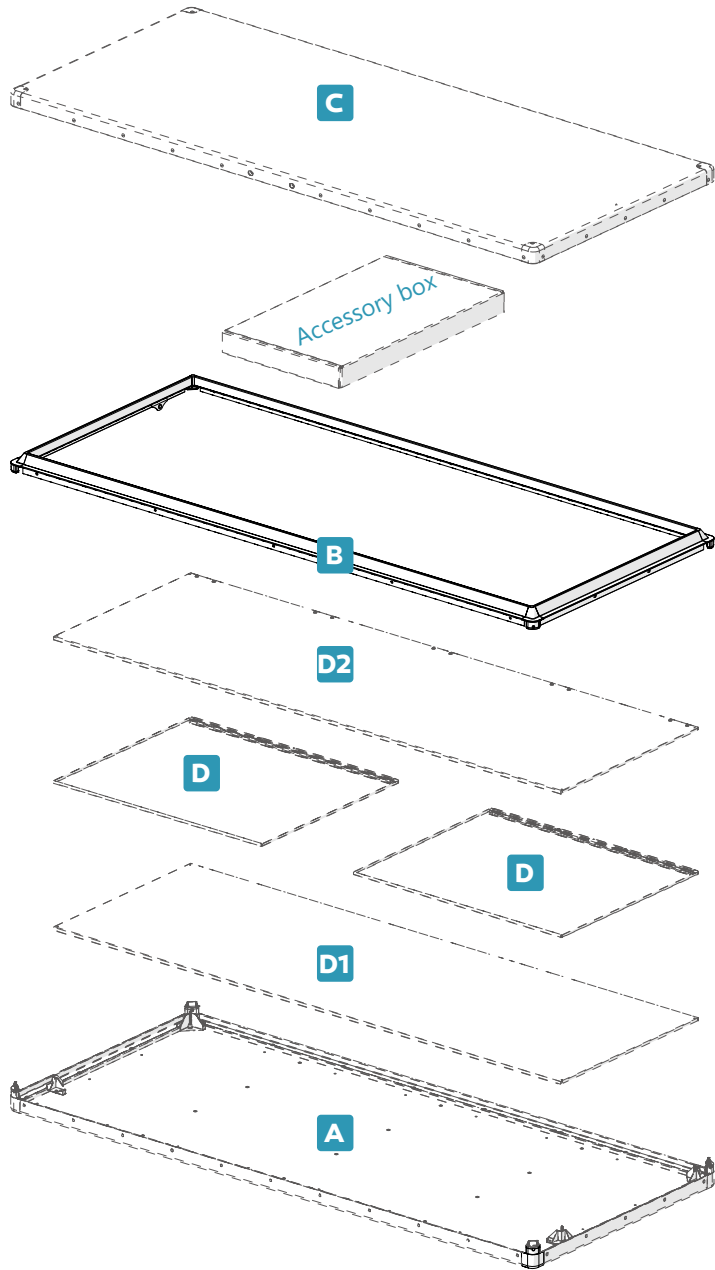 


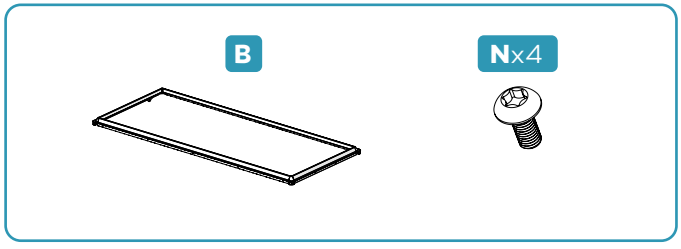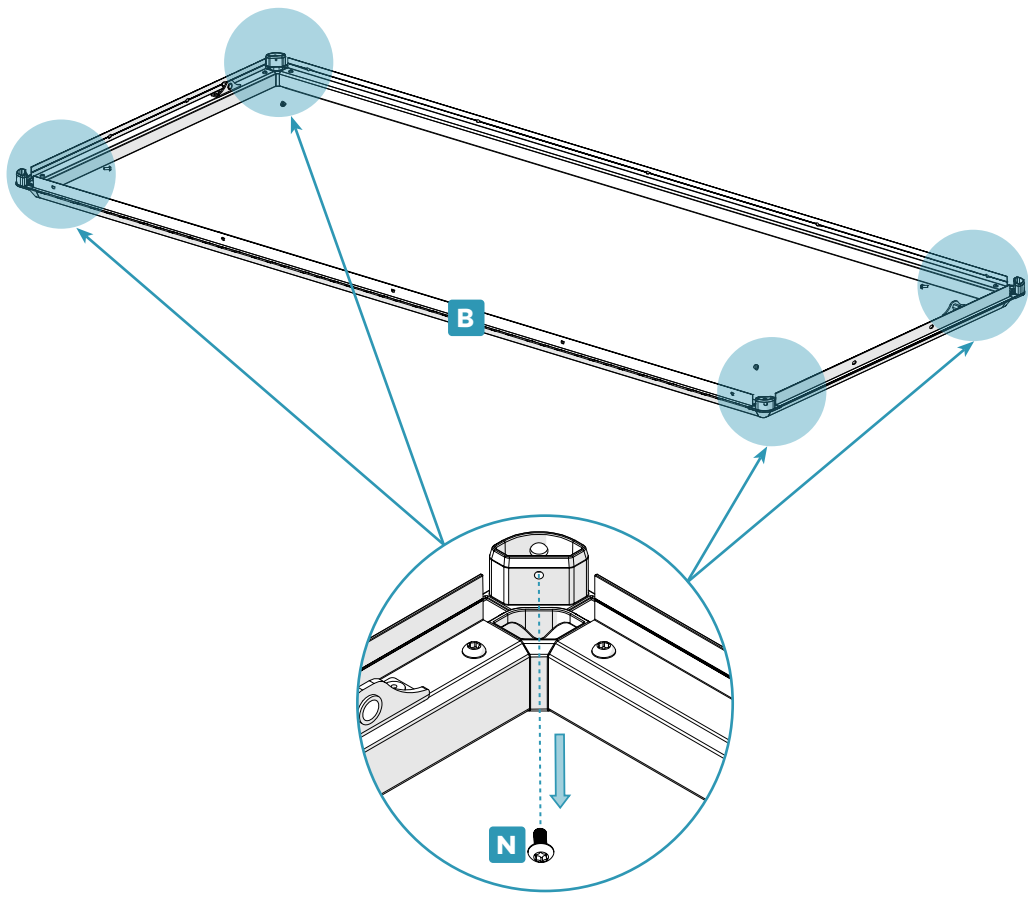 


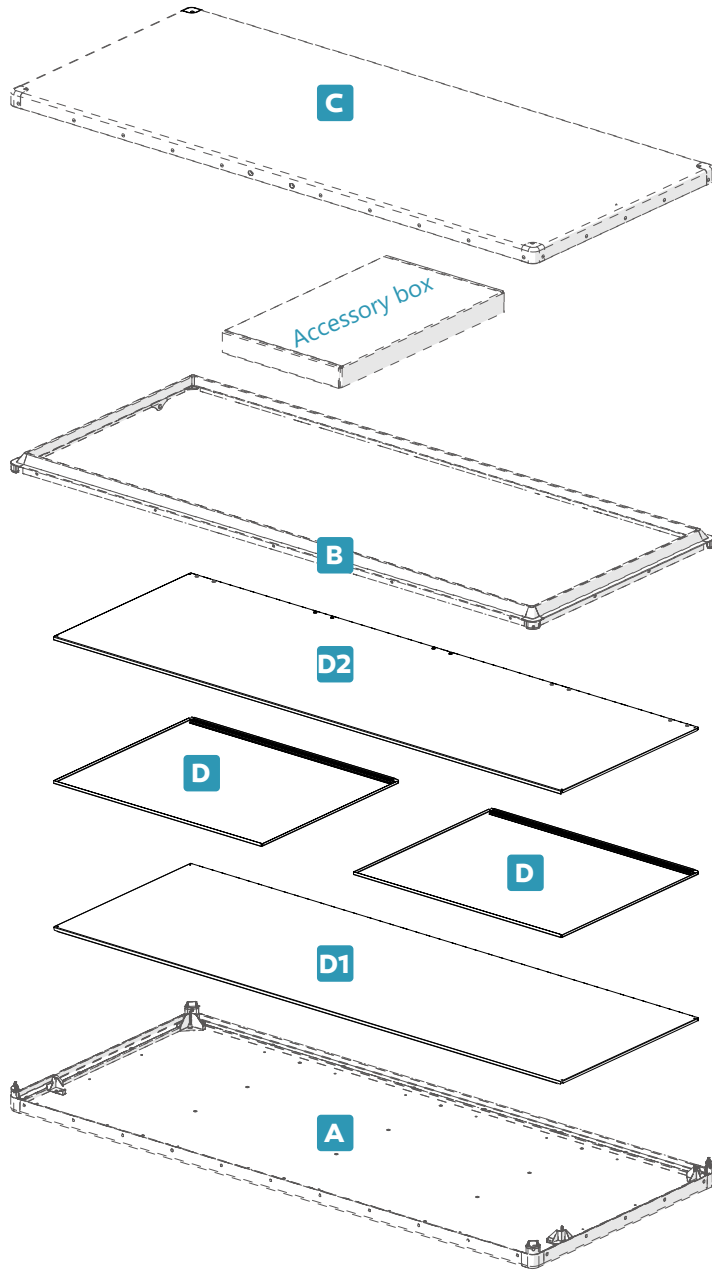

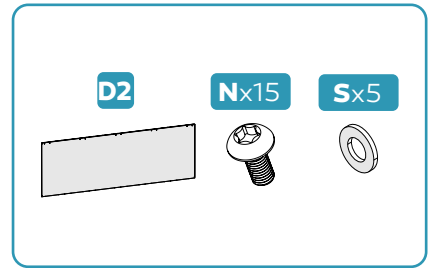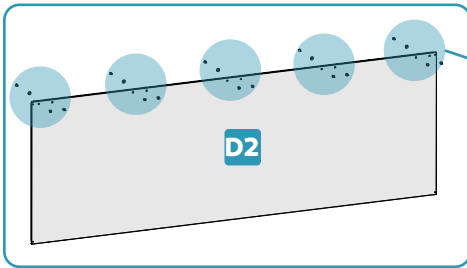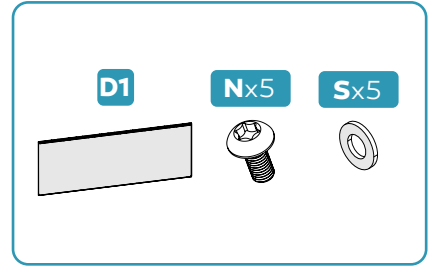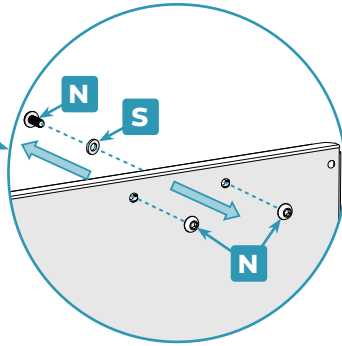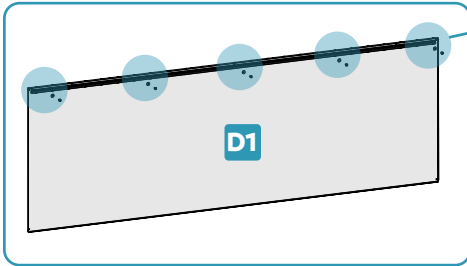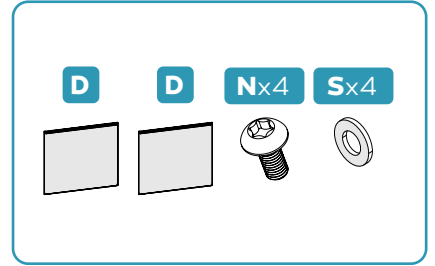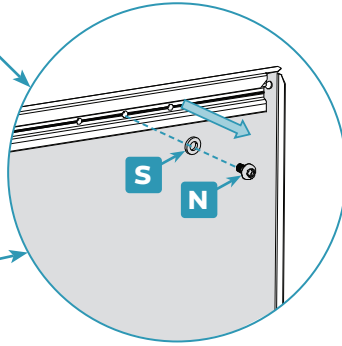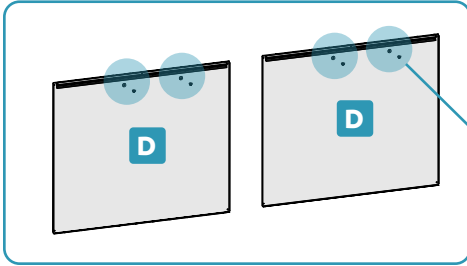

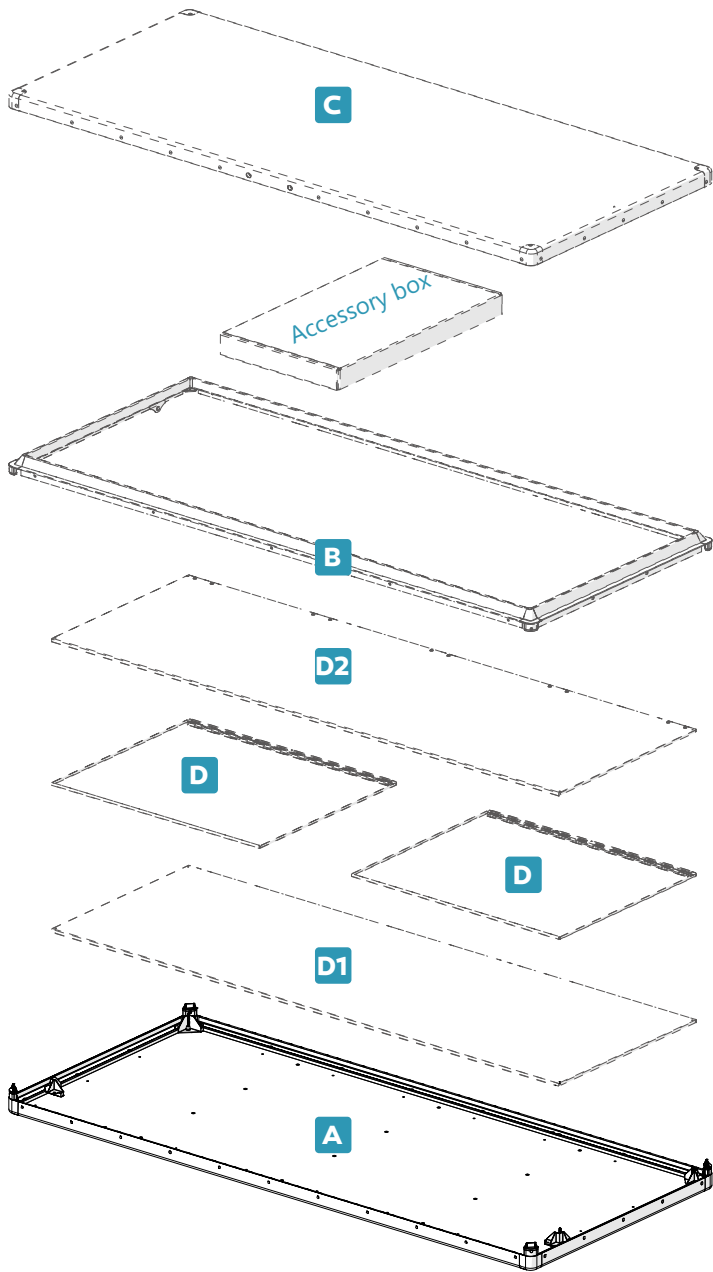

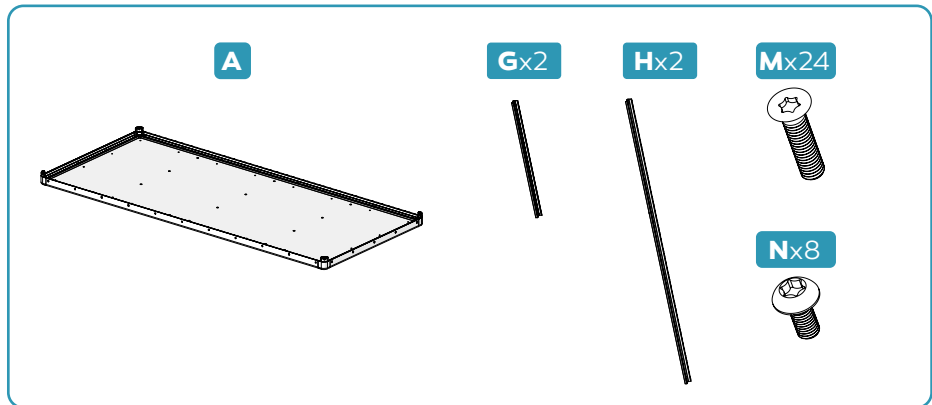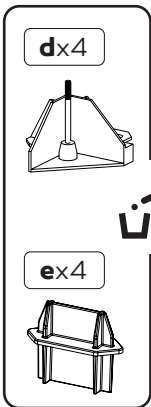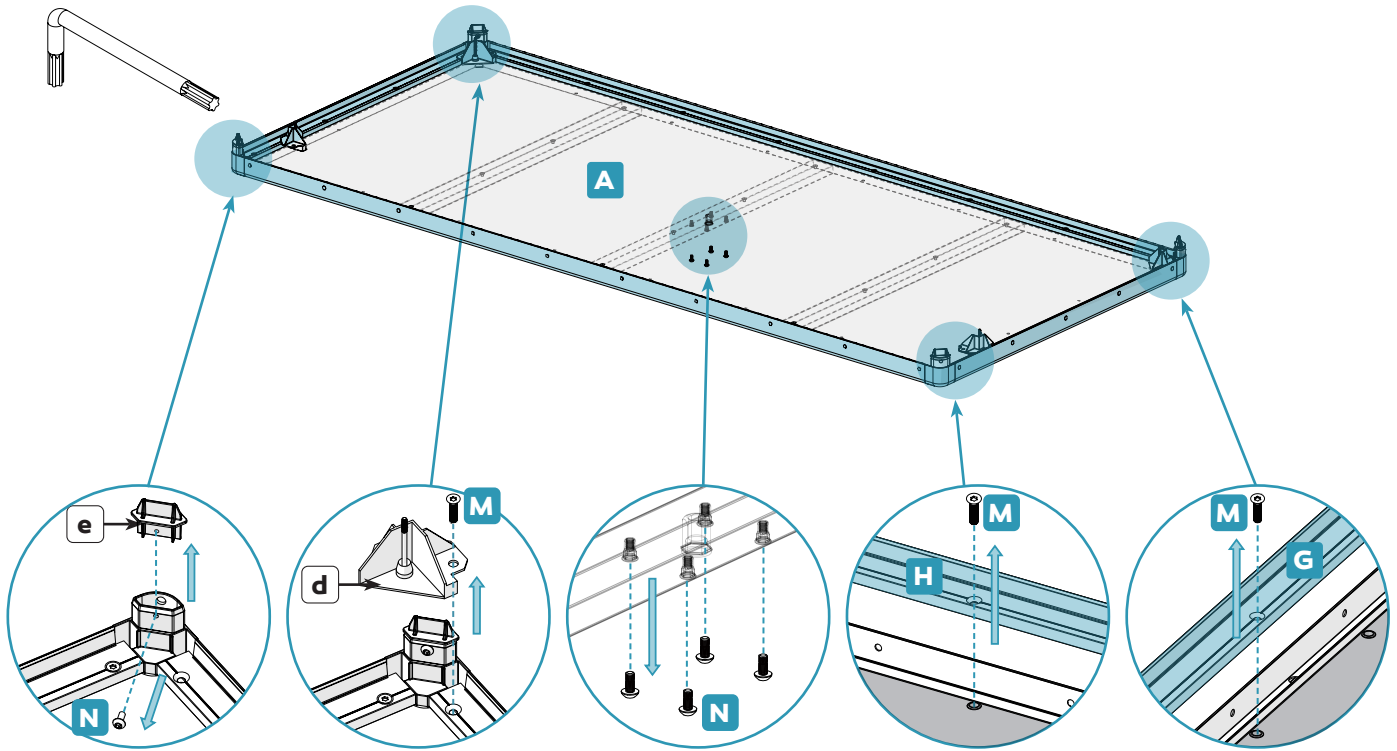


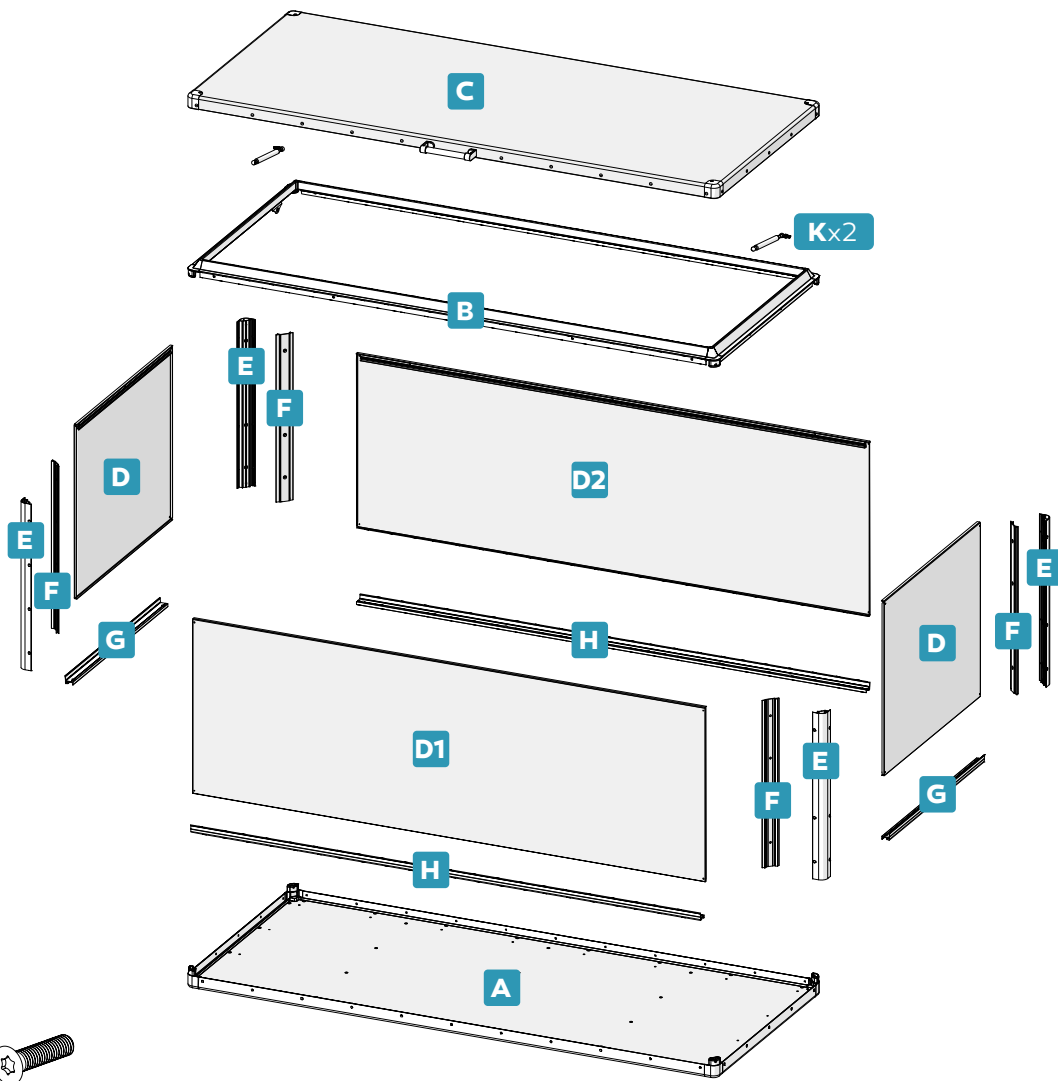


Tools required, not included.



 
A x1

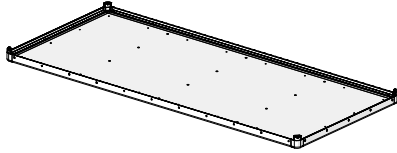


D1 x1

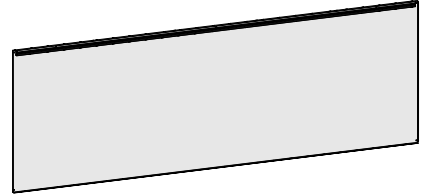 


B x1

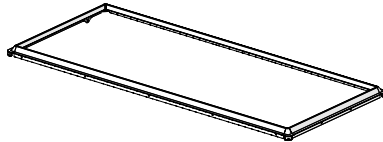 

D2 x1

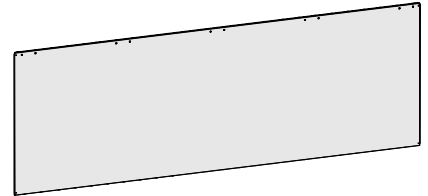 


C x1

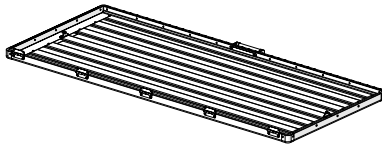 

G x2



 
D x2

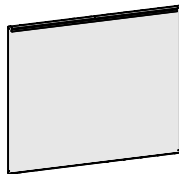


H x2



 
Accessory box




E x4

 

F x4

 

I x1

 


J x1



O x2



 K x2



L x4



 
L1 x5



L2 x1



M x40+3*



M6 x 25 mm

Flat head torx screw

 
N x38+2*



M5 x 12 mm

Dome head torx screw

P x1



T25

Torx Allen key

 
Q x1



T25

Torx bit

R x1



12 mm

Wrench

S x14



M5

 
 
 
 
Washer

*Extra spare parts included

ASSEMBLY


01

A x1  **L** x4  **L2** x1  **N** x4  or **L1** x5 

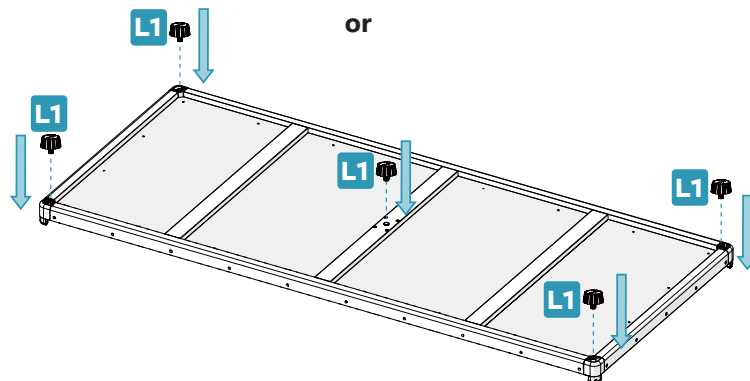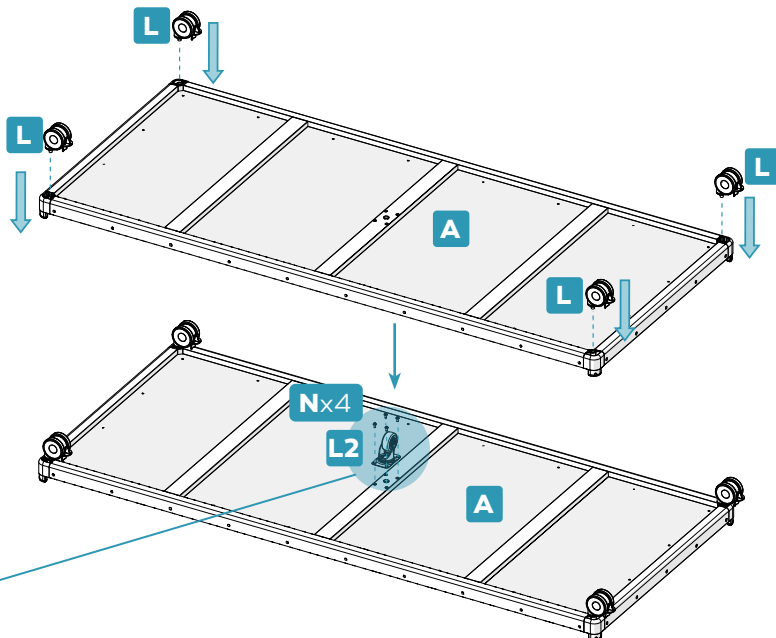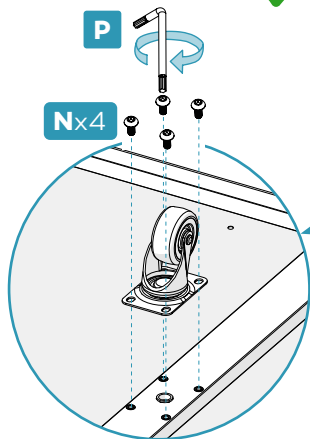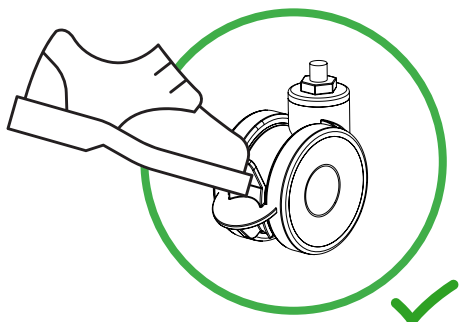

02

 
E x 4

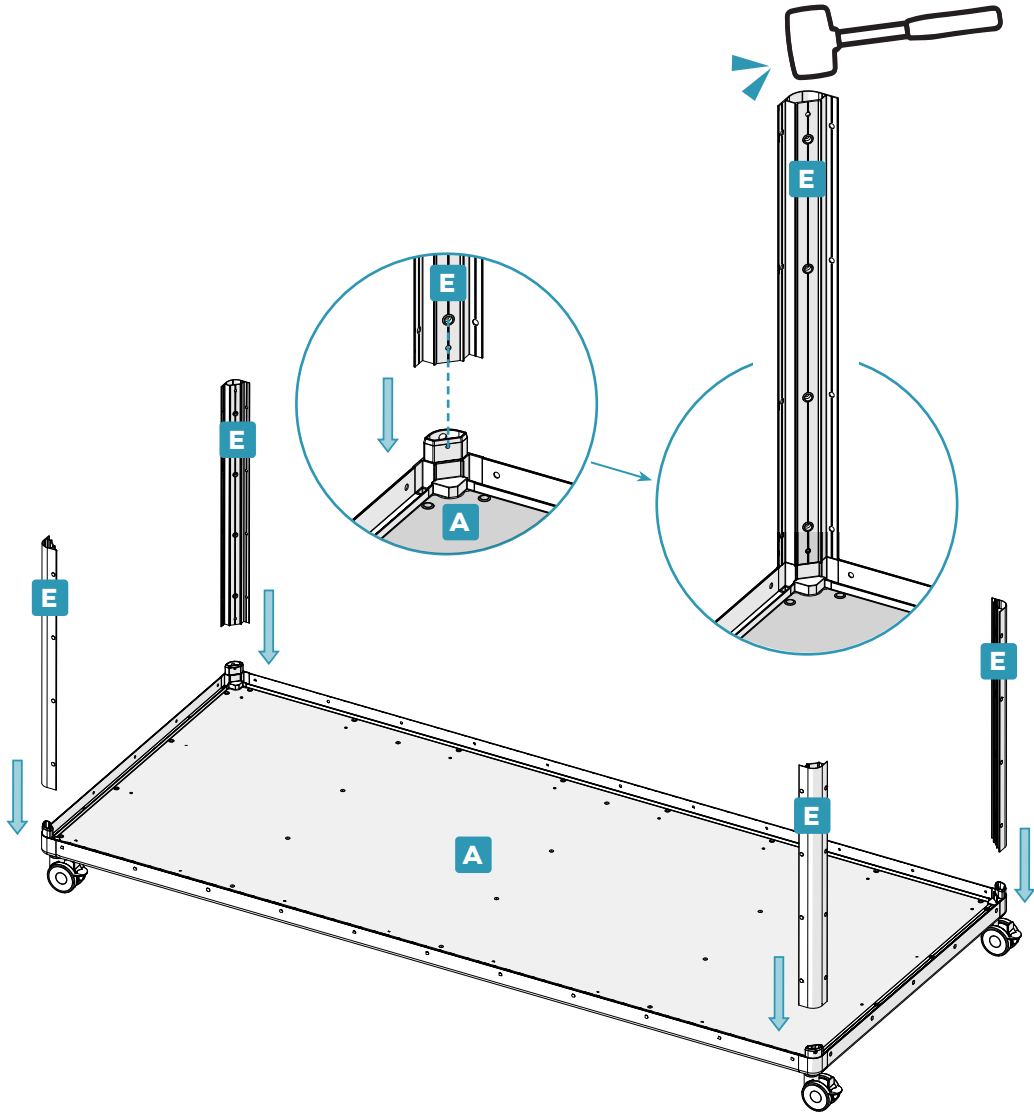

03


N x 4 

 P 

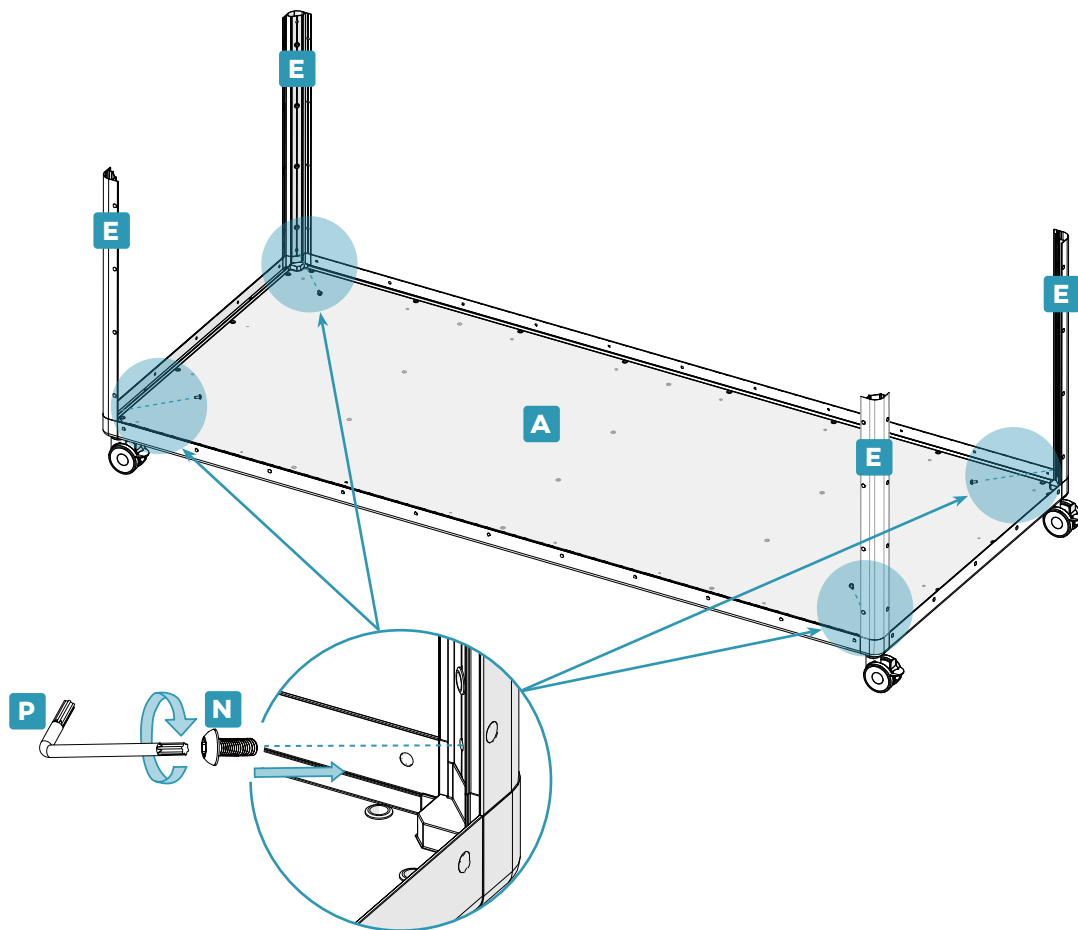



04

 D x1

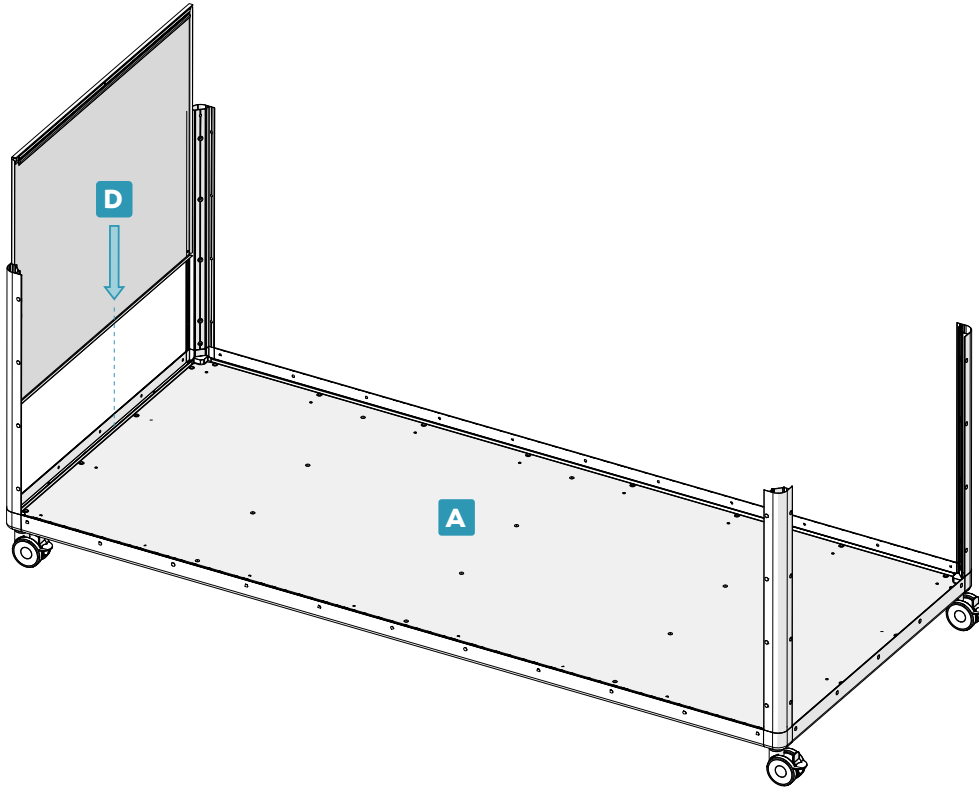

05

  D2 x1

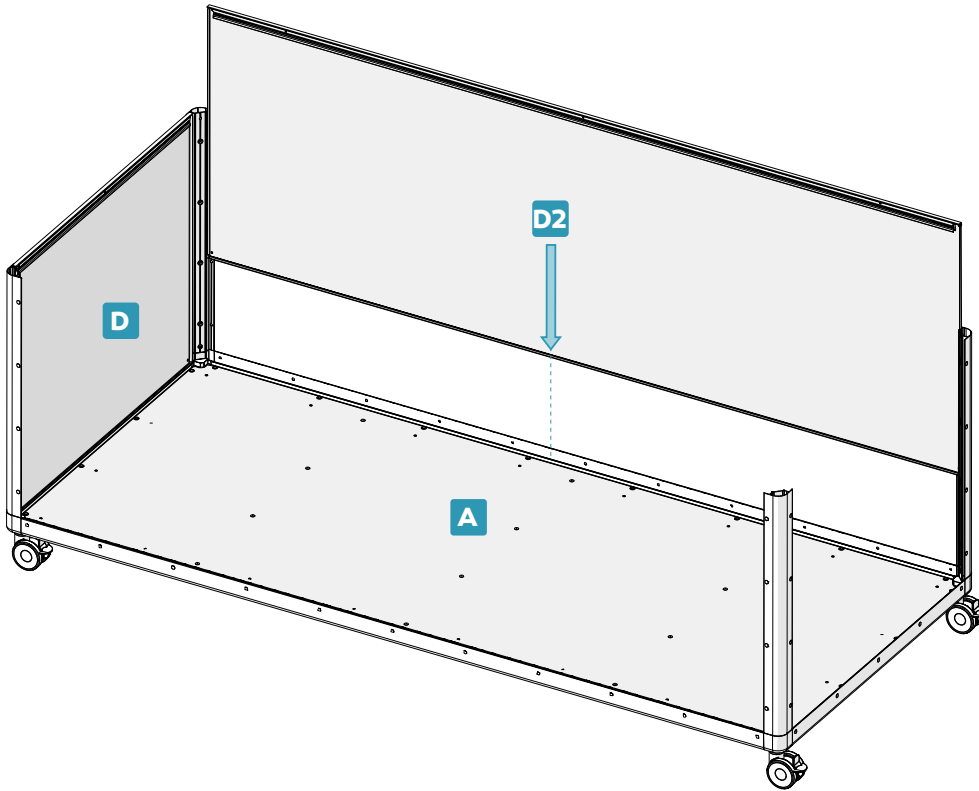


06


G x1



 H x1

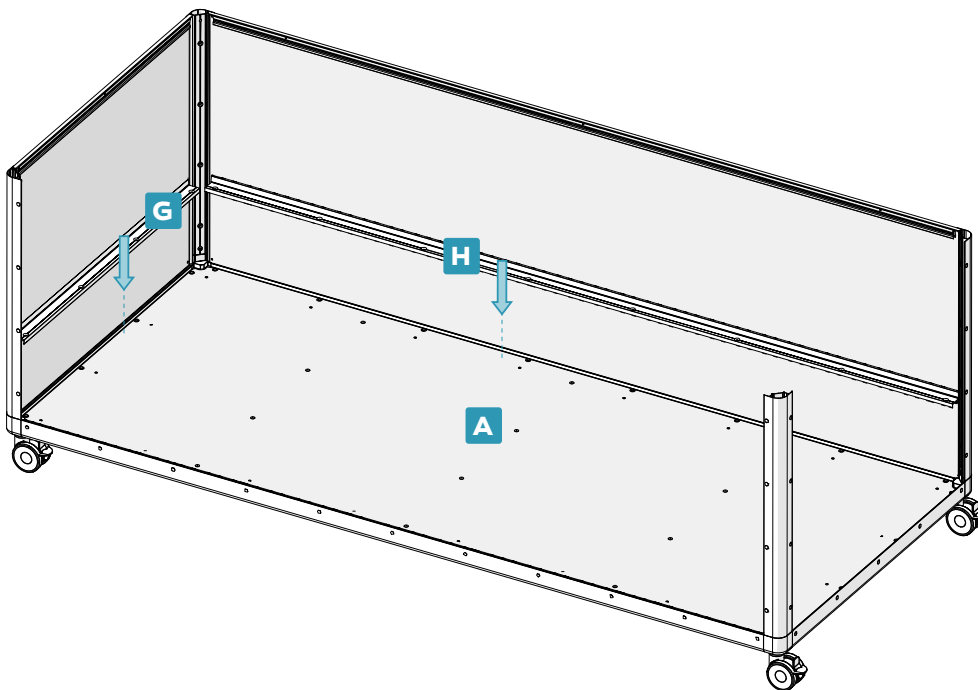


07

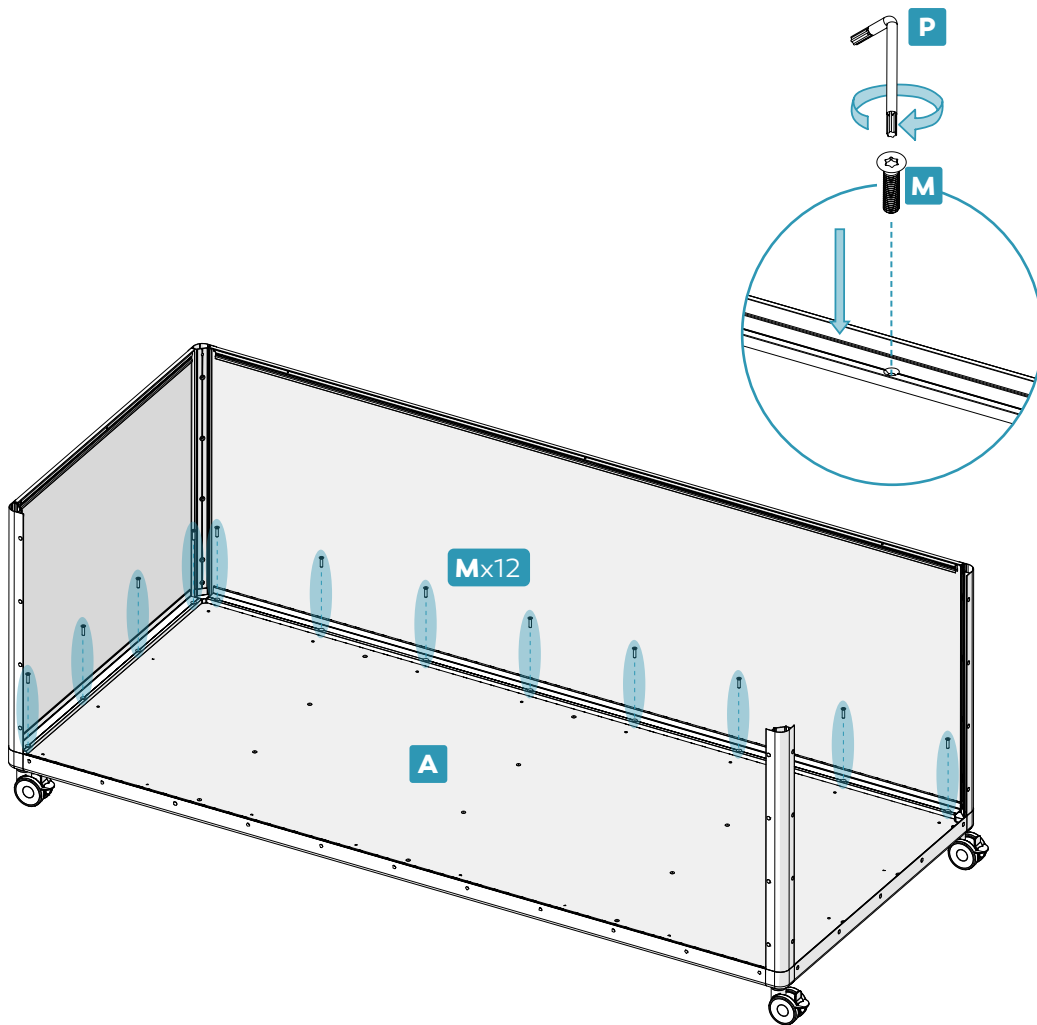 


08

 D x1

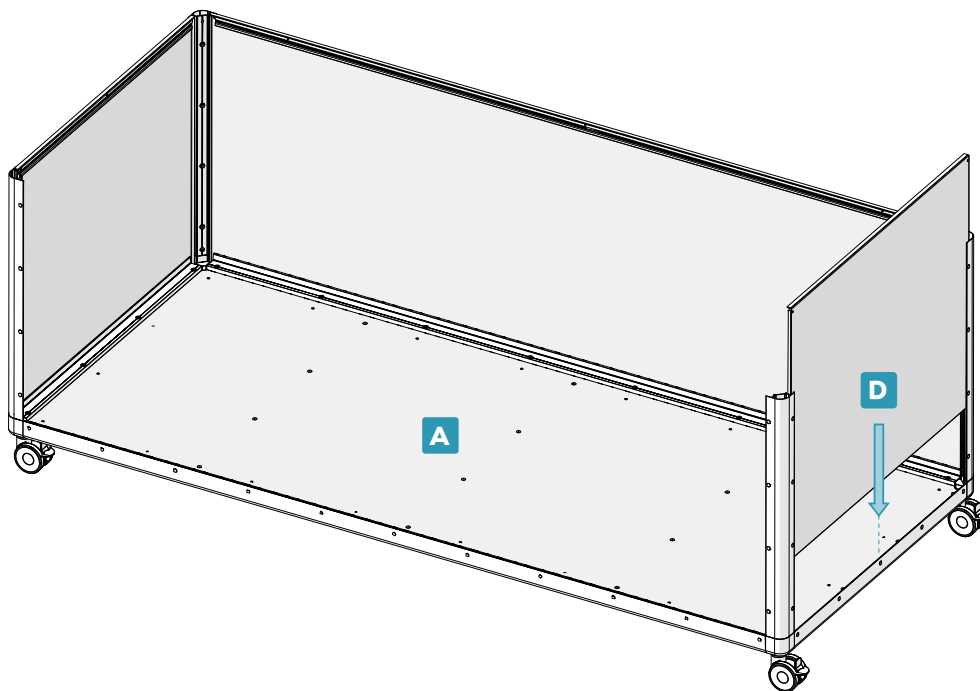

09

 D1 x1

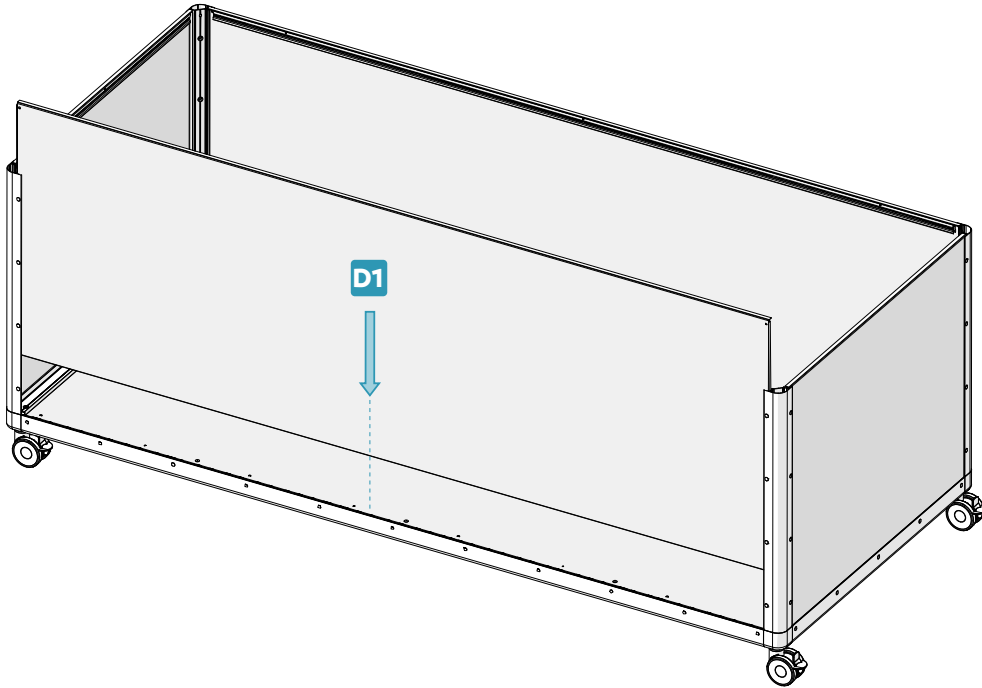


10




G x1



 
H x1

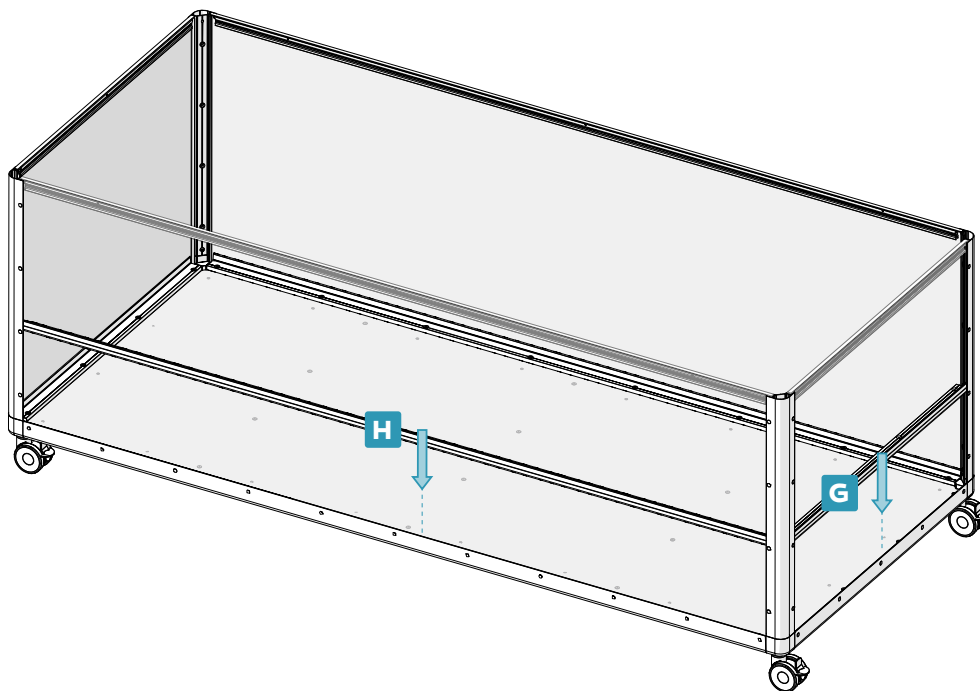

11

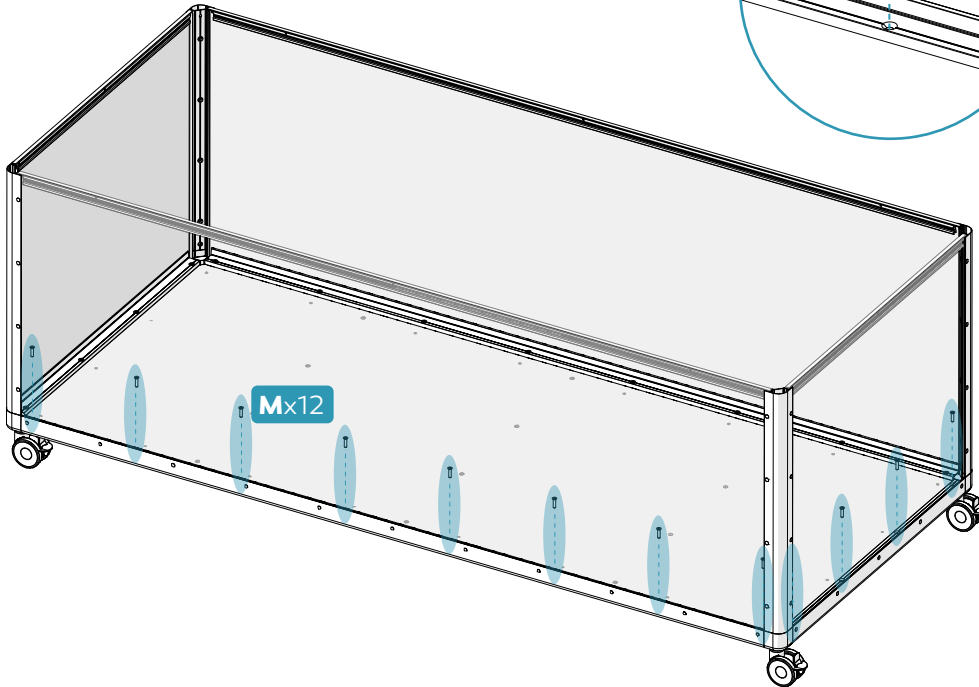 
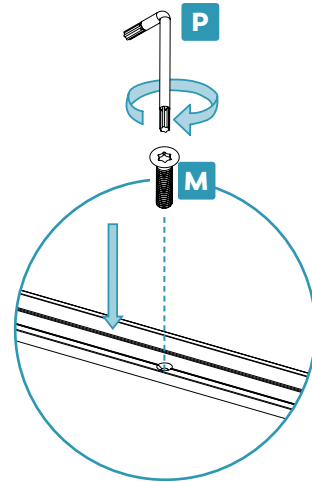 
 


12

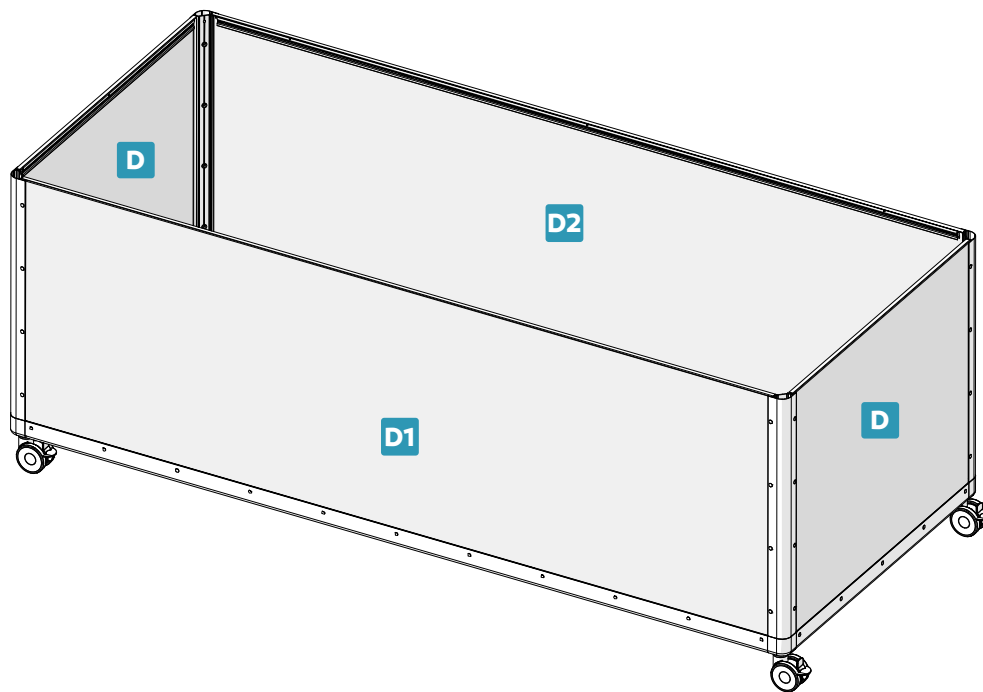 


13

   B x1

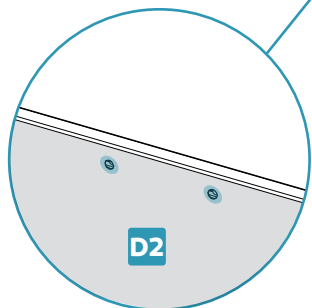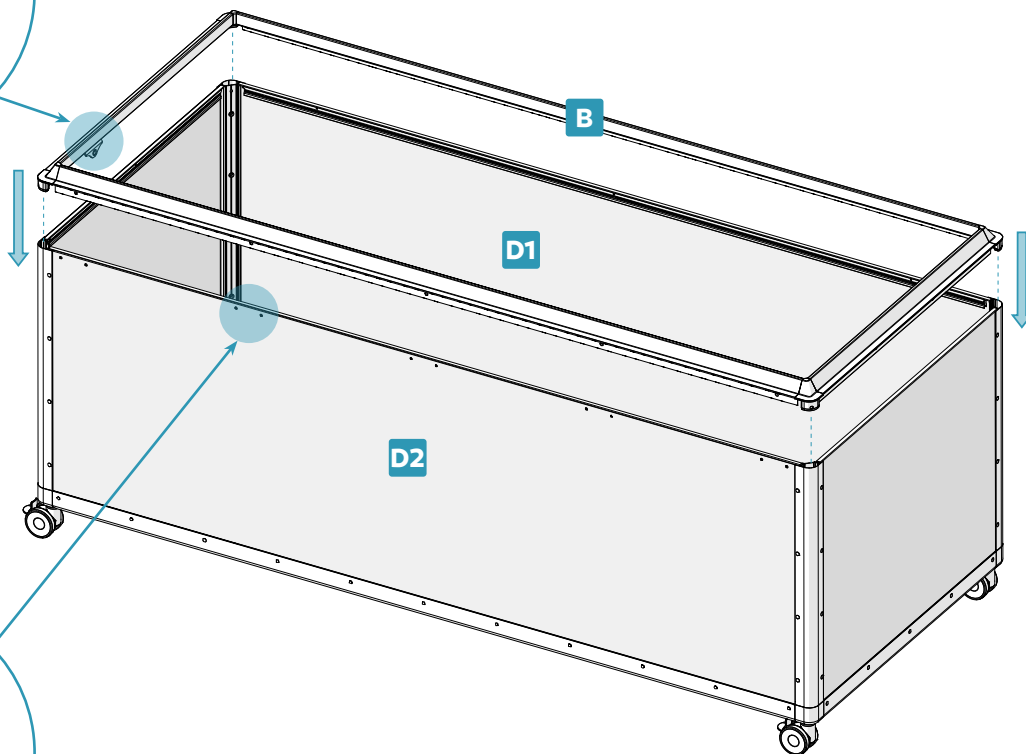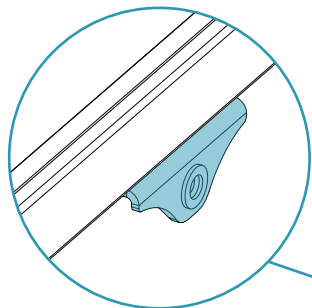


14

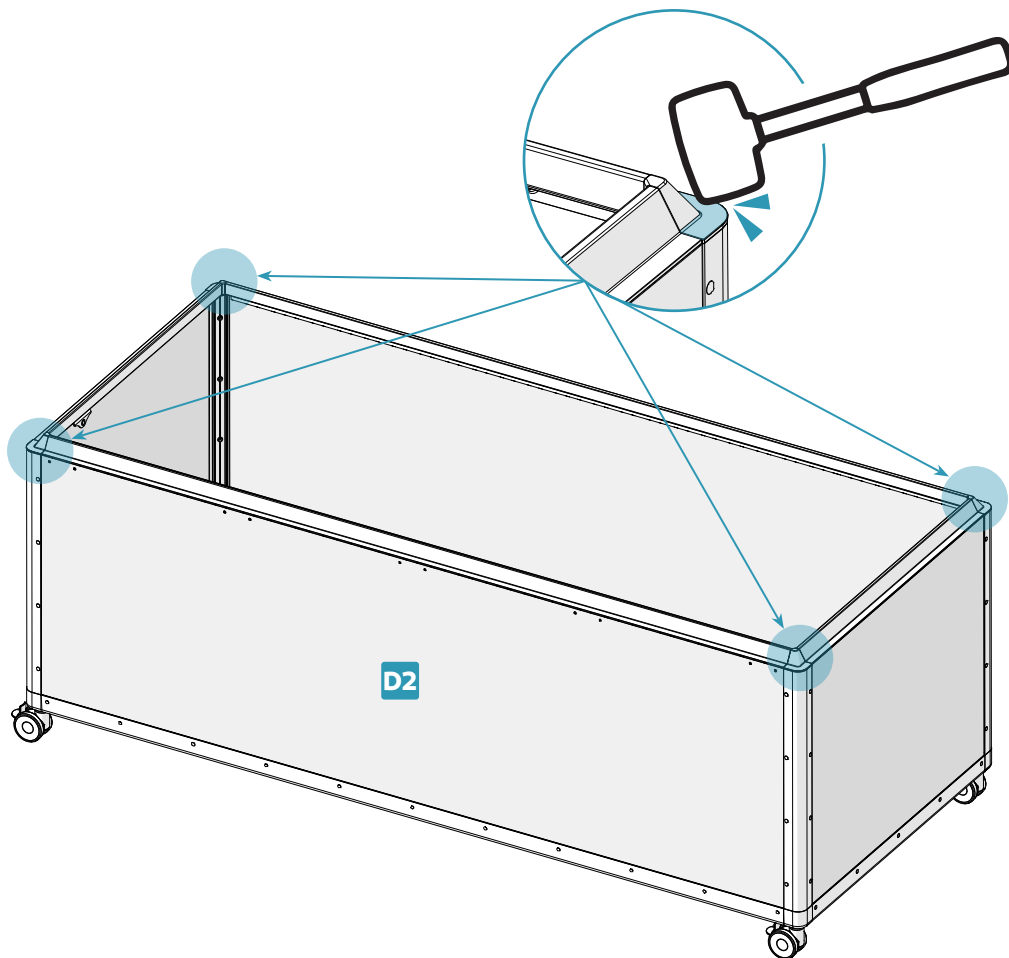 

15

N x4 

 P 

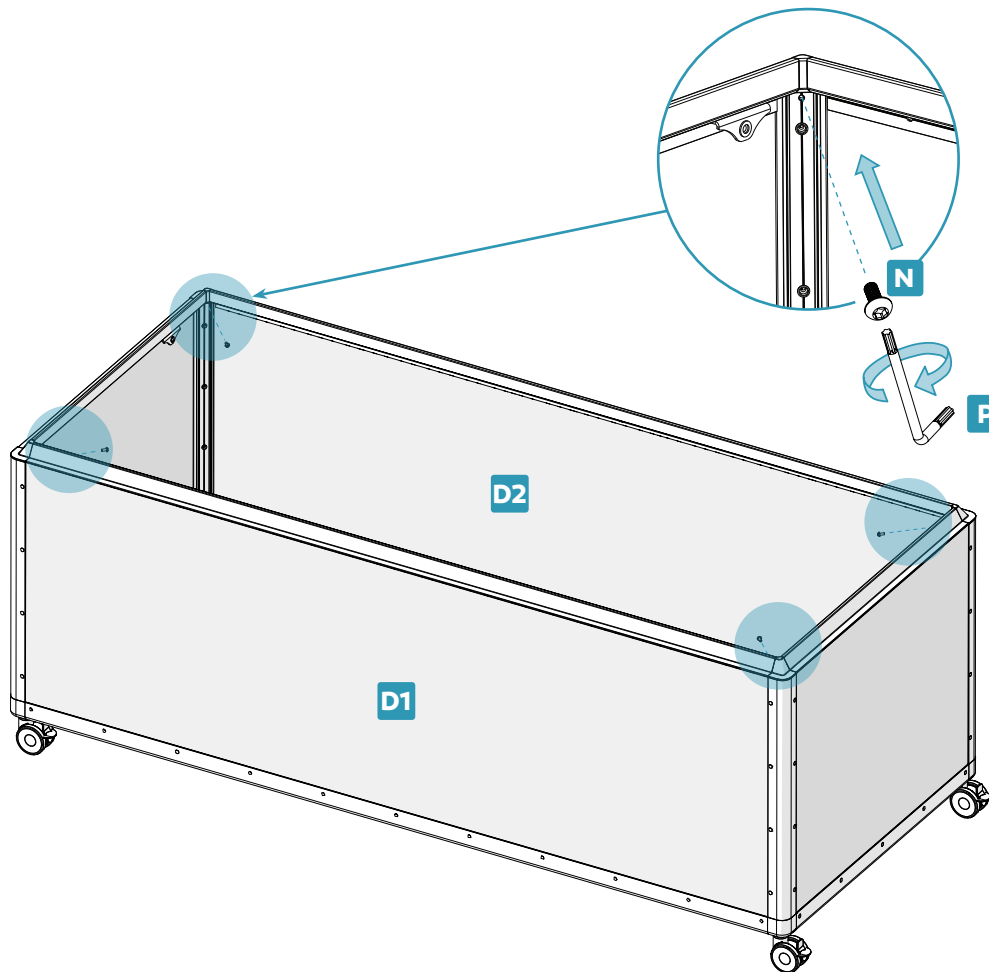


16

N x 14 


S x 14 

 P 

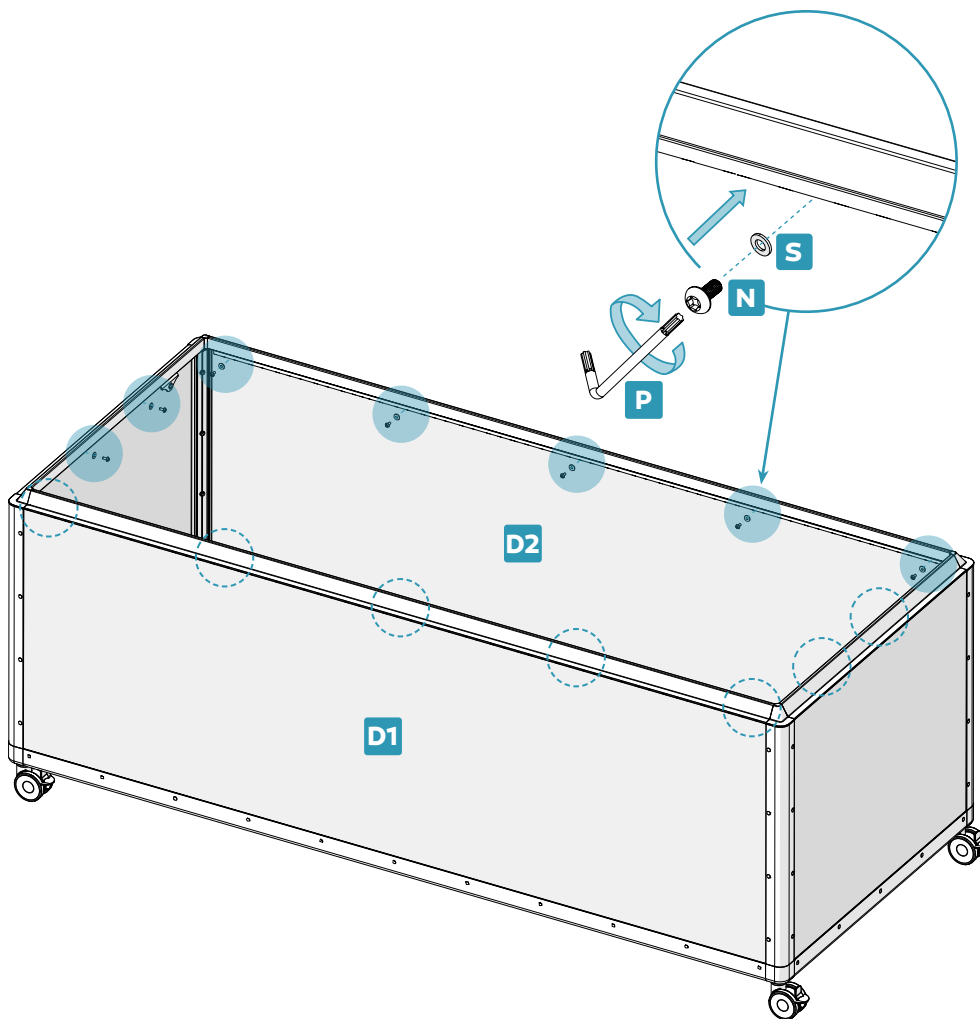

17

 F x 4 


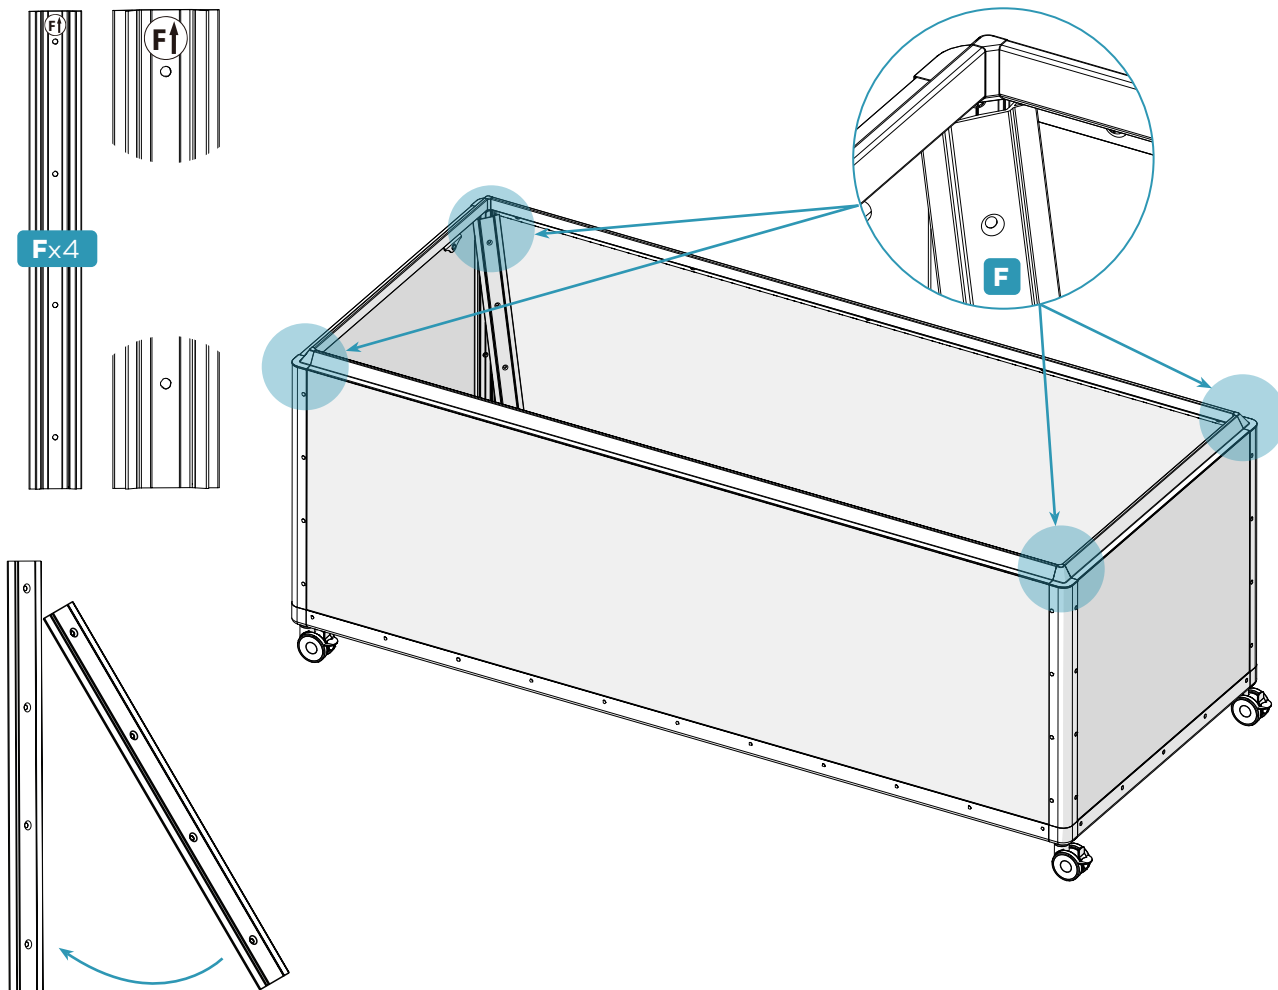


18





M x 16



  
P

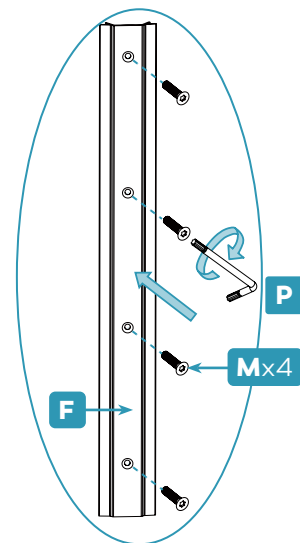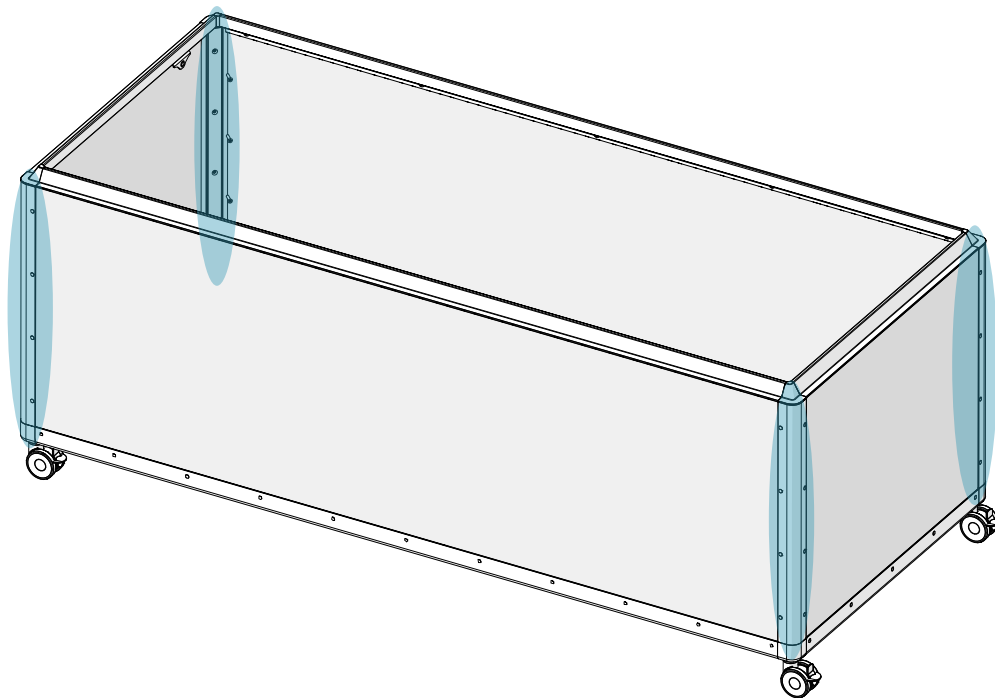

19

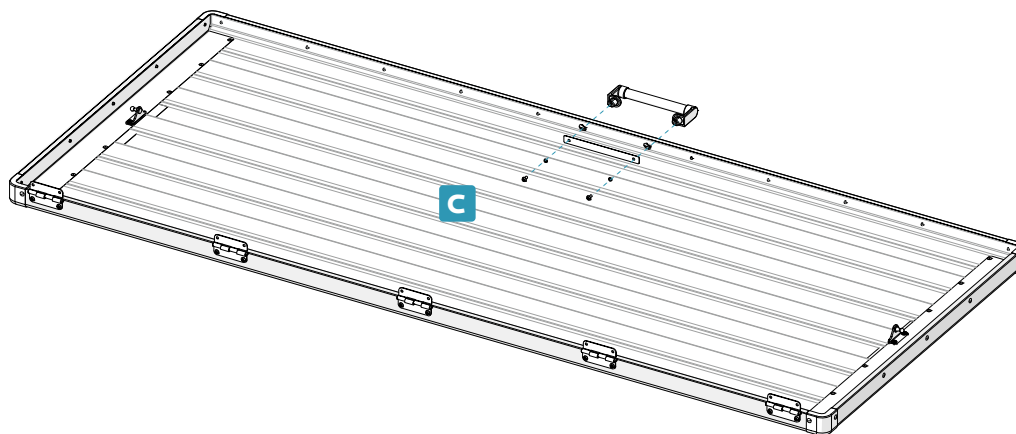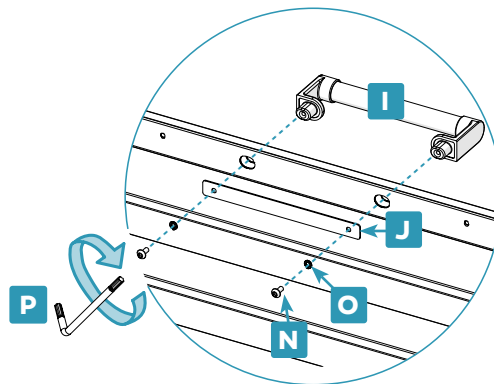    


20

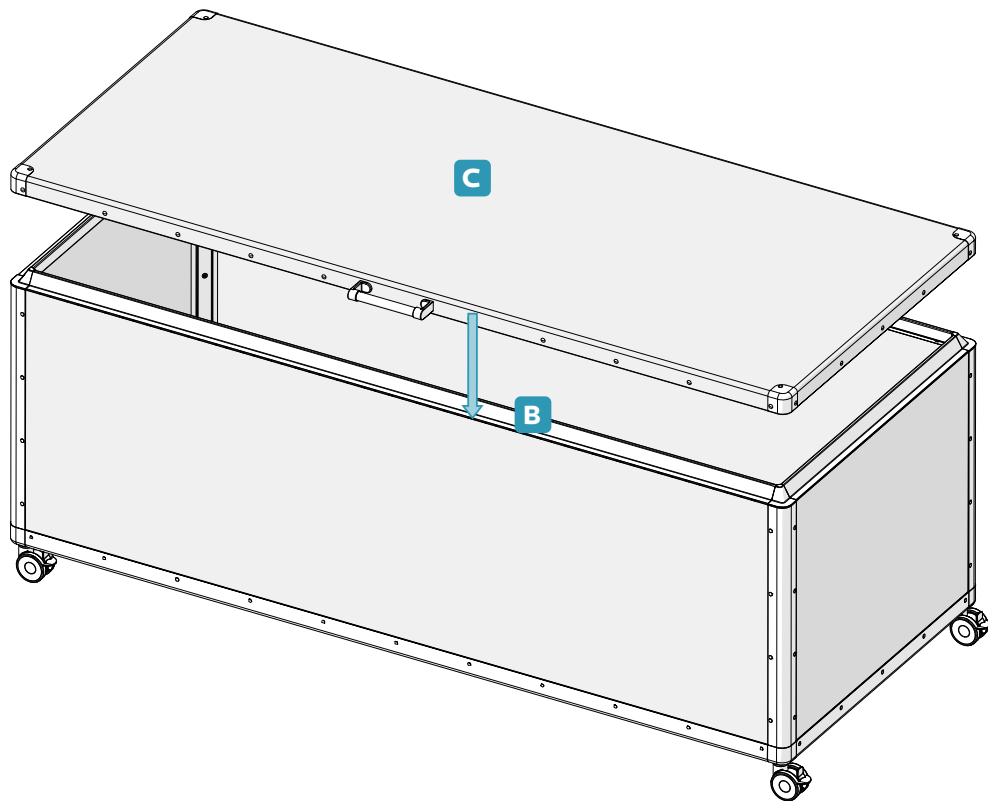 

21

N x4 

 
P 

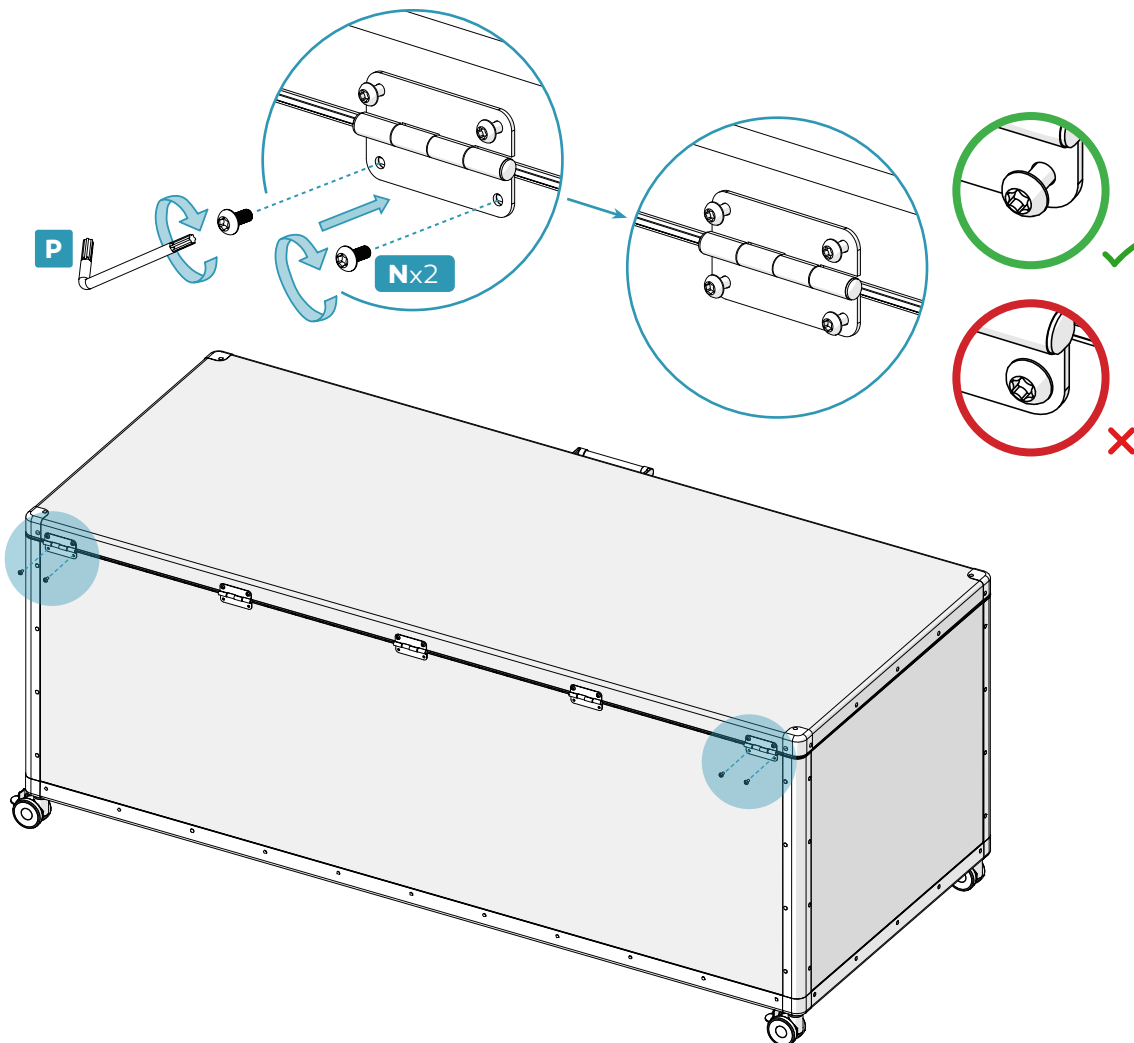

22


N x 6 

 P 

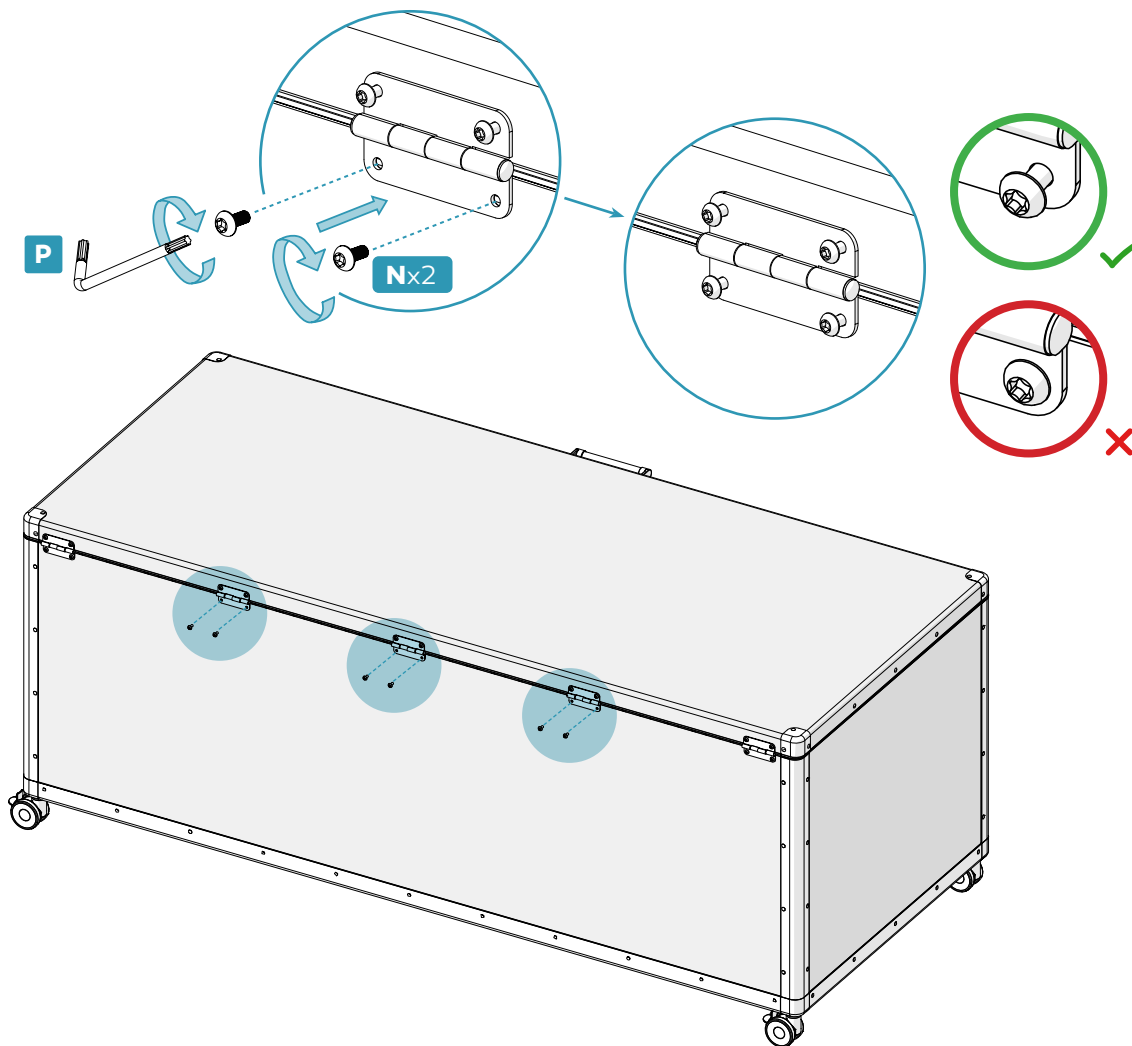


23

 
P

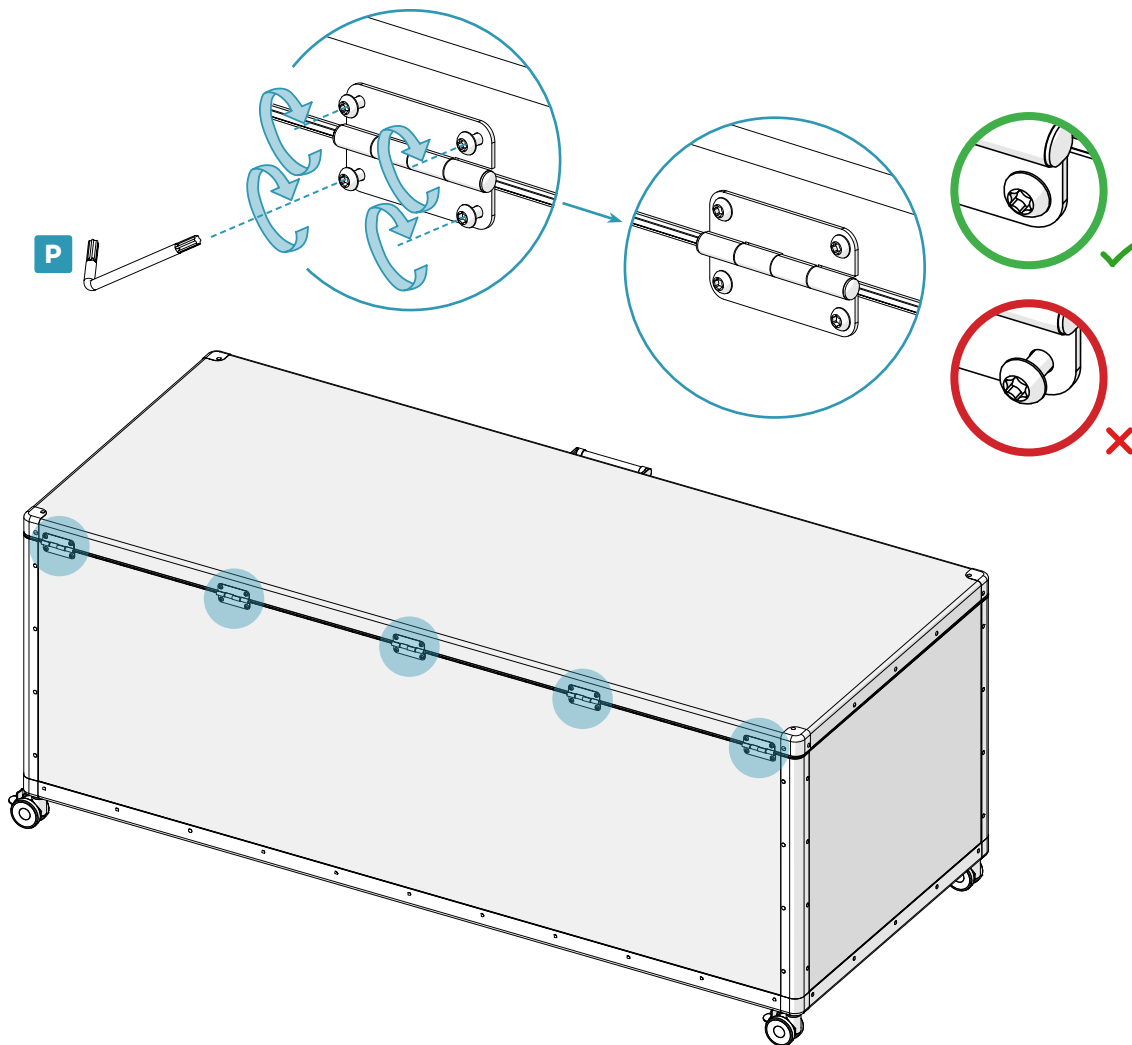


24

   K x2

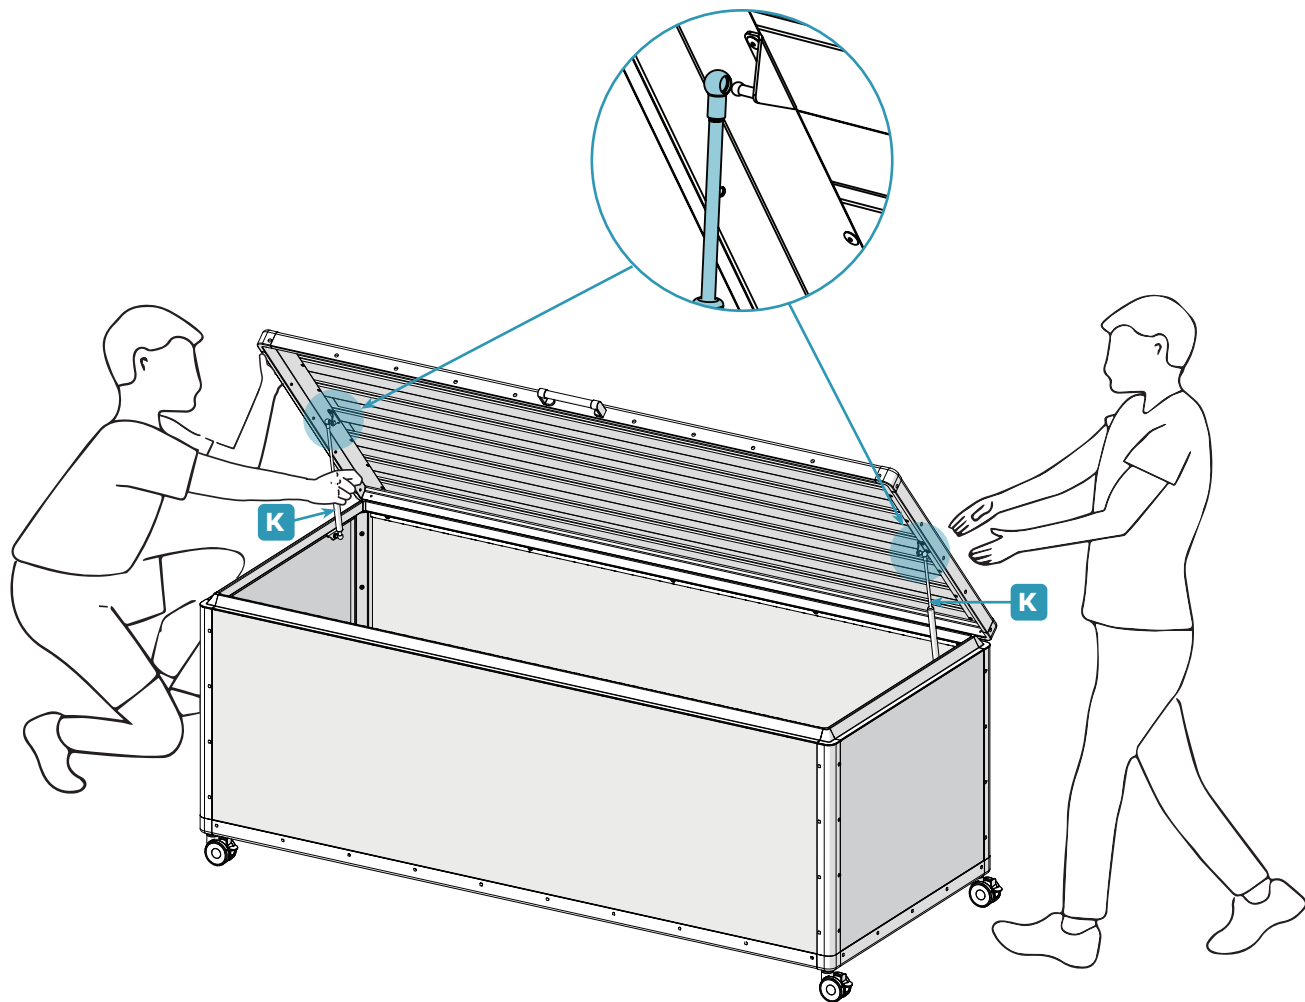


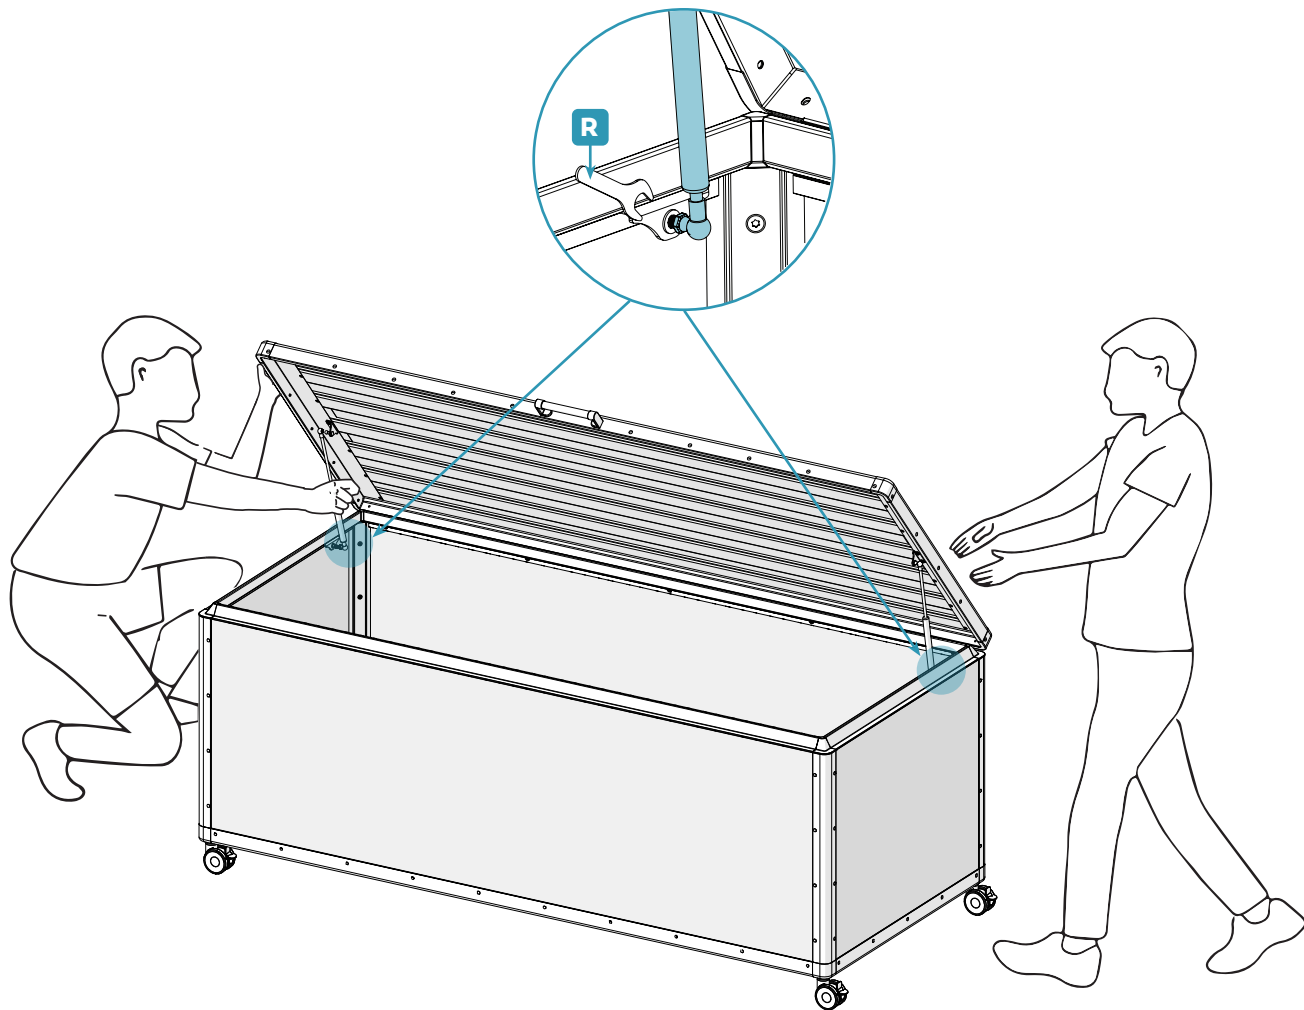

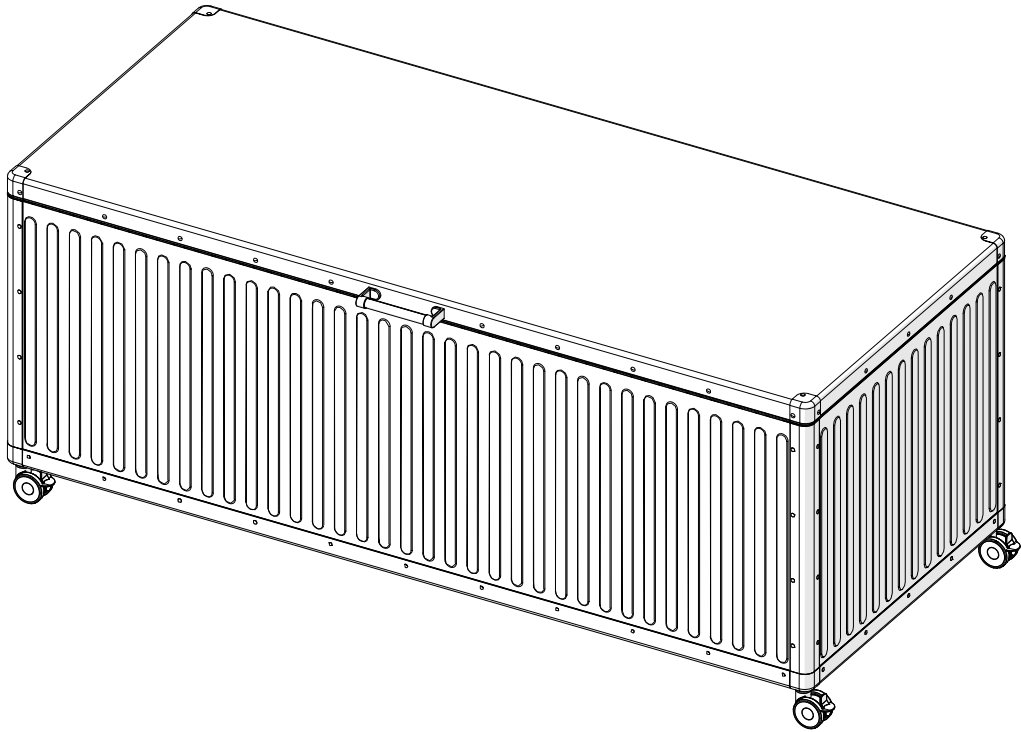

CARE & MAINTENANCE

 Regularly clean the deck box to prevent permanent stains on the metal.

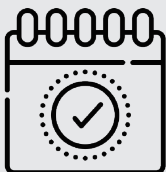

Regularly check that all bolts and fittings are secure. Tighten if needed.



Use only manufacturer-approved replacement parts.



✓ Approved

Use water/mild soap and air dry/wipe with a soft clean cloth to clean the deck box.



Do not use any bleach, ammonia, acidic, alkaline or other caustic cleaners.



WARRANTY & COMPLAINTS PROCEDURE

For terms and conditions of our limited warranty, please visit www.miradoroutdoor.com or contact your local Mirador sales representative.

Complaints procedure:

- The complaint must include an order number or transaction number. Goods without an order number or transaction number are not covered under the warranty.
- The complaint must include a detailed description of the defect, the name of the company which assembled the product if 3rd party was used and the date when the defect was discovered.
- At Sorara Outdoor Living USA Inc's discretion, customer must offer supplier the photos/videos of the issue/damaged parts. Otherwise, supplier reserves the right to refuse replacement parts or credit.
- Please save a copy of your purchase receipt.

Phone

+1 (877)-506-4777

Operation hours: Monday - Friday: 6:30 am - 4:30 pm, Saturday – Sunday: 8:30 am – 4:30 pm, PST.

Language: English and Spanish

E-mail

support@miradoroutdoor.com

Operation hours: We are available 24 hours a day. Please allow up to 24 hours for a response.

Language: English, Spanish and Canadian French

Online

miradoroutdoor.com

Operation hours: Monday - Friday: 5:30 am - 2:00 pm, Saturday – Sunday: 8:30 am – 4:30 pm, PST.

Language: English, Spanish and Canadian French

Note: Our team is available to assist you during these hours. If you have any inquiries or require support outside of these hours, please leave a voicemail, send an email, or use our online contact form. We will get back to you promptly during the next available support hours. Thank you for choosing Mirador Outdoor!

2134

more to
enjoy

FOLLOW US ON
WWW.MIRADOROUTDOOR.COM

 @miradoroutdoor  @MiradorOutdoor
 @miradoroutdoor  @miradoroutdoor

