 
 
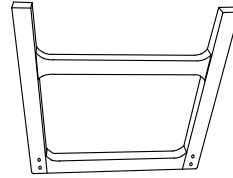 


# ASSEMBLY INSTRUCTIONS

## DINING TABLE

- |                    |                |                    |                                 |
|--------------------|----------------|--------------------|---------------------------------|
| <b>A</b> Table Top | <b>B</b> Apron | <b>C</b> Leg Frame | <b>D</b> JCBC Bolt<br>M6 x 55mm |
|--------------------|----------------|--------------------|---------------------------------|



 
- |                                   |                                   |                                   |                                  |
|-----------------------------------|-----------------------------------|-----------------------------------|----------------------------------|
| <b>E</b> Lock Washer<br>M6 x 12mm | <b>F</b> Flat Washer<br>M6 x 13mm | <b>G</b> Flat Washer<br>M8 x 18mm | <b>H</b> Wood Dowel<br>M8 x 30mm |
|-----------------------------------|-----------------------------------|-----------------------------------|----------------------------------|



- |                          |        |        |       |       |
|--------------------------|--------|--------|-------|-------|
| <b>I</b> Allen Key<br>M4 | 18 pcs | 10 pcs | 8 pcs | 4 pcs |
|--------------------------|--------|--------|-------|-------|




1 pc

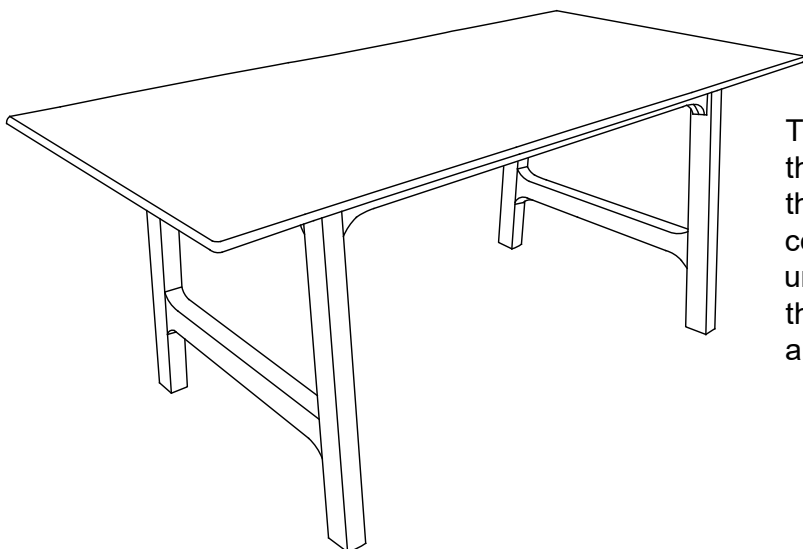


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 1** Place the Table Top (A) on a protective surface. Insert Wood Dowel (H) into the Apron (B). Then, attach the Apron (B) to the Table Top (A) using JCBC Bolt (D), Lock Washer (E) and Flat Washer (F) with the Allen Key (I).  
\*\*Do not fully tighten the bolts until all bolts are attached.

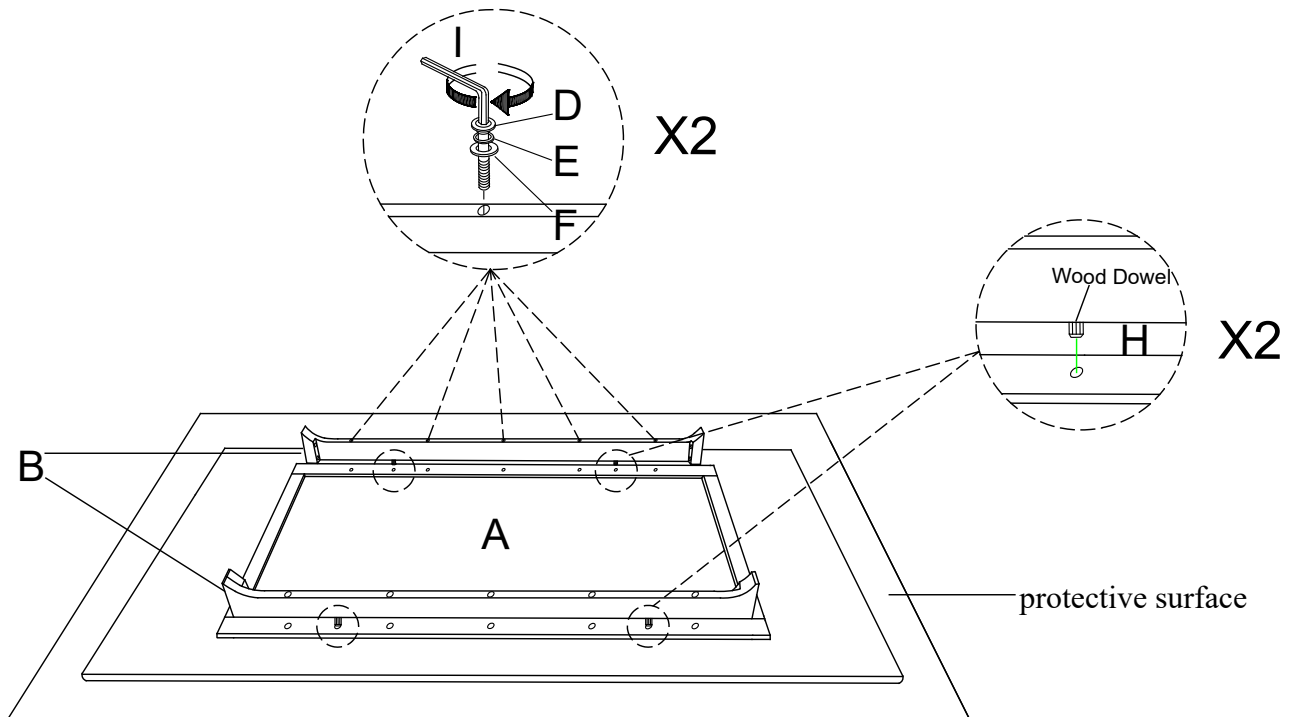

 - 2** Attach the Leg Frame (C) to the Apron (B) using JCBC Bolt (D), Lock Washer (E) and Flat Washer (G) with the Allen Key (I).  
\*\*Do not fully tighten the bolts until all bolts are attached.

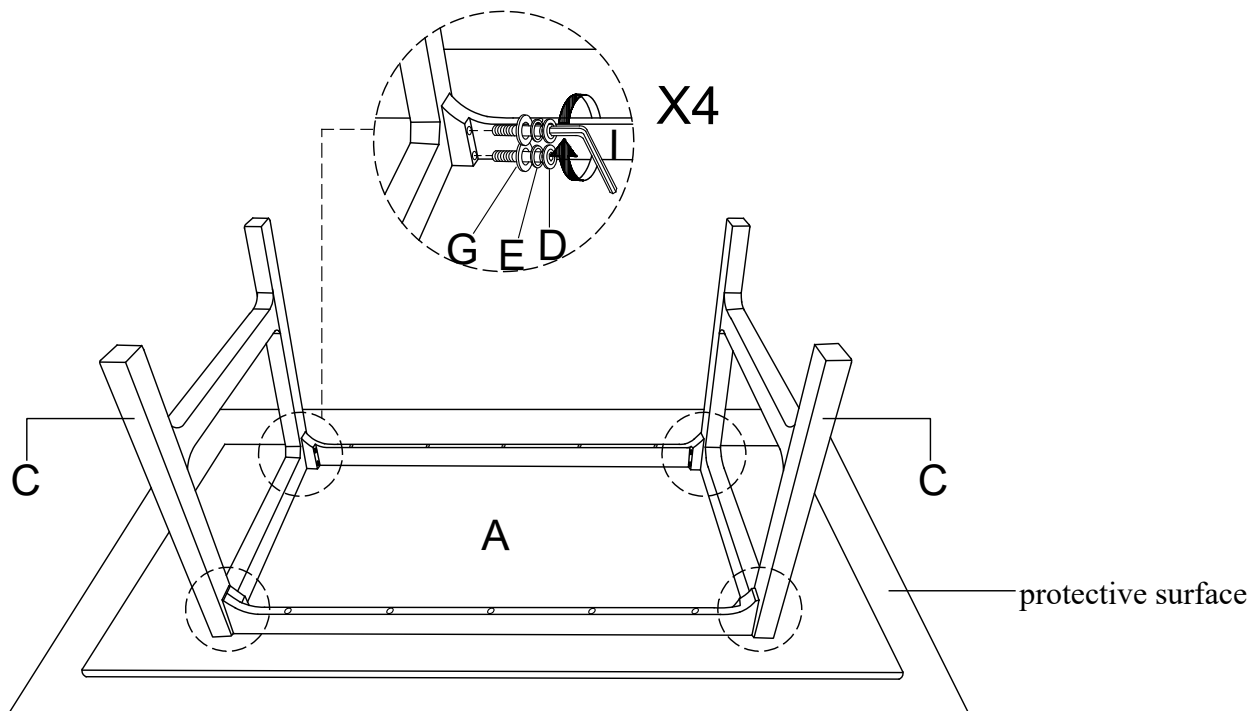


### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTIONS

## CHAIR

**A** Back Frame

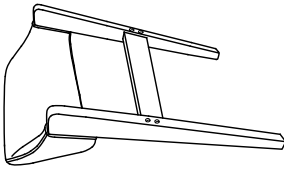


1 pc

**B** Cushion Seat




1 pc

 **C** Front Rail




1 pc

**D** Side Leg-LSF

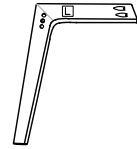


1 pc

**E** Side Leg-RSF

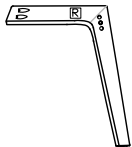

1 pc

 **F** JCBC Bolt  
M6 x 55mm



7 pcs

**G** Lock Washer  
M6 x 12mm



7 pcs

**H** Flat Washer  
M6 x 13mm



7 pcs

**I** Wood Screw  
M5 x 32mm



2 pcs

**J** Allen Key  
M4




1 pc

**K** Straight Allen Key  
M4



1 pc

(It is an alternative hardware to the Allen Key (J) for fastening JCBC Bolts, along with using a power drill.)

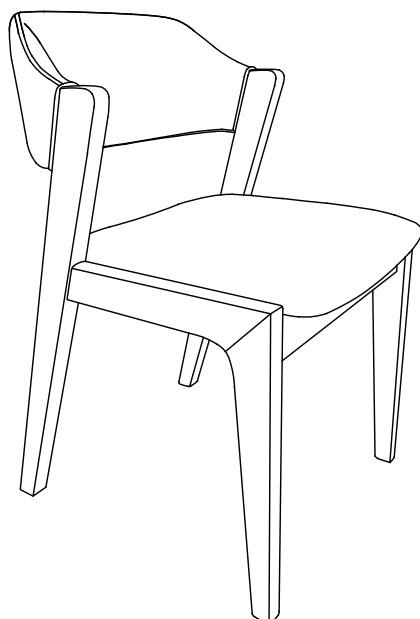


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1** Attach the Front Rail (C) to the Side Leg-LSF & RSF (D & E) using JCBC Bolt (F), Lock Washer (G) and Flat Washer (H) with the Allen Key (J).


\*\*Do not fully tighten the bolts until all bolts are attached.

Install in the direction of the arrow pointing downwards.


Take the Allen Key and turn the bolts until the legs are secured. **DO NOT TIGHTEN THE BOLTS COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

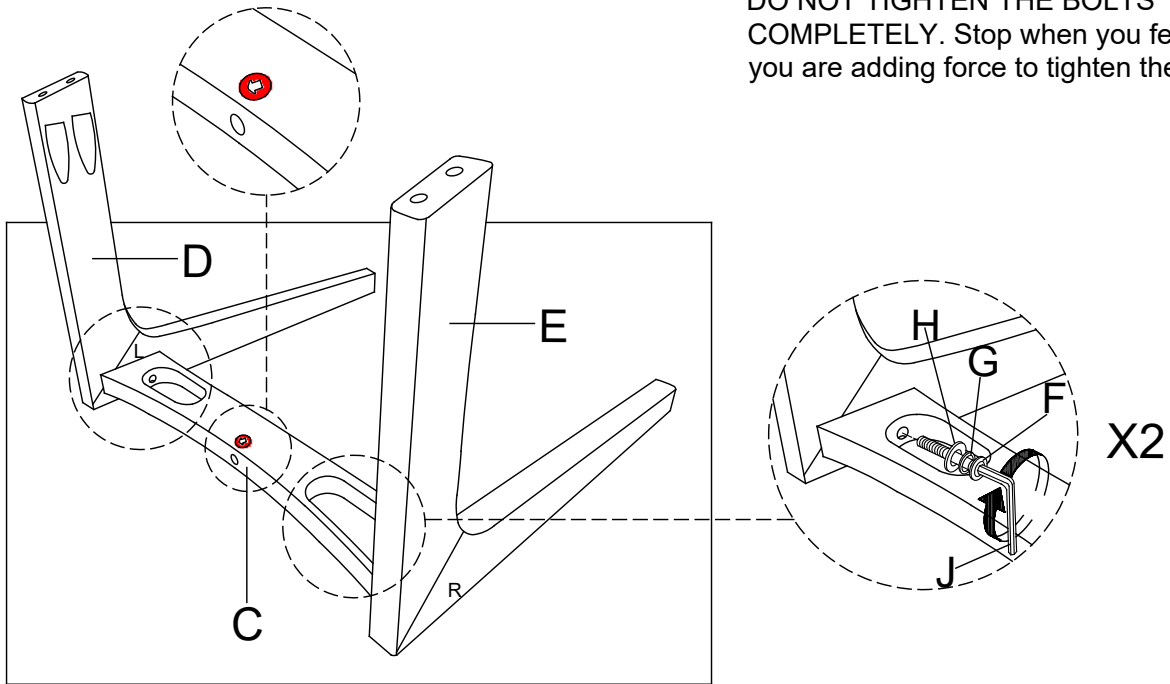


**2** Place the Back Frame (A) on a protective surface. Then, attach the Side Leg-LSF & RSF (D & E) to the Back Frame (A) using JCBC Bolt (F), Lock Washer (G) and Flat Washer (H) with the Allen Key (J).

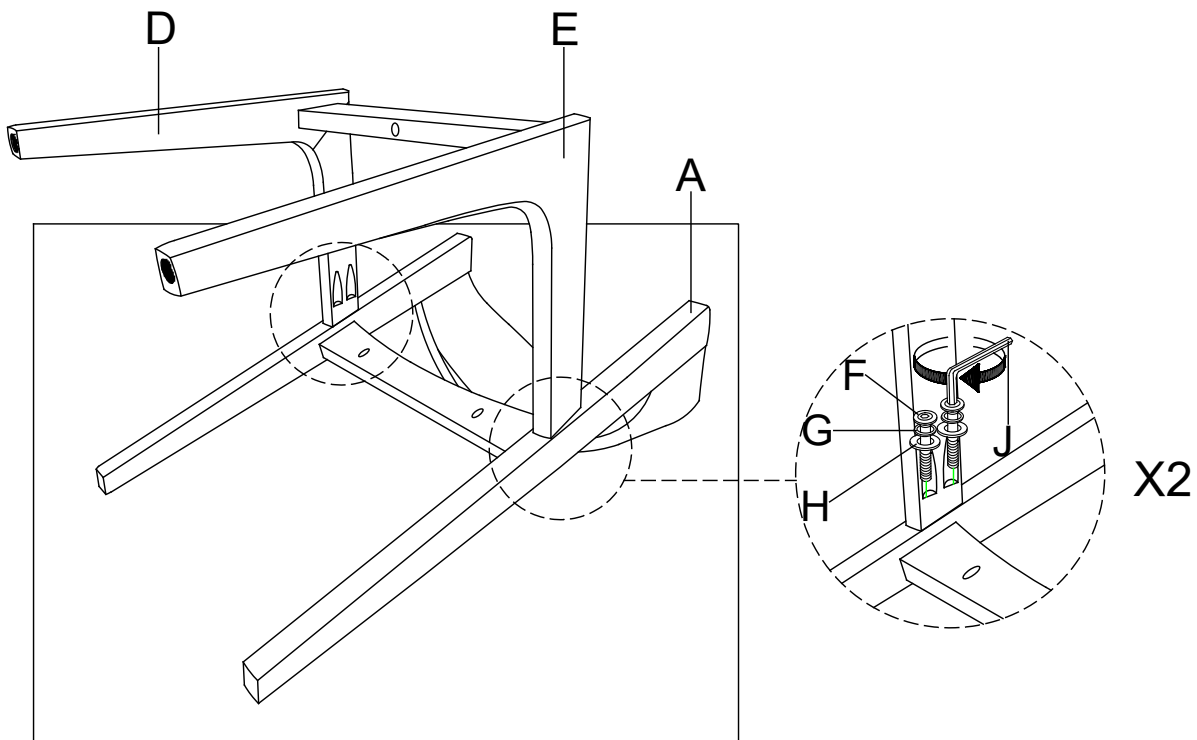

- 3** Position the assembled unit on an elevated surface and attach the Cushion (B) to it using JCBC Bolt (F), Lock Washer (G), and Flat Washer (H) with the Allen Key (J).

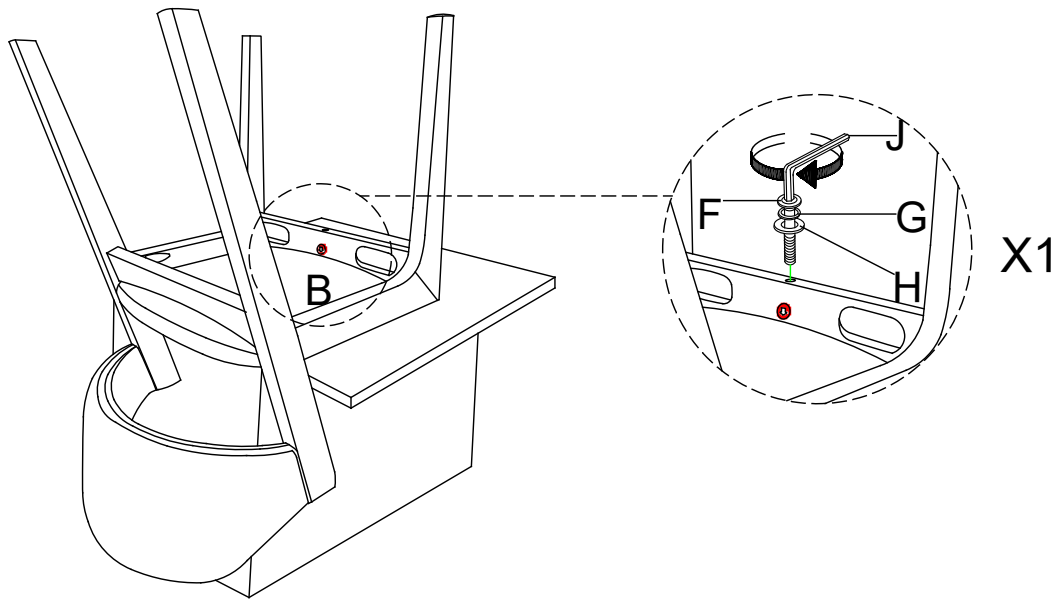

- 4** Attach the Back Frame (A) to the Cushion (B) using Wood Screw (I) with a screwdriver (not provided).

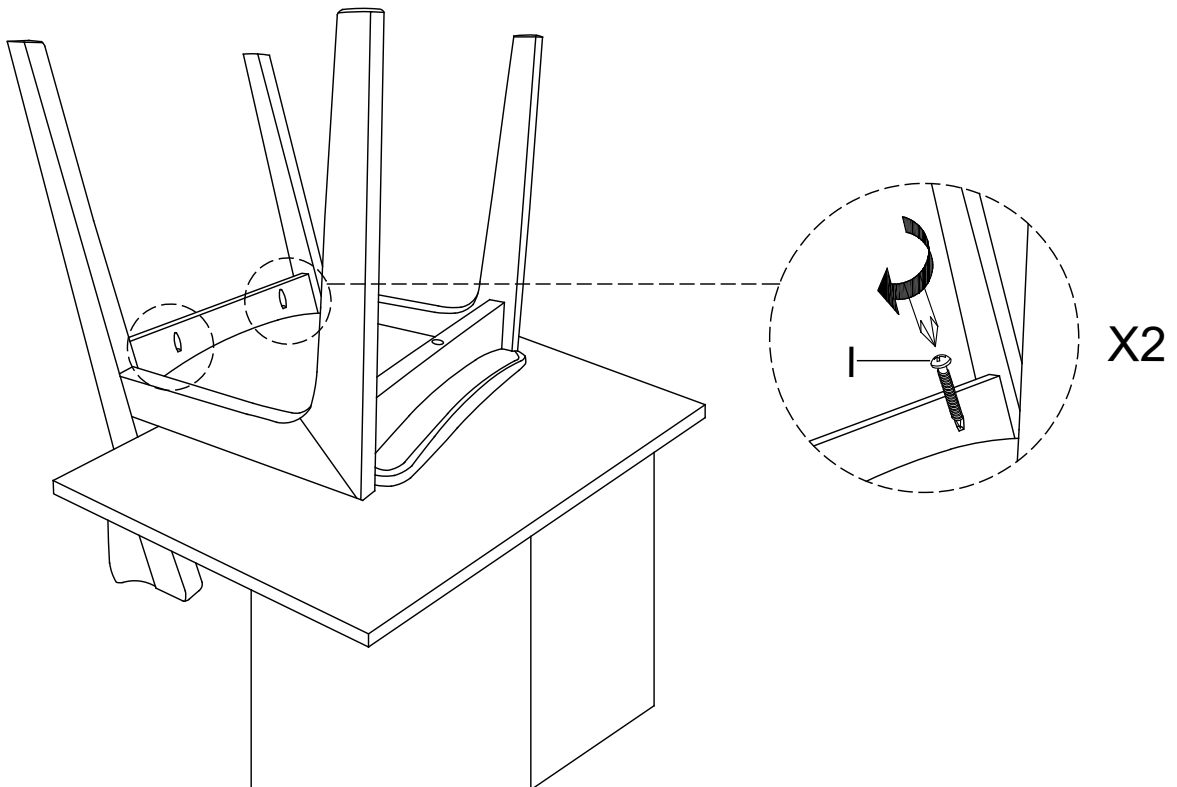


**5**

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, adjust the levelers or apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Helpful Tip:

Have someone sit in the chair while tightening the bolts from underneath.

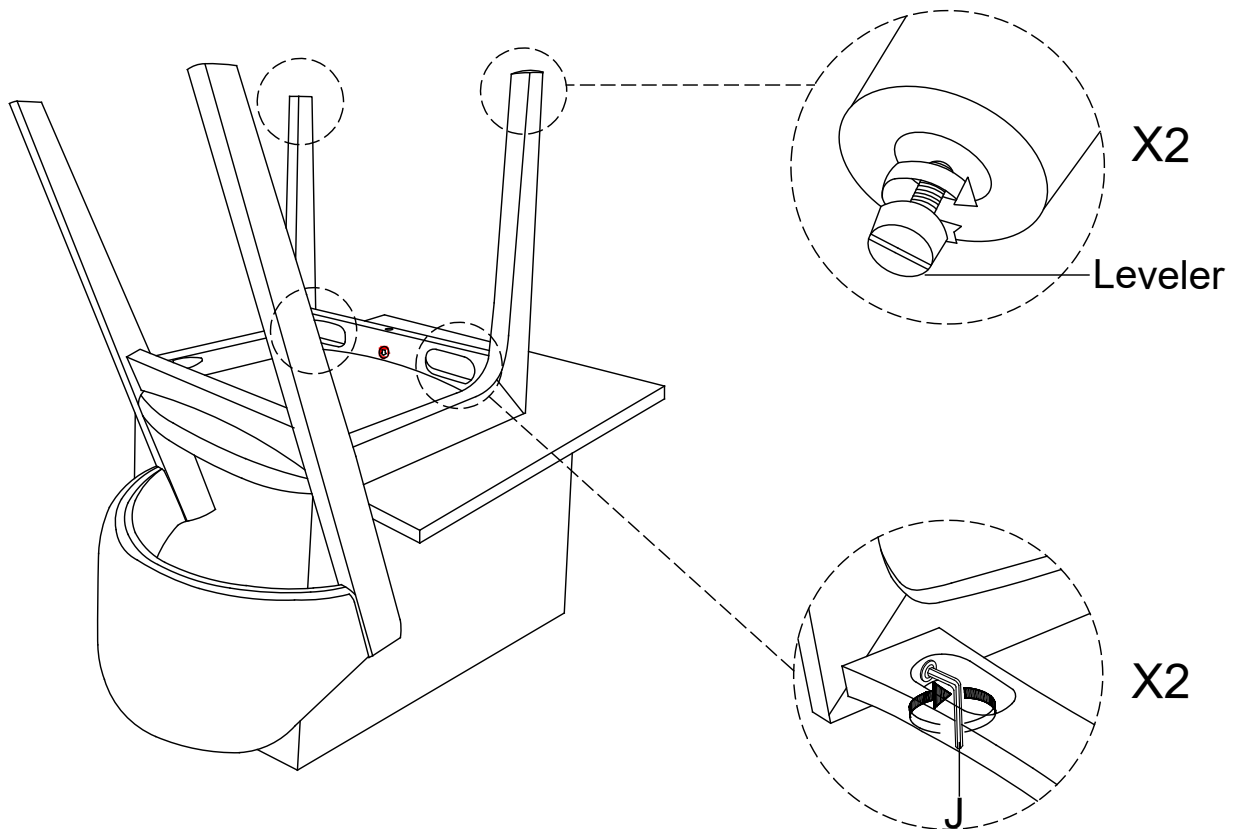

---




### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.


# ASSEMBLY INSTRUCTIONS

## BENCH

**A** Cushion Seat      **B** Top Frame      **C** Leg Frame      **D** Cross Bar

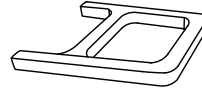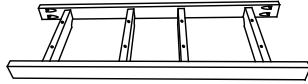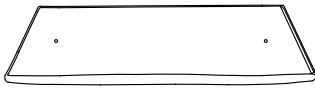

 **E** 1 pc JCBC Bolt M6 x 55mm      **F** 1 pc Lock Washer M8 x 12mm      **G** 2 pcs Flat Washer M8 x 13mm      **H** 1 pc Flat Washer M8 x 18mm




**I** 10 pcs Wood Screw M5 x 38mm      **J** 10 pcs Wood Dowel M8 x 30mm      **K** 8 pcs Allen Key M4      2 pcs



8 pcs


4 pcs

4 pcs

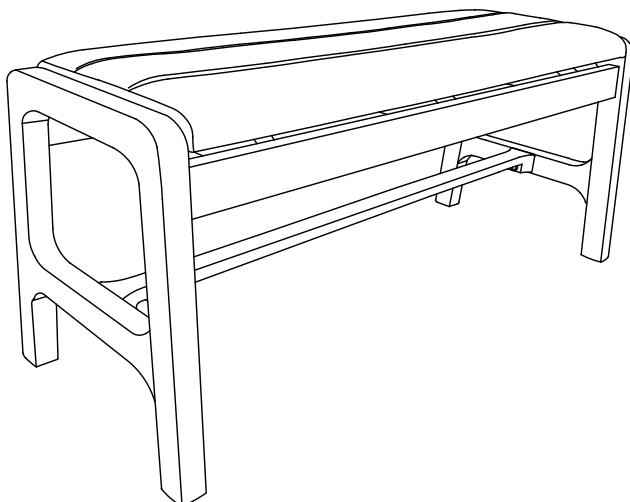


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1** Insert Wood Dowel (J) into the Top Frame (B) and the Cross Bar (D).

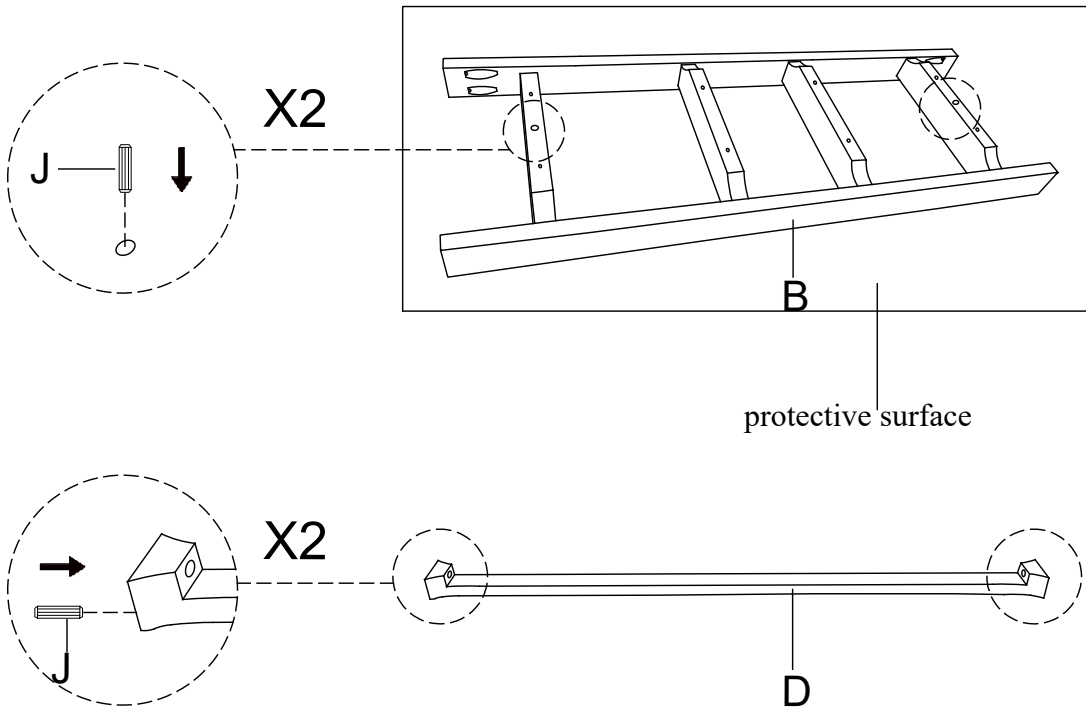


**2** Place the Top Frame (B) on a protective surface. Attach the Leg Frame (C) to the Top Frame (B) using JCBC Bolt (E), Lock Washer (F) and Flat Washer (G) with Allen Key (K). Then attach the Cross Bar (D) to the Leg Frame (C) using JCBC Bolt (E), Lock Washer (F) and Flat Washer (H) with the Allen Key (K).

Take the Allen Key and turn the bolts until the frames and bar are secured. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

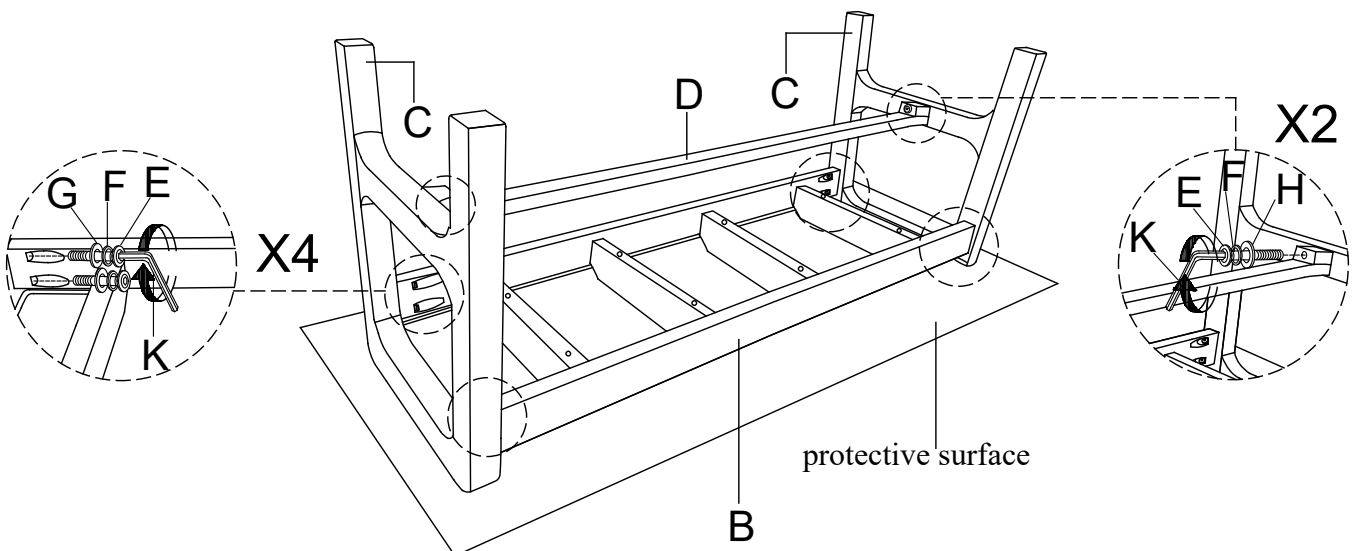

**3**

Attach the Cushion Seat (A) and Top Frame (B) using Wood Dowel (J) and Wood Screw (I) with a screwdriver (not provided).

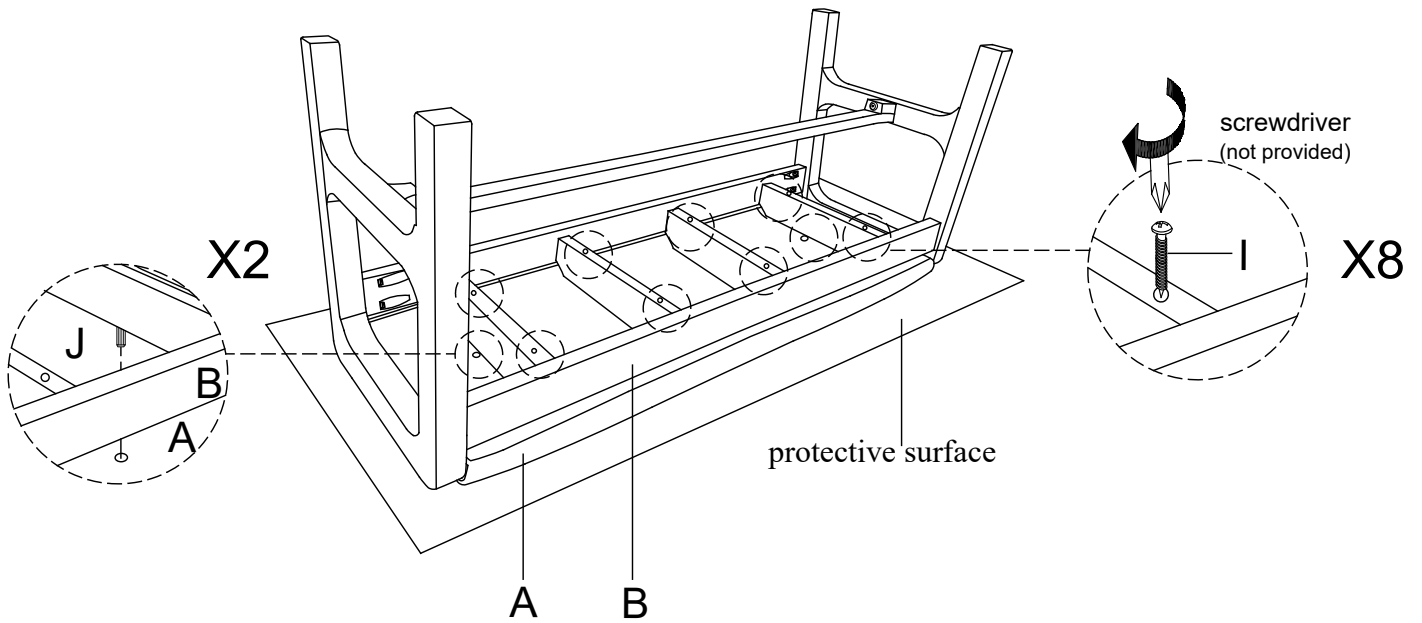

---

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.