 
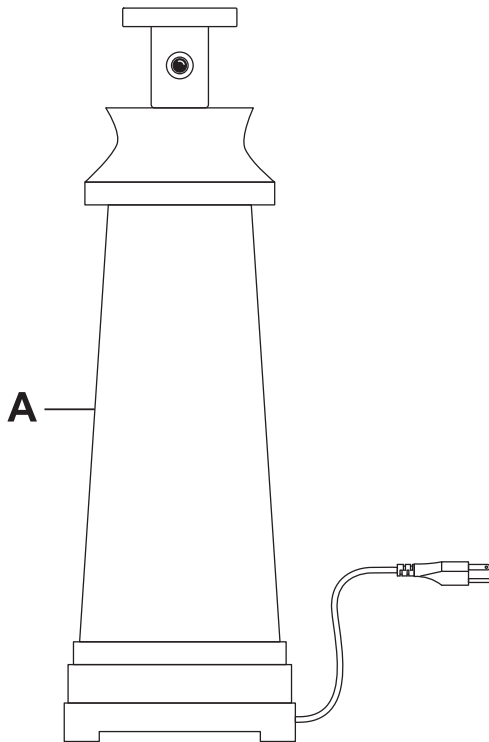 
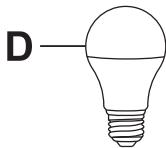 
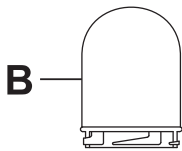 


Thank you for choosing us. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion.

COPPER ACCENT SLATE OUTDOOR TABLE LAMP

Review all assembly and care information before using this product. Save this manual for future reference.

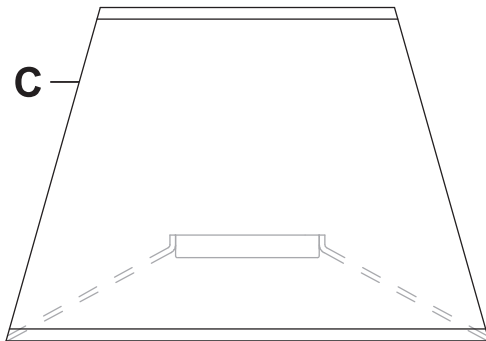

Inspect packaging to ensure all parts are accounted for before disposing of packing materials. Save the packing slip.

No.	PARTS	QTY.
A	Lamp	1
B	Bulb Cover	1
C	Lamp Shade	1
D	Light Bulb	1



IMPORTANT: Slate is a natural product; the colors and texture of each piece are unique, no two units will look the same. Variations in the slate colors and textures are not a cause for return. Each piece of slate is cut from a larger slab. Spalling (flaking) may occur during product production, naturally over time, and/or if slate is dropped.

Variations in the natural characteristics of slate are not a cause for return.

ASSEMBLY

1. Install Light Bulb (D) into Lamp (A).
2. Affix Bulb Cover (B) to the lamp socket.
3. Place Lamp Shade (C) on the bulb cover.
4. Plug the power cord directly into a properly grounded GFCI outlet.

Care & Maintenance

- For outdoor or indoor use.
- When using outdoors, avoid areas that are directly exposed to weather elements.
- Ensure the lamp is situated on a flat, stable surface.
- Keep the power cord away from all heat sources.
- To prevent risk of electric shock, turn the lamp off and unplug it when changing the light bulb.
- Always grip the plug end when unplugging the lamp; never pull or yank the power cord as doing so can damage the wiring.

Cleaning

 
Do not use chemicals or abrasive materials to clean the lamp or shade.

Weekly dusting is recommended to prevent dust from settling into the lamp shade fabric. Use a feather duster or a microfiber cloth to clean the lamp and shade.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR THE USE OF CLEANING PRODUCTS.

! IMPORTANT SAFETY INFORMATION !

- For outdoor or indoor use.
- Avoid exposure to rain and high moisture.
- Prevent risk of electric shock by ensuring the power cord has a drip loop; a diagram is shown on the right.
- Ensure the power cord is away from traffic areas where it could become a trip hazard.
- Keep power cord away from all heat sources.
- Always turn the switch off and unplug the power supply before changing the light bulb.
- Never use the lamp if any wires or fixtures are damaged.
- Only use a compatible A19/E26 replacement bulb. Wait until the light bulb is cool before replacing.
- Store indoors during freezing temperatures.

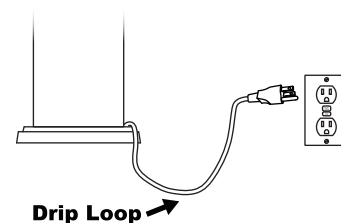

Drawing is for visual reference, style shown is for demonstration purposes only.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience any issues with the product or it was damaged during transit, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

! WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.