 


TV STAND

USER MANUAL

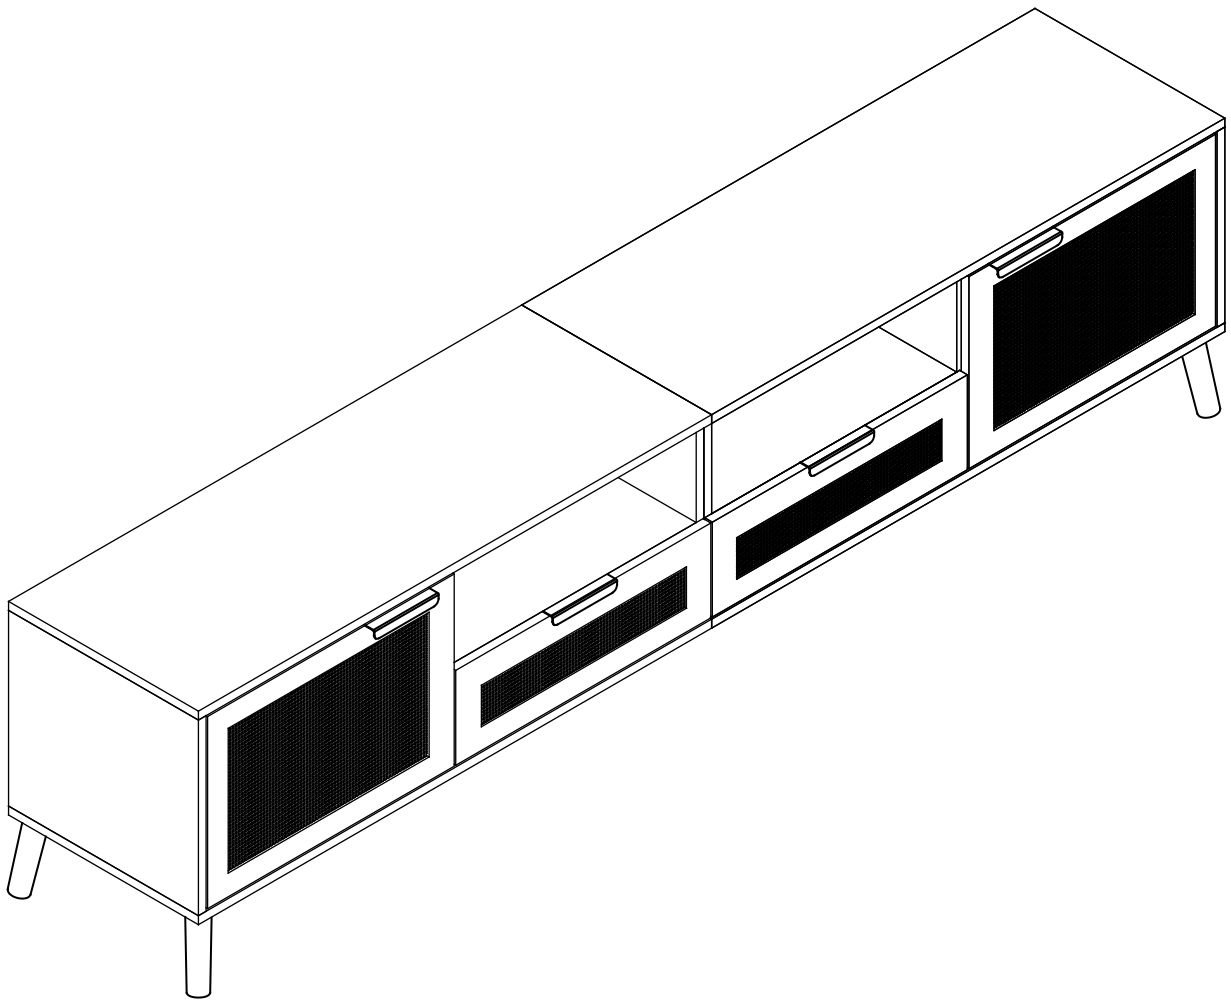

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

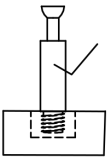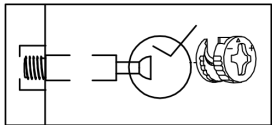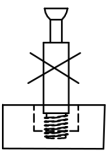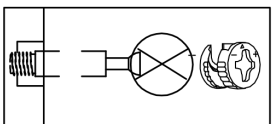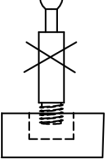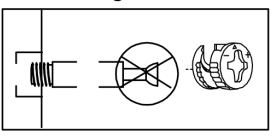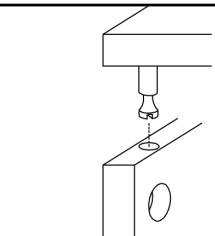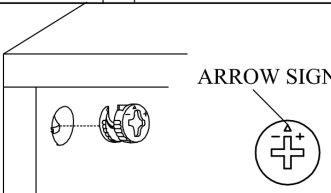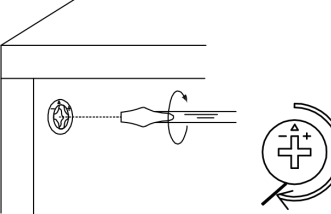	<p>Diagram A</p> 	<p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> 	<p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> 	<p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
 <p>Connect the panels together.</p>		
 <p>ARROW SIGN</p> <p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>		
 <p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>		

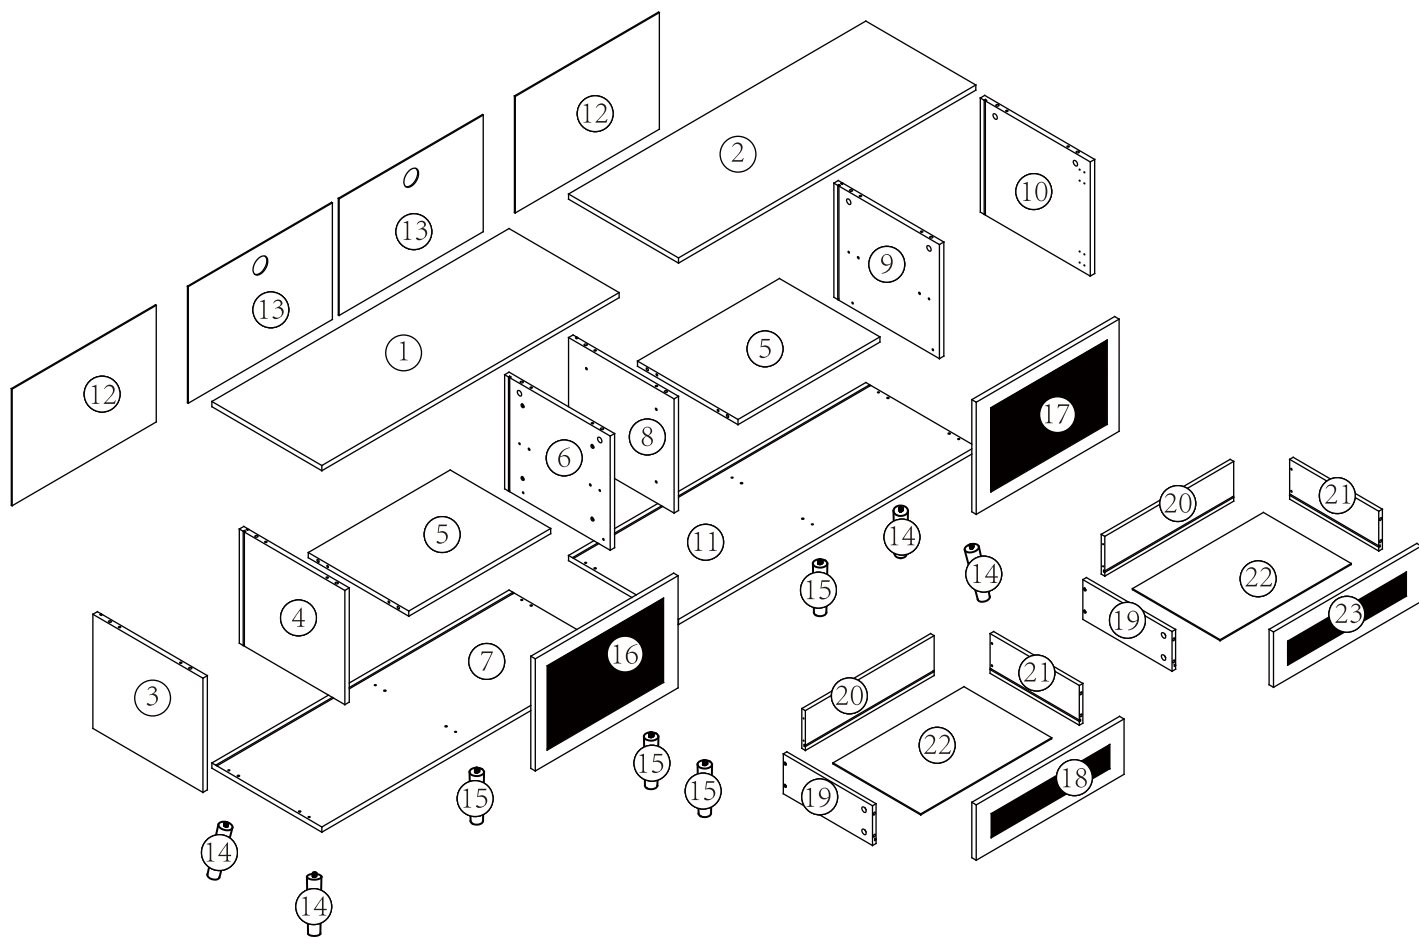 

Ax28

 

Bx28



Cx12



Dx32




Ex 4




Fx 12



 
Gx4



Hx 4

 

Ix 4

 


Jx24



Kx 20



 
Lx4




Mx40



 
Nx 16



Ox4

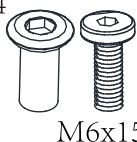 

Px 2

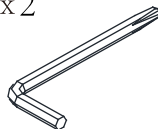 

Qx 4




CRx2




CLx2



 
DRx2




DLx2

 

 
STEP 1

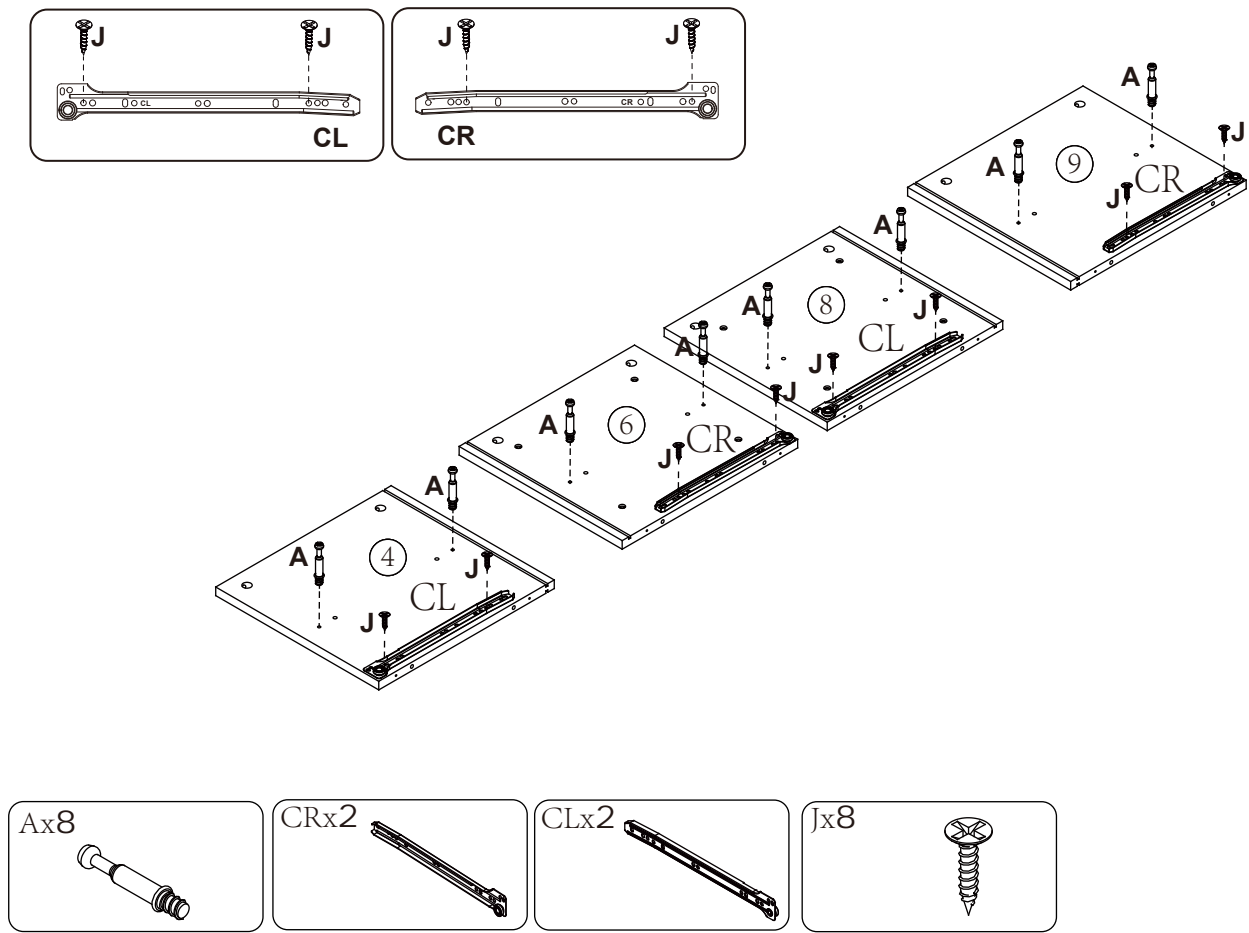

 STEP 2

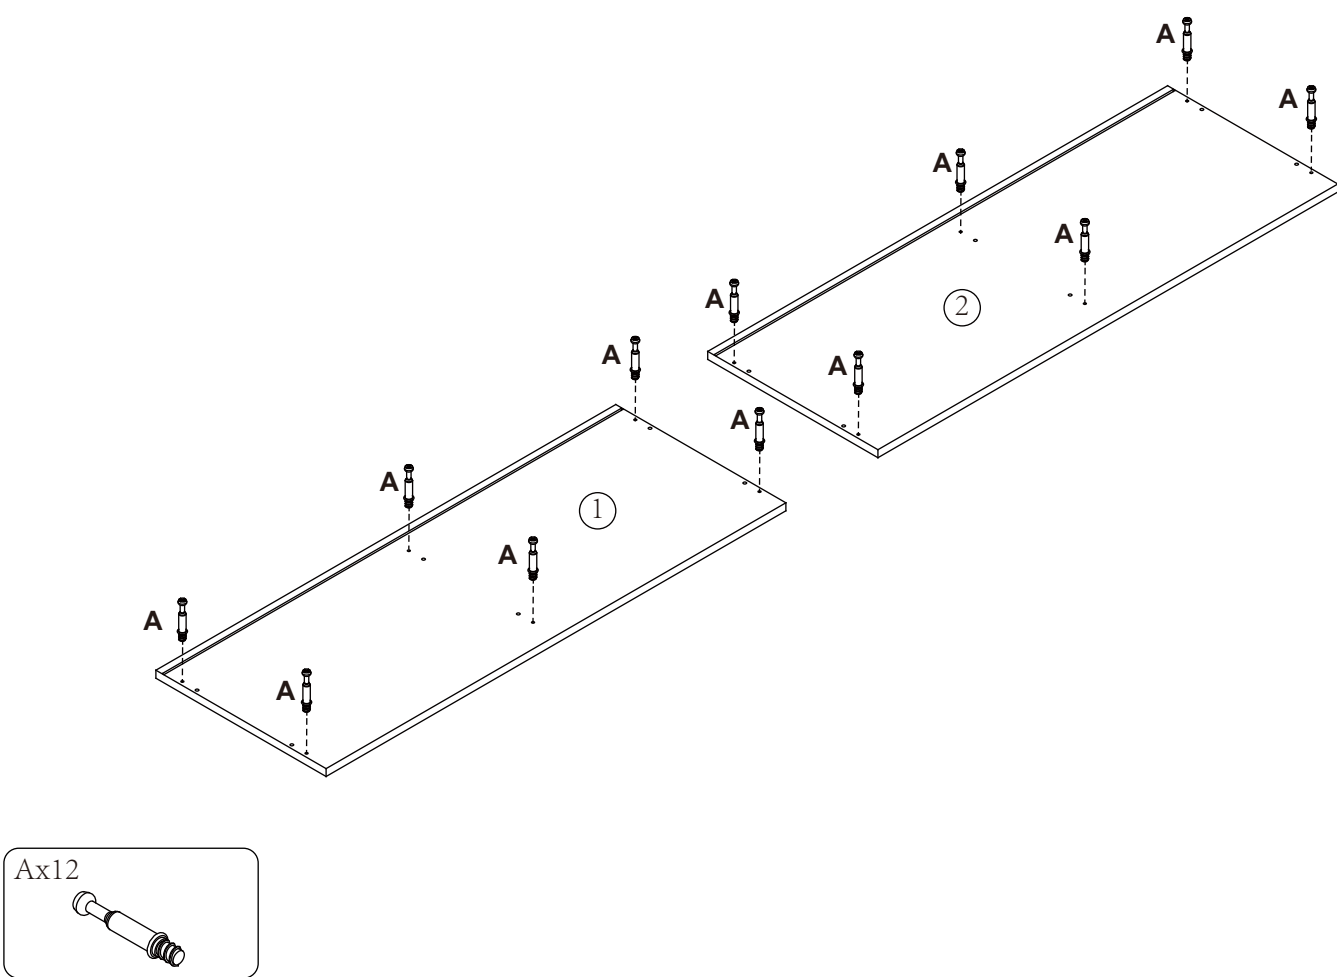

 
STEP 3

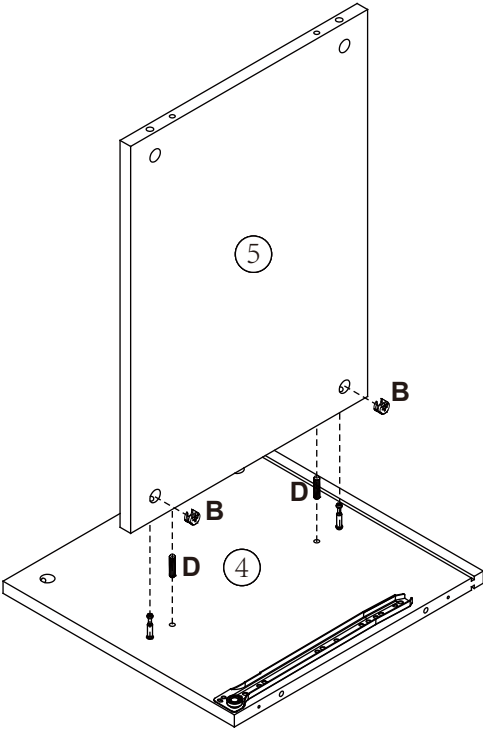


Bx2



 Dx2



 
STEP 4

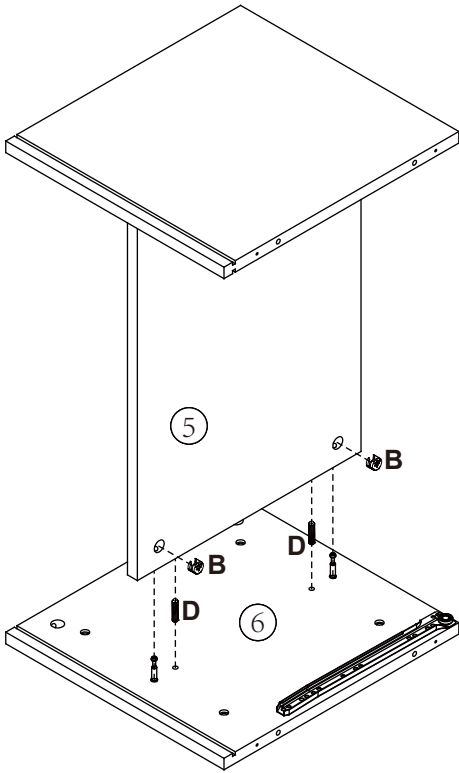


Bx2



 Dx2



 
STEP 5

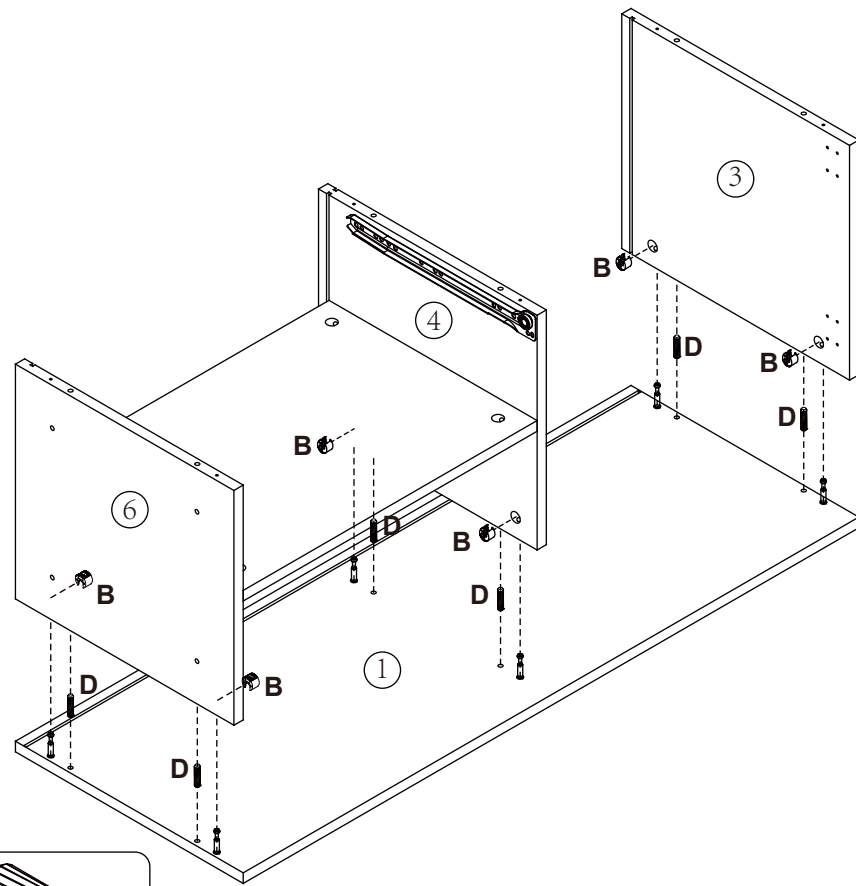


Bx6




 
Dx6



 
STEP 6

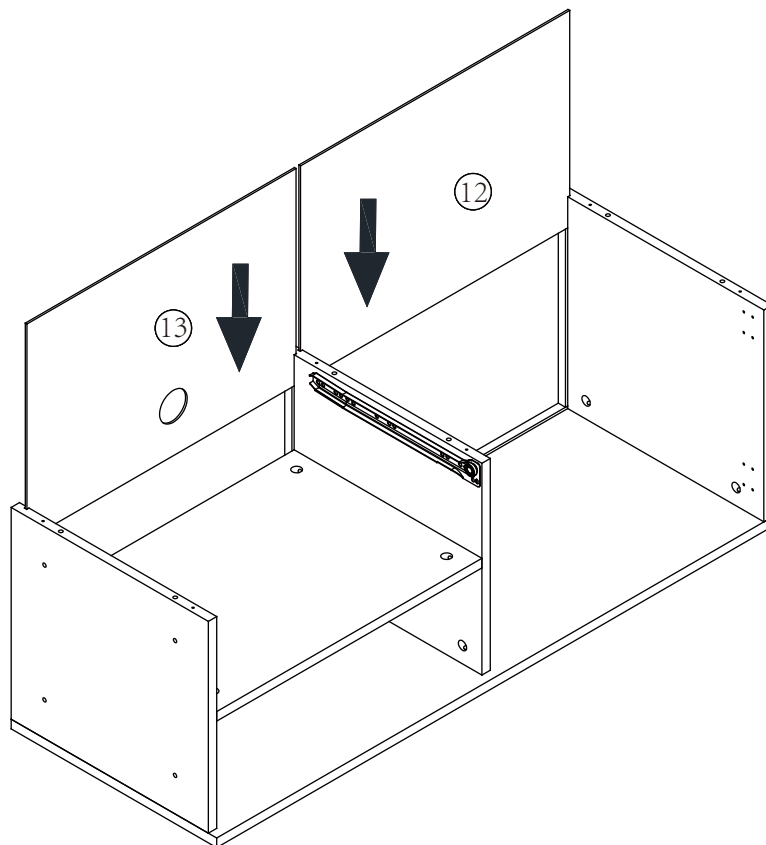

  
STEP 7

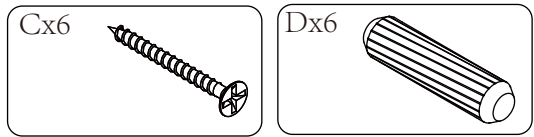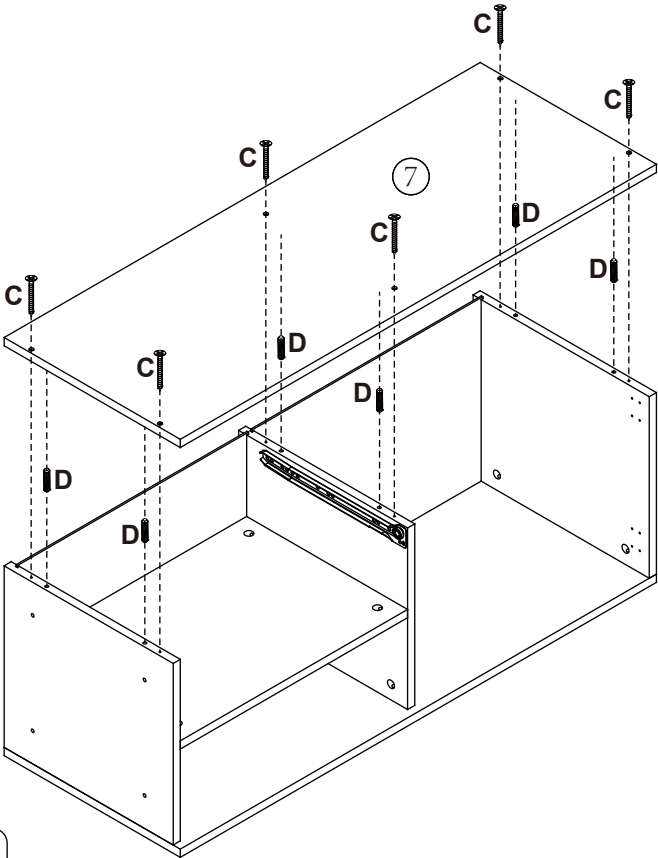

 STEP 8

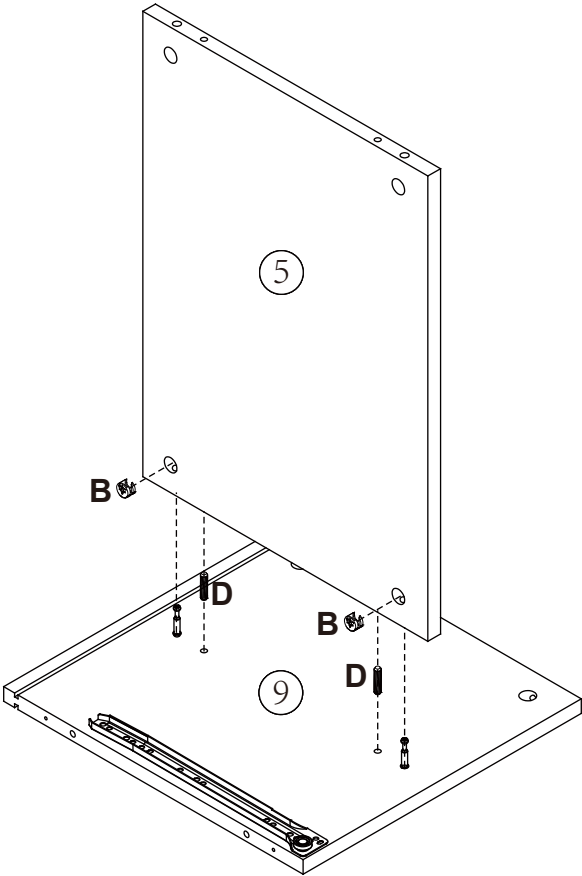

 
STEP 9

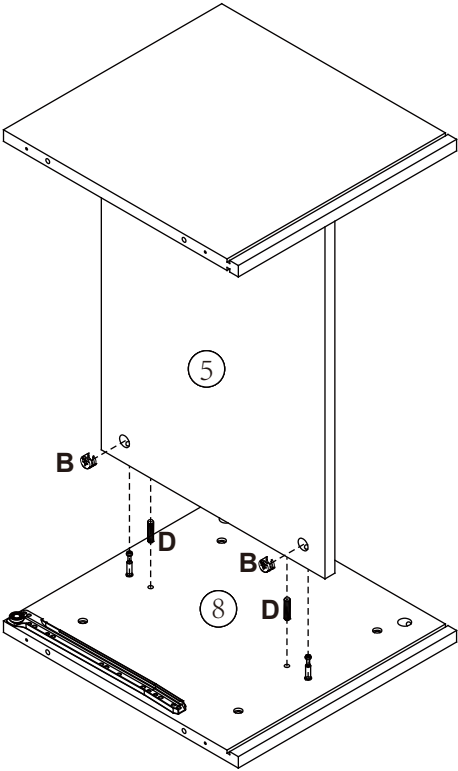


Bx2



 Dx2



 
STEP 10

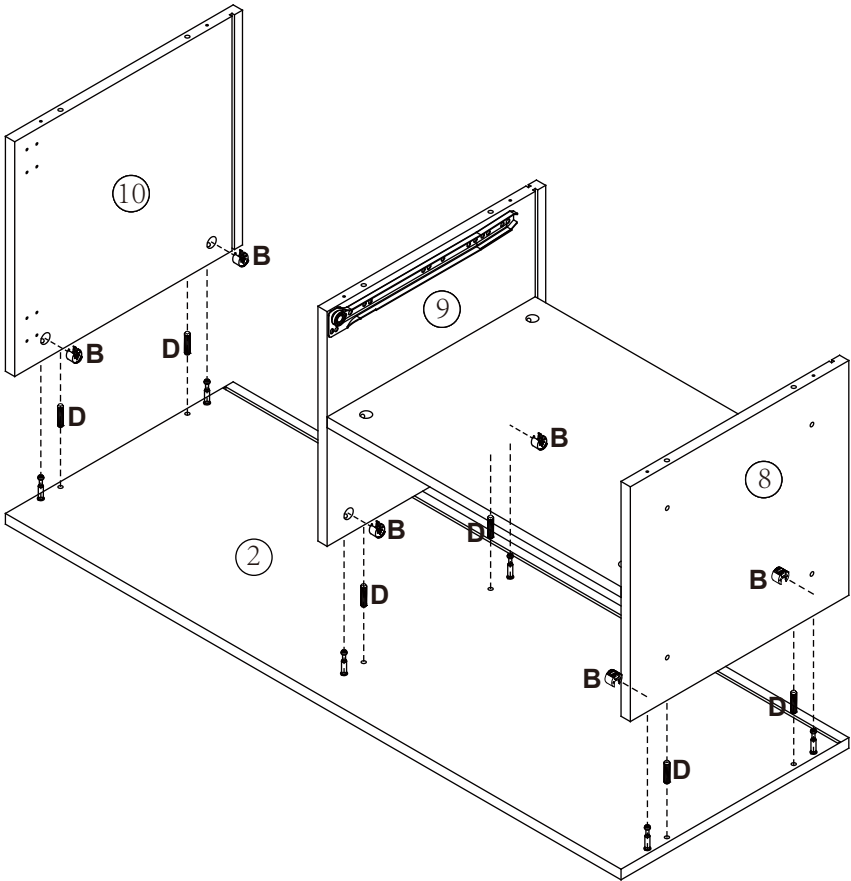


Bx6




 
Dx6






 
STEP 11

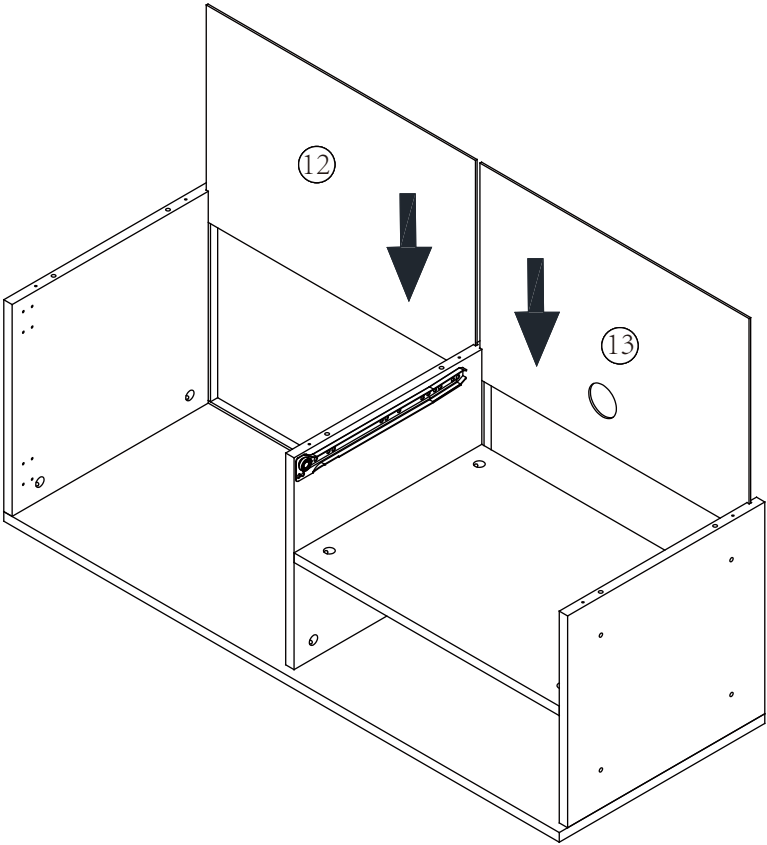

  
STEP 12

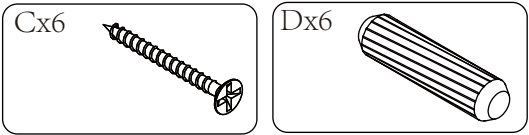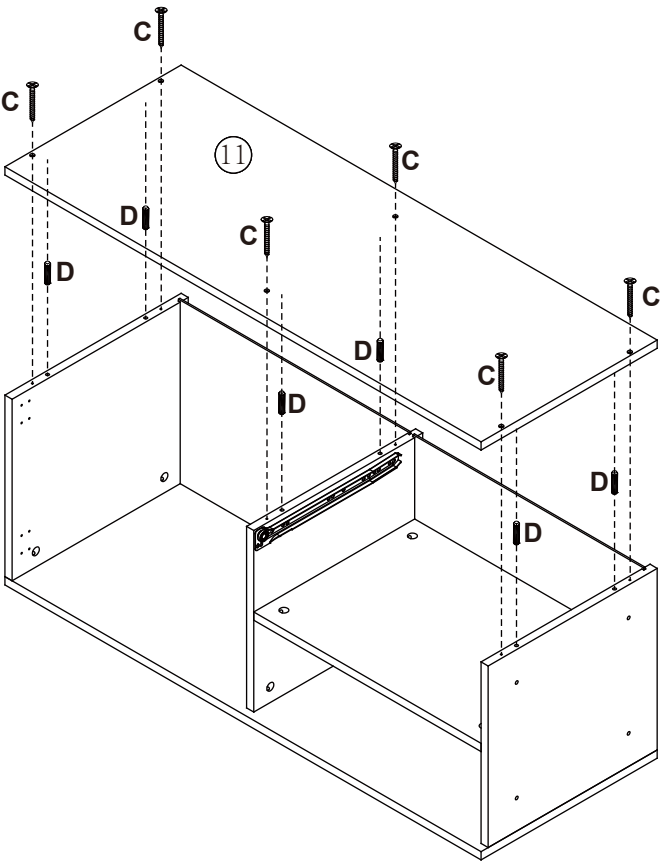

   
 
STEP 13

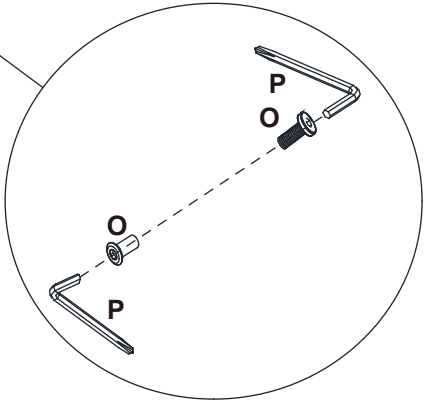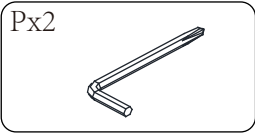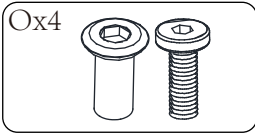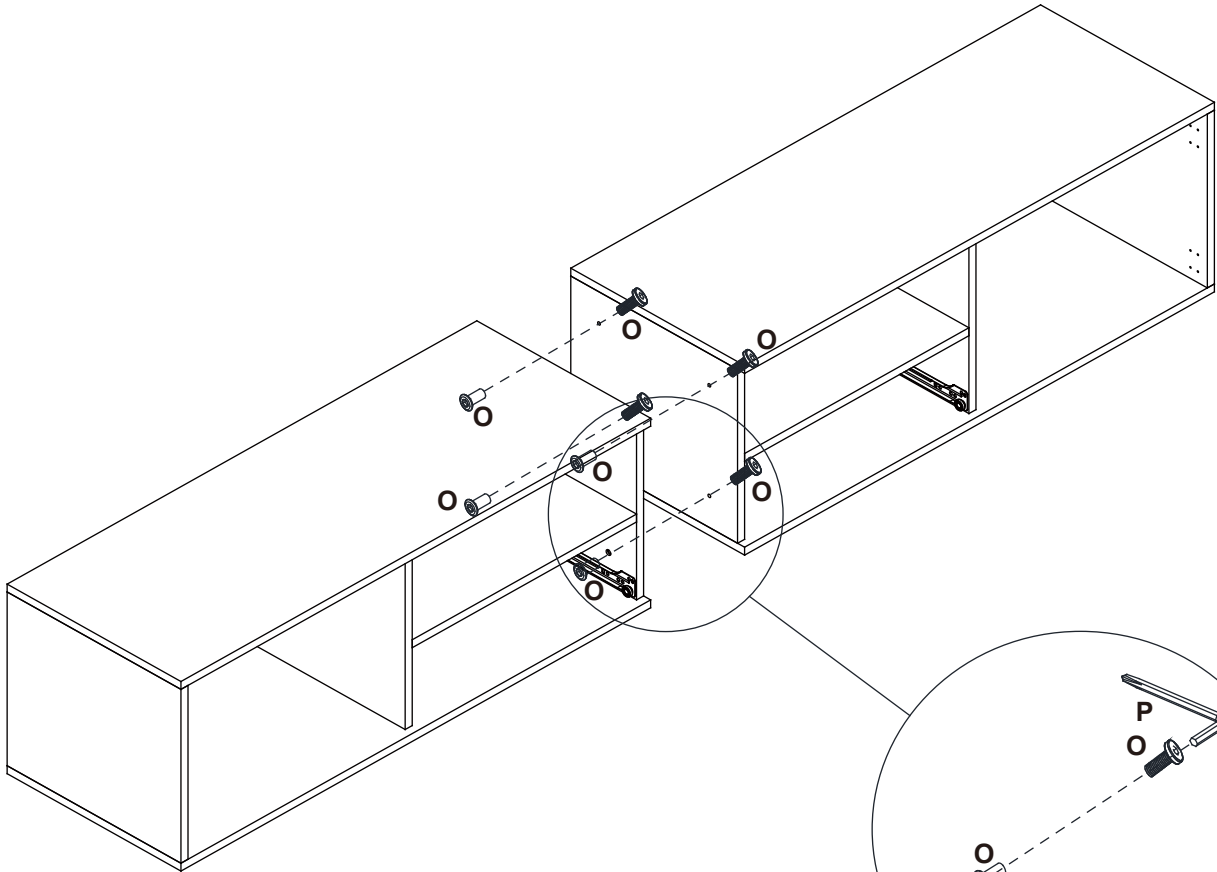

 
STEP 14

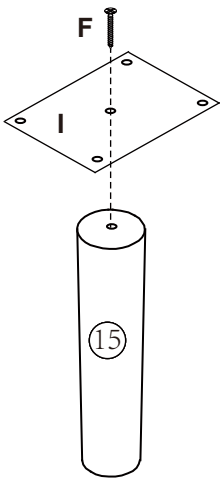



x4

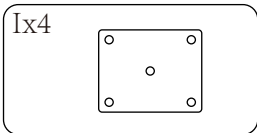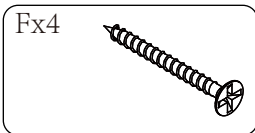  

 
 
STEP 15


Mx16

Ex4

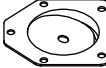
Hx4


Qx4

 
Kx20

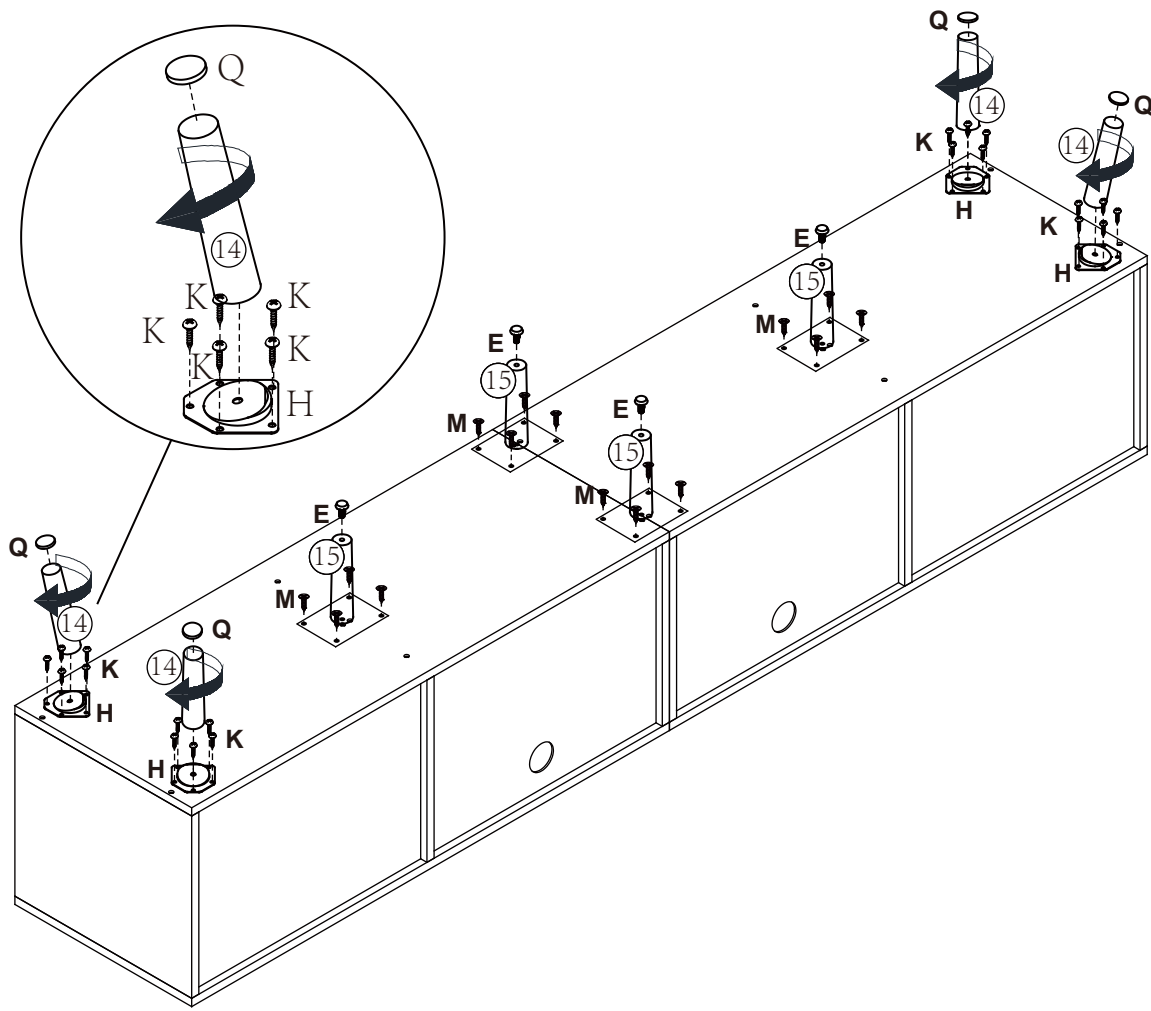


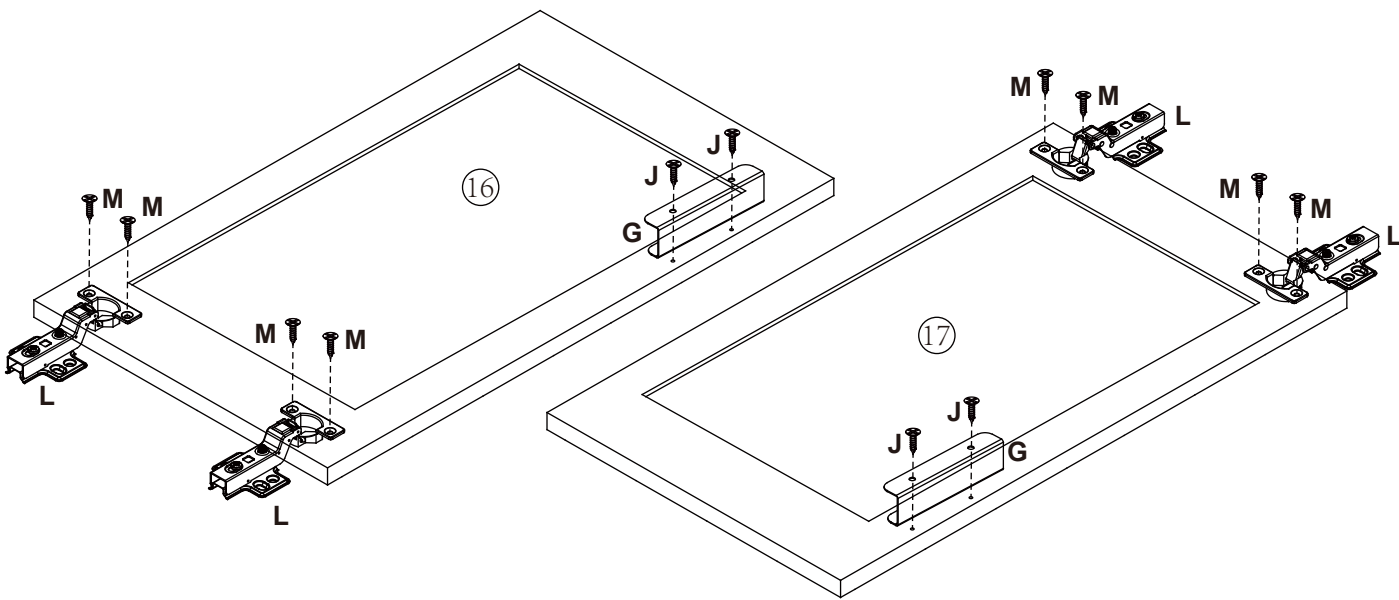 
STEP 16

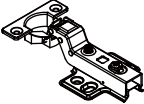Lx4



Mx8

Gx2

Jx4





  STEP 17

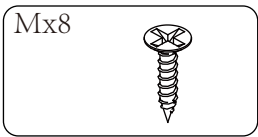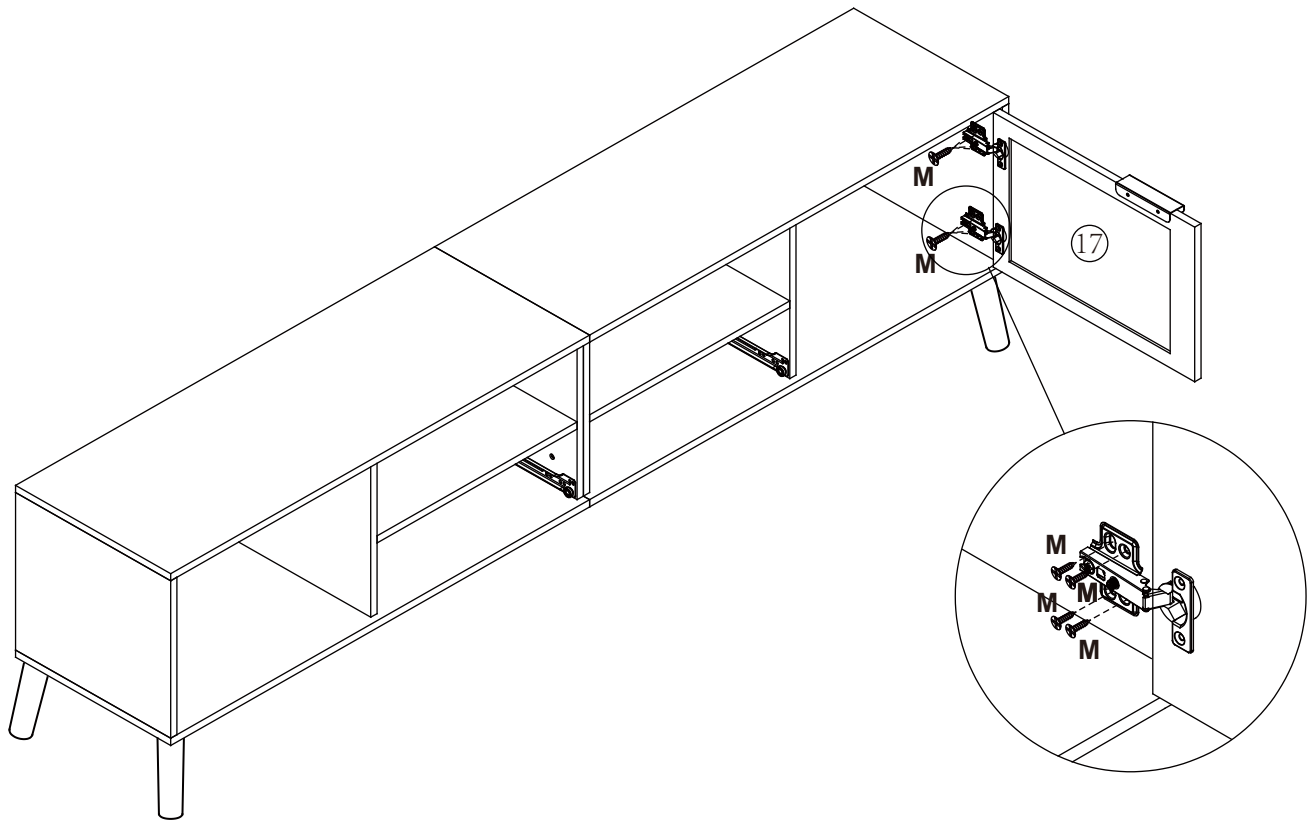





(For detailed hinge adjustment instructions, please refer to the last page.)

  STEP 18

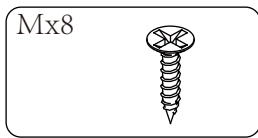
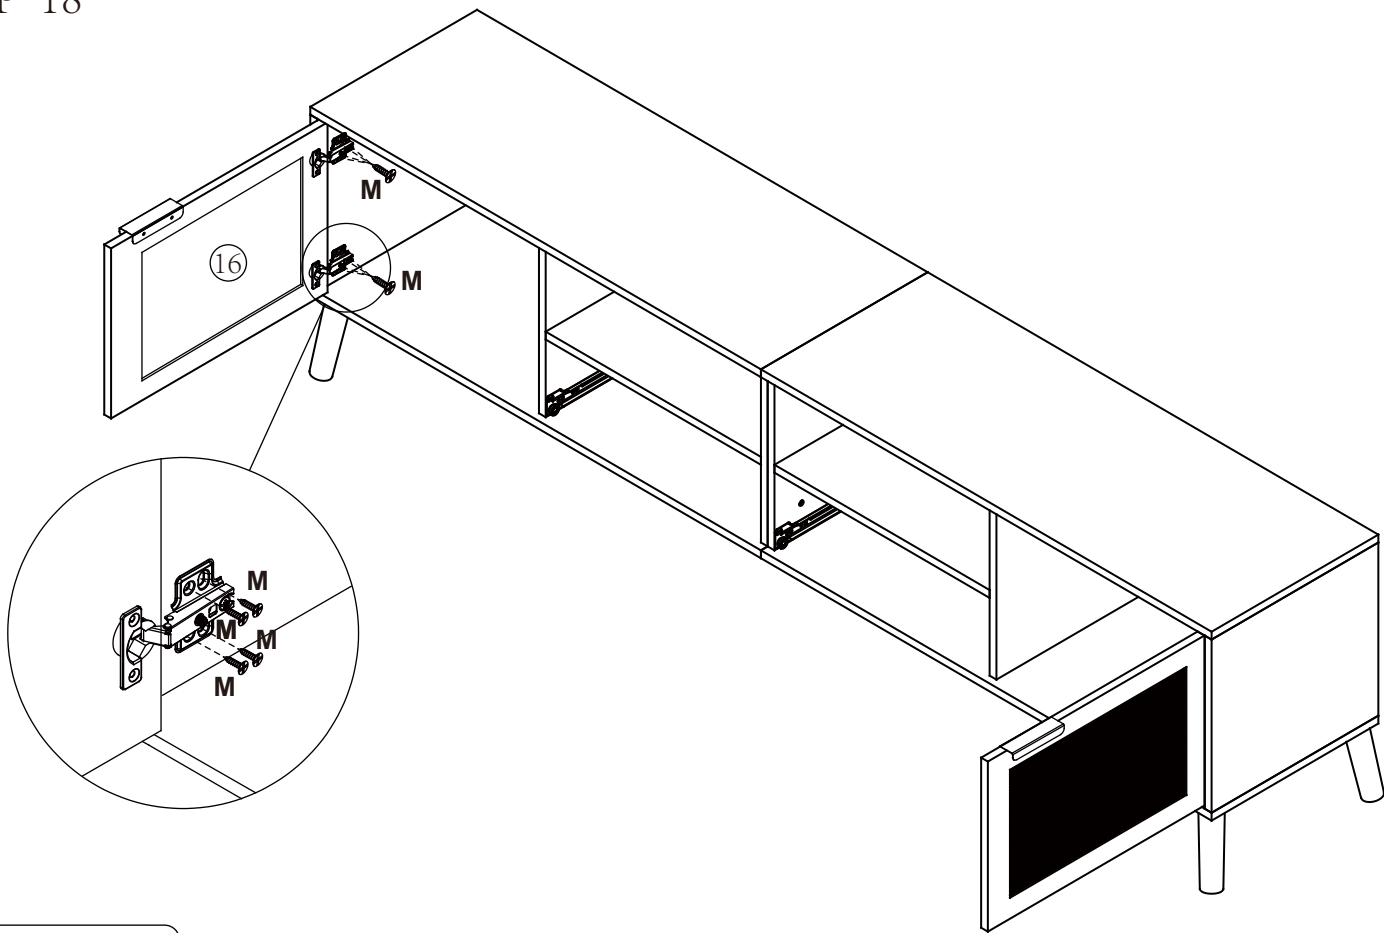


(For detailed hinge adjustment instructions, please refer to the last page.)

    
STEP 19

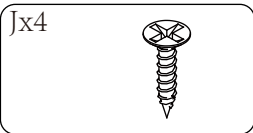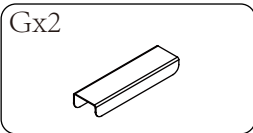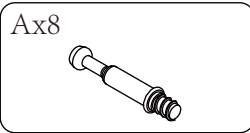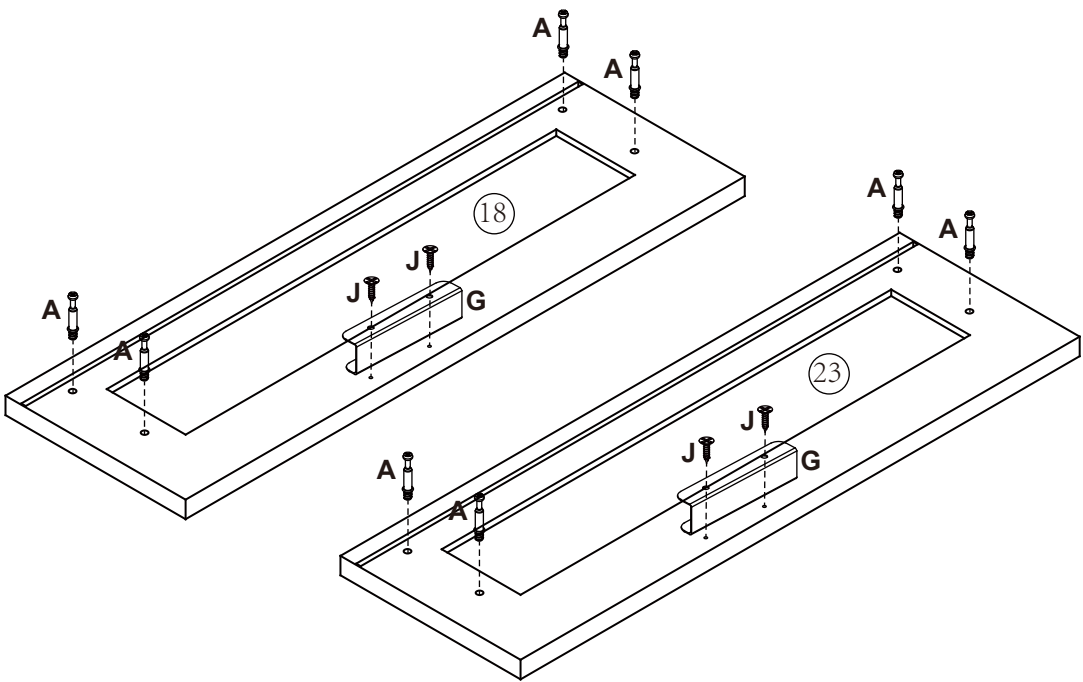

 
 
STEP 20

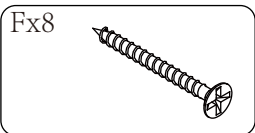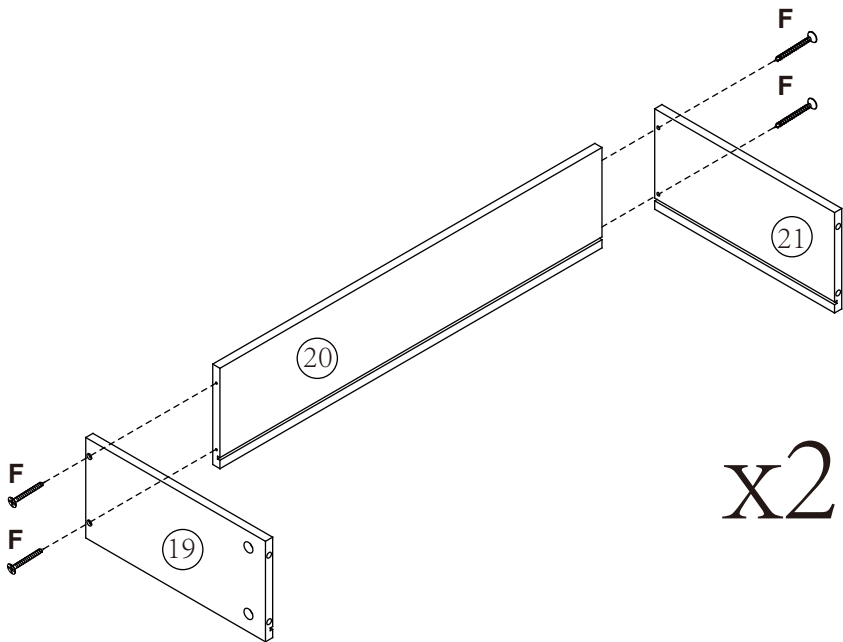

 
STEP 21

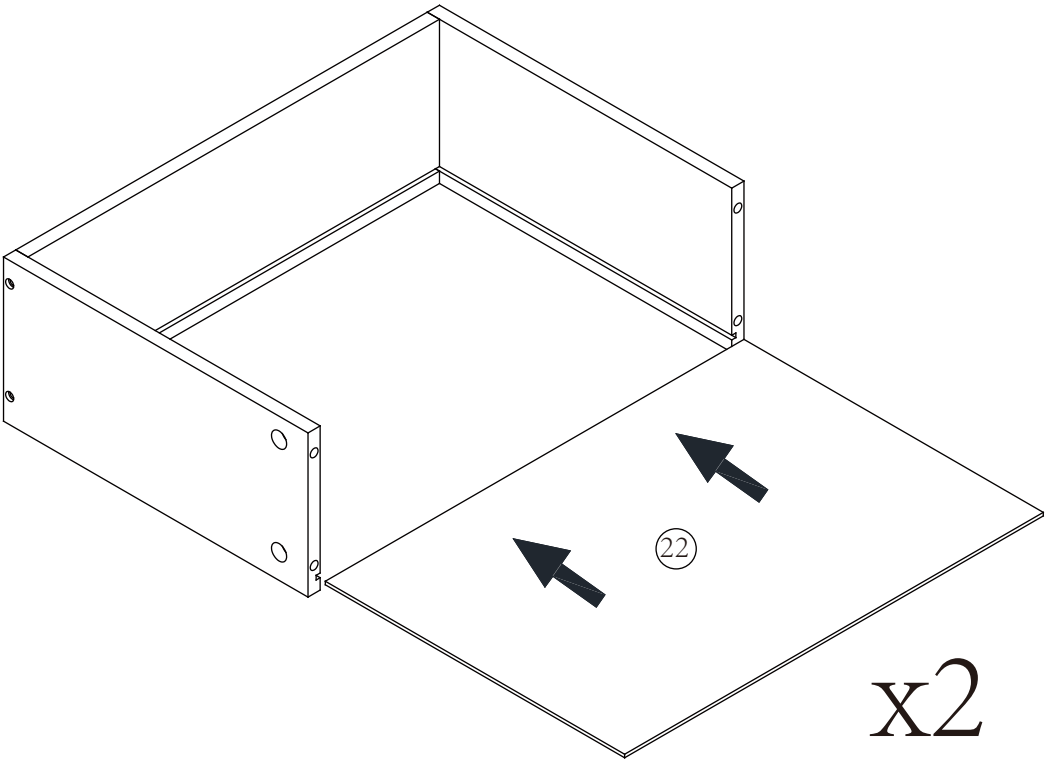

  
STEP 22

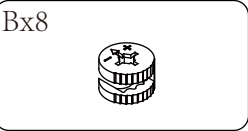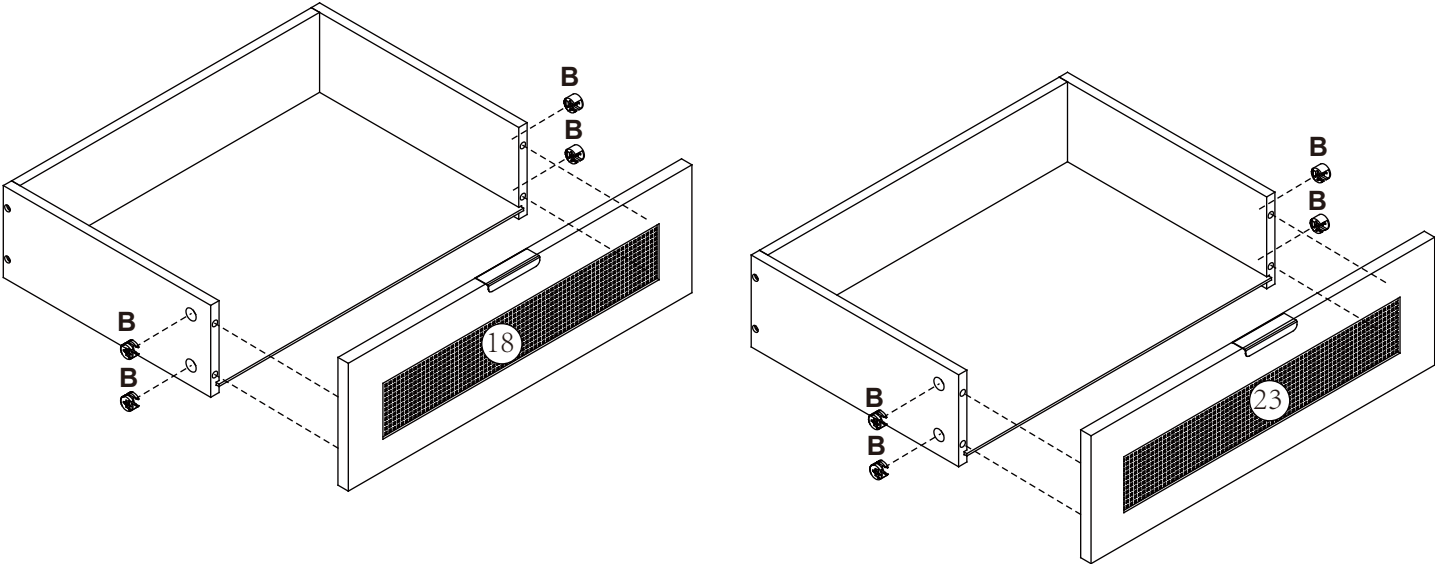

 STEP 23

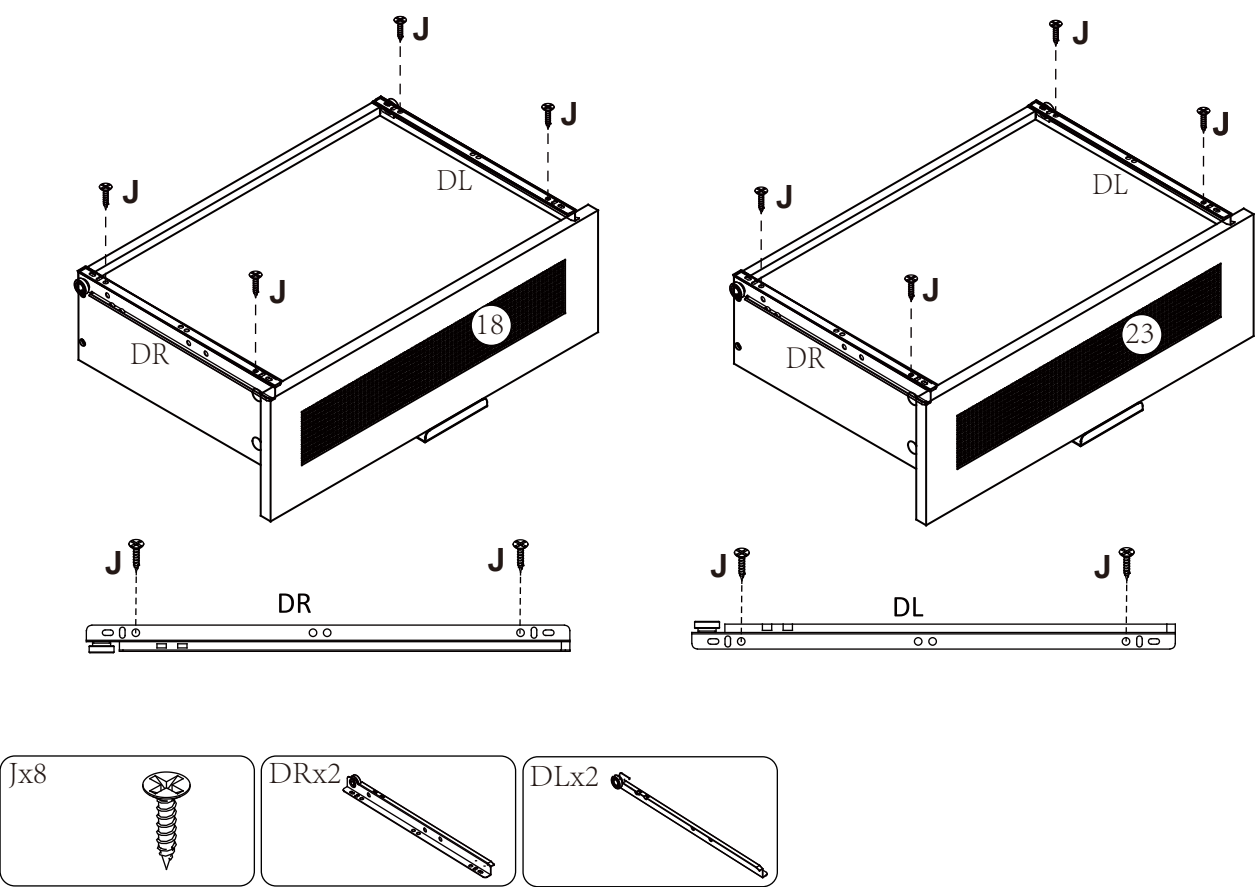


 STEP 24

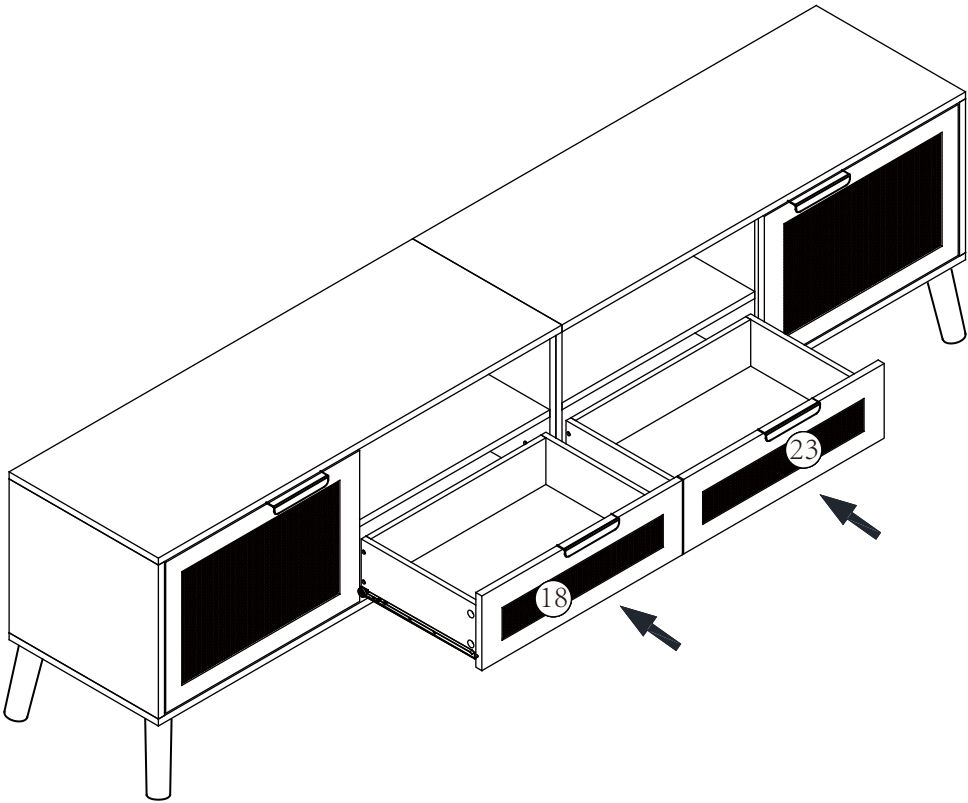


STEP 25

 Nx16

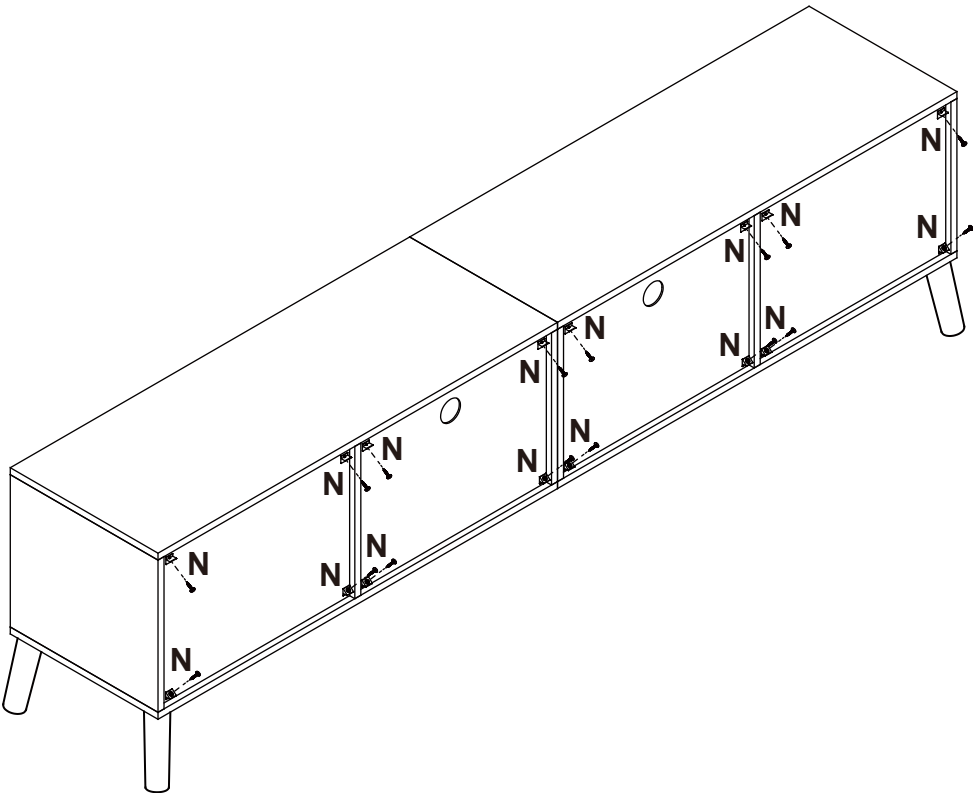


HINGE ADJUSTMENTS

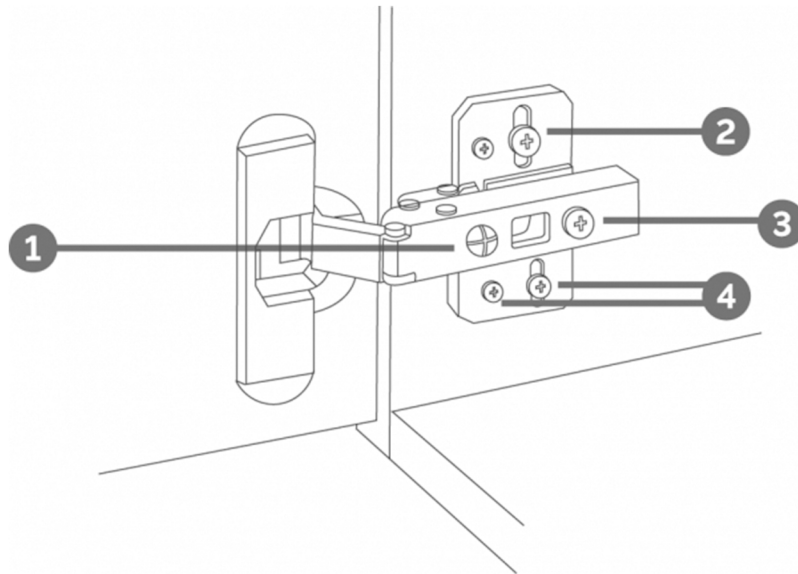 


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

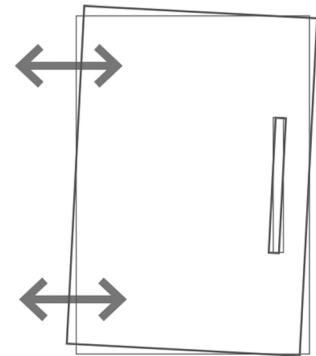

② ④ Height adjustment

 While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

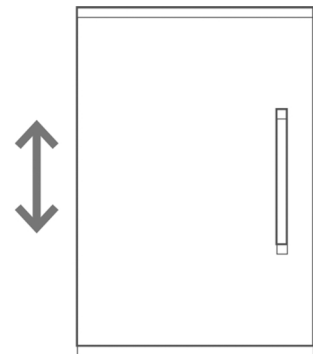

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

