

## Cautions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- THE BLADE IS VERY SHARP. TAKE GREAT CARE WHEN HANDLING THE BLADE ASSEMBLY.
- Always keep the appliance out of the reach of children.
- Ensure that your home electrical supply corresponds to the requirements of the appliance - see "Specifications".
- Do not connect the Mains Lead ⑦ into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.
- Never leave the unit unattended when it is plugged in.
- The Mains Lead ⑦ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children. Use the Cable Storage ⑤ to store any part of the lead that is not required.
- Do not use the appliance outdoors.
- Do not place the appliance close to a heat source.
- Ensure that the Mains Lead ⑦ is not near any hot surface.
- Pull the plug (do not pull Mains Lead ⑦) to disconnect from mains socket.
- Do not pull the Mains Lead ⑦ to move the appliance.
- It is not recommended that the appliance be used with an extension lead.
- The appliance should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- Do not use the can opener to open pressurised cans or cans containing flammable liquids.
- Do not switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the appliance yourself - contact Judge Customer Services at the address given in the warranty section.
- DO NOT IMMERSE ANY PART OF THE CAN OPENER BODY IN WATER.
- Should the appliance accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.
- Please keep your purchase receipt.

## Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power
Judge Electric Can Opener	JEA48	230V	50Hz	60W



### Judge 2 Year Domestic Electrical Guarantee

The Judge Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase. During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.

The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.

The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.

THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.

Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

*Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.*

Errors and Omissions Excepted.

JUDGE CUSTOMER SERVICES, HORWOOD,  
AVONMOUTH WAY,  
BRISTOL,  
BS11 9HX, GREAT BRITAIN


customerservice@horwood.co.uk

www.judgcookware.co.uk

Tel: 0117 940 0000



### CORRECT DISPOSAL OF THIS PRODUCT

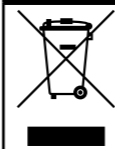

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**FOR DOMESTIC USE ONLY**

 **JUDGE**

# Electric Can Opener



## Instruction Manual

Model No. JEA48

**PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY  
BEFORE USE AND RETAIN FOR LATER REFERENCE.**

**UNPACK YOUR CAN OPENER CAREFULLY AND REMOVE  
TEMPORARY PACKING PIECES, LABELS AND STICKERS.**

## Identifying the parts

(with Part Numbers for customer replaceable items)

 


1. Can opener body (front and rear views)
2. Blade assembly (JEA48BA)
3. Blade assembly mounting
4. Bottle opener
5. Cable storage
6. Knife shapener
7. Mains lead and plug


### Before first use

1. Remove any labels and/or swingtickets.
2. Follow the cleaning instructions - see "Cleaning and Care".

### How to use the Can Opener

- The Can Opener should be sited on a dry, level and stable surface, away from direct heat. The Mains Lead ⑦ should be positioned so as not to cause an obstruction or to overhang the edge of the surface.
1. Align the lug at the rear of the Blade Assembly ② (see inset) with the slot in the Blade Assembly Mounting ③. Insert the lug into the slot and rotate the Blade Assembly ② clockwise into the horizontal position. 
  - **THE BLADE IS VERY SHARP. TAKE GREAT CARE WHEN HANDLING THE BLADE ASSEMBLY.**
  2. Plug the Mains Lead ⑦ into a mains socket and switch on; please read the CAUTIONS on siting and connecting to your mains electricity.
  - Do not use the can opener to open cans that are intended to be opened by other means, such a ring pull or rotating key. The can opener will not open rimless cans or cans with angled corners.

3. Position the Can ① (see diagram below) against the body of the Can Opener, so that:
  - the top of the can rim is in contact with the Locating Post ②,
  - the bottom outer edge of the can rim is in contact with the Toothed Wheel ③,
  - the can lid is in contact with the Magnet ④ and
  - the Blade ⑤ is in contact with the can lid, on the inside of the can rim.

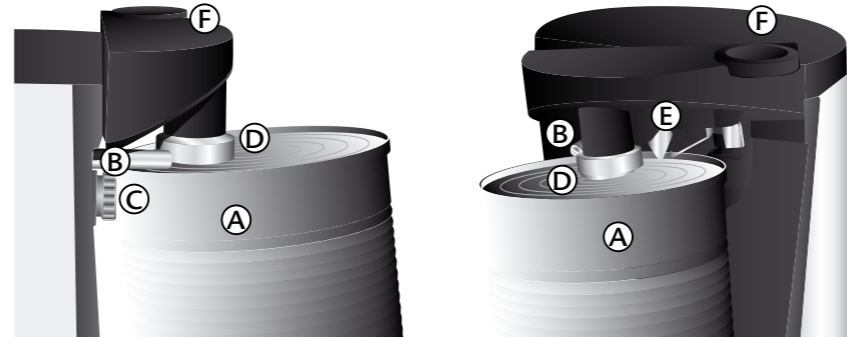

- You should find that you are able readily to position the can as described and that it remains in place, so that there is no need to support it by hand. If the can is not held in place by the mechanism, adjust its position as necessary. You may need to support the Can Opener Body ① when opening a large or heavy can.
4. Press down on the Blade Assembly Button ⑥, until the Blade Assembly ② is below the horizontal position, so that the Blade ⑤ pierces the can lid and the Can Opener motor switches on.
    - The can will rotate as it is opened by the Can Opener, until the lid is fully removed. The Blade Assembly ② will return to the horizontal position, the lid will be held by the magnet and the can will be supported by the Can Opener mechanism. The magnet will not hold aluminium or other non-ferrous can lids.
    - If there is a dent in the rim of the can, open the other end (if suitable) or start the cutting action just beyond the dent. Cans with heavy seams, uneven rims or odd shapes may cause the can opener to stall; if this occurs, turn the can slightly by hand to aid the cutting action.
  5. Remove the lid from the magnet and dispose of the lid. Grasp the can, then lift the Blade Assembly ② slightly to release the can, which can now be withdrawn.

THE CAN AND LID WILL BOTH BE SHARP. HANDLE AND DISPOSE OF WITH CARE.
  6. Switch off at the mains and unplug the Mains Lead ⑦ from the socket.
    - Do not use the can opener to open pressurised cans or cans containing flammable liquids.
    - Do not open more than five cans in succession; allow a 15-second break after five cans.

### How to use the Bottle Opener

1. Ensure the Can Opener is disconnected from the mains supply.
2. Support the body of the Can Opener with one hand and insert the neck of the bottle into the Bottle Opener ④ (see diagram).
3. Move the bottle body downwards with a swing action to remove the cap from the bottle.

ENSURE THAT THE TOP EDGE OF THE BOTTLE OPENER IS IN CONTACT WITH THE EDGE OF THE BOTTLE CAP, NOT THE BOTTLE NECK, OR THE GLASS MIGHT BREAK.



### How to use the Knife Sharpener

1. Ensure the Can Opener is disconnected from the mains supply.
2. Wash and dry the knife to be sharpened.
3. Support the body of the Can Opener with one hand and insert the knife blade into the Knife Sharpener ⑥ (see diagram).
4. Draw the knife blade through the knife sharpener slot, for the full length of the blade, in either direction, until you achieve the desired sharpness.
5. Wash and dry the sharpened knife.

TAKE CARE WHEN HANDLING THE KNIFE AFTER SHARPENING.

DO NOT ATTEMPT TO SHARPEN SERRATED BLADES, AS THIS WILL REMOVE THE SERRATION. DO NOT ATTEMPT TO SHARPEN SCISSORS.



### Cleaning & Care

- Ensure the Can Opener is disconnected from the mains before cleaning.
1. Wash the Blade Assembly ② in liquid detergent and warm water, then allow to dry.
    - **THE BLADE IS VERY SHARP. TAKE GREAT CARE WHEN HANDLING THE BLADE ASSEMBLY.**
  2. Wipe the inside and outside of the Can Opener Body ① with a cloth slightly dampened with liquid detergent and warm water. A scourer can be used with the liquid detergent solution to remove stubborn spots.
    - Do not use harsh abrasive cleaners.
  3. When the Can Opener is not in use, store in a dry place. The Mains Lead ⑦ can be pushed into the Cable Storage ⑤.