

Operation Instruction

Pearl Cooker



Cleaning and Maintenance

Before cleaning and maintenance, please confirm that the Pearl cooker has been unplugged and the product has been completely cooled.

Please use a soft cloth to clean the lid, pot and other parts to keep the Pearl cooker clean. (Note: Do not wipe the operation panel, plug and power cord with a wet cloth.)

Do not use corrosive syrups and hard objects to clean the inside and outside of the product. (eg banana water, gasoline, decontamination powder, hard brush, etc.)

It is strictly forbidden to enter the water inside the appliance. Please do not clean the cooker into the water.

Do not use a dishwasher to clean, to avoid damage or explosion.


Product specification sheet

Rated current	220V~50HZ	220V~50HZ	220V~50HZ	220V~50HZ	220V~50HZ
Rated power	900W	1350W	1850W	2200W	2200W
Rated capacity	5L	9L	12L	16L	19L
Maximum pearl volume	0.9KG	1.5KG	2.0KG	2.7KG	3.6KG

Executive standard

GB4706.36-2014 GB4706.1-2005

Electrical Schematic

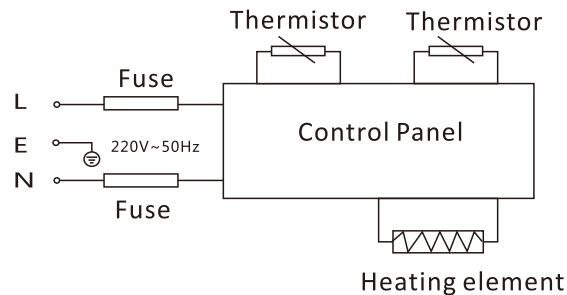

The characteristics of pearl cooker

1. With adjustable automatic cooked pearl program, you can choose cooking time according to different brands of pearls, to ensure the softness of the pearl.

2. Open the lid with one button, LED time display, time preset function.

Safety precautions

1. This precaution is the important content to prevent safety and damage to you and others, please be sure to follow them.

2. Ignore the following table and use the product incorrectly, which may result in personal injury or death and material damage, please be sure to follow

3. The following are the meanings identified in this article:

⊘ Absolutely forbidden operation item

⚠ Must following operation item

ⓘ Daily attention operation item

Dangerous

⊘ Please keep out of children. Children are not allowed to operate alone to avoid electric shock or burns.

⊘ Do not insert the metal tip, wire, needle and other foreign body inside the product, otherwise it will cause electric shock or abnormal operation.



Warning


 
⚠ In order to prevent leakage or accidental startup during cleaning, moving, overhaul, or product failure, be sure to unplug the power cord.

⚠ If the power cord or plug is damaged and the socket is loose, please do not use it to avoid electric shock or fire.

⚠ Do not place this product on fire directly or in any place close to the heat source, otherwise the product may be damaged or malfunction, or even dangerous.

⚠ Please do not place the product on the surface which is not stable, moist, smooth, and not heat-resistant (such as plastic tablecloth, cotton cloth, carpet, etc.) to avoid injury, property damage caused by electric shock, fire, falling off.


Operation panel

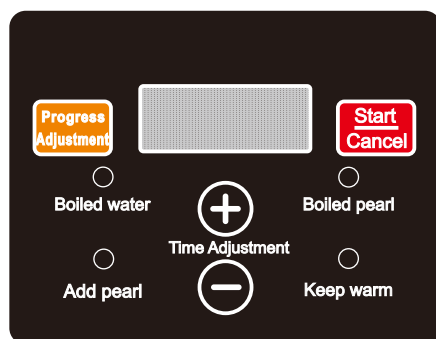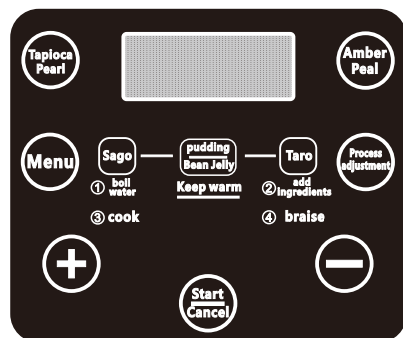

Instructions

1 **start**
cancel

After selecting the desired cooking function, press the “Start” button and the pearl cooker will start working. For the cooking method, please refer to the food manual. “Cancel” button to cancel work

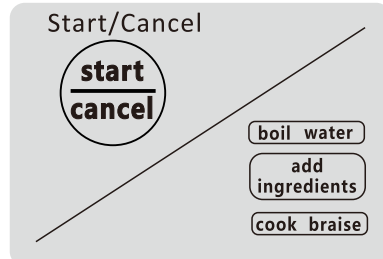

Notice

- ❗ This appliance cannot be operated in the form of an external timer or a separate remote control system.
- ❗ Please do not use it for purposes other than the function of this product to avoid damage to the machine or personal injury.
- ❗ This product is for indoor use only. It should not be used in wet places or outdoors, to prevent damage caused by electric shock and aging components.
- ❗ Do not move the product during work.
- ❗ After unpacking, immediately put the plastic bag in the trash can to prevent children from playing and posing a risk of suffocation.
- ❗ This product is not intended for use by persons with sensory or mental dysfunction, lack of relevant experience or knowledge (including children). Unless they use this product under the supervision and guidance of professionals. Children should be looked after to ensure they do not play with this product.
- ❗ When the product is working, the temperature will rise. Do not touch the metal or glass part of the product directly to avoid burns.
- ❗ The bottom and edge of the inner pot should be kept clean. The bottom of the inner pot and the surface of the heating element should not be attached with water droplets, rice and other debris. The inner pot should be placed smoothly. Otherwise, the components will be burnt due to poor contact between the heating element and inner pot.
- ❗ If the product malfunctions, do not disassemble the product or replace the accessories by yourself, to avoid fire, electric shock or injury.
- ❗ The inner pot must not collide or be placed directly on other heat sources, such as a gas stove, otherwise it will be easily deformed.



Notice


- ! When working on the product , do not cover the lid with a damp cloth, to prevent components damage causing by the steam can not release and the body can not dissipate heat.
- ! Do not open the lid while the product is working to prevent burns.
- ! The cooker is prohibited to enter water, rinsed and soaked with water, to avoid electric shock or short circuit.
- ! When taking food such as rice , please do not touch the inner part with high temperature to avoid burns.
- ! Please use the spoon that comes with the product, do not use the instrument with sharp angles, to avoid damage to the inner layer of the inner pot.
- ! Do not use the inner pot not belong to this cooker, to prevent overheating and damage to components.
- ! Do not put any bagged, canned or bottled items into the product for heating , otherwise there is a danger of explosion.
- ! High temperature and steam will be generated when the product is working. Do not place the face close to the steam hole, to avoid burns.



Executive standard

Description of parts and Instructions

Name of parts


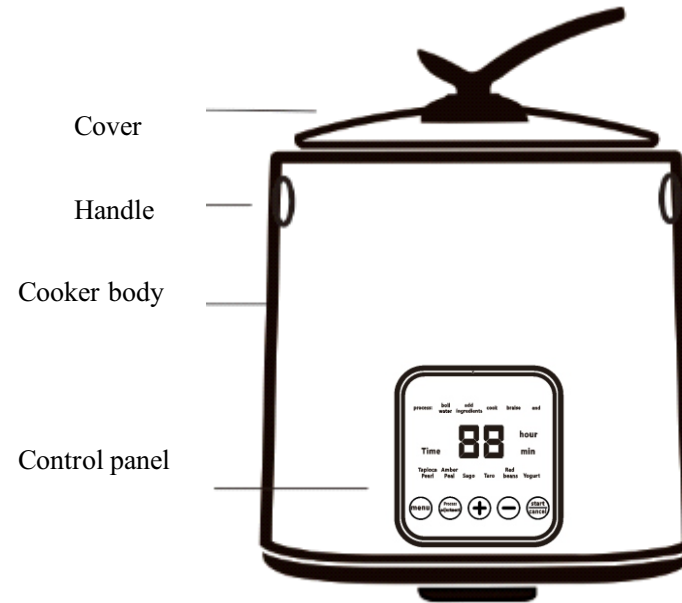


Accessories

Spoon

Notice

- ⚠ Do not use wet hands to insert or pull the plug, otherwise it will cause electric shock or injury
- ⚠ Please use the dedicated power socket of 16A and above. Do not share the same socket with other high-power appliances at the same time, so as to avoid fire caused by excessive current.

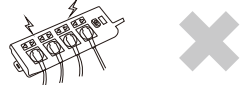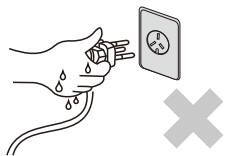

- ⚠ The working power supply uses AC220V-50Hz. Do not use other power sources, otherwise it will damage the components or cause fire, electric shock and other accidents.
- ⚠ Please make sure the plug is inserted into the socket fully. Otherwise, the component may overheat and burn out due to poor contact, which may cause a short circuit or fire.

- ⚠ Please hold the plug when removing the plug, do not pull the power cord. Otherwise, the power cord may be damaged.
- ⚠ When not in use, unplug the power cord to prevent short circuit and aging of components.


- ⚠ When the power is cut off during work, please unplug the plug and re-operate after the call.
- ⚠ Before use, please ensure that the power cord is connected to the host reliably, otherwise the components may be damaged due to poor contact.

- ⚠ Make sure that the power cord does not come into contact with sharp edges, burrs, other protruding sharp objects, or hot objects. This may cause electric leakage, resulting in electric shock or fire.


- ⚠ This product is Class 1 appliances, the grounding wire of the socket must be well grounded.

2 Process adjustment

Tap the “Progress adjustment” button to select the function boiled water, add pearls, boiled pearls, and braised pearls, to switch between the four progresses.

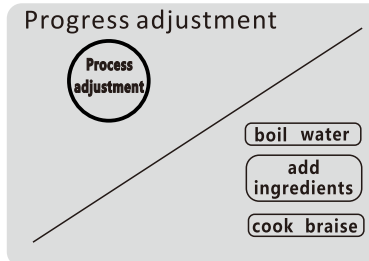


3 + -

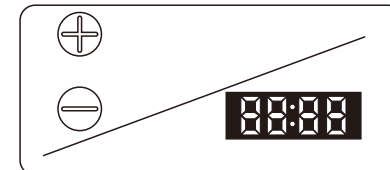

Time adjustment, “+” means add time, one press add 1 minute, long press to add number quickly. “-“ means reduce the time, one press reduce 1 minute, long press to reduce the number quickly.


4

The indicator light flashes red, indicating that the product is working.

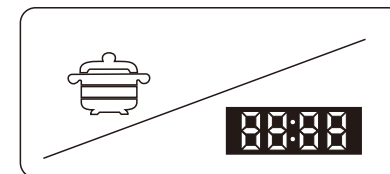

5

“Display”, display the time of braised pearl, set the cooking time of the pearl in advance, it will work according to the set time after the pearl is cooked.

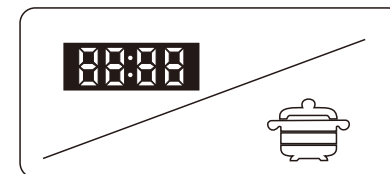

6

This is the function display, can not press it directly. Need to use the “progress adjustment” button to select the progress. When the four progresses are made in the pearl pot, the red light is on.

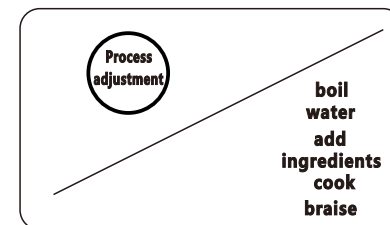


Table of Contents

1. The characteristics of pearl cooker
2. Safety precautions
3. Description of parts and Instructions
4. Name of parts
5. Operation panel
6. Instructions
7. Cleaning and Maintenance
8. Product specification sheet
9. Executive standard
10. Electrical Schematic
11. Fault operation and handling method
12. Quality Assurance Card

Fault operation and handling method

If the pearl pot is faulty during use, please check it according to the following "fault phenomenon" and handle it according to the following methods:

Failure ault	Causes	Re-solvent
The indicator light does not work	1. Circuit power supply is not turned on	Check for power turned on
	2. Line fault	Send a qualified home appliance maintenance department for maintenance
Heat plate is not heated	1. Circuit fault	Send a qualified home appliance maintenance department for maintenance
	2. Fuse-breaker	
	3. Heat supply plate failure	
Pearl Overflow	1 Maximum water level exceeding the internal bile (scale line) 2. Too high concentration of food materials	Adjust to the appropriate proportions The best ratio of water to pearl is 5: 1

Quality Assurance Card

customer	full name		term of service One year
	address		
	telephone		
	date of purchase		
a. Please fill in the columns of this warranty card in detail and stamped with the dealer seal. It is invalid. b. The product is free of use within one year of the purchase date. c. If the replacement of spare parts is required beyond the above specified period, the maintenance fee shall be charged as appropriate. d. During the warranty period, no free repair under the following circumstances; e. Failure to produce a warranty card or purchase certificate (invoice or receipt). f. Repair beyond the warranty period. g. Damage caused by disassembly or modification. h. Damage caused by wrong / negligent use or improper human use. i. F function or damage caused by non-general household use (e. g. in places with bad environment). j. The appearance naturally stains the old person by its use.		checker	
		Dealer and Seal	