


Installation Instructions

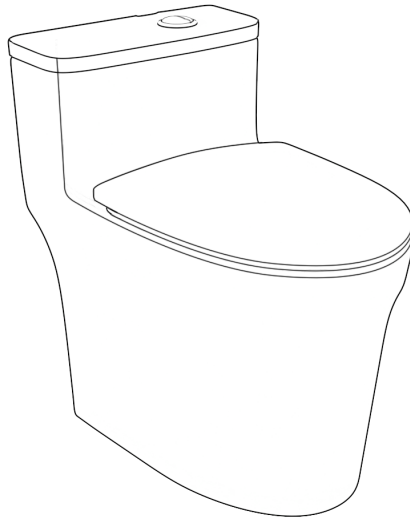

Compact One Piece Toilet 6666

Contact our Customer Care Center

- USA: (+1) 347-368-7521 (GMT-8/ 9:30-18:30/ Mon-Fri)
- Office Address: 12100 W 52nd Ave, Wheat Ridge, CO, 80033, United States
- www.givingtreehome.com

READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT

- 2 people are required to lift and during entire installation of this product
- Installation of this products by an inexperienced installer may result personal injury!
- We reserves the right to change, update, modify, alter, redesign this manual/ product or its policies without prior notice!
- We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!
- We are not responsible for local code compliance for this product. building and plumbing codes may vary from state-to-state in
- Accordance to your location. we are not resonsible for providing any compliance certifications.
- under no circumstances we are shall not be liable for any and all incidental damages sustained in connection with this product.
- neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.
- under no circumstances we shall not be liable for any and all fees, cost of installation/reinstallation/removal, subsequent damage or transportation in case of the product defect

TOOLS AND MATERIALS



Soft Cloth
or Blanket



Silicone



Silicone/
Caulk Gun



Tape
Measure



Pencil/
Marker



Safety
Glass




Knife



Adjustable
Wrench




Channel
Lock Pliers

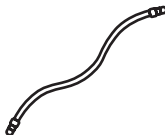

Adjustable
Socket Extension



 Philips
Screwdriver



Level




Putty Knife


PARTS LIST

	Bowl with lid x1		Wax Ring x1		Plastic washer x2
	Toilet Seat Set x1		Mounting Screw x2		bolt cap decoration x2
	The plastic piece x2		Expansion screw x2		T-Bolt Nuts and Washers x2


PRODUCT SIZE

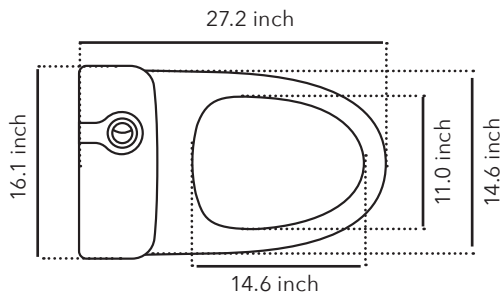

Top view

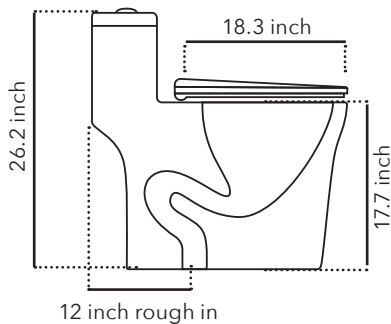

Side View

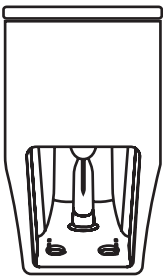

Back View

REMOVE OLD TOILET


IMPORTANT!

Shut off main water supply prior to installation!


1. Shut off water supply line. If you do not have shut-off valve near the toilet shut off main water supply line.
2. Flush the old toilet and make sure that tank is empty.
3. Disconnect and remove water supply line connected to the toilet's tank.
4. Remove old toilet, bolts, nuts from the closet flange.
5. Clean closet flange area from old wax ring and putty sealant using putty knife from the base area.
6. Clean any remaining debris and wipe any water at the installation area
7. Temporarily plug flange on a floor with a flange plug or towel to prevent gasses from escaping.

INSTALLATION STEPS


1. Place the toilet in the designated position

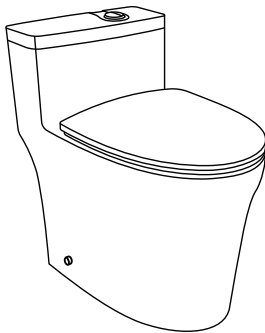


2. Place the toilet in the designated position

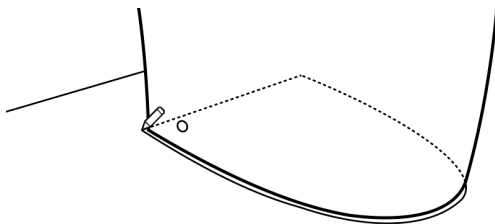


3. Vertically mark the intersection points along the side holes

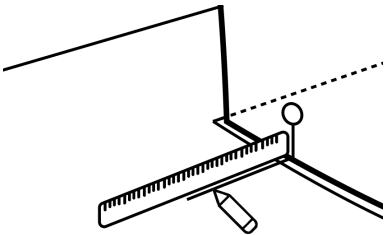


4. Move the toilet aside and measure the drilling hole locations, with a distance of 2.95 inches from the intersection points

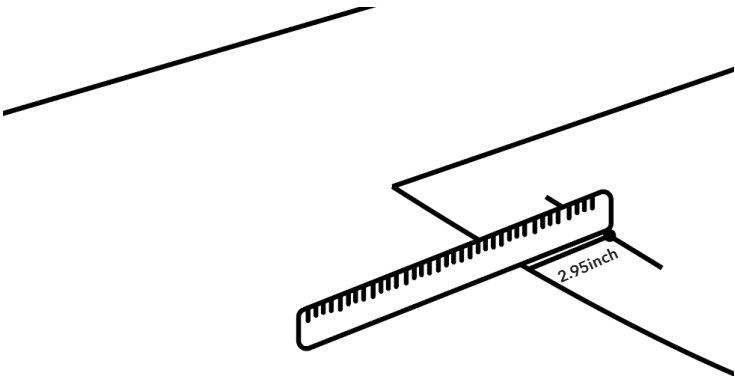


5. After positioning, drill the holes

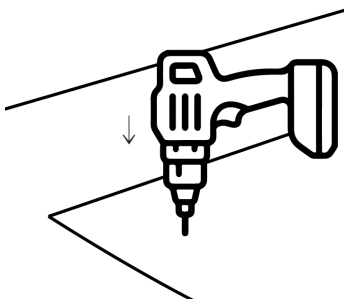


6. Install the expansion bolt sleeves

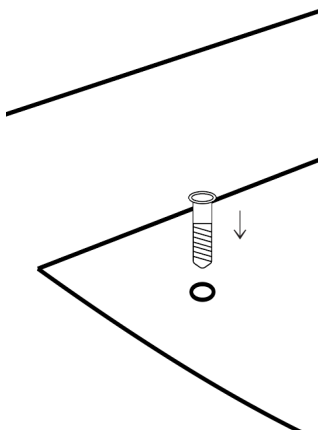


7. Tighten the L-shaped bolts, positioning them as close as possible to the left and right sides of the toilet, with adjustable positioning

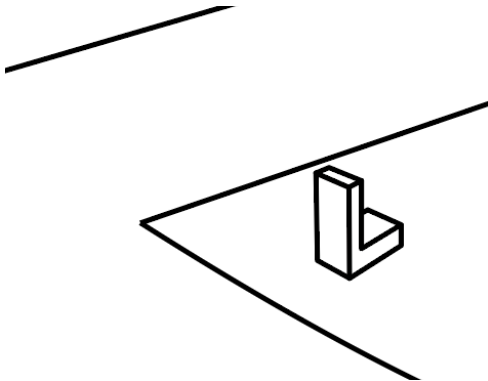


8. Place the toilet to confirm the proper position

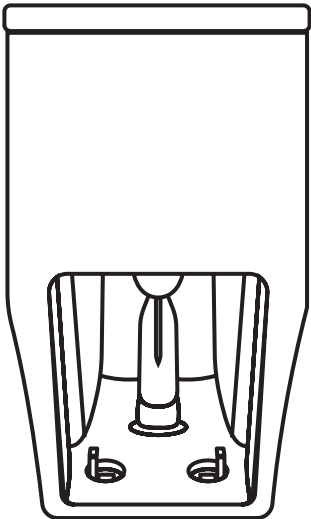

9. Screw in the side holes, securing the toilet to the L-shaped bolts, and cover with decorative caps

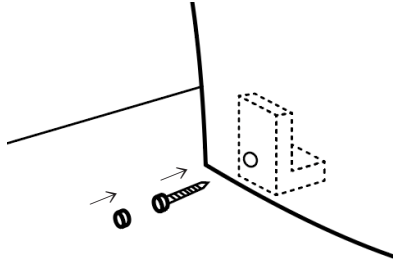

10. Installation is complete

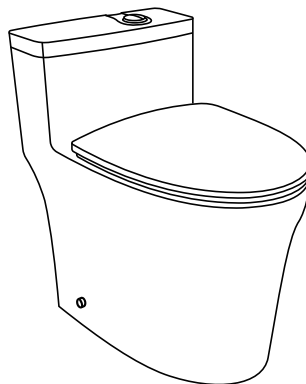


ADJUSTMENT & MAINTENANCE (DUAL FLUSH VALVE)

Important Note: Flush GPF amount is factory set. (1.6GPF/1.1GPF)

No additional adjustment is required. This page is for reference only.

All adjustments are already made by manufacturer.

Full flush and half Flush range will decline when the button is moved upward from the bottom.

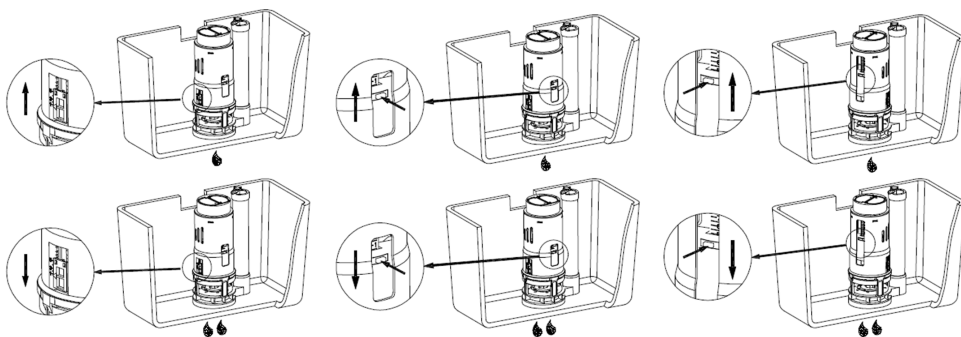

Full flush adiustment-1



Full flush adjustment -2

Half flush adiustment-1

1. Full flush requires the adjustment of 2 valves, the "FULL" red valve and the "FULL" green valve. Adjust upwards to reduce the water flow and downwards to increase the water flow. 2 valves must be synchronized.

2. Half flush requires the adjustment of 1 valve, the "HALF" green valve.

TROUBLESHOOTING

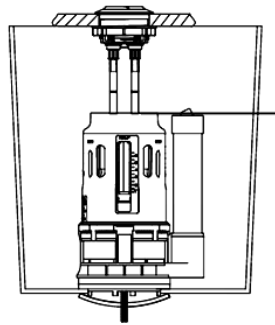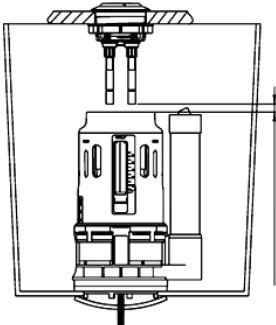

If the rod is too short, please re-adjust it (outward rotation).

If the rod is too long please cut-off the extra length and re-adjust it.

MAINTENANCE & CARE

Use soft sponges or soft-cloths to clean the surface. Always rinse thoroughly any cleaning solutions immediately after cleaning. Do not any chemical remain on the surface for extended periods of time.

IMPORTANT!

DO NOT USE: Abrasive cleaners such as: acid, ammonia, bleach, and similar solutions. Use of such solutions may cause corrosion, finish peeling, and/or dull the surface.

DO NOT USE: Abrasive sponges or cloth. Never use steel, wool, or wired brushes that will permanently scratch the surface.

FILL/FLUSH VALVES MAINTENANCE & CARE

Do not pour any amounts of chlorine or any other chemicals into the tank.

Use of chemical products will result in damage to the fill valve and flush valve components and may cause flood and property damage

Note: fill and flush valves are maintenance free. No maintenance is required.

Retain these installation instructions for future reference!

