

Towel Warmer

E1682

User Manual

Returning Policy

If the item needs to be returned, please contact our Customer Service Team.
We will provide a prepaid returning label.

NOTE: We are not responsible for any costs incurred if the buyer returns the item themselves.

Instruction

Thank you for purchasing towel warmer.

With normal care and proper treatment, it will provide years of reliable service.

 
Please read all instructions before using this product.

Please retain this manual for future reference.

FEATURES


- Set low/ high heating temperature .
- A disc holder for inserting a fragrance disc to add a fresh, odor-neutralizing scent to your towels and blankets.

CONTENTS

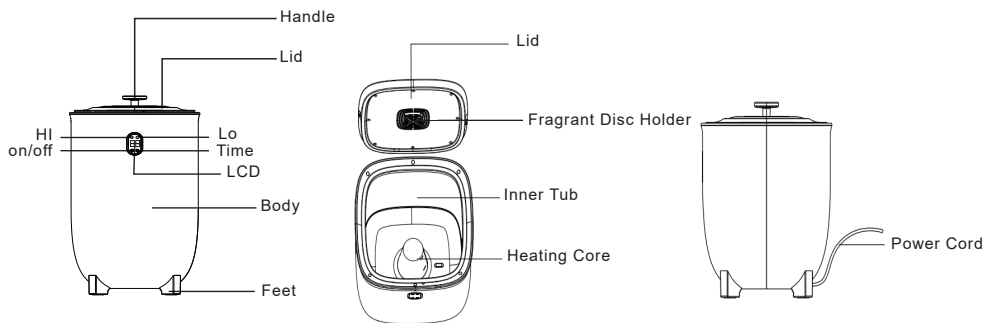

Note: The capacity of this model is 40L

 Instructions for indicators

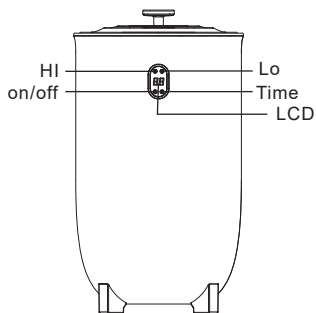

Using instruction

1.

Take out the machine from the packaging box.



2.

Remove the plastic bags on the product and the lid.



 
3.

Take out all the accessories inside and check if they're complete




4.

Throw your towel into the machine. (please make sure the towel is dry and try to arrange it in a fluffy way)

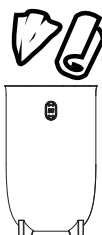

5.

 Insert the 3 - prong grounding plug into a AC120V electrical outlet.

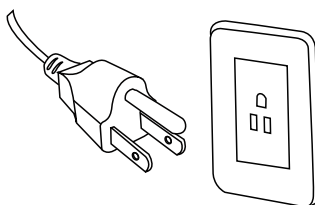

6.

Press the “”, the machine starts to work.



7.

Press the “” to adjust the expected working minutes(20/40/60/90). And the default time is 60 minutes. The time shown here is a countdown of the remaining working time



Using instruction

 
8.

Press "HI" or "LO" to adjust the mode of heating power. The button will be lit after you press the corresponding buttons. The default gear is "HI"




9.

When the temperature inside the machine is higher than 122 °F, the "HI" or "LO" buttons will turn red. Please do not touch the internal surface with your hands.

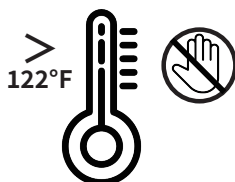

10.

 When the scheduled working time is completed, the machine will stop working. Now you can open the lid and use the towel. However, if you need to touch the internal surface to move the machine, do so after the indicator light has turned white (the inner wall temperature is below 122°F)

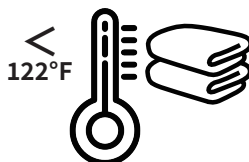

Using tips

1.

It would only take 6 minutes to reach a high temperature.



 
2.

You can stop the heating program at any time by pressing the “” for once when the machine is working.




3.

After the heating cycle is complete, the interior surface of the towel warmer will be too hot to touch until at least 30 minutes.

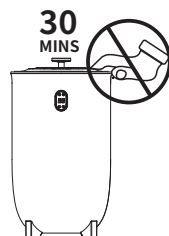

4.

 4 towels (55*27.5 inches) can be accommodated

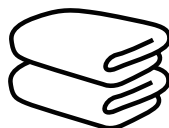

5.

 
The internal diameter: 12 inches
The internal height: 18.5 inches



Instruction of fragrance disc

This fragrance disc holder additionally design is for some users who like to use aromatic tablets or essential oils when warming towels. It would be an innovative air refresher for your home, which also effectively eliminates odors

1. Before insert the fragrance disc into the fragrance disc holder, please remove its sealed plastic bag.
2. A carrier(like a wood chip) would be needed if you want to use essential oils.
3. The fragrance disc holder is located on the underside of the lid. It can accommodate the size of objects with a thickness of less than 4mm and a diameter of less than 47mm.

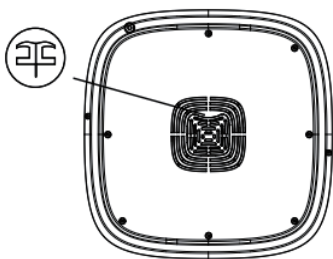

The fragrance disc is an innovative air fresher for your home, which also effectively eliminates odors.

Tips for best results

1. Use cotton or cotton blend towels or fabrics only.
2. For fast and even heating, loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Use only with DRY fabrics.

NOTE: Do NOT use with damp or wet articles.

4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the Towel & Blanket Warmer, resulting in damage to the fabric and the product.
5. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid mid-cycle may result in slower heating times.

NOTE: Condensation on the lid and interior of the product is normal.

6. When used with the Towel & Blanket Warmer, the Fragrance Disc may warp over time.

Safety Instructions

Please read the following instructions carefully before putting your device into use. Please retain these instructions for further reference!



WARNING

To reduce risk of fire, electric shock or serious injury to persons when using the appliance, adhere to the following basic precautions:

FOR HOUSEHOLD USE ONLY

Always unplug the product from the electrical outlet immediately after use. Do not use the device for anything other than its intended use.

- Do not place or store the device where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid. **DO NOT IMMERSE IN WATER.**
- Do not reach for the product after it has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and/or liquids are not spilled onto the device.
- The device should never be left unattended when plugged in.
- Close supervision is necessary when this device is used near children or disabled persons.
- Only use the device for its intended use as described in this manual.
- Never operate the device when it has a damaged cord or plug, when it is not working properly or when it has been dropped, damaged or immersed in water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the exterior of the device or let the cord hang over a table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces and vent.
- Do not use accessory attachments not recommended by the manufacturer, as this may cause injuries.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Cleaning and Maintenance

- Before cleaning, make sure the power supply is turned off and the plug has been pulled out from the socket.
- Use a soft dry cloth to wipe the product when the device is damp to touch.
- Do not pull the power plug by wet hands.
- Do not use water washing the product, do not spray the water or any liquid to the interior of the device.

Maintenance

- Make sure the power supply is turned off and the plug has been pulled out from the socket.
- Sweep off the dust. Keep the device clean and away from damp places.
- Store the device in a cool, dry place out of reach of children.
- Avoid contact with sharp edges or pointed objects which might cut or puncture the cover of the device.



- Before plugging, check and make sure the power cord is undamaged.
- Do not use the wet hand to plug in the adapter.
- Please don't stand or sit on the product.
- When moving the product, please don't pull the power cord or drag the product directly to avoid any damaged caused.
- Please don't let children and pets play the products for preventing any accident happened.
- Do not use the wet hand to pull out the power cord in order to avoid any electric shock.
- Do not use this product in damp environment to avoid electric shock.