


INSTRUCTION

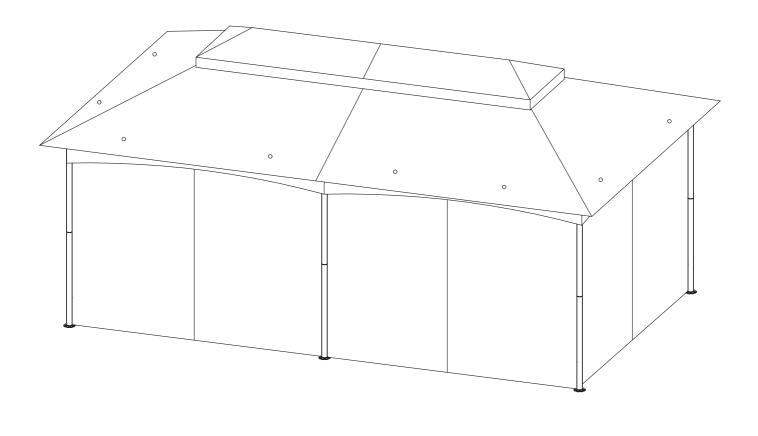

12*20FT GAZEBO

We appreciate the trust and confidence you have placed in HOTEEL through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing HOTEEL.

Making The Best Outdoor Furniture For You

- ·Read all instructions throughly.
- Open and check boxes for parts list.
- If any part is broken or missing call or email customer service.
- Keep all packaging until you are satisfied with your product.
- Return is not accepted without original packaging.
- Make sure you have ample space for assembly.
- Three or more people are required.

Safety Information

- Tighten each bolt firmly and properly. Do not completely tighten screws until all screws are started.
- Some parts may contain sharp edges. Wearing protective gloves are necessary.
- •Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product. Children under the age of 10 should be supervised by a competent adult while using this furniture.
- Please keep children out of the assembly area during assembly.
- Never use this product as a support. Do not shake, lean, or climb on the product at any time.
- Do not erect the structure in heavy winds or inclement weather.
- Do not leave up this unit for extended periods of time, as it is not a permanent structure or design to withstand sustained wind or rain. It is a
- temporary shelter that shields you from sunlight and rain.
- The screens also block flying insects.
- Do not use candles, matches, or any open flame near the tent.





DANGER: Do not allow children to play with plastic wraps or small parts to prevent potential chocking hazard.



CAUTION: Read all the instructions before assembly. Failure to do so may result in faulty assembly and potential injury!

Prepare the work area.

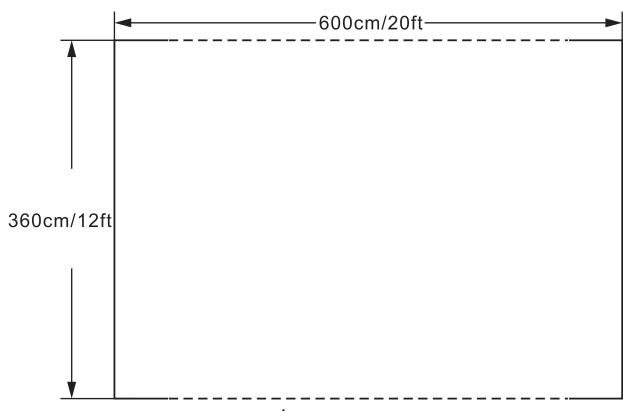

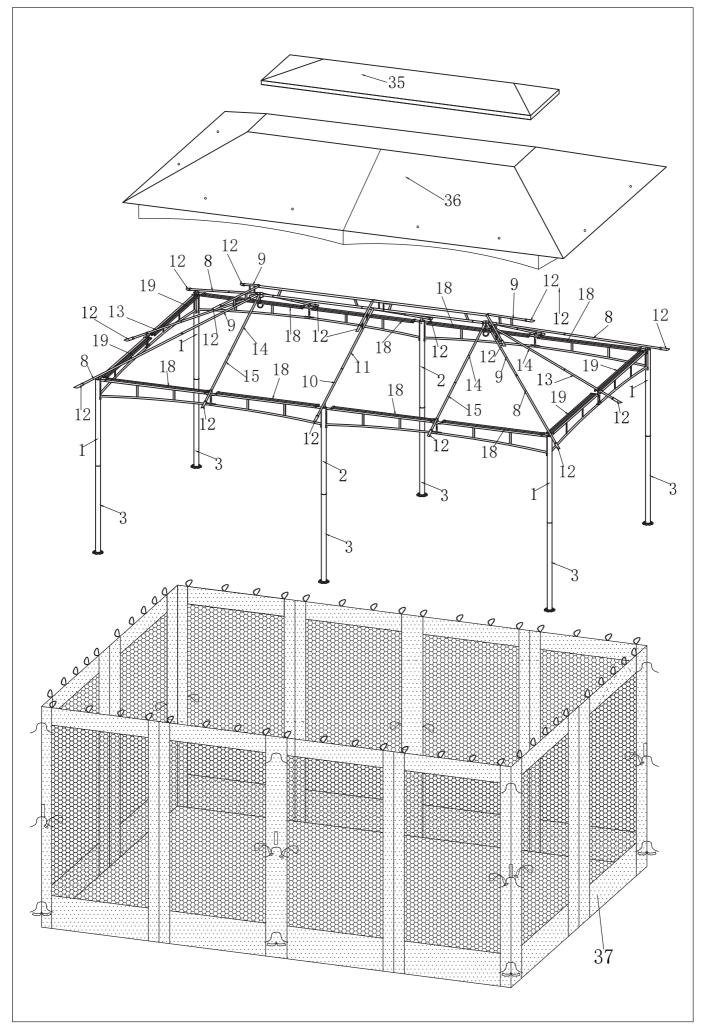

NO.	Quantity	Description	Reference Image
1	4	Top Pole (for the Four Corners)	
2	2	Top Pole (for the Middle of the 20FT Side)	
3	6	Bottom Pole	
4	2	Beam	
5	2	Beam	
6	4	Beam	
7	4	Beam	
8	4	Corner Roof Bar	
9	4	Corner Roof Bar	
10	2	Roof Bar	
11	2	Roof Bar	
12	18	Plastic Adjusting Lever	
13	2	Roof Bar	C0
14	6	Roof Bar	لى
15	4	Roof Bar	Ç0
16	1	Ejector Pin	
17	1	Ejector Pin	
18	8	Looping Rod (for the 20FT Side)	77
19	4	Looping Rod (for the 12FT Side)	<u>[7</u>]
20	1	Ejector Pin Connector	
21	2	Top Connector	
22	6	Beam Connector	

NO.	Quantity	Description	Reference Image
23	6	Screws	[11111] M6X35
24	24	Screws	[] M6X30
25	12	Screws	[]1111] M6X15
26	12	Screws	M6X15
27	42	Nut	@ M6
28	42	Screw Cap(plastic)	
29	42	Screw Cap(plastic)	
30	2	Wrench	5C
31	12	Tent Leg	
32	104	Hook	
33	6	Expansion Screws	M8X50
34	2	Lamp hook	
35	1	Little Top Cloth	
36	1	Large Top Cloth	
37	1	Mosquito Side Wall	
			·

