 


ASSEMBLY INSTRUCTION

ITEM NO.N715P405930

Dining Chair

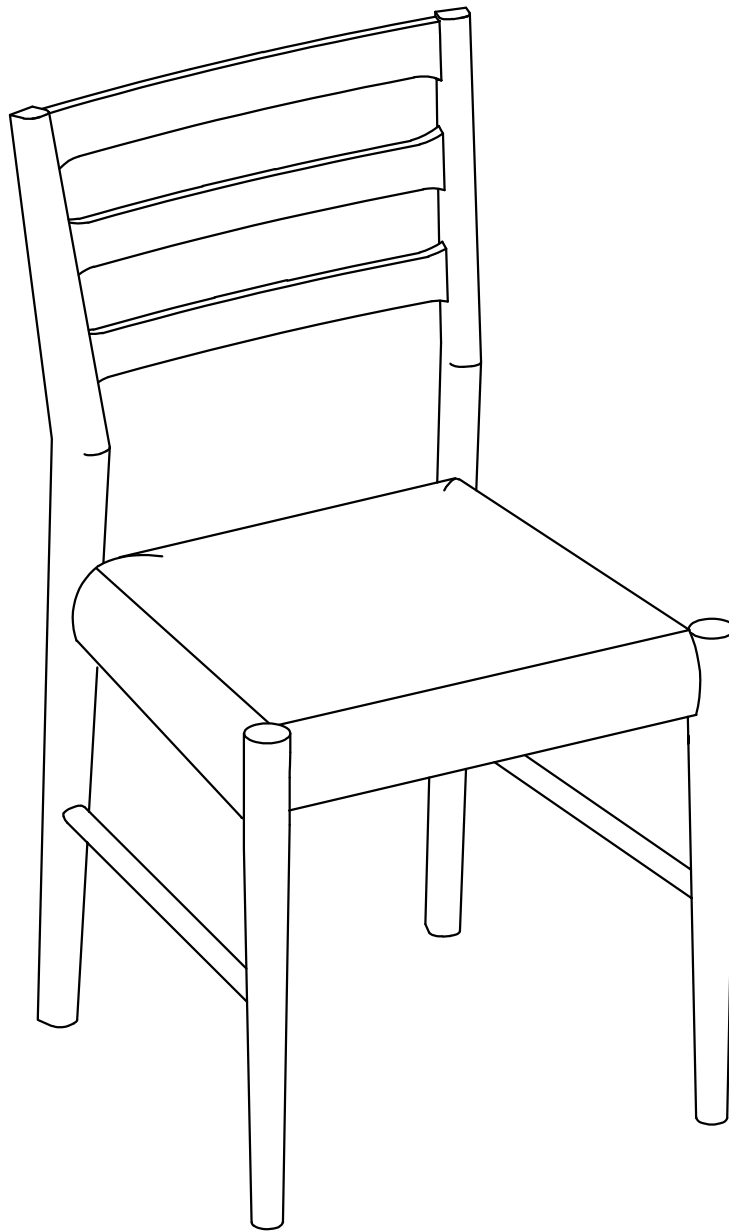

ASSEMBLY INSTRUCTION

ITEM NO.N715P405930

Please read these instructions fully before starting assembly:

 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P405930

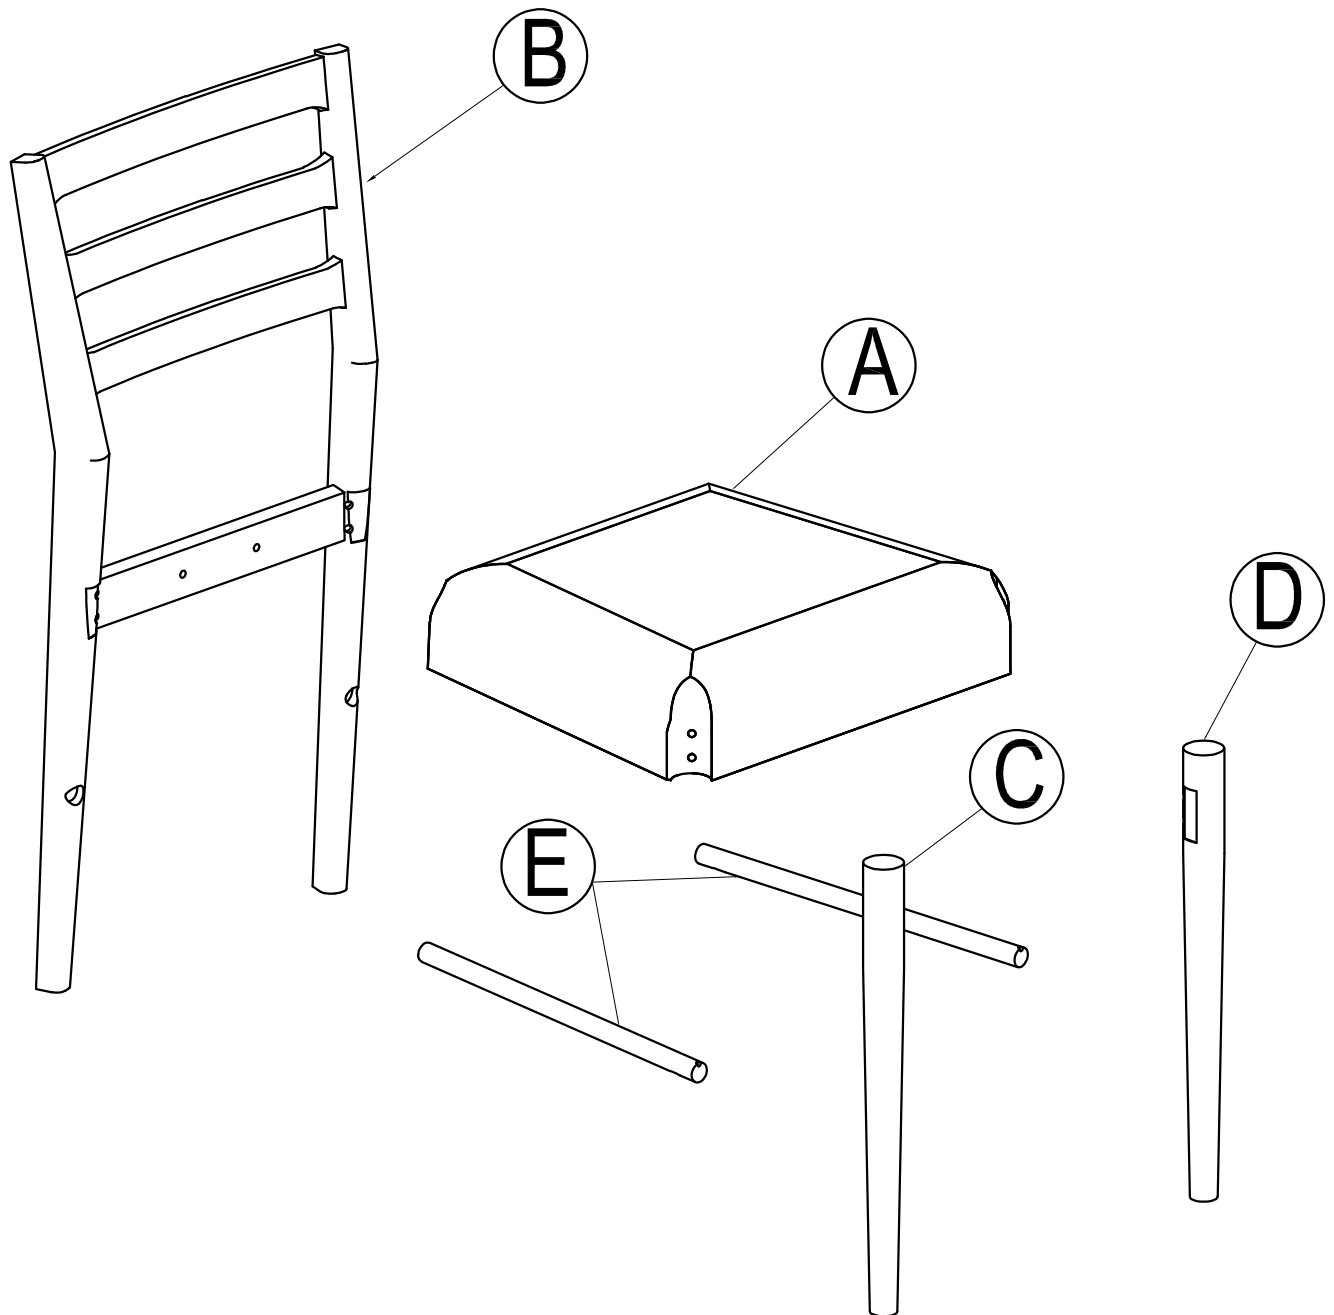


ASSEMBLY INSTRUCTION

ITEM NO.N715P405930


Part List

 Ⓐ

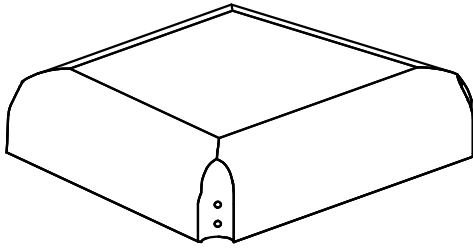

CUSHION SEAT (3 pcs)

 Ⓑ

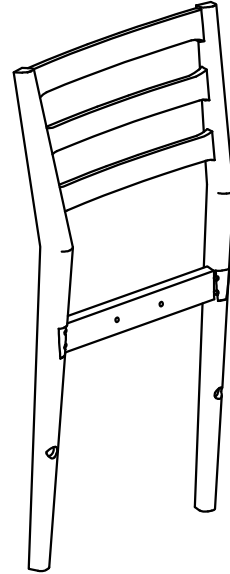


CHAIR BACK (3 pcs)

Ⓒ




LEG LEFT (3 pcs)

 Ⓓ



LEG RIGHT (3 pcs)

 Ⓔ

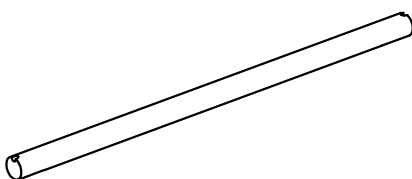


SIDE STRETCHER (6 pcs)

ASSEMBLY INSTRUCTION

ITEM NO.N715P405930

Hardware List

 
①

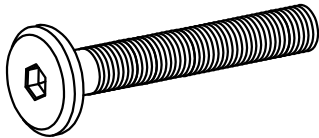

Ø 1/4" x 40mm

BOLT (6 pcs)

 
②

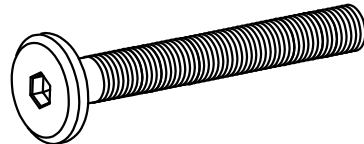

Ø 1/4" x 50mm

BOLT (12 pcs)

 
③

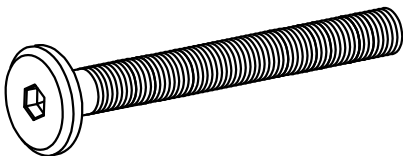

Ø 1/4" x 75mm

BOLT (12 pcs)

 
④



Ø5/16" x 13mm

LOCK WASHER (30 pcs)

 ⑤

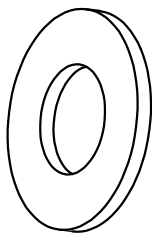

Ø5/16" x 19 x 2mm

FLAT WASHER (30 pcs)

 
⑥



4mm

ALLEN KEY (3 pcs)

⑦




Ø4 x 38 mm

WOOD SCREWS (12 pcs)

ASSEMBLY INSTRUCTION


ITEM NO.N715P405930

 
STEP 1:

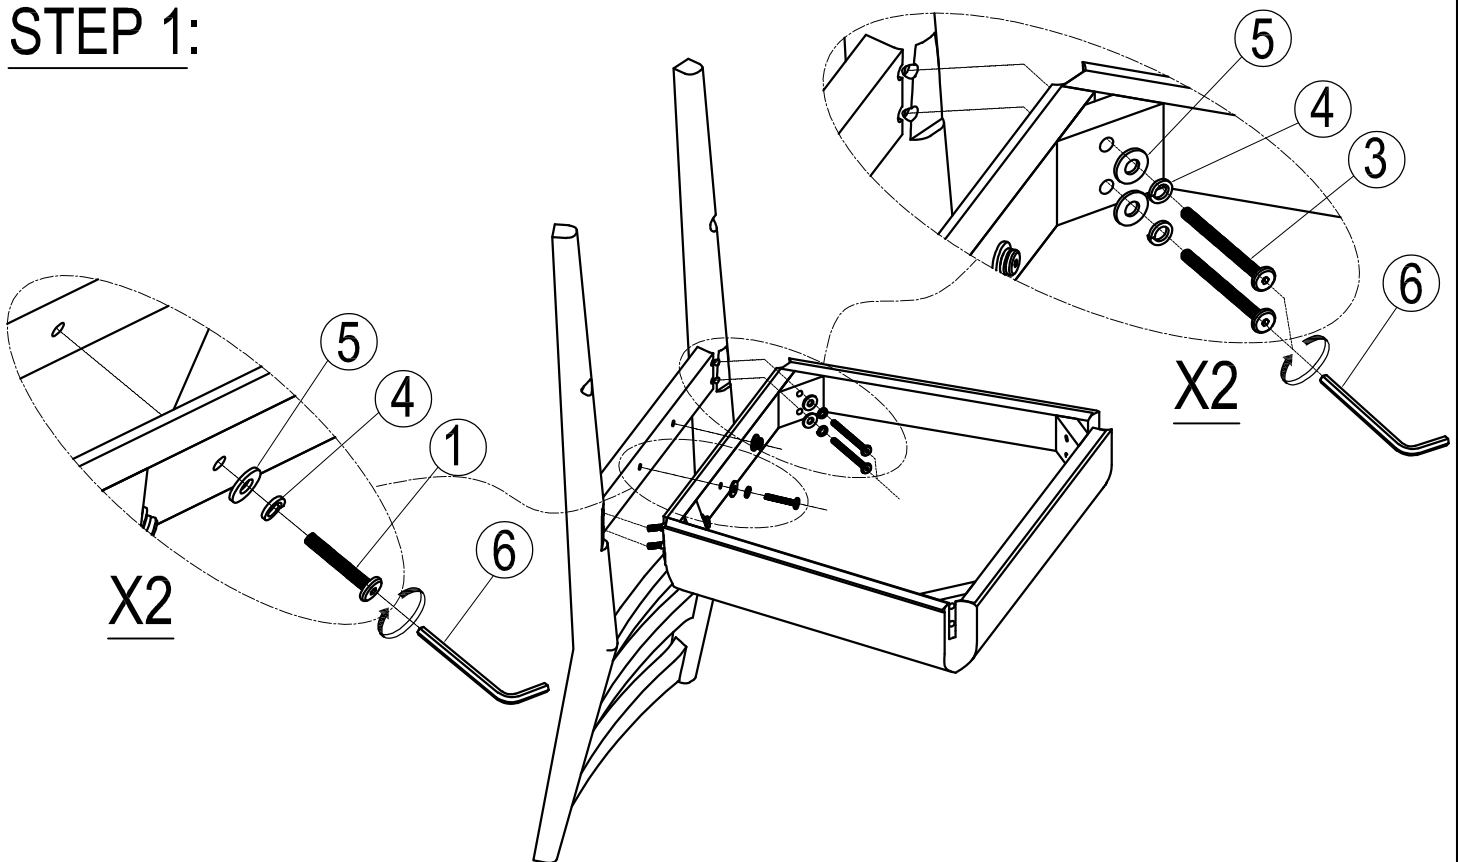

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2mm	ALLEN KEY 4 mm
				
① x 6	③ x 12	④ x 18	⑤ x 18	⑥ x 1

  STEP 2:

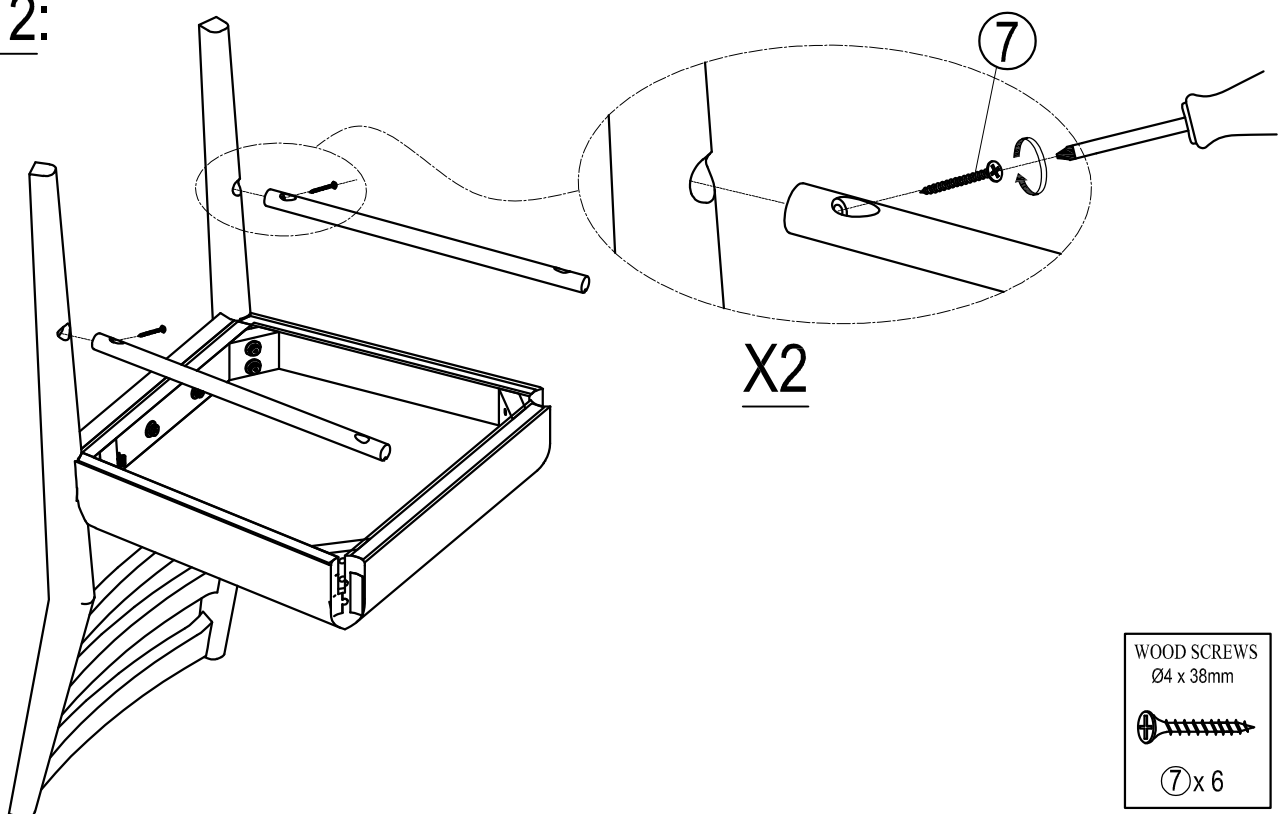



WOOD SCREWS Ø4 x 38mm

⑦ x 6

ASSEMBLY INSTRUCTION

 ITEM NO.N715P405930

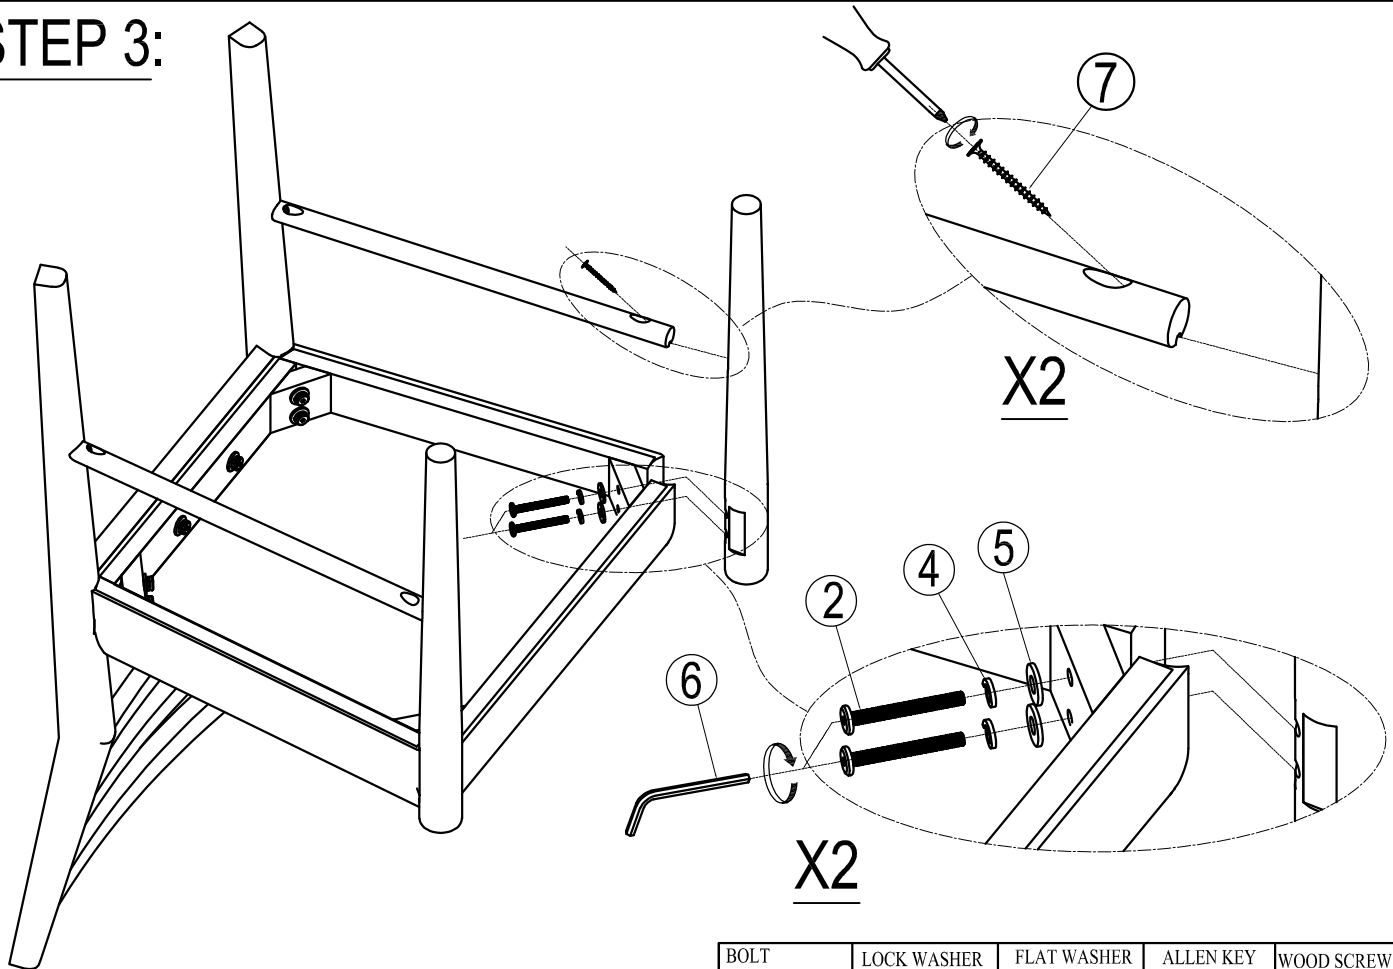 STEP 3:



BOLT Ø 1/4" x 50 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2mm	ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
				
②x12	④x 12	⑤x12	⑥x 1	⑦x 6

COMPLETE

