


ELECTRONIC GUN SECURITY CABINET


INSTRUCTION MANUAL


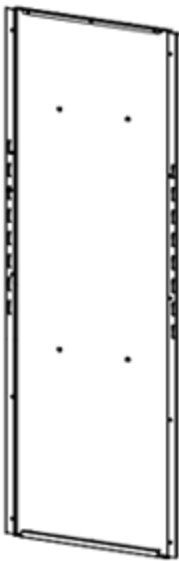


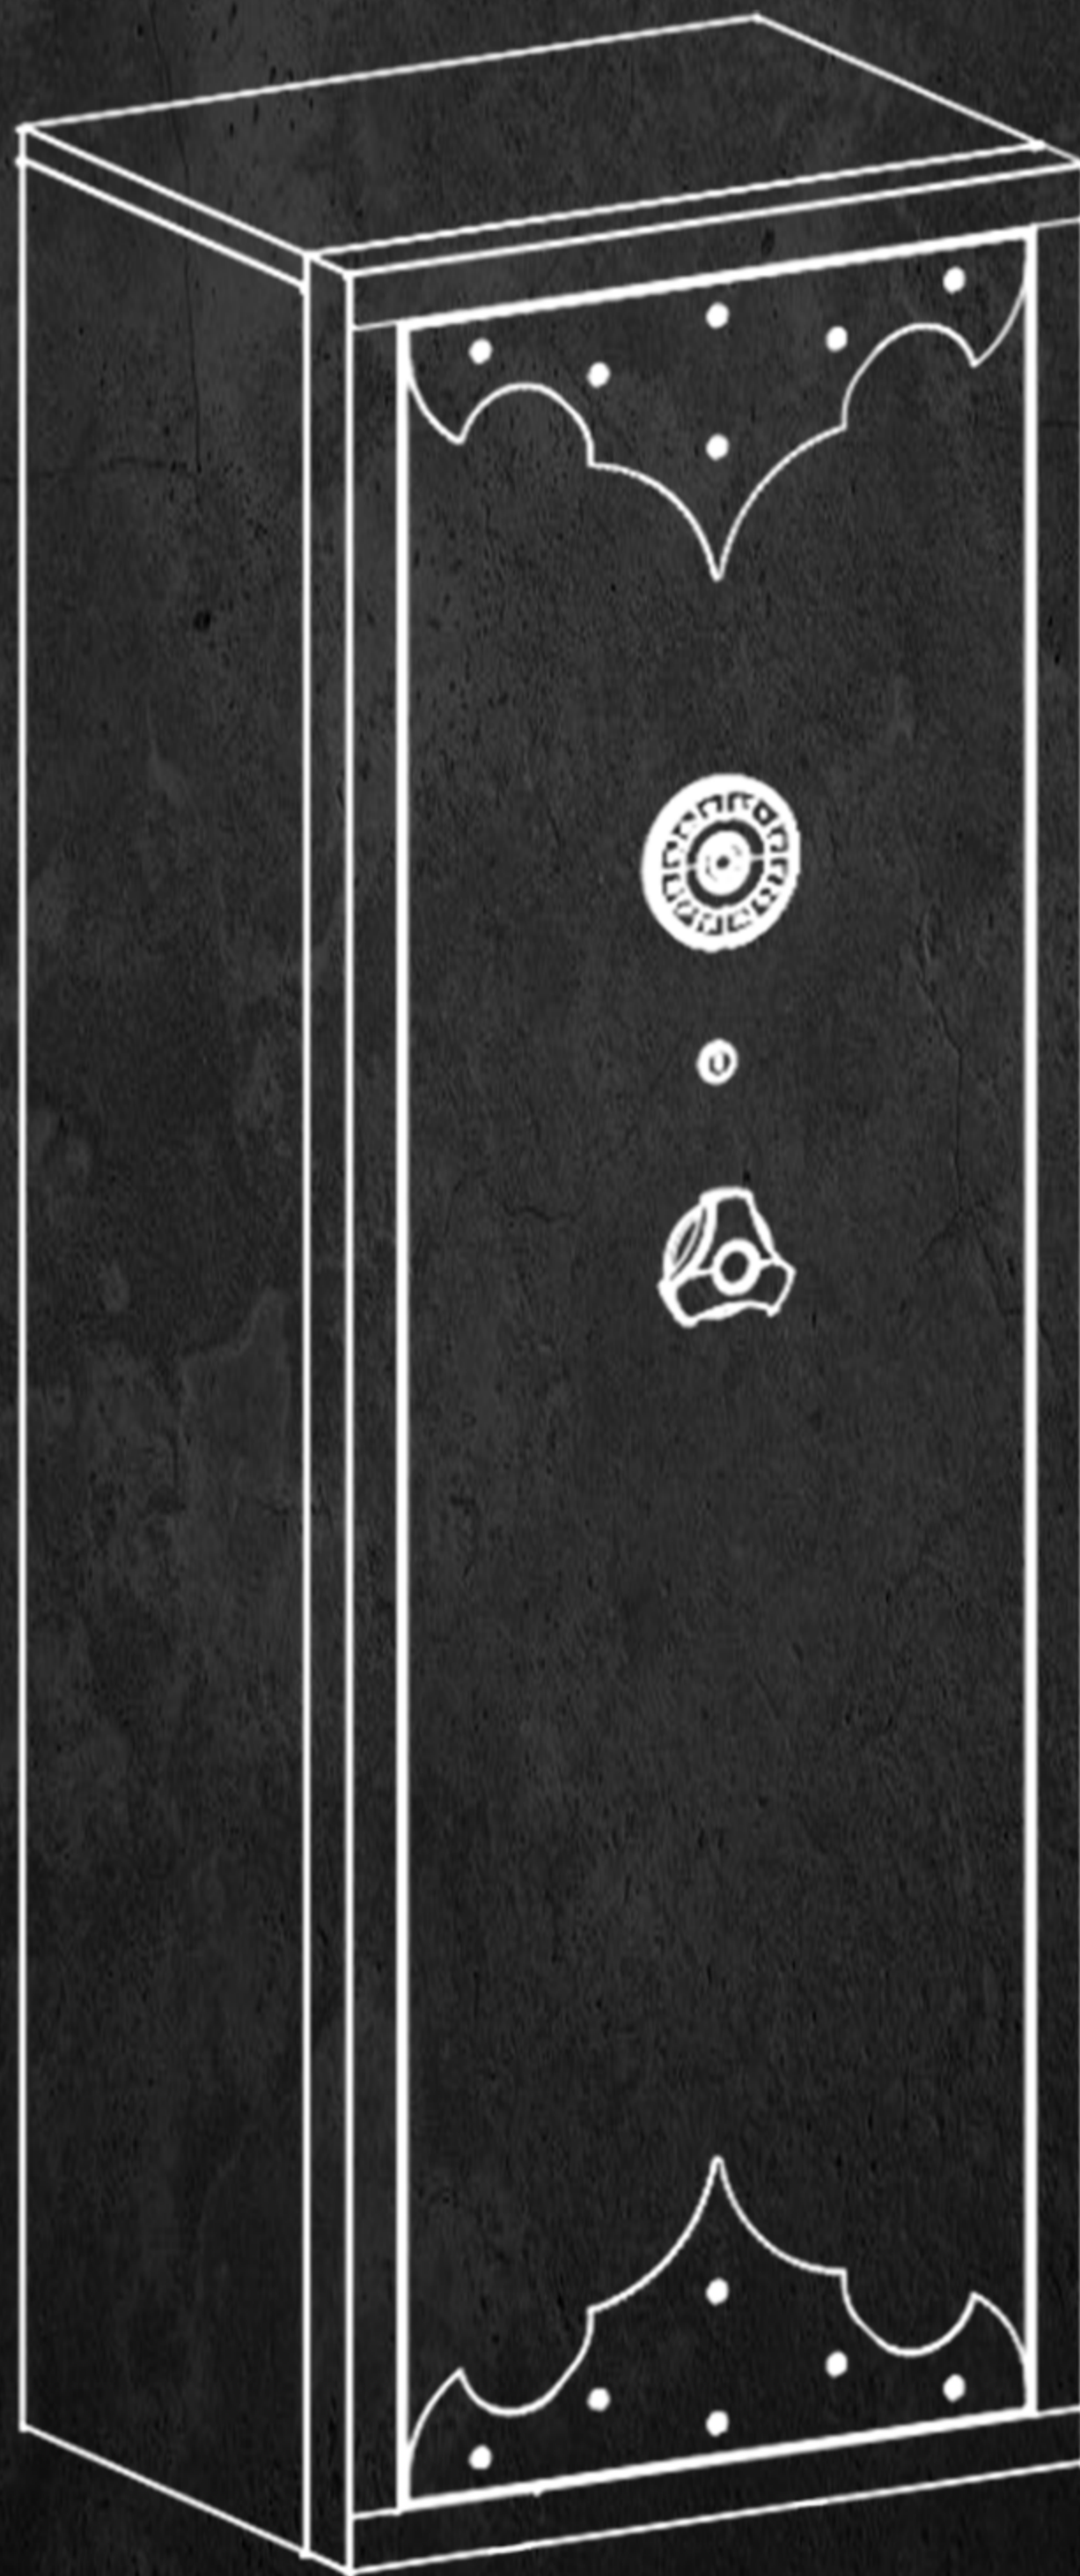






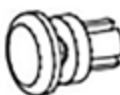


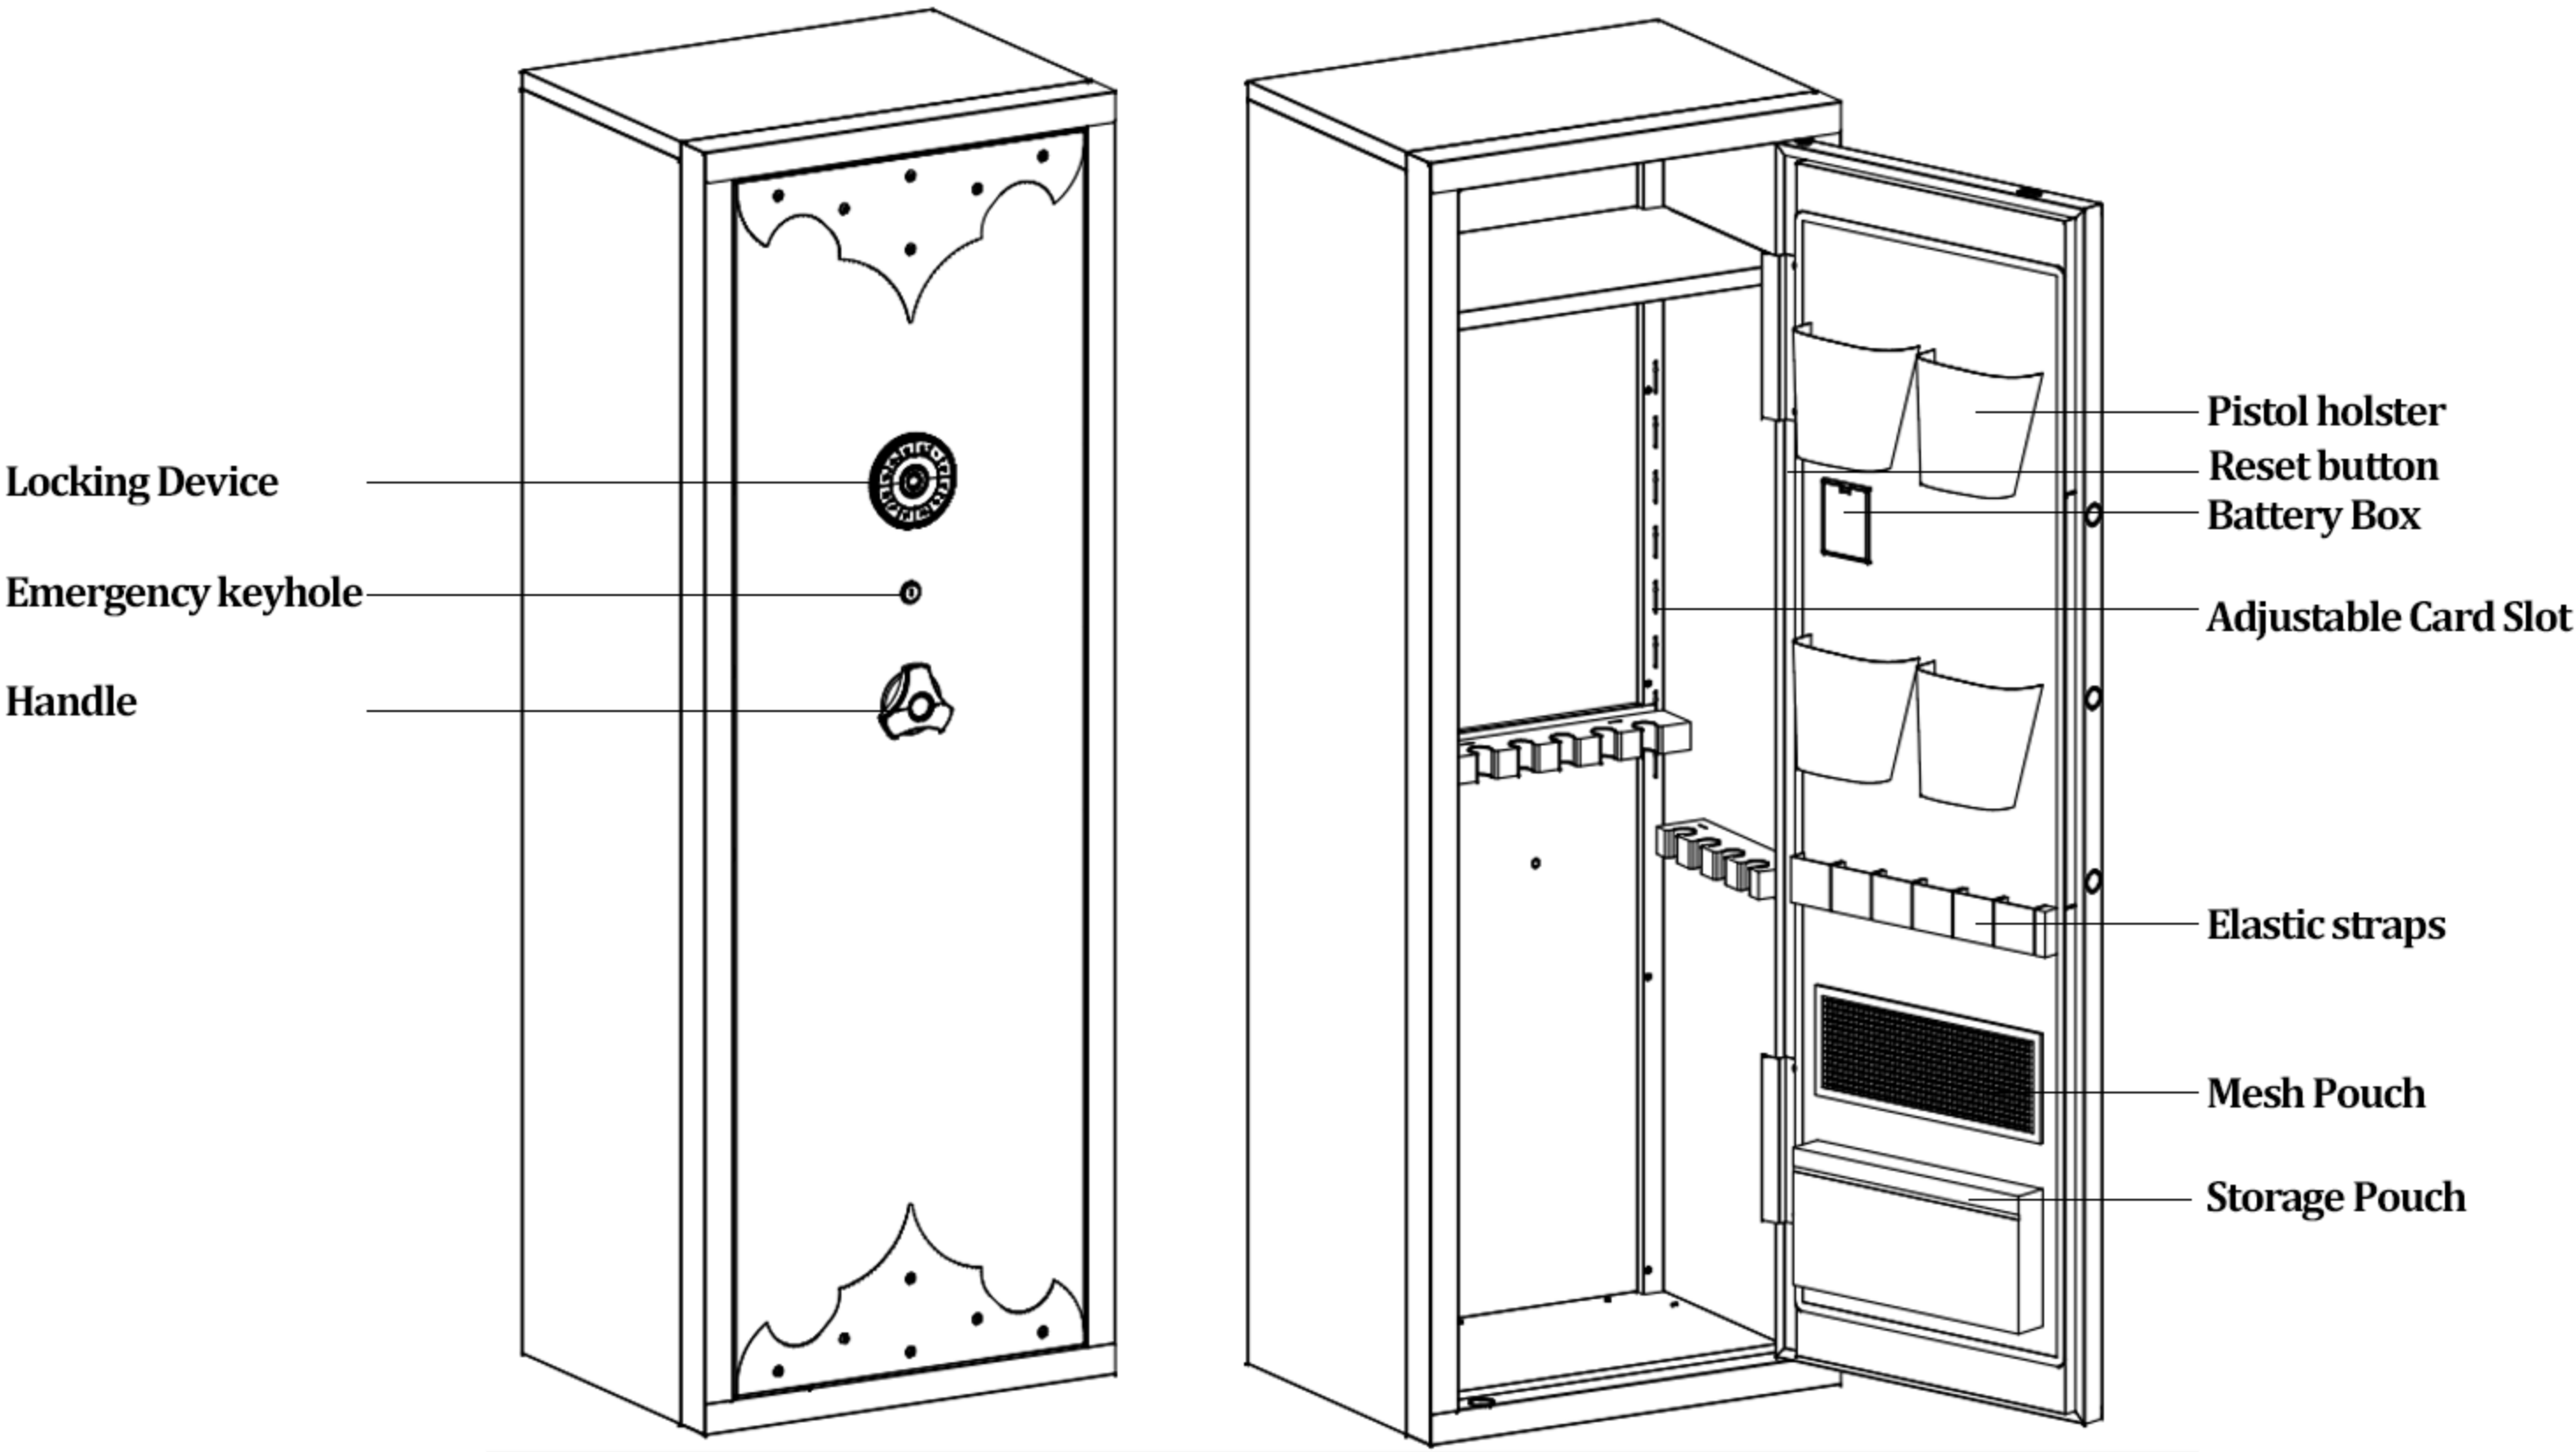
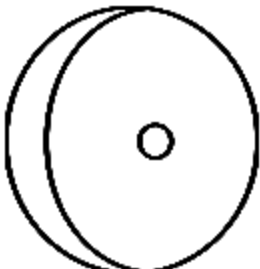





Keep children or unauthorized persons away from your guns

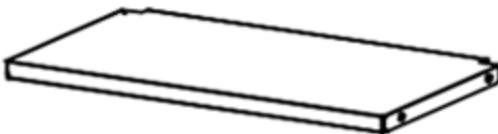
COMPONENT DESCRIPTION

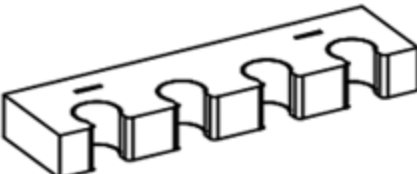Hi friend,
Thank you for your purchase, please take a few minutes to read the instruction manual for better use of the product.



					
Door Frame 1 Pc	Back Panel 1 Pc	Side Panel-L 1 Pc	Side Panel-R 1 Pc		
					
Top Shelf 1 Pc	Bottom Shelf 1 Pc	Clapboard 1 Pc	Gun bracket 1 Pc		
		 39 Pcs	 3PCS		
Gun rack 1 Pc	Gun rack 2 Pcs	Self tapping thread	Plastic screws	Keys	
					
Screwdriver 1 Pc	Gloves 1 Pair	Magnetic LED Light	Expansion bolt		Instruction
					
			External power box		

STRUCTURAL SCHEMATIC

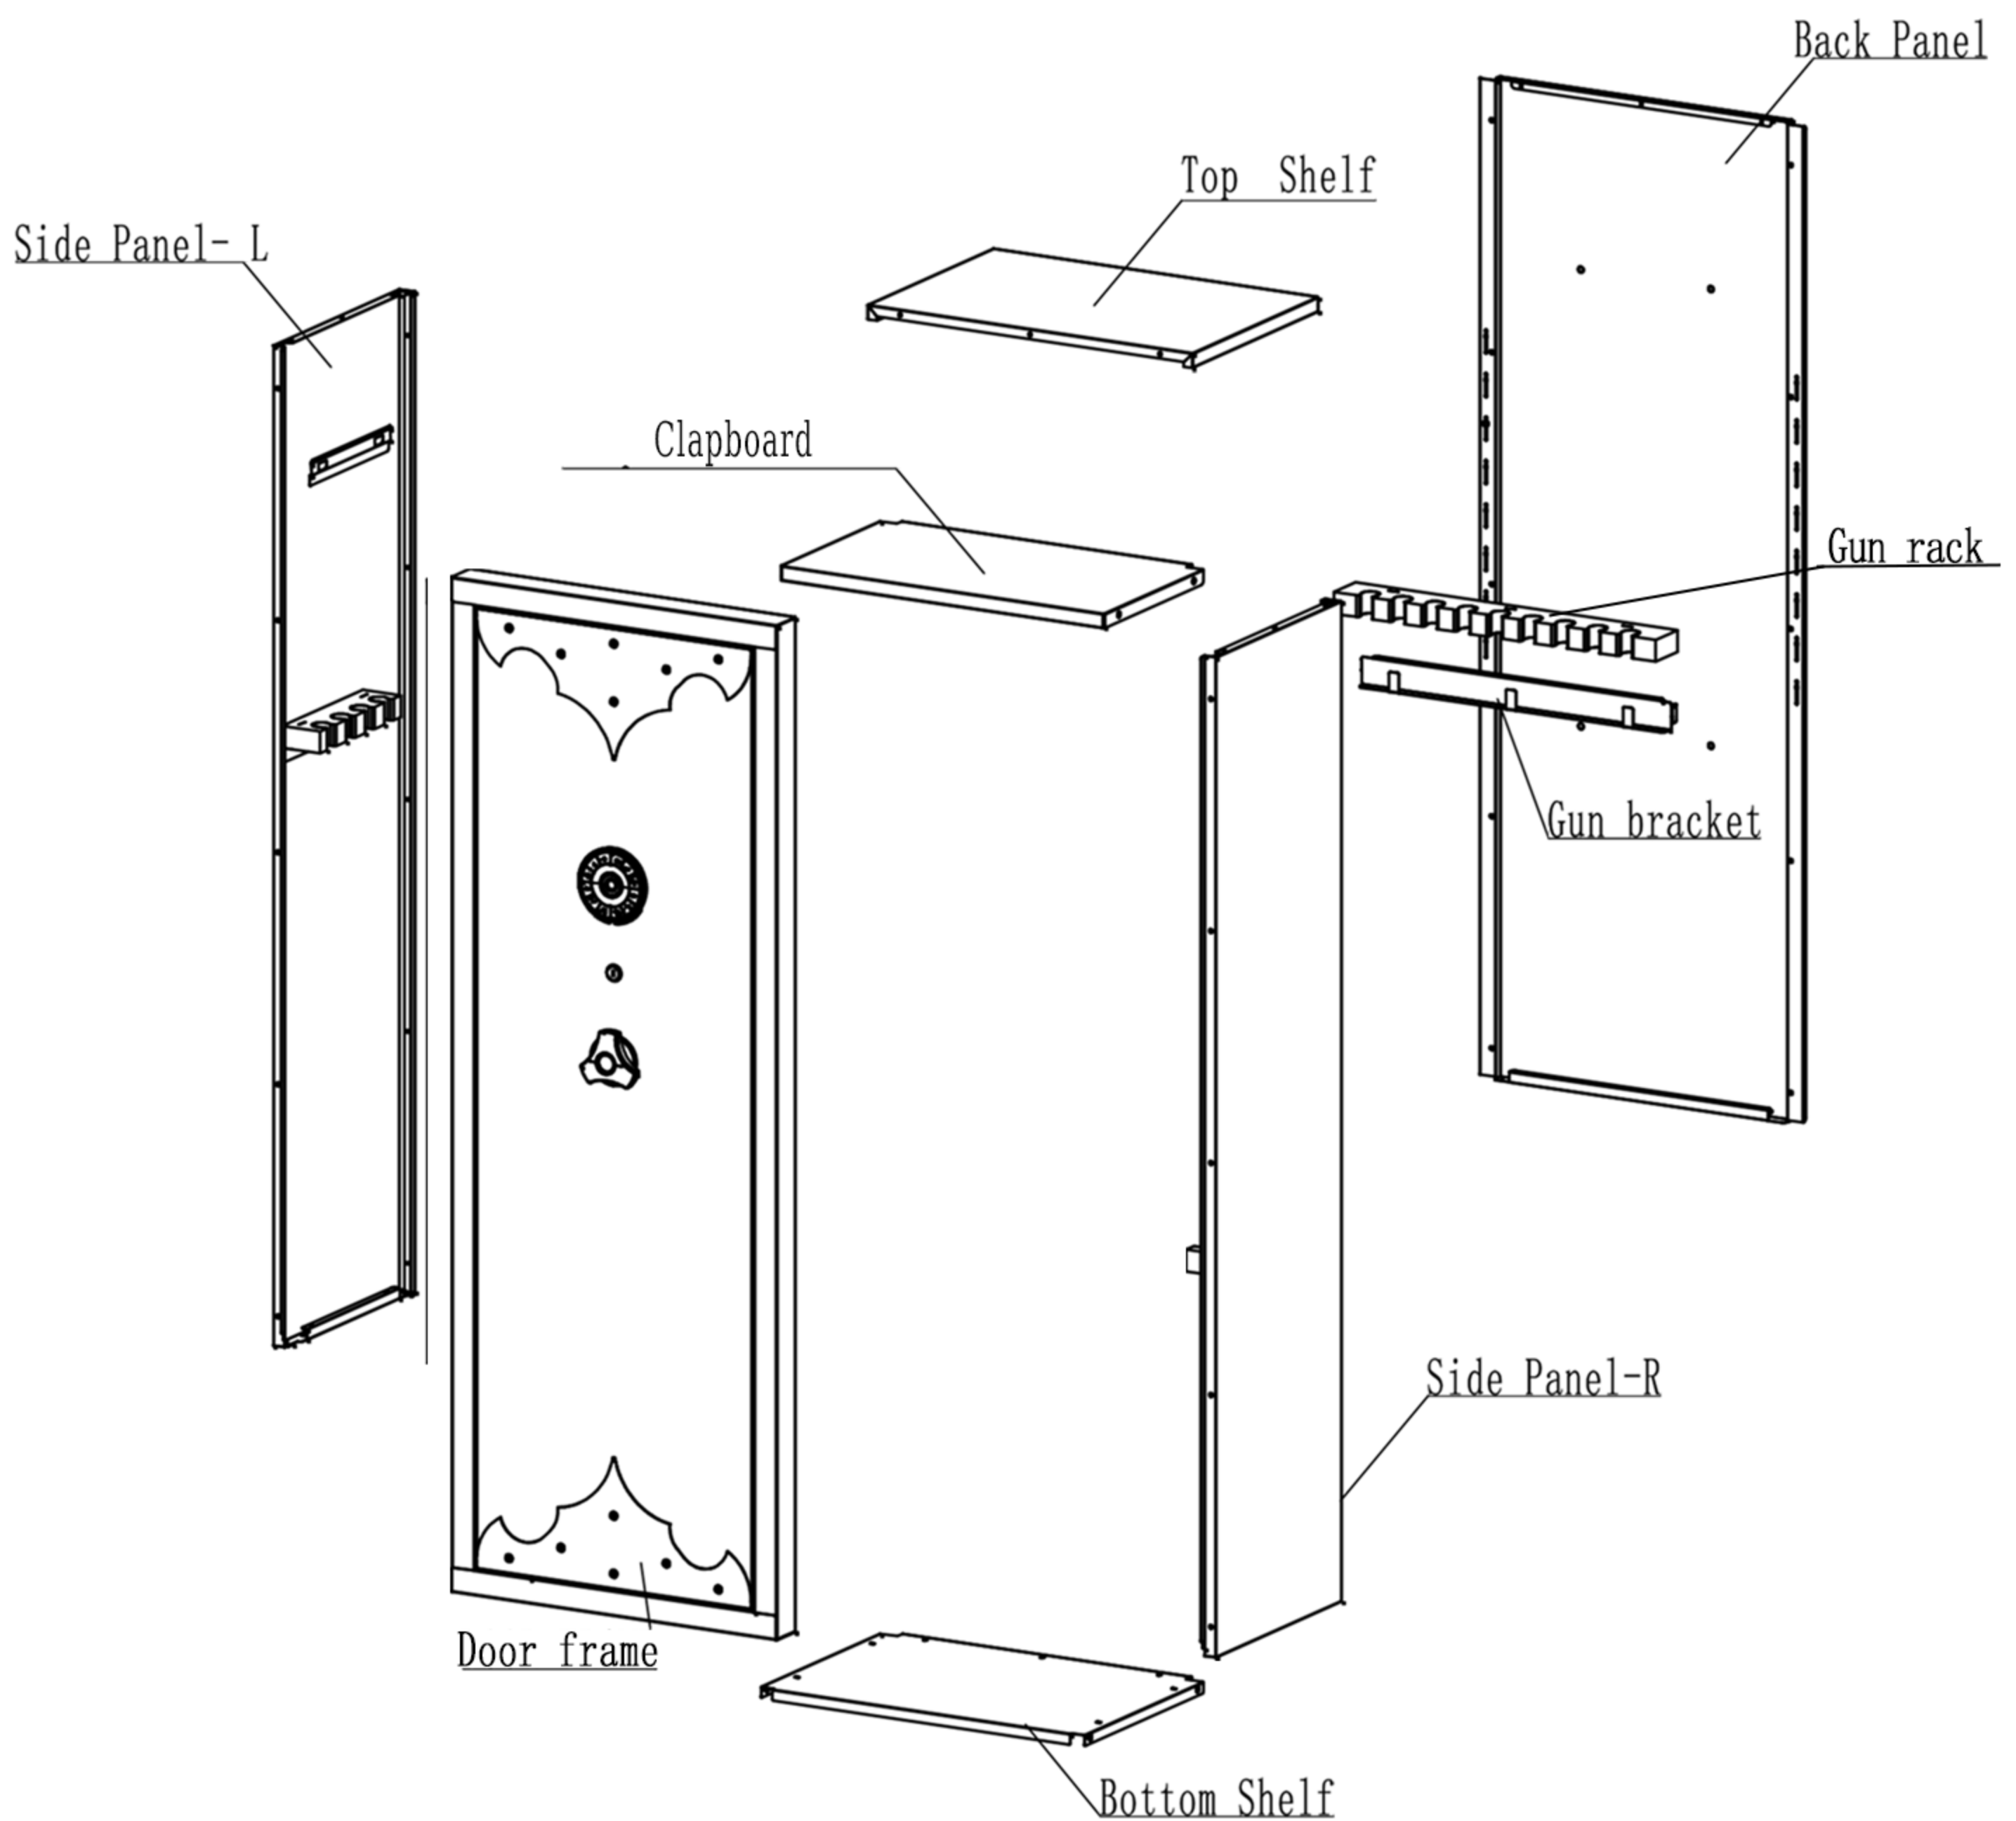

- Please refer to the illustration to identify the parts and accessories of the gun cabinet and check the materials to ensure that they are not damaged.
- During the installation process, please pay attention to loosen the nuts to ensure that all external panels are correct, and tighten the nuts after all panels are assembled.
- If any parts are missing or the goods are damaged, please contact us and we will provide you with a satisfactory solution.



WARNING




Tip Over Hazard

- Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.
- Children should not play around the safe at any time.


INSTALLATION INSTRUCTIONS

Step 1:

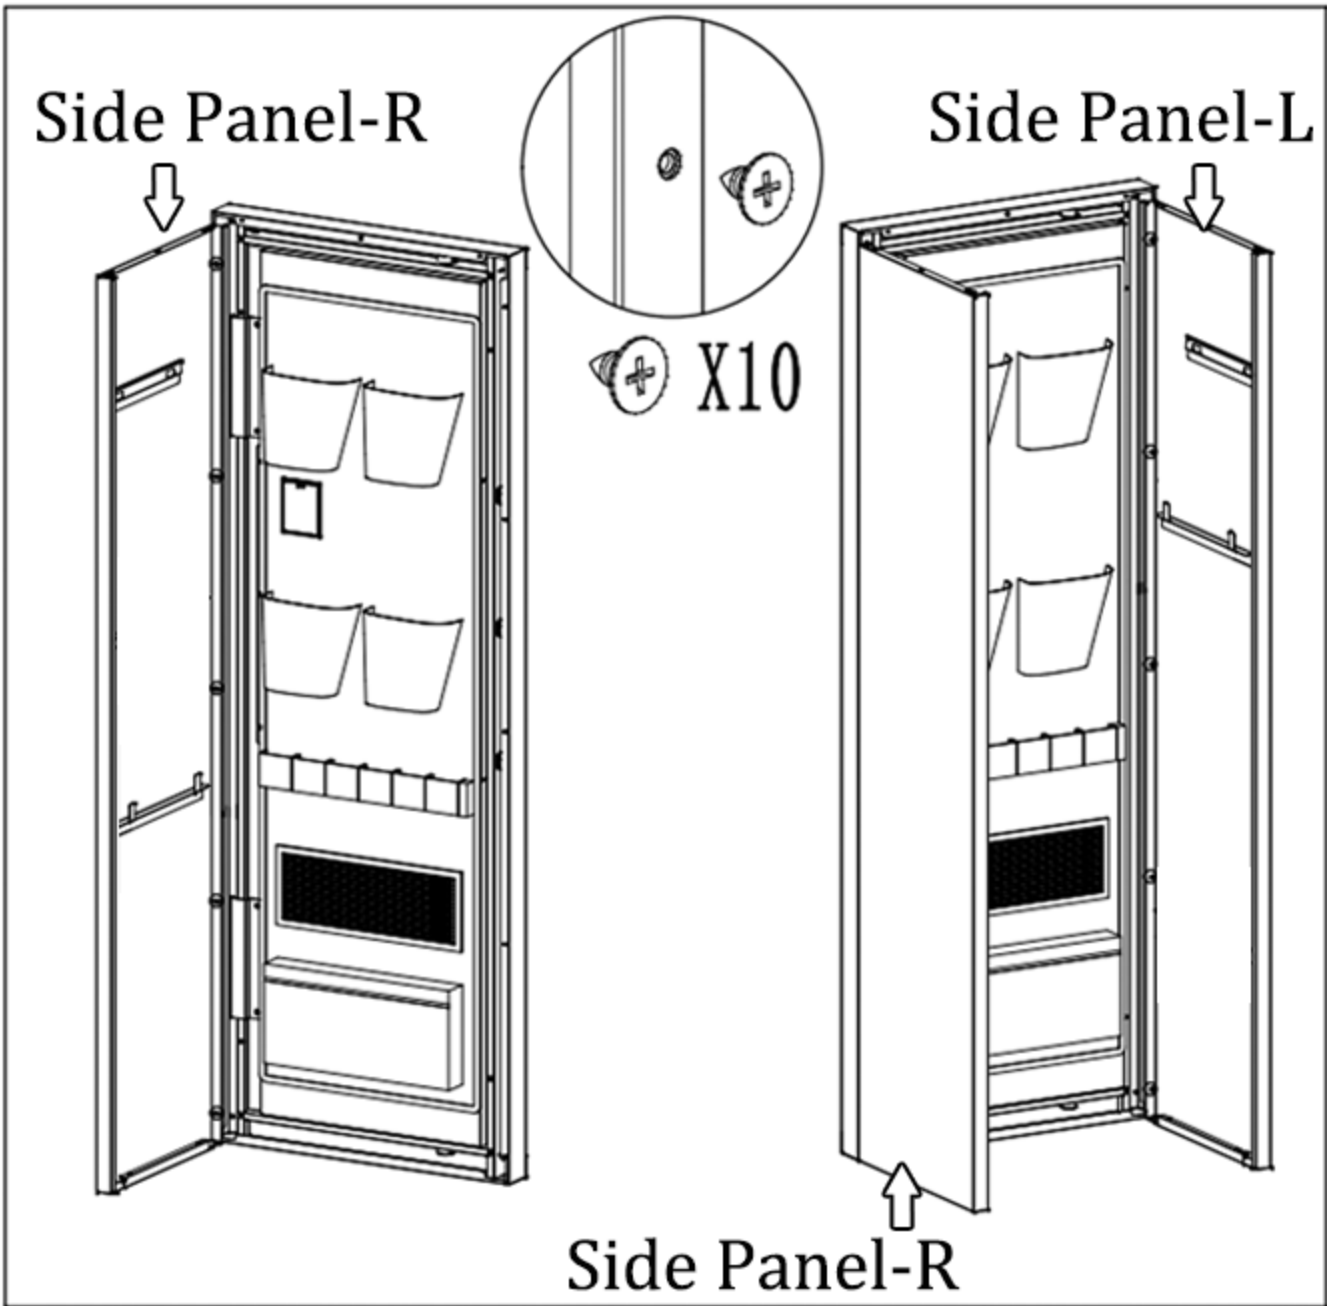


Connect the left and right side panels and door panels with self-tapping screws.

Step 2:

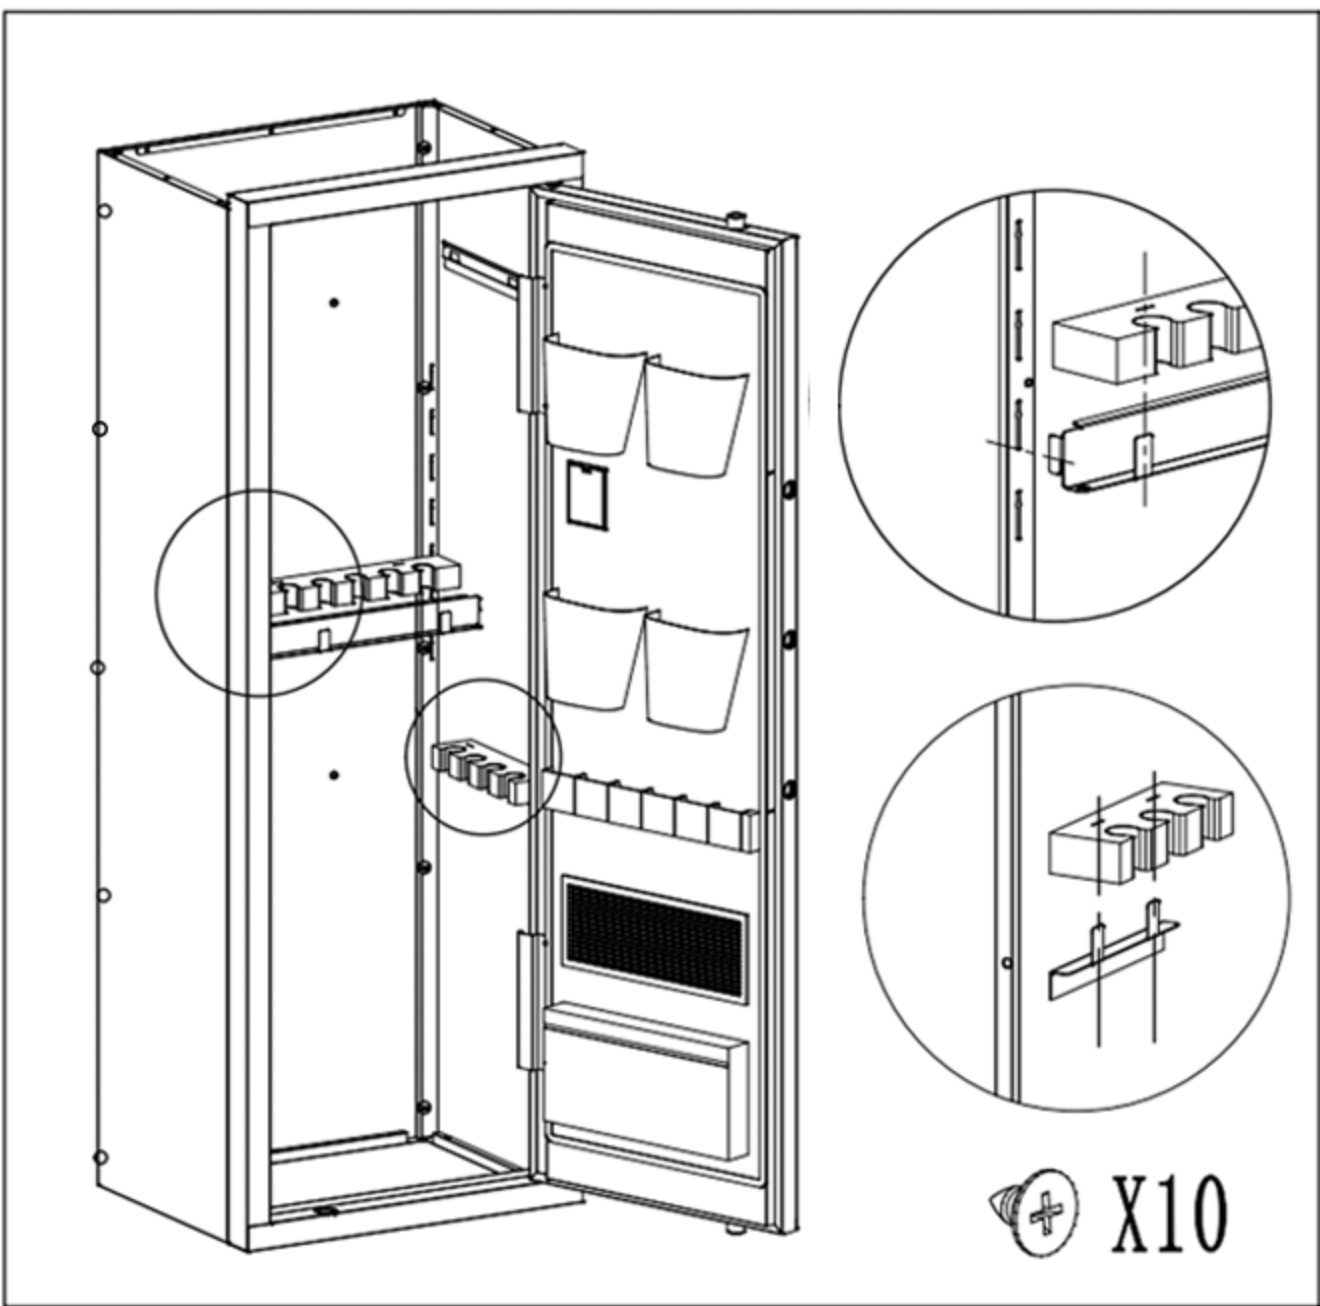


Connect the left and right side panels and back panel with self-tapping screws (open the door panel), and install an adjustable gun mount.

Step 3:

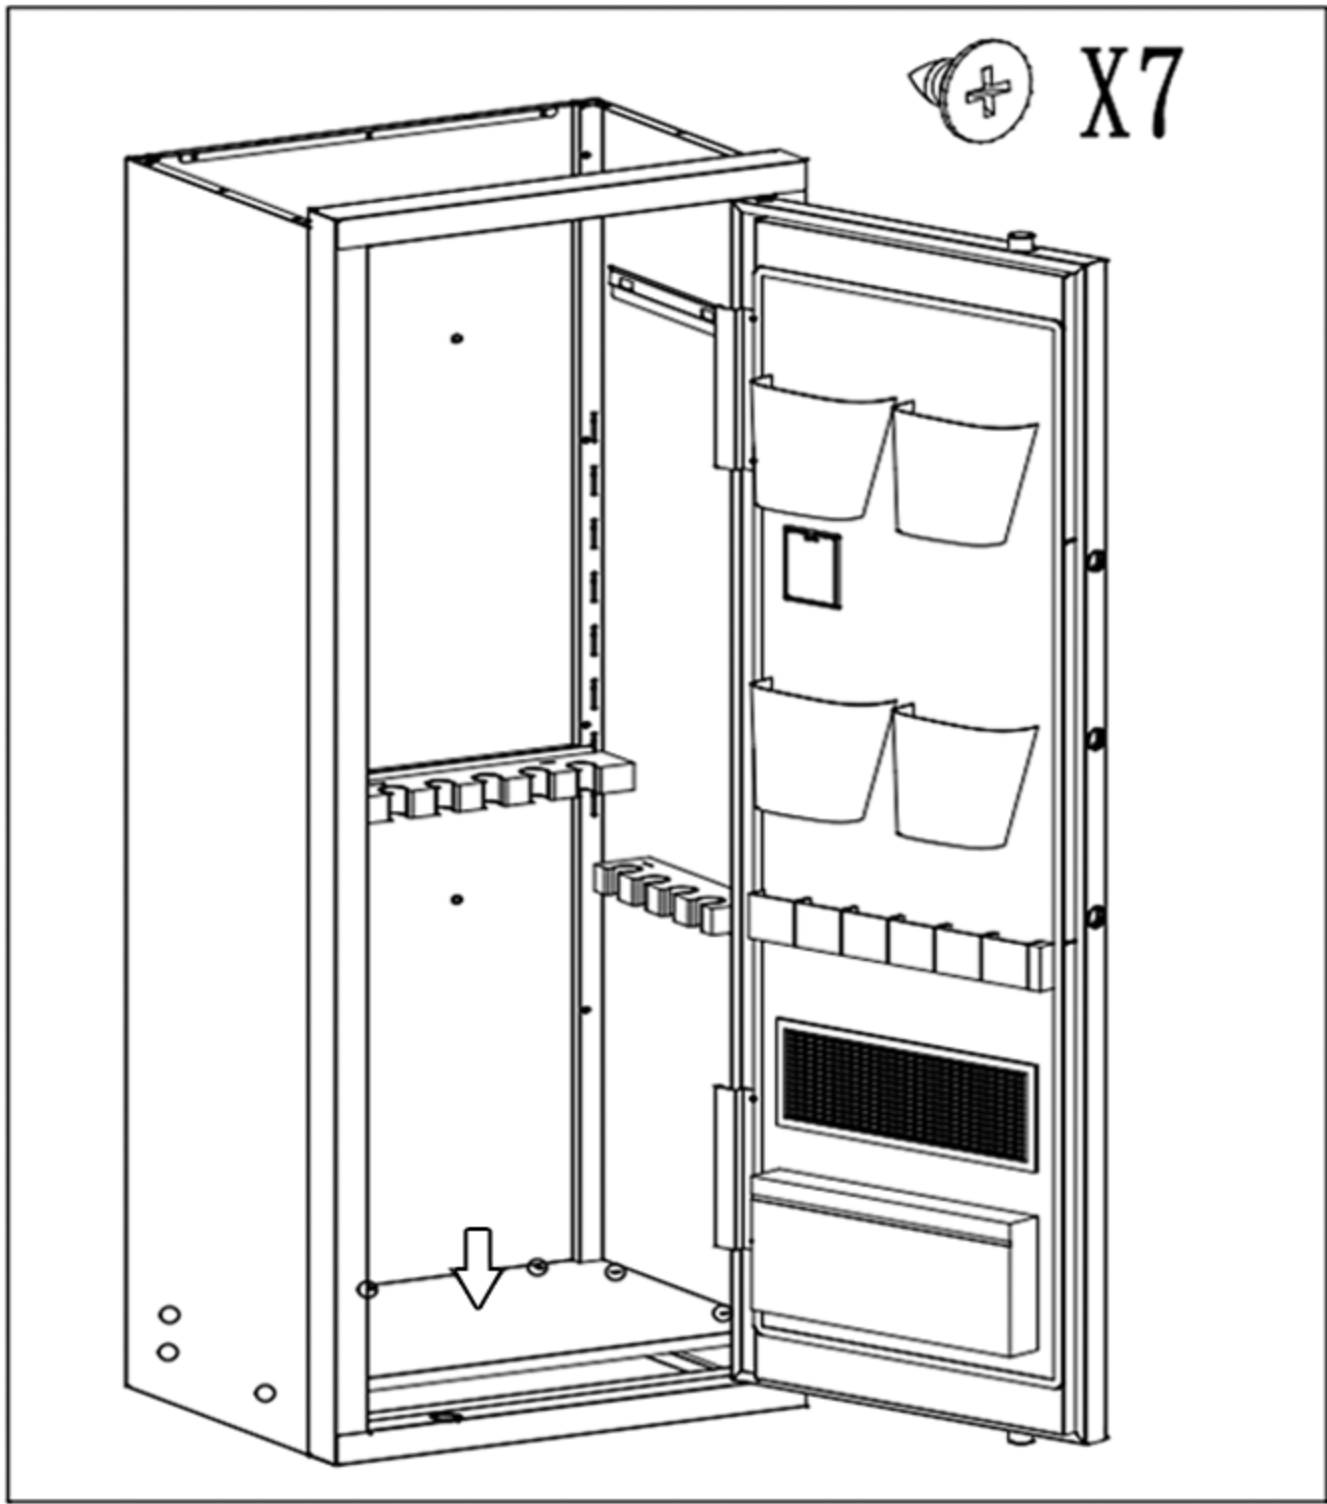

Install the bottom plate and connect it to the bottom with self-tapping screws.


Step 4:

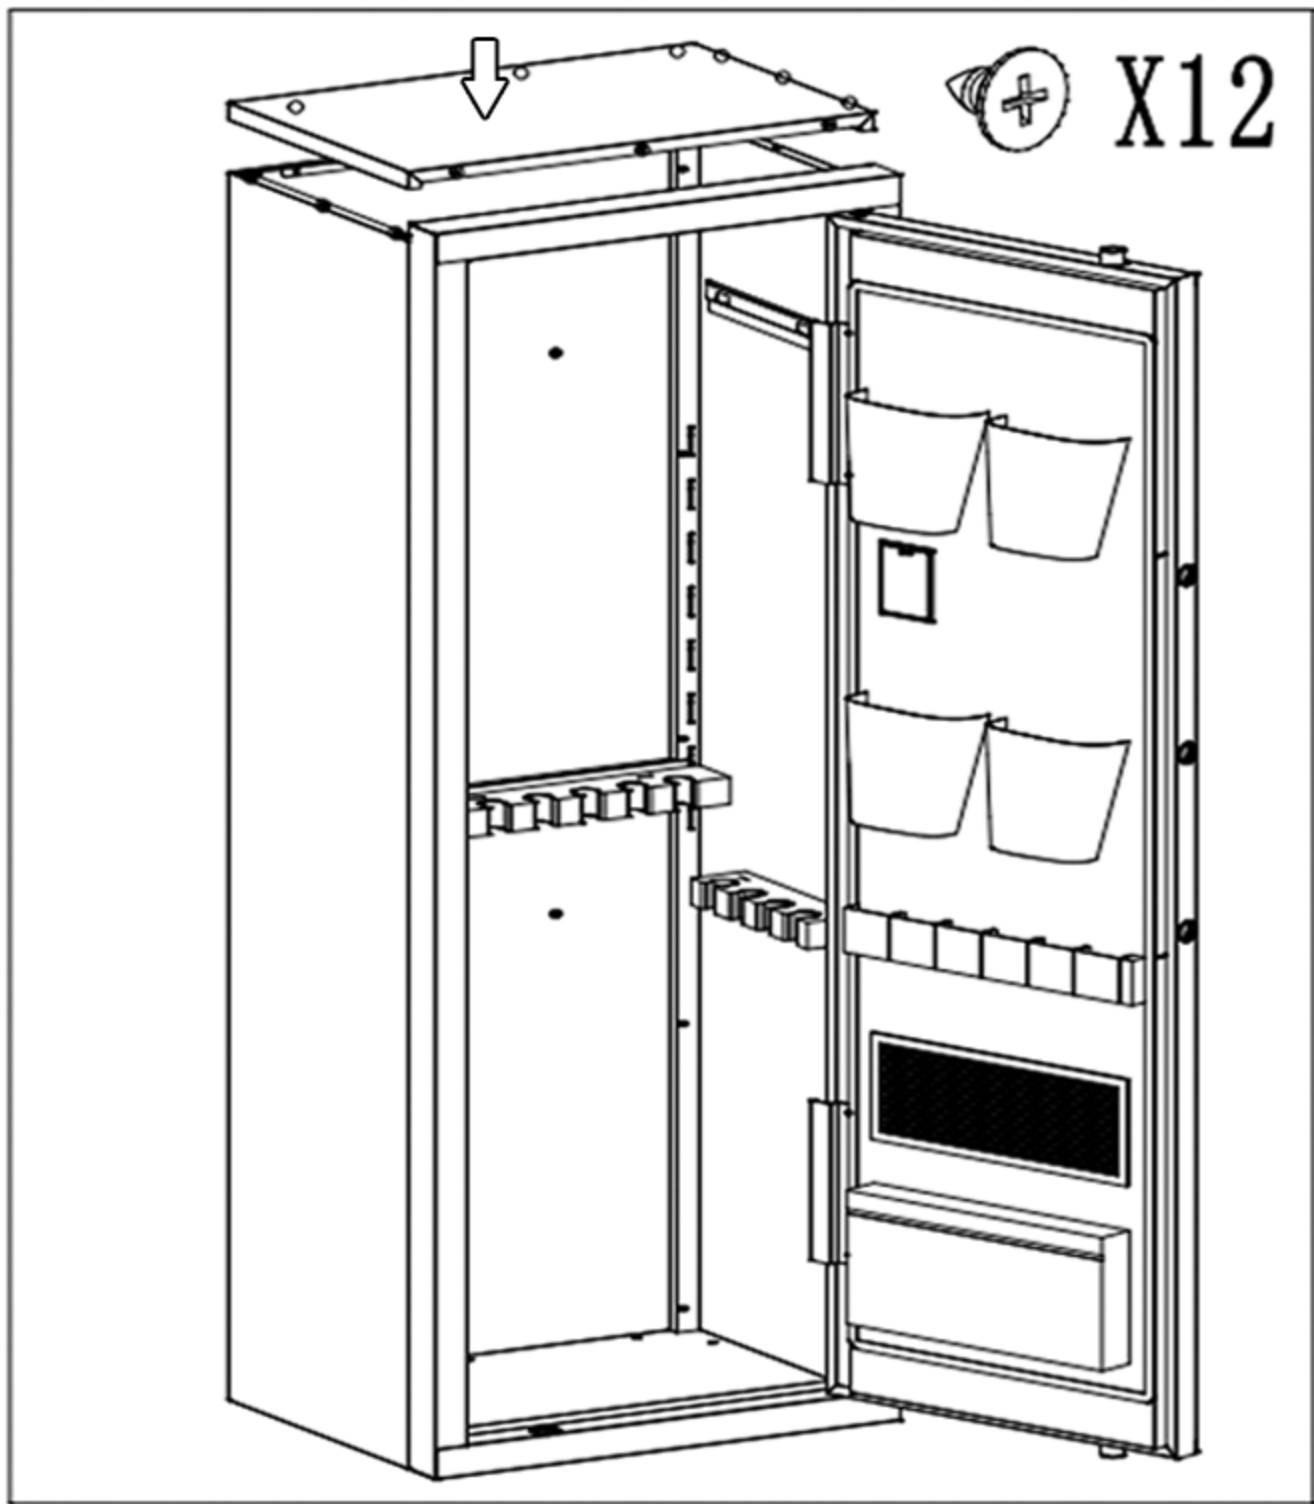


Install the top plate and connect it to the top with self-tapping screws.

INSTALLATION INSTRUCTIONS

Step 5:

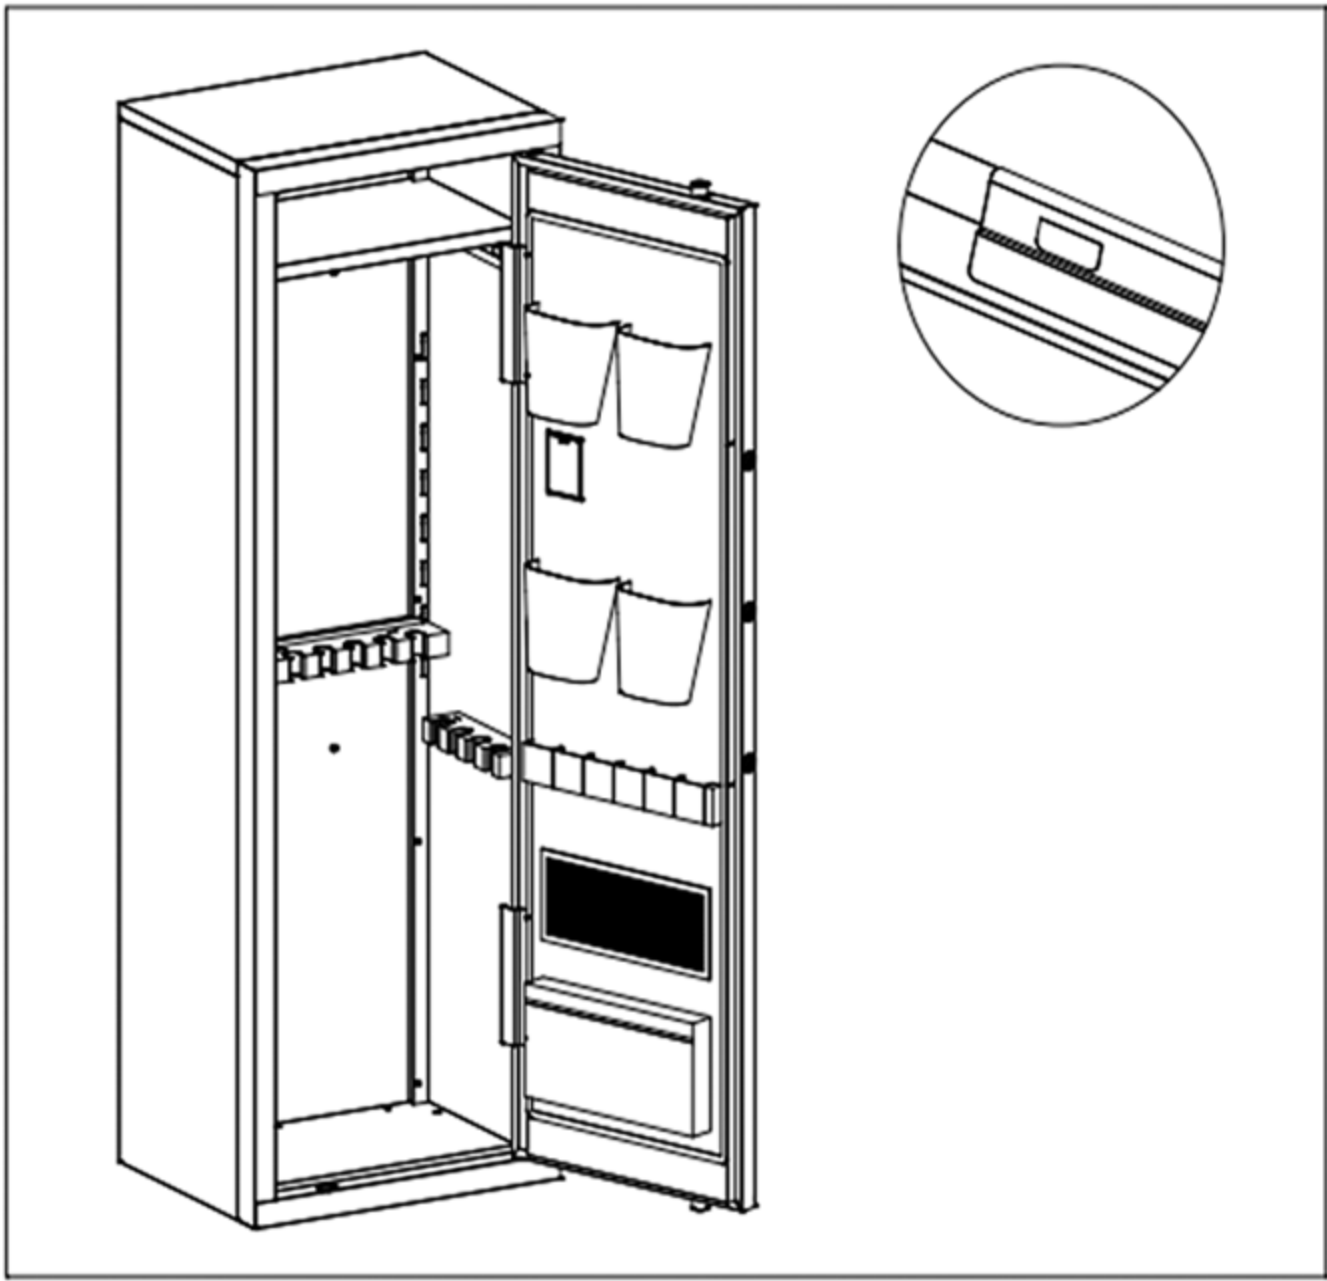

Install the shelf and snap the shelf into the grommet to complete the installation.

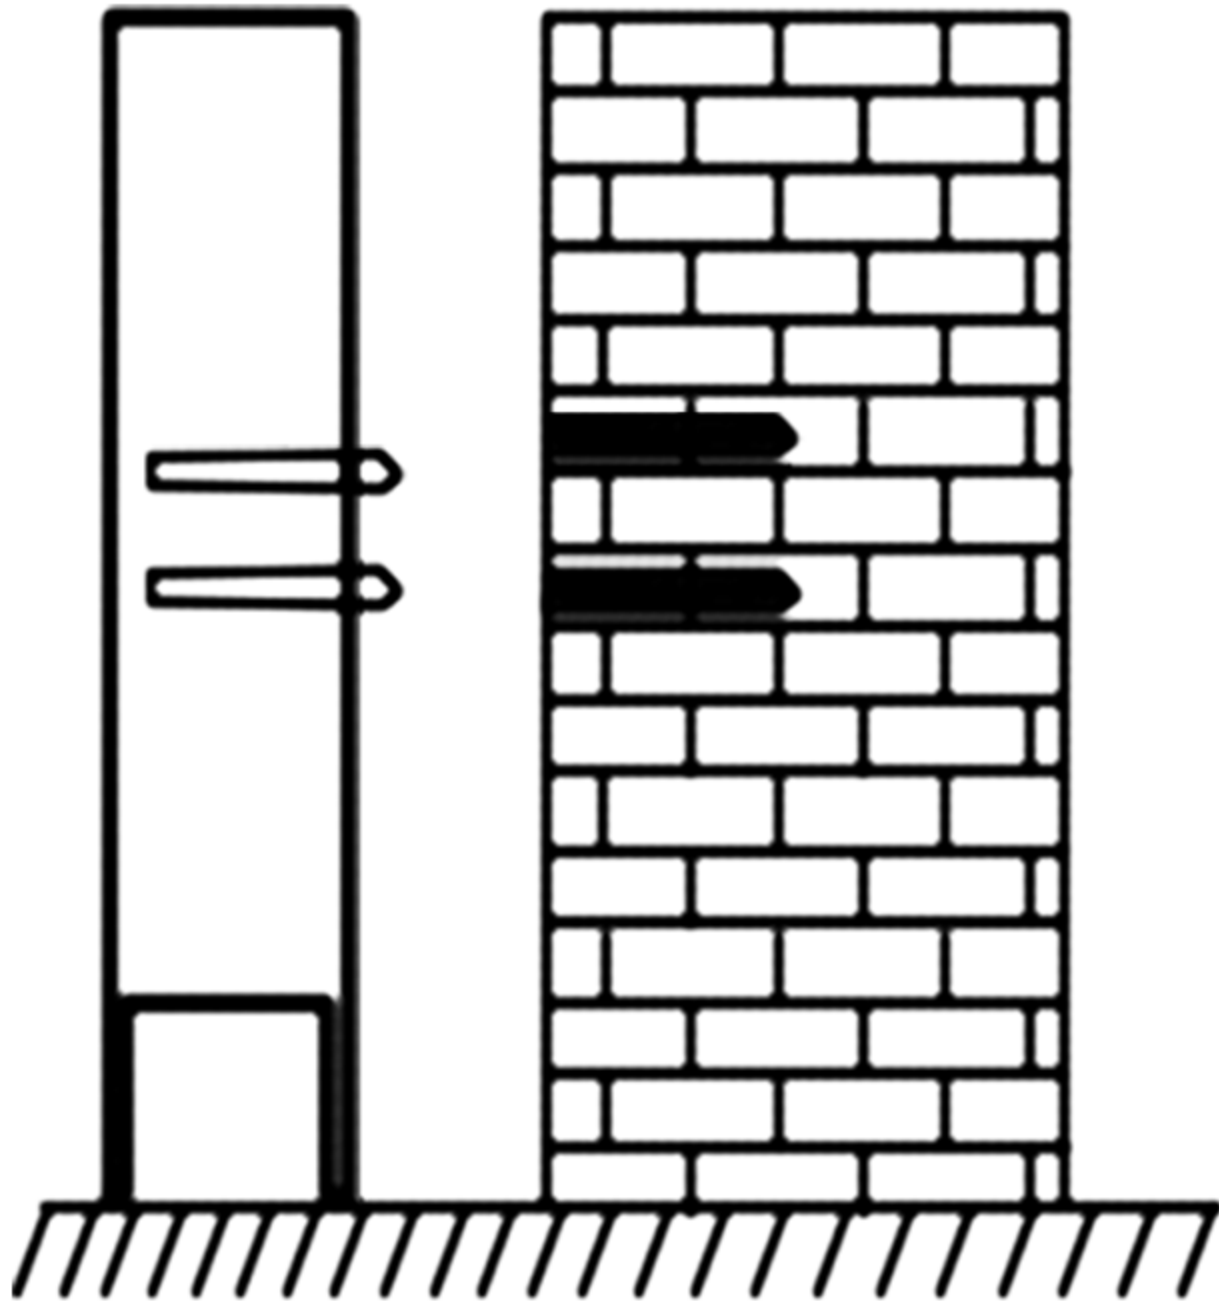

Expansion screws can be threaded through pre-drilled holes in the safe to secure it anywhere.

THE FIRST TIME OPENING


1.Insert the key		2.Turn the handle	
3.Insert 4 AA alkaline batteries (not included)		Please do not use rechargeable or different brands of batteries	

PERSONAL PASSWORD SETTING

Original factory password: 123456

This gun safe can be set with two sets of passwords

SET UP THE FIRST PASSWORD

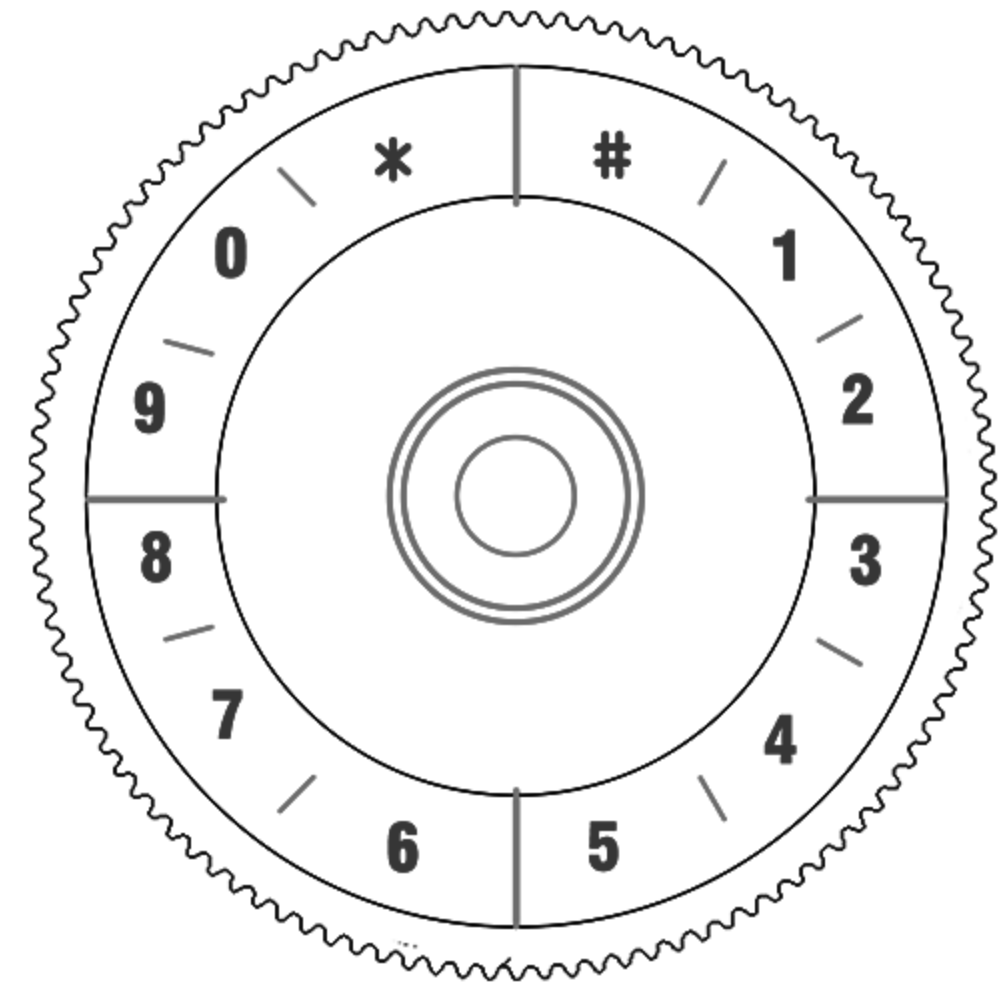

1. In the open state, press the green setting button inside of the gun cabinet, the buzzer will sound once and the keyboard light on.

2. Enter any new 3-12 digits code, press the "#" button to confirm. The buzzer will sound once and the blue indicator light will be off. Password is set successfully.

Note: After setting your password, please test the new password to ensure it is valid.

SET UP THE SECOND PASSWORD

1. In the open state, press '00', the keyboard light on. Then press the green setting button inside the door.

2. Enter another new code within 3-12 digits, and then press "#" key to confirm. The buzzer sound and the blue indicator light will be off, the second code is set successfully.

HOW TO OPEN THE GUN SAFE

1. Touch any code on the keyboard to wake up the keyboard, and enter the password you set.

2. Press the "#" key to confirm, the blue indicator light is on, and the buzzer beeps twice, indicating that the password is entered correctly.

3. Turn the handle clockwise.

NOTE: Input wrong password, The keyboard will sound beep for 4 times, and the alarm sound can only be eliminated after entering the correct password.

SYSTEM INITIALIZATION

Press the green setting button for 5 seconds, the system will restore the initialized settings and clear all passwords.

LOW BATTERY ALERT

1. The gun cabinet uses four 1.5V alkaline batteries, if the voltage is insufficient to open the door after the continuous reminder of "beep" twice, the power indicator light flashes for about 30 seconds before shutting down, reminding you of the low battery. You need to replace the batteries promptly.
2. If the battery voltage is insufficient, you can use the emergency power supply or mechanical emergency key to open the safe.

*** This electronic lock has the function of no power protection code never disappear.**

MUTE MODE

1. Tap to activate the touch screen, enter "11#"
2. The buzzer "beep--" a long sound, indicate the mute and non-mute mode set successfully.

TECHNICAL PARAMETERS

1. Working power supply : 4 No. 5 "AA" alkaline batteries
2. Working voltage range : 4.2V-7V
3. Working undervoltage point : $4.6V \pm 0.20V$
4. Operating current : $\leq 380mA$
5. Static current : 35uA

PERFECT SERVICE

Hi, my order number is 111-*****, I have problems with.....



Dear Customer.

Thank you very much for contacting us through your e-mail address.

You are now our VIP member!

Could you please describe your problem in detail?

Attach a picture so we can solve it faster.

We will provide you with a perfect solution.

Best wishes to you!



Please email us to get a special VIP discount code before your next order.



Problem with the order? Please email us, give us a chance to help you firstly.



Do you love your new product? Help others find it by leaving a product comment online!