

# 10'X20' Dome Garage

ITEM #: G10208



## Dimensions:


10ft. Wide x 20ft. Deep x 8ft. Center Height

### WARNING:

Keep all flame and heat sources away from this tent fabric. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.

Distributed by: PIC America, LTD.  
1730 Five Points Lane • Fuquay-Varina, NC 27526  
1-800-800-6296 • [www.kingcanopy.com](http://www.kingcanopy.com)

# PARTS

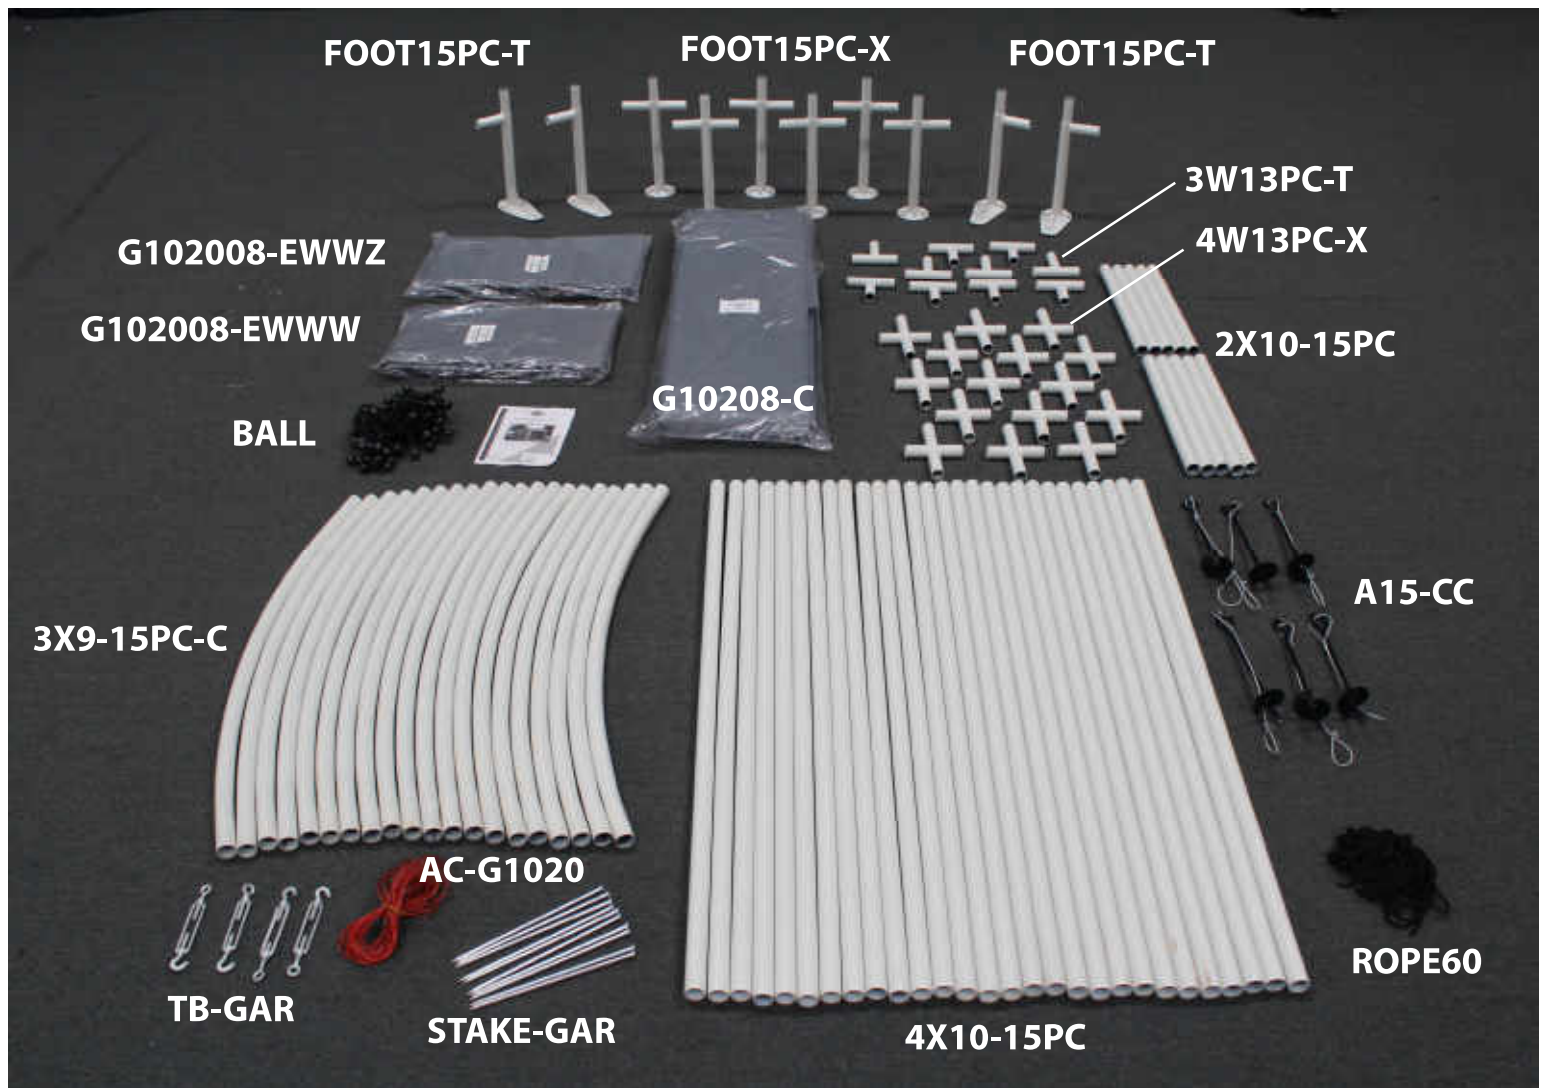

FOOT15PC-T	(4)	2-way Corner Foot Pads
FOOT15PC-X	(6)	3-way Center Foot Pads
3W13PC-T	(10)	3-way Connectors (ends)
4W13PC-X	(15)	4-way Connectors (centers)
4X10-15PC	(28)	58" Pipe
2X10-15PC	(10)	21.5" Pipe
3X9-15PC-C	(20)	45" Curved Pipe
BALL	(70)	Ball Bungee Straps
AC-G1020	(5)	Assembly Cables
ROPE60	(60')	Rope for Assembly
STAKE-GAR	(10)	Stakes
A15-CC	(6)	Screw-in Ground Anchors
G102008-EWWZ	(1)	Front Wall with Zippers
G102008-EWWW	(1)	Back Wall with Window
G10208-C	(1)	Cover
TB-GAR	(4)	Corner Turnbuckles

Diagram illustrating the assembled 10' x 10' goal cage structure, showing the components and their arrangement:


- FOOT15PC-X**: Top and bottom horizontal endposts.
- FOOT15PC-T**: Top and bottom horizontal endposts (labeled on the right side).
- 4X10-15PC**: Vertical posts (labeled on the left and right sides).
- 2X10-15PC**: Vertical posts (labeled on the left and right sides).
- 3X9-15PC-C**: Corner posts (labeled on the left and right sides).
- 4X10-15PC**: Vertical posts (labeled in the center).
- 4W13PC-X**: Central horizontal crossbar.
- 3W13PC-T**: Central horizontal crossbar (labeled on the left side).
- 3X9-15PC-C**: Corner posts (labeled at the bottom).

**Note: The two longest parts of the 4-way are used to form the length.**

**1)** Start by laying out all of the parts and pieces to your King Canopy. Please refer to the parts list to ensure that your kit is complete. When all the parts have been accounted for, begin to layout your frame according to the photo above. The 3X9-15PC-C curved pipes form the dome part of the canopy. The 4X10-15PC pipes form the length of the canopy. Each 3-way fitting (3W13PC-T) should be placed at all the end connections and the 4-way (4W13PC-X) fittings are placed in the 3 center sections.



# FRAME ASSEMBLY

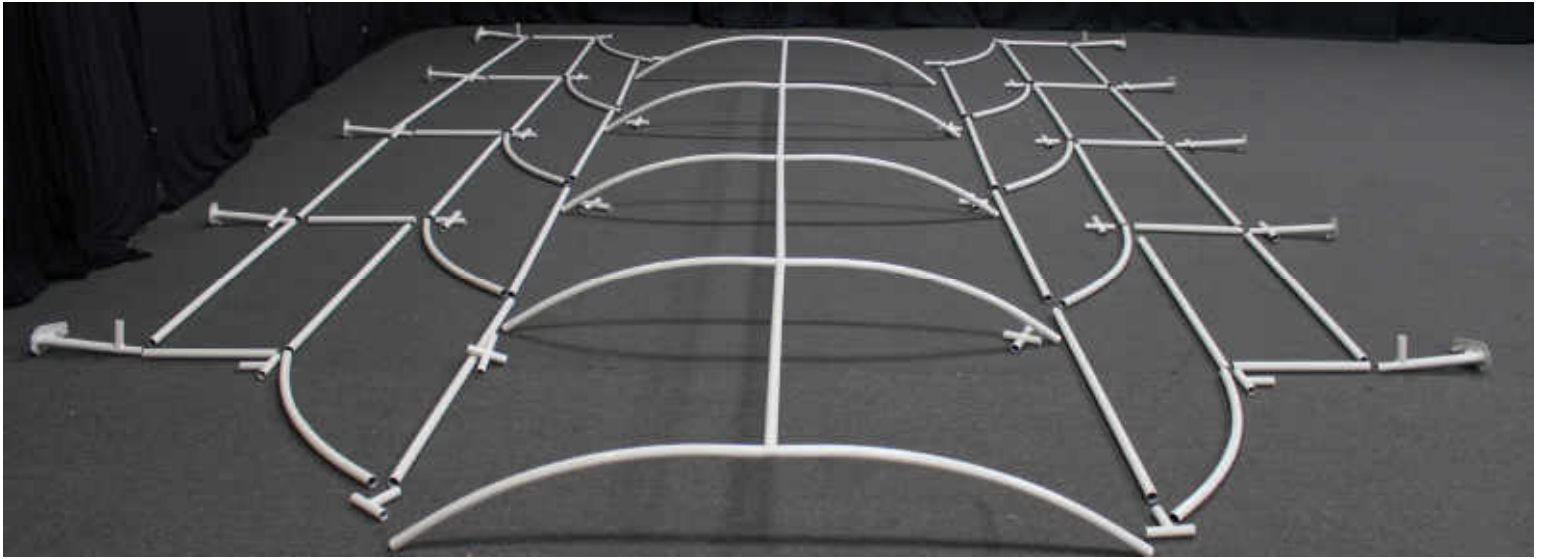


2) Assemble the center section of frame using the 3X9-15PC-C curved pipe and the 4X10-15PC 58'' straight pipe. (See photo above) Make sure longest part of the 3-ways and 4-ways are used to form length. Continue assembly until you have four sections complete, which is the full length of the unit.



2) After assembling the first full length section of roof, use the rope enclosed to hold frame together by tying the frame from end to end down the center (See Photo Above and on Right).




# FRAME ASSEMBLY

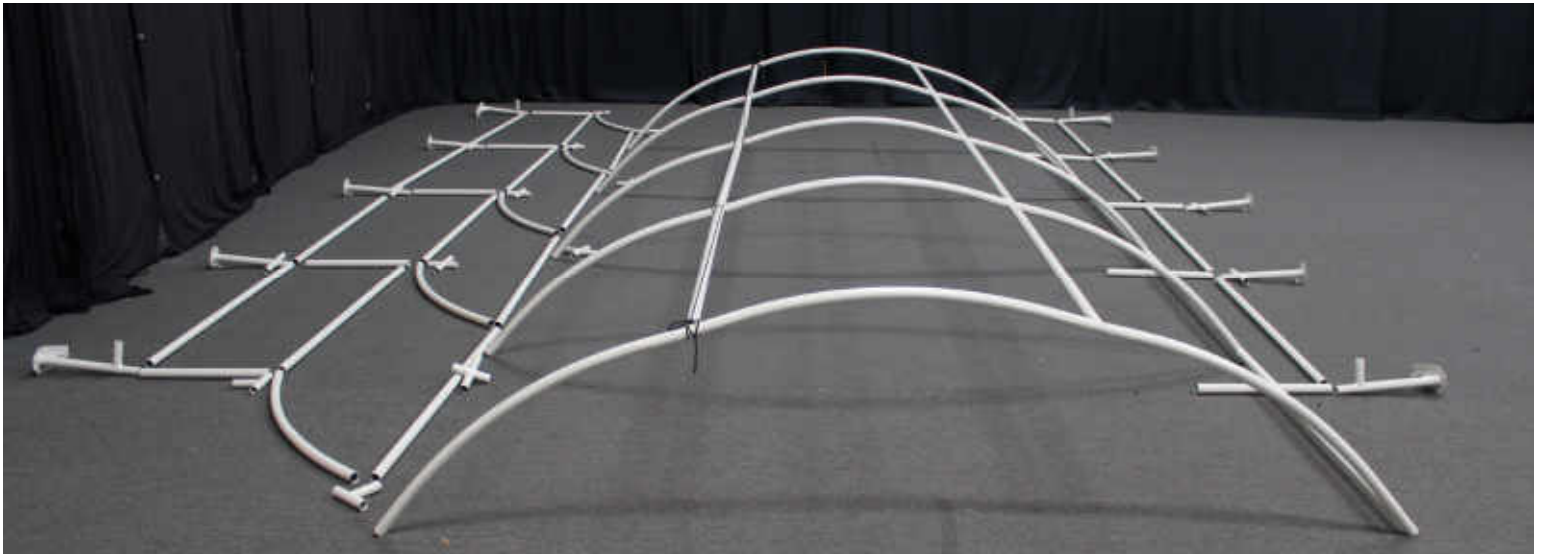

3) Continue assembly by completing the next curved section on each side of the top section. (See Photo Above) Hold frame together by tying frame from end to end like in step 2 before.

**NOTE: PUSH FRAME INWARD FROM EACH SIDE TO KEEP CURVE SHAPE.**

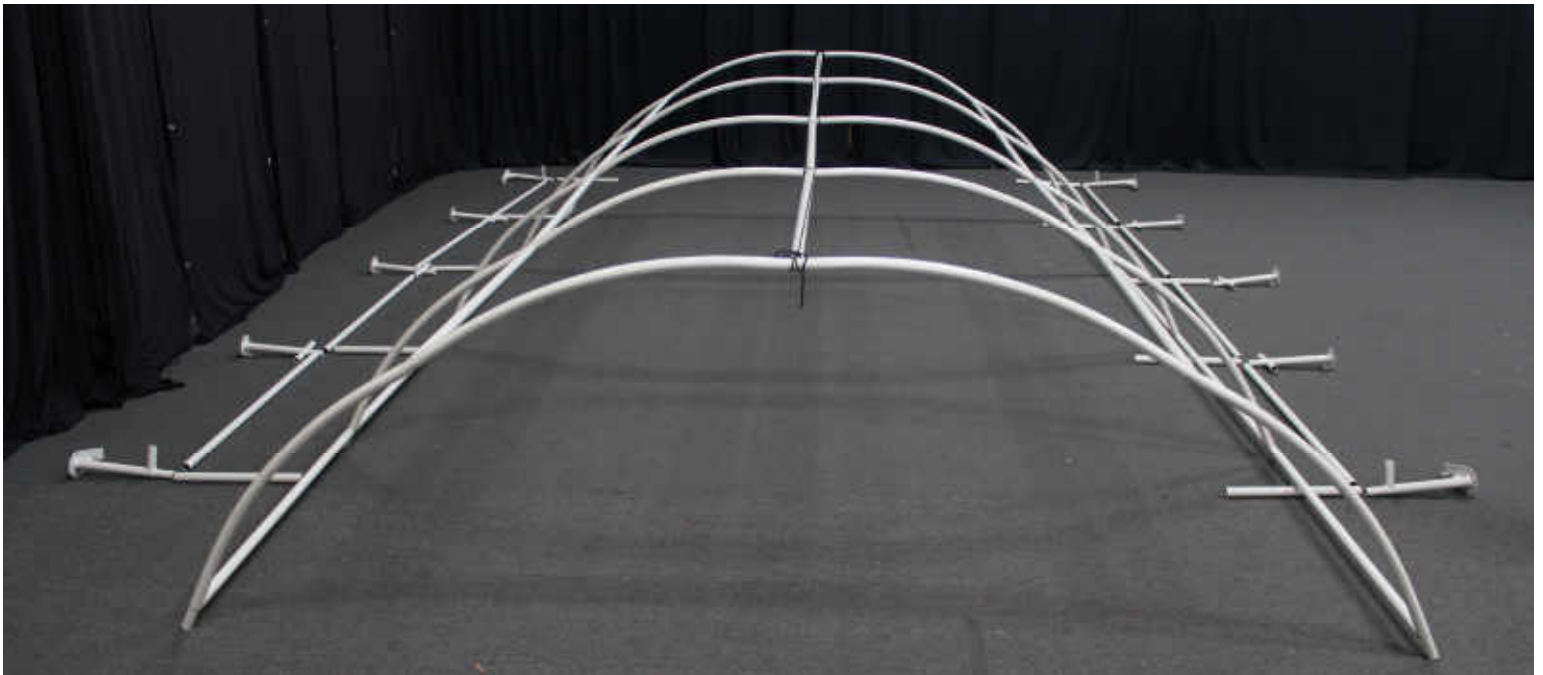

4) Once you have completely assembled all the curved sections of the canopy, (See Photo Above) you are now ready to put the cover on. Put the cover on before assembling the last section with feet. See next step.

# COVER & LEG ASSEMBLY

5) Remove the cover from plastic bag and unfold. Next fold half the cover over the other half with the white side out. Match the corners (See Diagram F) and mark the top center of cover at the grommet line at both ends. (See Diagram G).

**Diagram F**



**Diagram G**



**Diagram H**

6) Once centers have been marked at both ends, pull cover over frame with white side down. (See Diagram H) Position the center mark with the top center pipe of frame. (See Diagram I) Attach cover to each end of top curved frame by running ball bungee straps through each grommet hole, around pipe and hook back over ball. (See Diagrams J and K)



**Diagram I**




**Diagram J**



7) Once you have secured the cover to the curved section of frame, you may now finish frame assembly. Assemble the remaining frame on each side using the 2X10-15PC pipe, foot sections, and 4X10-15PC pipe as shown in Diagram K. Make sure hooks on the feet are on the inside of frame. Push in on leg sections and make sure the legs are securely set on ground before assembling final side and standing canopy up. This will keep the canopy from sliding.



INSIDE VIEW

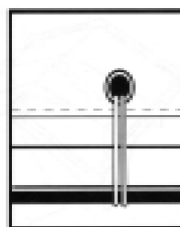

OUTSIDE VIEW

**Diagram K**






# COVER & LEG ASSEMBLY

8) Now that you have completed the frame assembly and your canopy is standing, take the cables provided and hook one end to each foot (See Diagram L) over to the foot on the opposite side. You may have to push out or pull in to get cables hooked. Make sure cables are tight across. These cables keep the canopy frame with the designed curved shape.

**(NOTE: Be careful NOT to trip over cables.)**

Diagram L

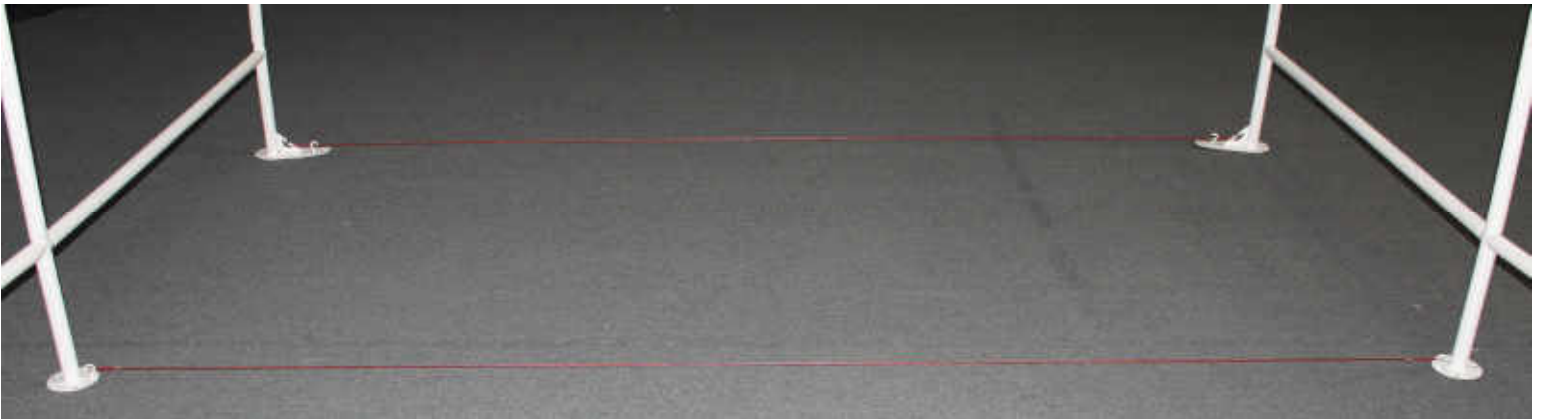

9) With the canopy standing and cables in place, anchor the canopy using the foot stakes provided (See Diagram M). Driving the stakes in at an angle will help anchor the canopy more securely. Once stakes are in place, you may remove the cables.

Diagram M

**SEE "ANCHORING YOUR CANOPY"**



# COVER & END WALL ASSEMBLY



10) To complete your canopy, secure the top down each side on the bottom pipe and around each end with ball bungee straps. (See Diagram N)

11) Add the canopy endwalls using the hook & loop straps and then secure them using the ball bungee straps. Next, tighten and secure the drawstrings at each corner foot. You have successfully set up your canopy (See Diagram O). Now that the canopy is set up, you may remove the ropes used for assembly.





# COVER & END WALL ASSEMBLY

Diagram O



**NOTE:** Your canopy sidewalls and rear endwall are long enough to be buried in the ground. This will help prevent water from running inside.

# ANCHORING YOUR UNIT

This canopy is designed for use as a temporary structure. After assembly, the canopy **MUST BE** securely anchored to the ground to prevent damage from winds. Your canopy will act like a kite in the wind if not properly and securely anchored to the ground. Severe winds will cause the frame to twist and unanchored legs will fall, thereby collapsing the canopy. If severe winds are expected, you must remove the cover from the frame to prevent damage.

**Parts Enclosed > 6-screw-in anchors with cable and clamp attached**  
**(Tools needed = 5/8 inch wrench and large heavy-duty screw driver)**

1. We recommend anchoring your canopy at each corner foot and center foot on each side. Screw anchor into ground next to canopy foot using a large screw driver as seen in Diagram A. Looping the cable through the anchor eye will keep it out of the way while turning. Tilting the anchor slightly will help the anchor to cut into the ground. Apply downward pressure while turning the anchor into the ground. Leave approximately three inches of anchor out of the ground.
2. Unloop the cable from the anchor eye and slide the clamp onto cable. Run cable around the pipe, (See Diagram B) and then back through the clamp as seen in Diagram C. Pull the cable as tight as possible through the clamp. Hold the cable and tighten clamp with a 5/8 inch wrench or some type of adjustable wrench.
3. When you have tightened the clamp and satisfied that the cable will not slip, you may tighten the cable more by turning the anchor further in the ground as seen in Diagram D.

If you have further questions call our customer service department toll free at 1-800-800-6296

Diagram A



Diagram B



Diagram C



Diagram D



# IMPORTANT NOTICE: PLEASE READ CAREFULLY

**We are confident that you will be completely satisfied with your King Canopy unit. Please take a moment to read the very important information below, and call us with any questions you may have.**

King Canopy/PIC America, LTD. has no control over wind, snow, ice, rain or any other weather condition and we are in no way responsible for any damage caused by the canopy or to the canopy. We suggest you contact your insurance carrier just as you would for any other outside structure.

## **OTHER PRECAUTIONS WHICH MUST BE FOLLOWED:**

Keep all flame and heat sources away from this tent fabric. The tent fabric will burn if left in continuous contact with any flame source.

DO NOT cook underneath or near canopy.

DO NOT store or use flammable liquids underneath or near canopy.

DO NOT ignite or store fireworks underneath or near canopy.

DO NOT use bleach to clean cover.

DO NOT dry clean cover.

DO NOT wash cover in washing machine or dry in dryer. Hand wash with mild soap and water only.

DO NOT allow rain water, snow or ice to accumulate on top of cover.

DO NOT hang or suspend anything from the frame, grommets, truss system or ball straps of the unit.

REMOVE canopy cover before a storm, or disassemble entire canopy unit if possible.

REMOVE rain water, snow and ice from canopy cover.

**This is a temporary structure and is not recommended for use as a permanent structure.**



# WARRANTY INFORMATION

## Defective Parts

We try our best to eliminate any defective parts that are shipped with our products. If, however, you should find a defective part, we will replace – free of charge – any part which is defective. You will need to provide proof of purchase showing date of purchase and provide us with detailed description of the defective component. Your replacement will be shipped by ground shipping, freight prepaid. Next day or express shipping will require freight collect and paid for by you, the consumer. Damages from improper anchoring, strong winds, snow, ice or rain are not considered defects.

## Improper Anchoring, Strong Winds, Rain Snow, or Ice

King Canopy/PIC America, LTD. does not guarantee these canopies under strong weather conditions. These canopies are designed to protect against damages caused by sun, rain, tree sap, birds, etc. They are not designed to hold roof loads that accompany snow, ice or heavy rains. If your canopy is not anchored securely, it can be lifted by the wind and will fly away. If your canopy takes flight, we are not responsible for any replacement. If you know strong weather is predicted, remove the cover or take down the canopy unit completely. The cover is designed to be quickly and easily removed.

## Warranty

All components of this canopy feature a 1-year limited warranty and are warranted to be free from defects in material and workmanship for a period of 1-year. You must complete and return the enclosed warranty card promptly after purchase. Please retain your proof of purchase receipt; you will be asked to provide this receipt in order to obtain warranty service.

## Non-Warranty Replacement Parts

If after expiration of the warranty period, you require replacement parts please contact us at 1-800-800-6296. We stock replacement parts and make them available to you at discounted prices. Our customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely hard on covers of any kind. Normal wear and tear is not covered under the warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

For missing parts, replacement parts or any questions:

Please Call 8:00am – 5:00pm EST, Monday – Friday  
**1-800-800-6296 or 1-919-552-2977**

Or you can fax us at: **1-919-552-5069**

Replacement parts and customer service is also available through our website.  
Please visit us at **[www.kingcanopy.com](http://www.kingcanopy.com)**